


**1988 System Wiring Diagrams  
Ford - Taurus**

**PAVLIN**

**Fig. 1: 2.5L, Cooling Fan Circuit  
1988 Ford Taurus LX**

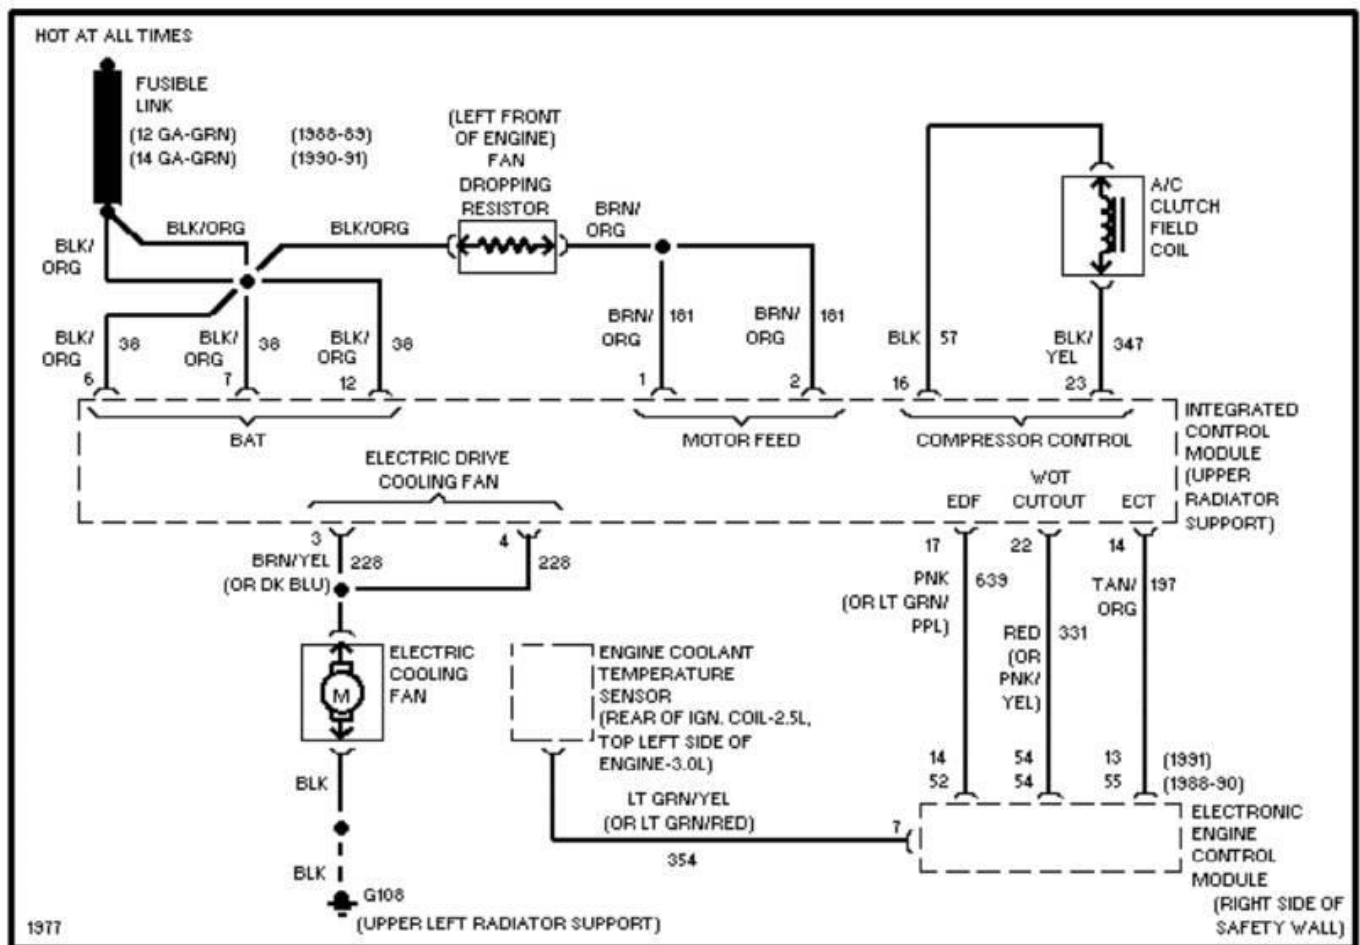






1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 3: 3.8L, Cooling Fan Circuit  
1988 Ford Taurus LX

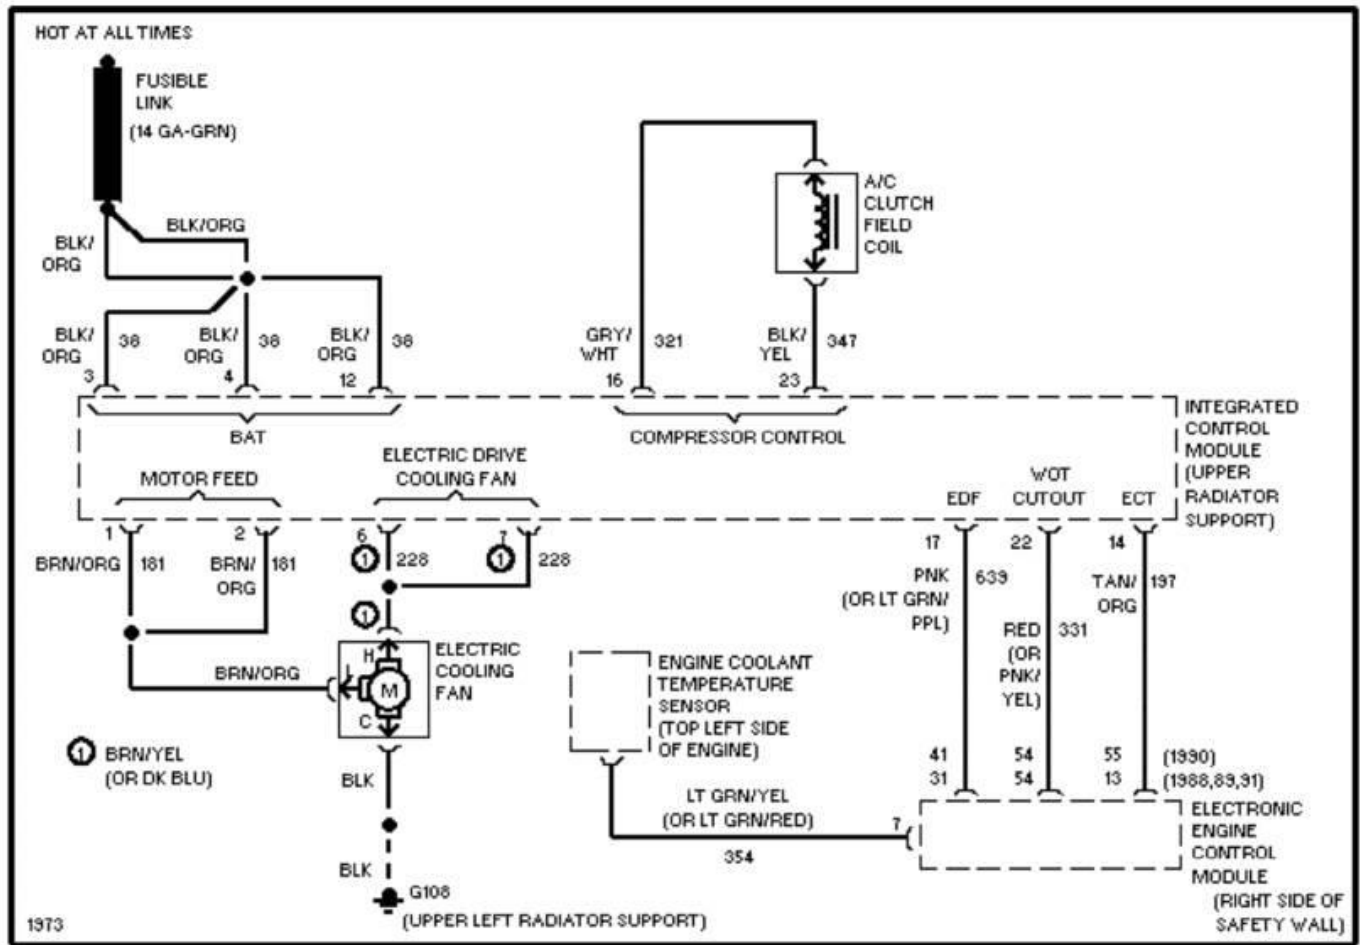


1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 4: Defogger Circuit  
1988 Ford Taurus LX

© 1985 VFTC

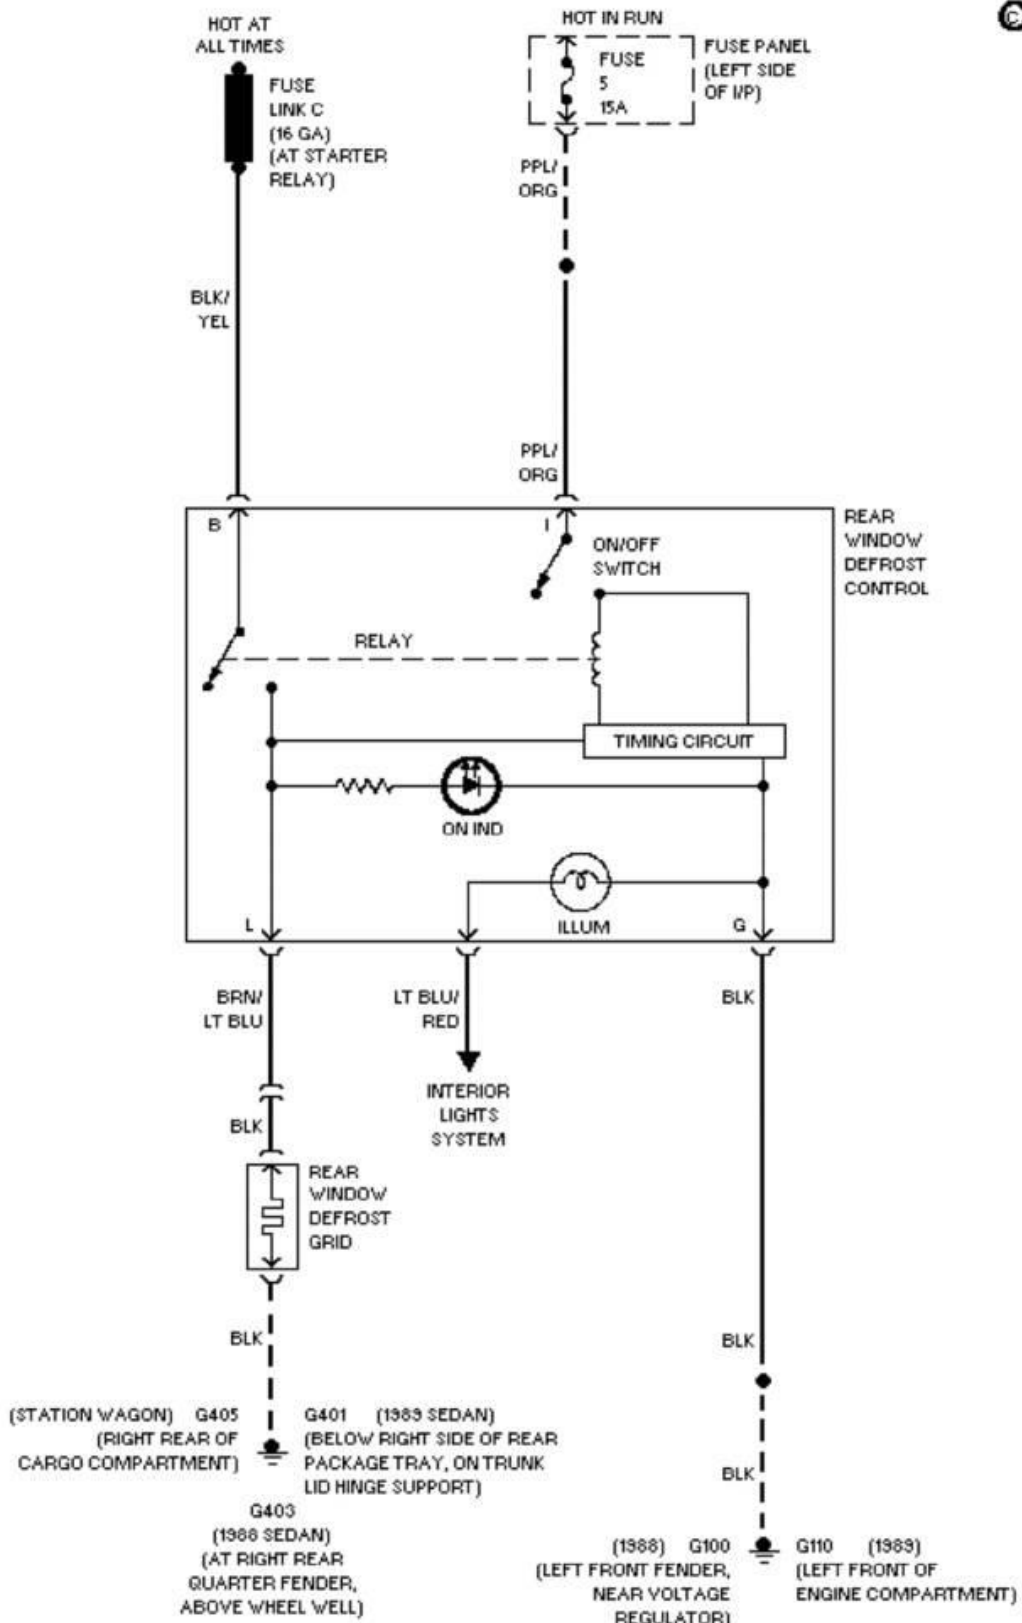


59621

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 5: Horn Circuit  
1988 Ford Taurus LX

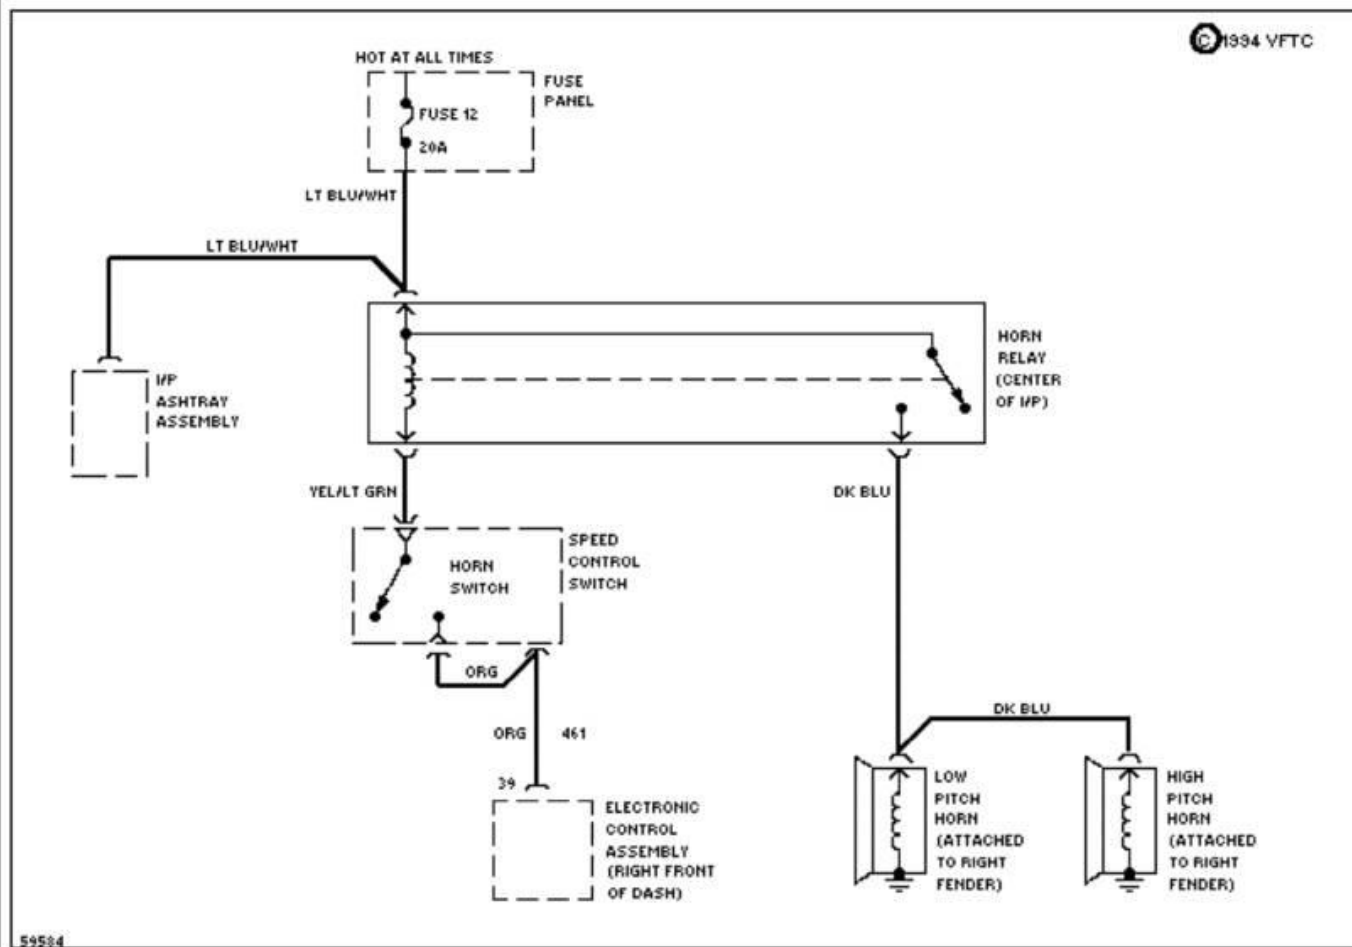

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 6: Power Antenna Circuit  
1988 Ford Taurus LX

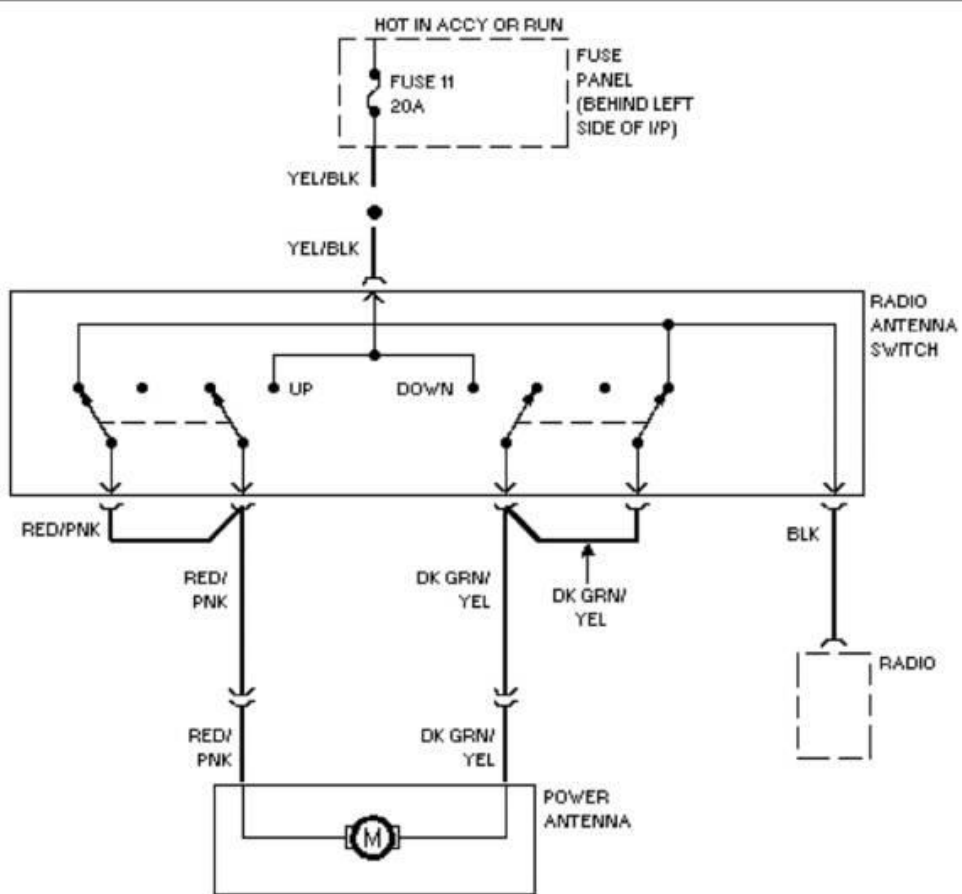


© 1985 VFTC

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 7: Door Lock Circuit  
1988 Ford Taurus LX

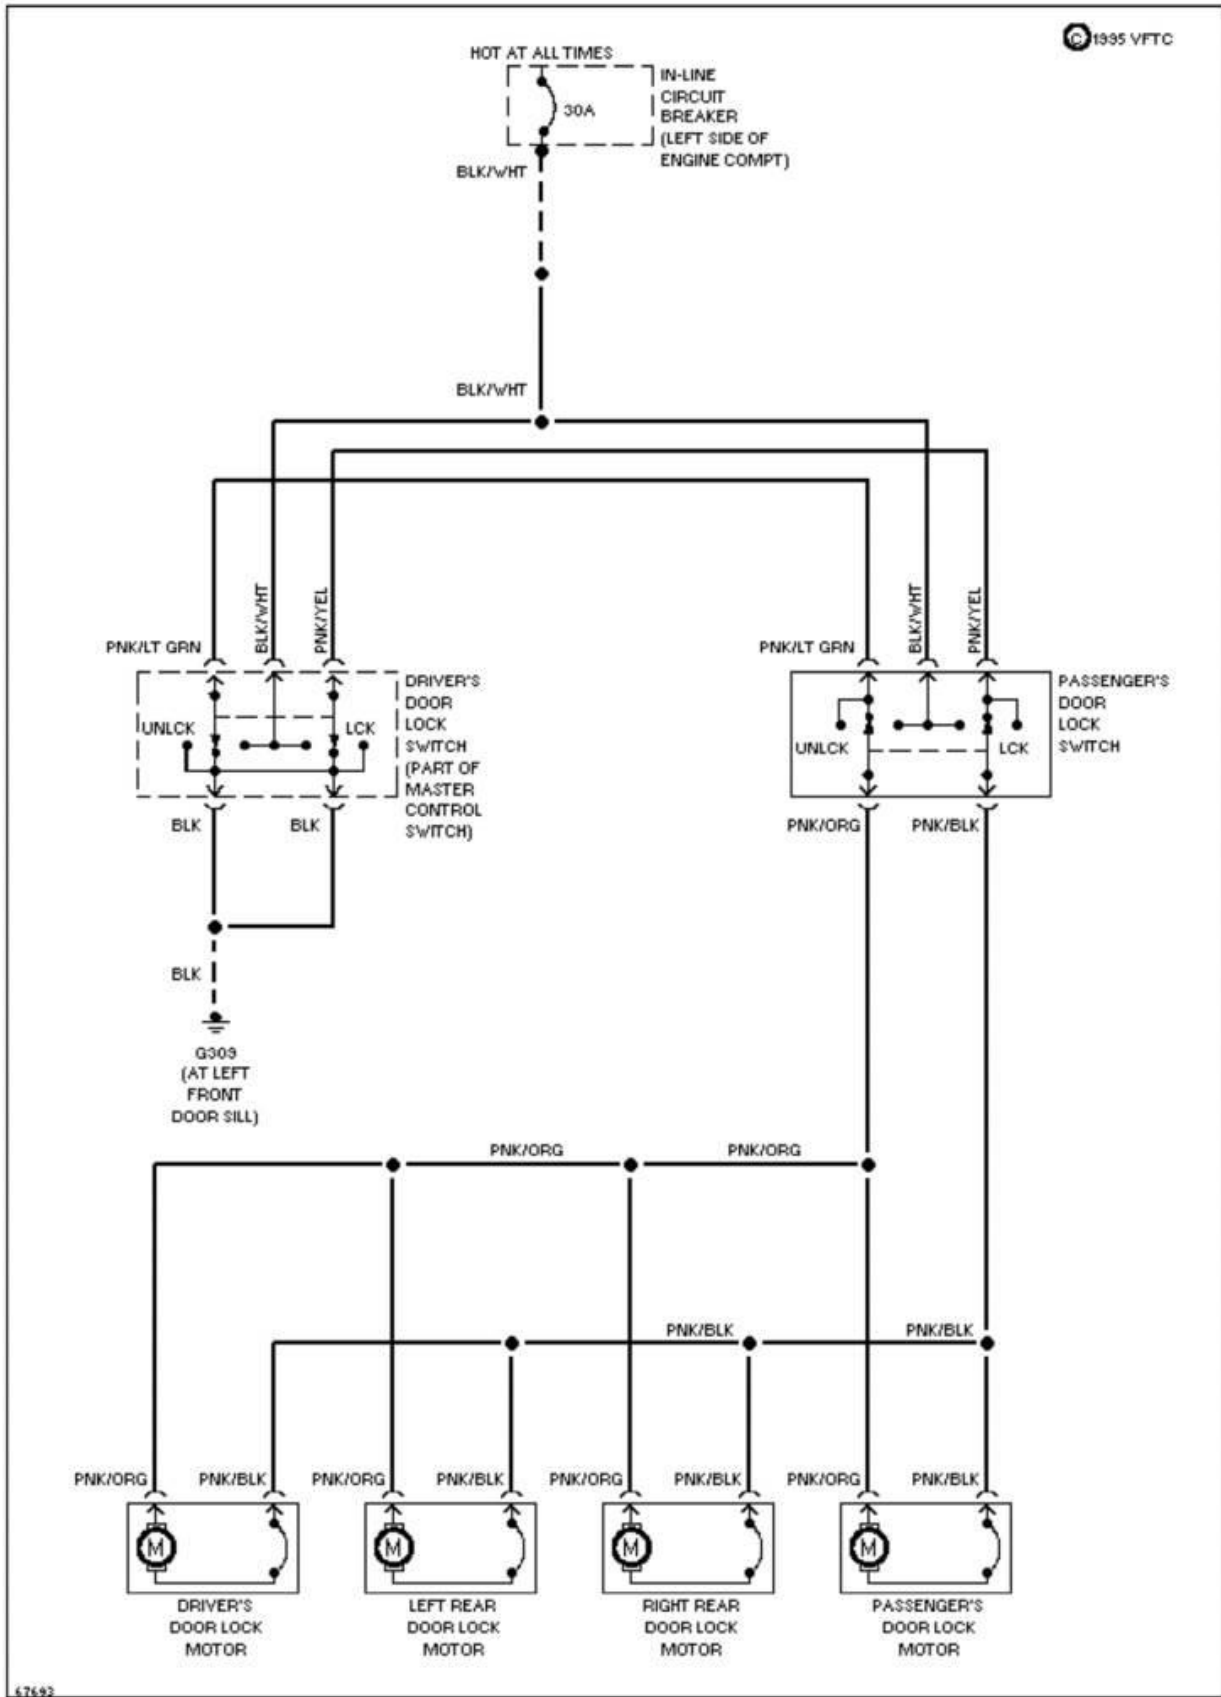




# 1988 System Wiring Diagrams Ford - Taurus

PAVLIN


**Fig. 8: Keyless Entry Circuit**  
1988 Ford Taurus LX

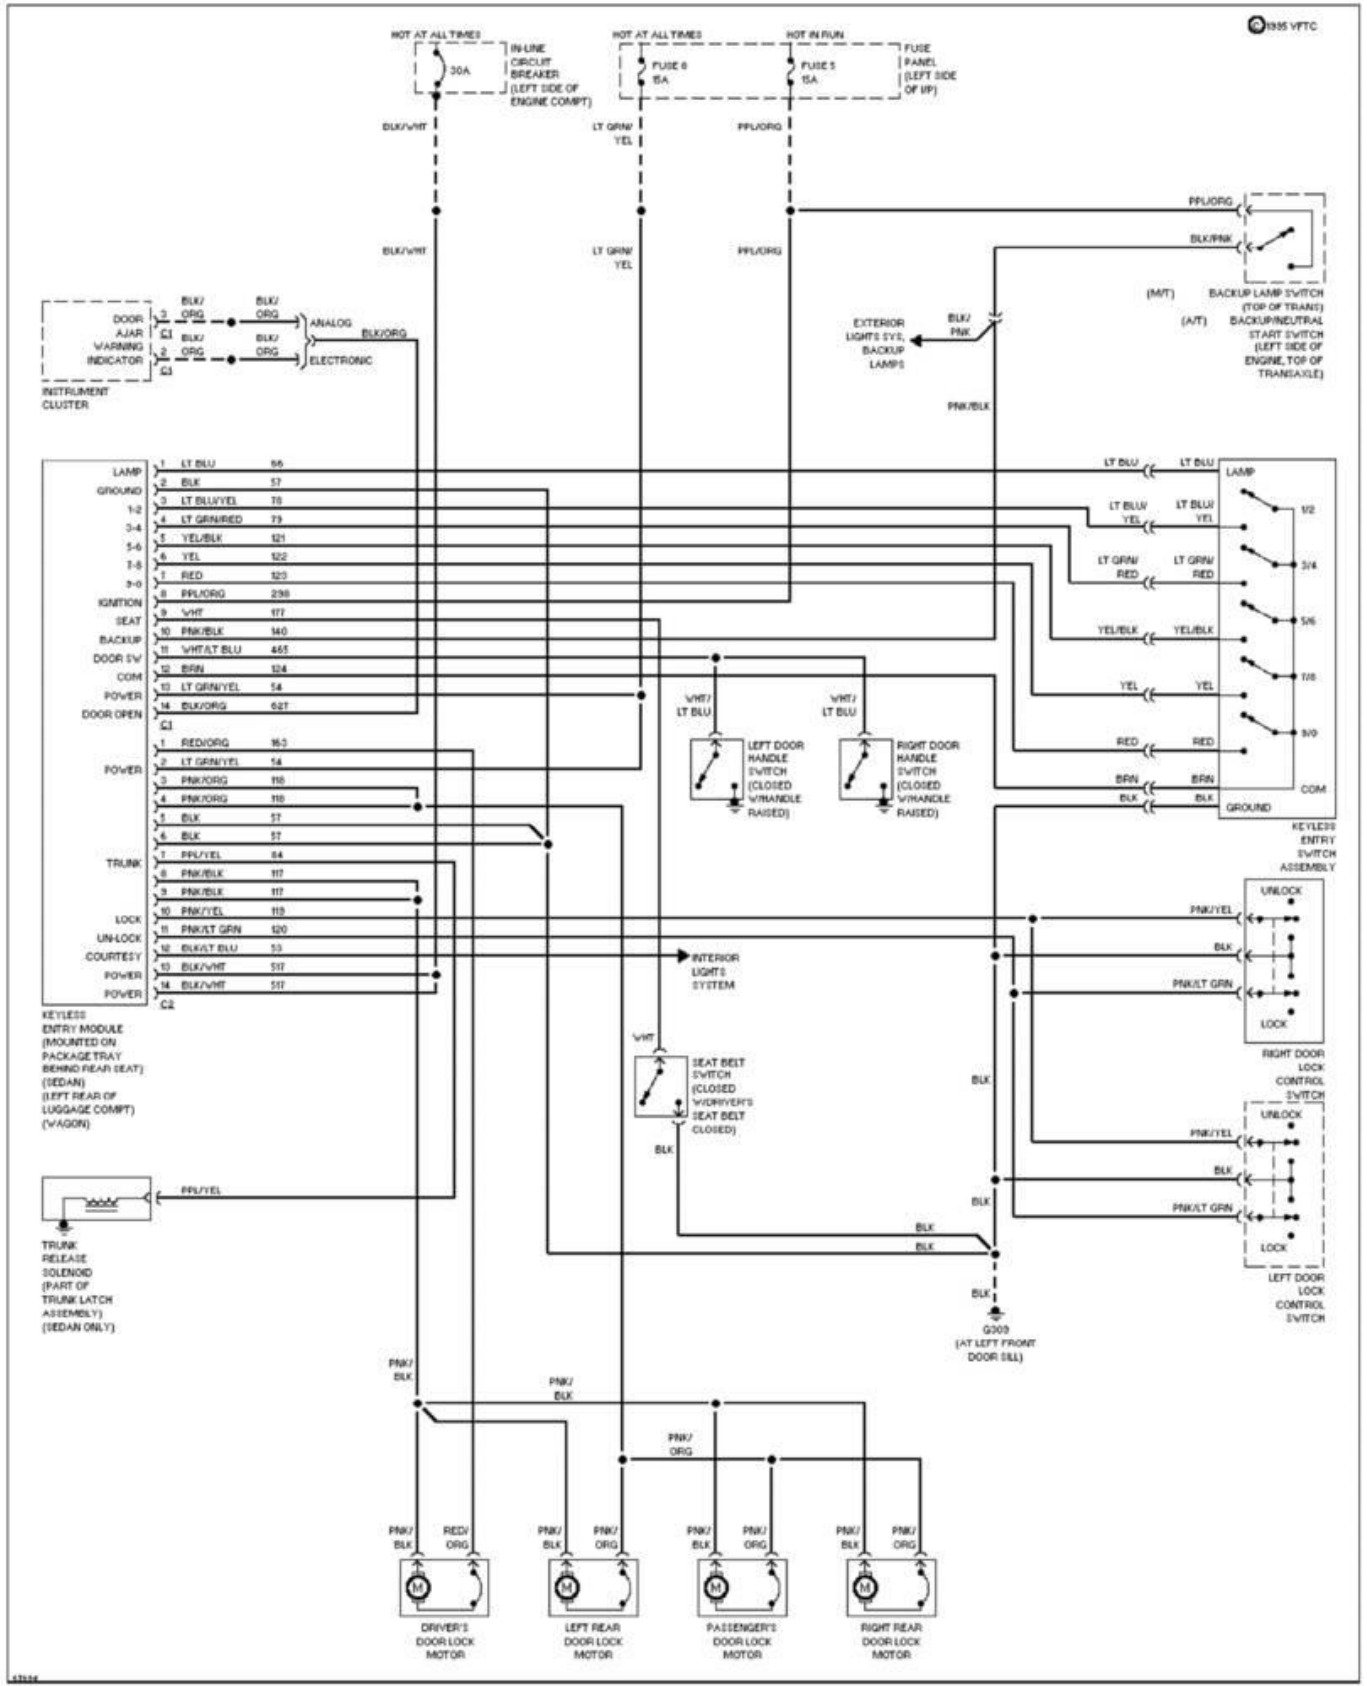

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 9: Power Mirror Circuit  
1988 Ford Taurus LX

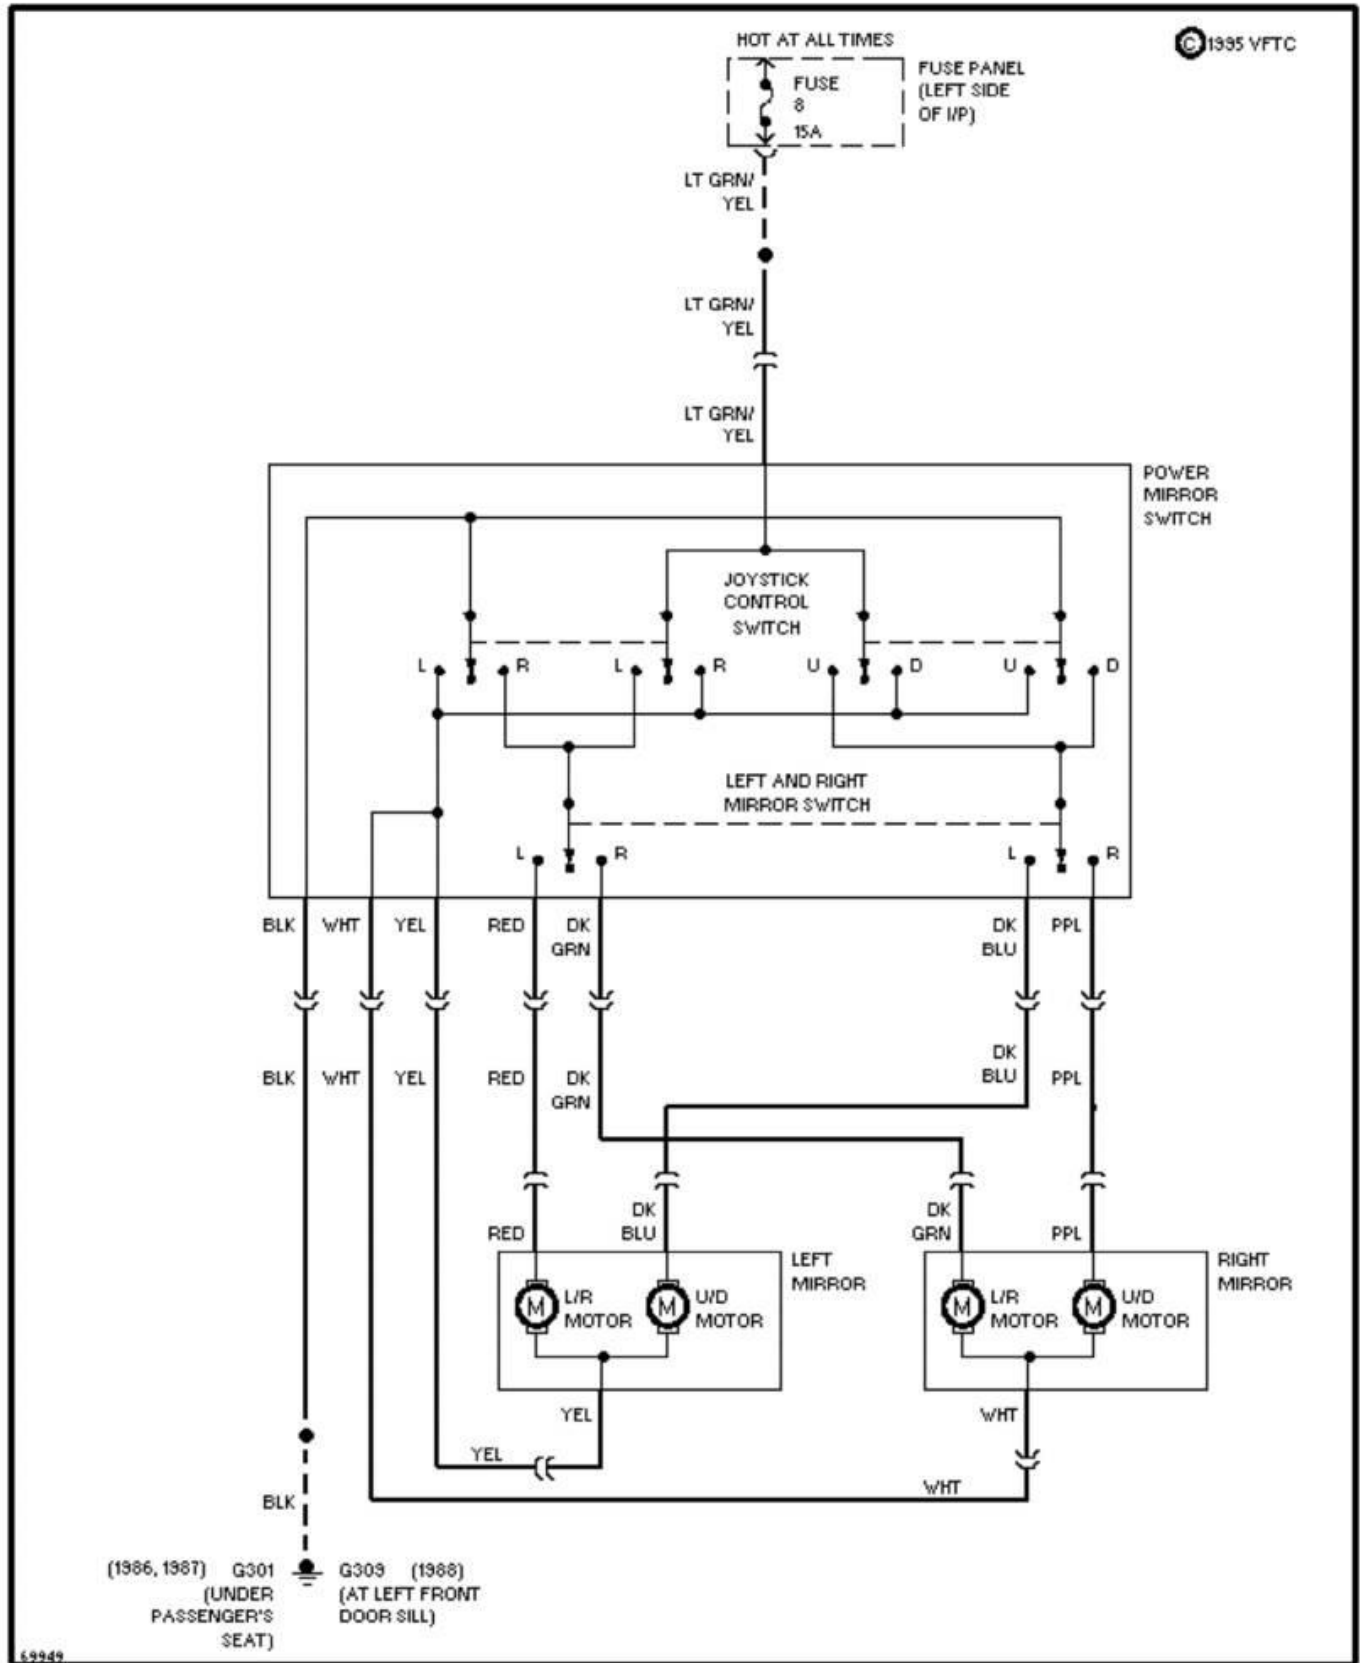

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 10: Lumbar Circuit  
1988 Ford Taurus LX

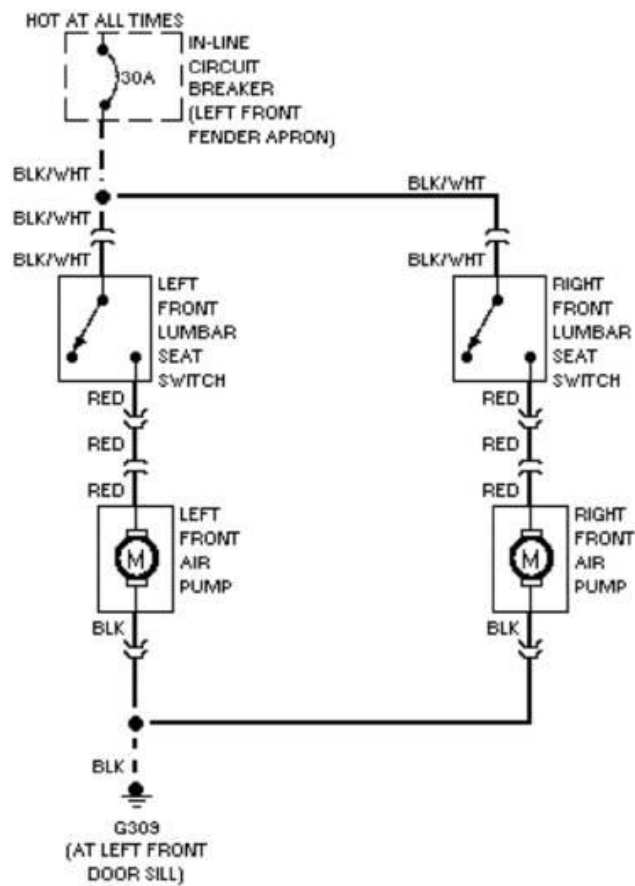


66512

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 11: Power Seat Circuit  
1988 Ford Taurus LX

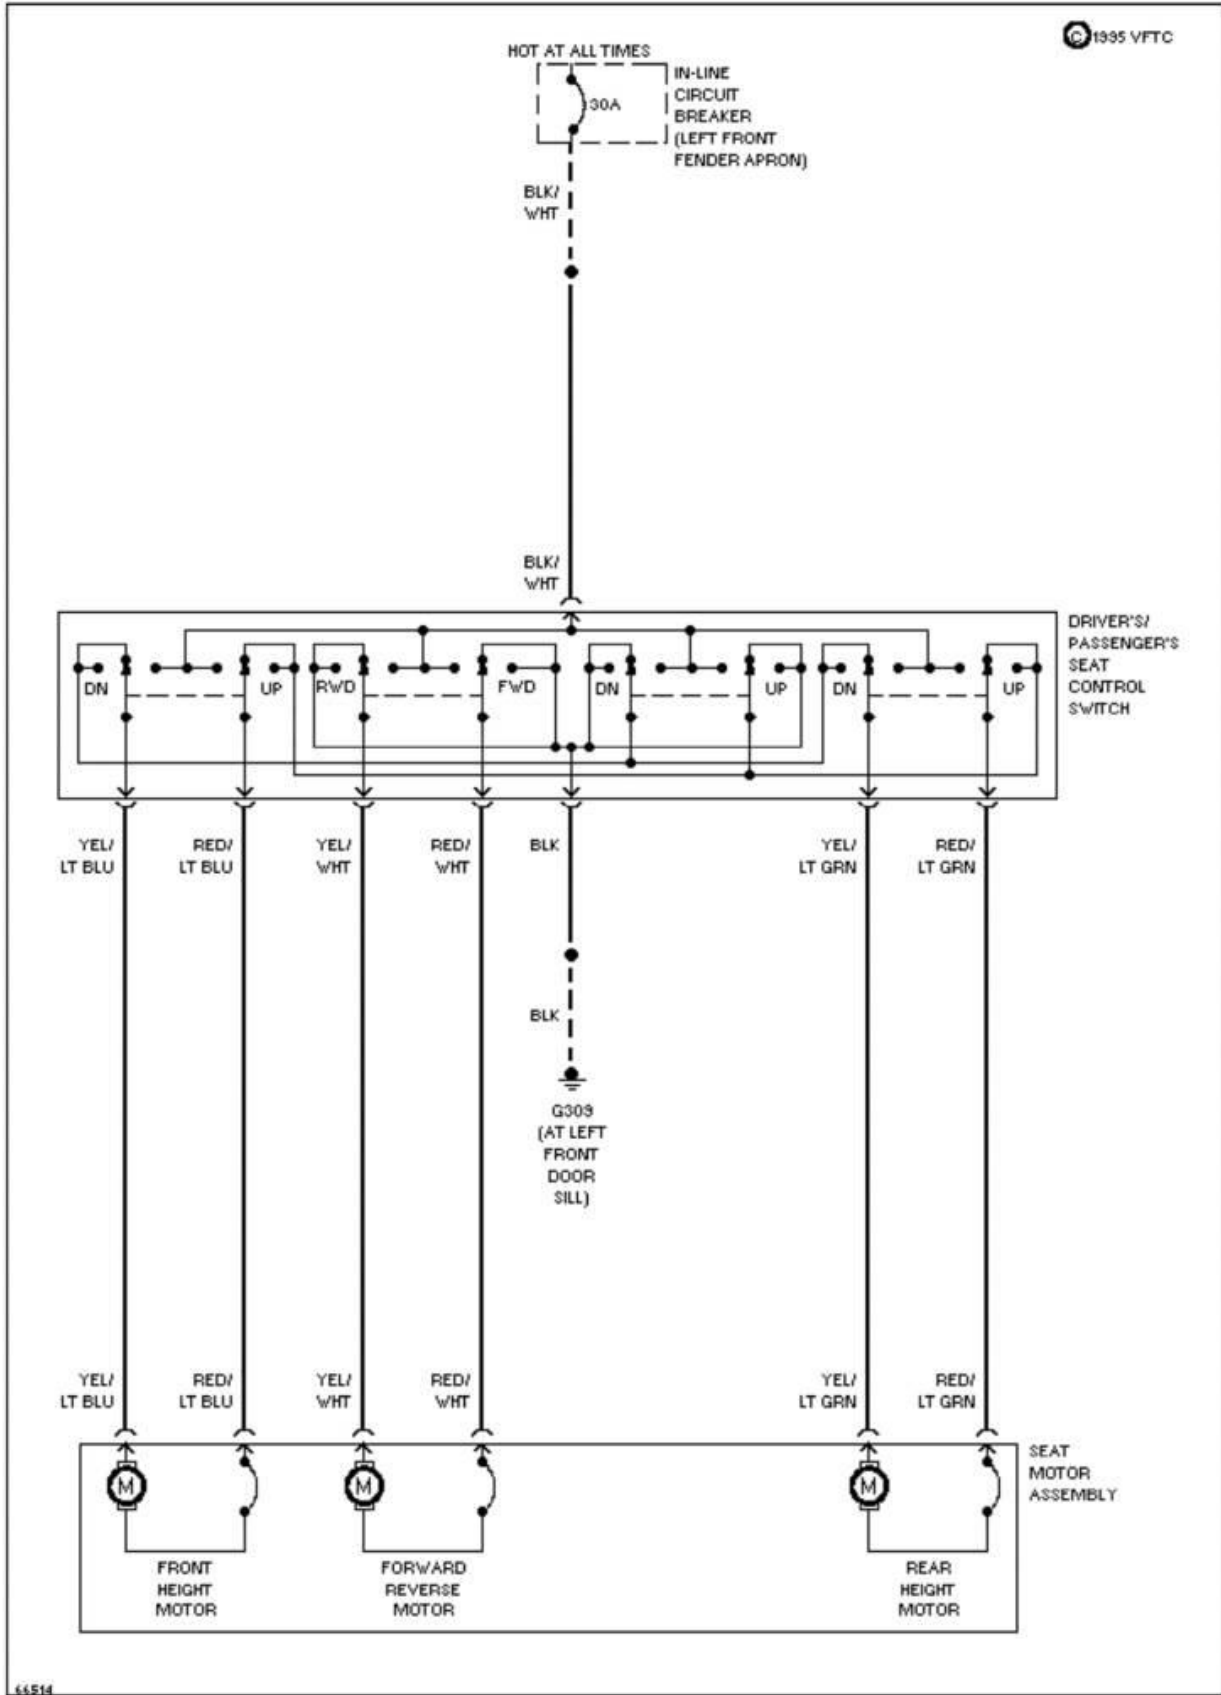




**1988 System Wiring Diagrams  
Ford - Taurus**

PAVLIN


**Fig. 13: Premium Sound Radio Circuit, AEC**  
1988 Ford Taurus LX

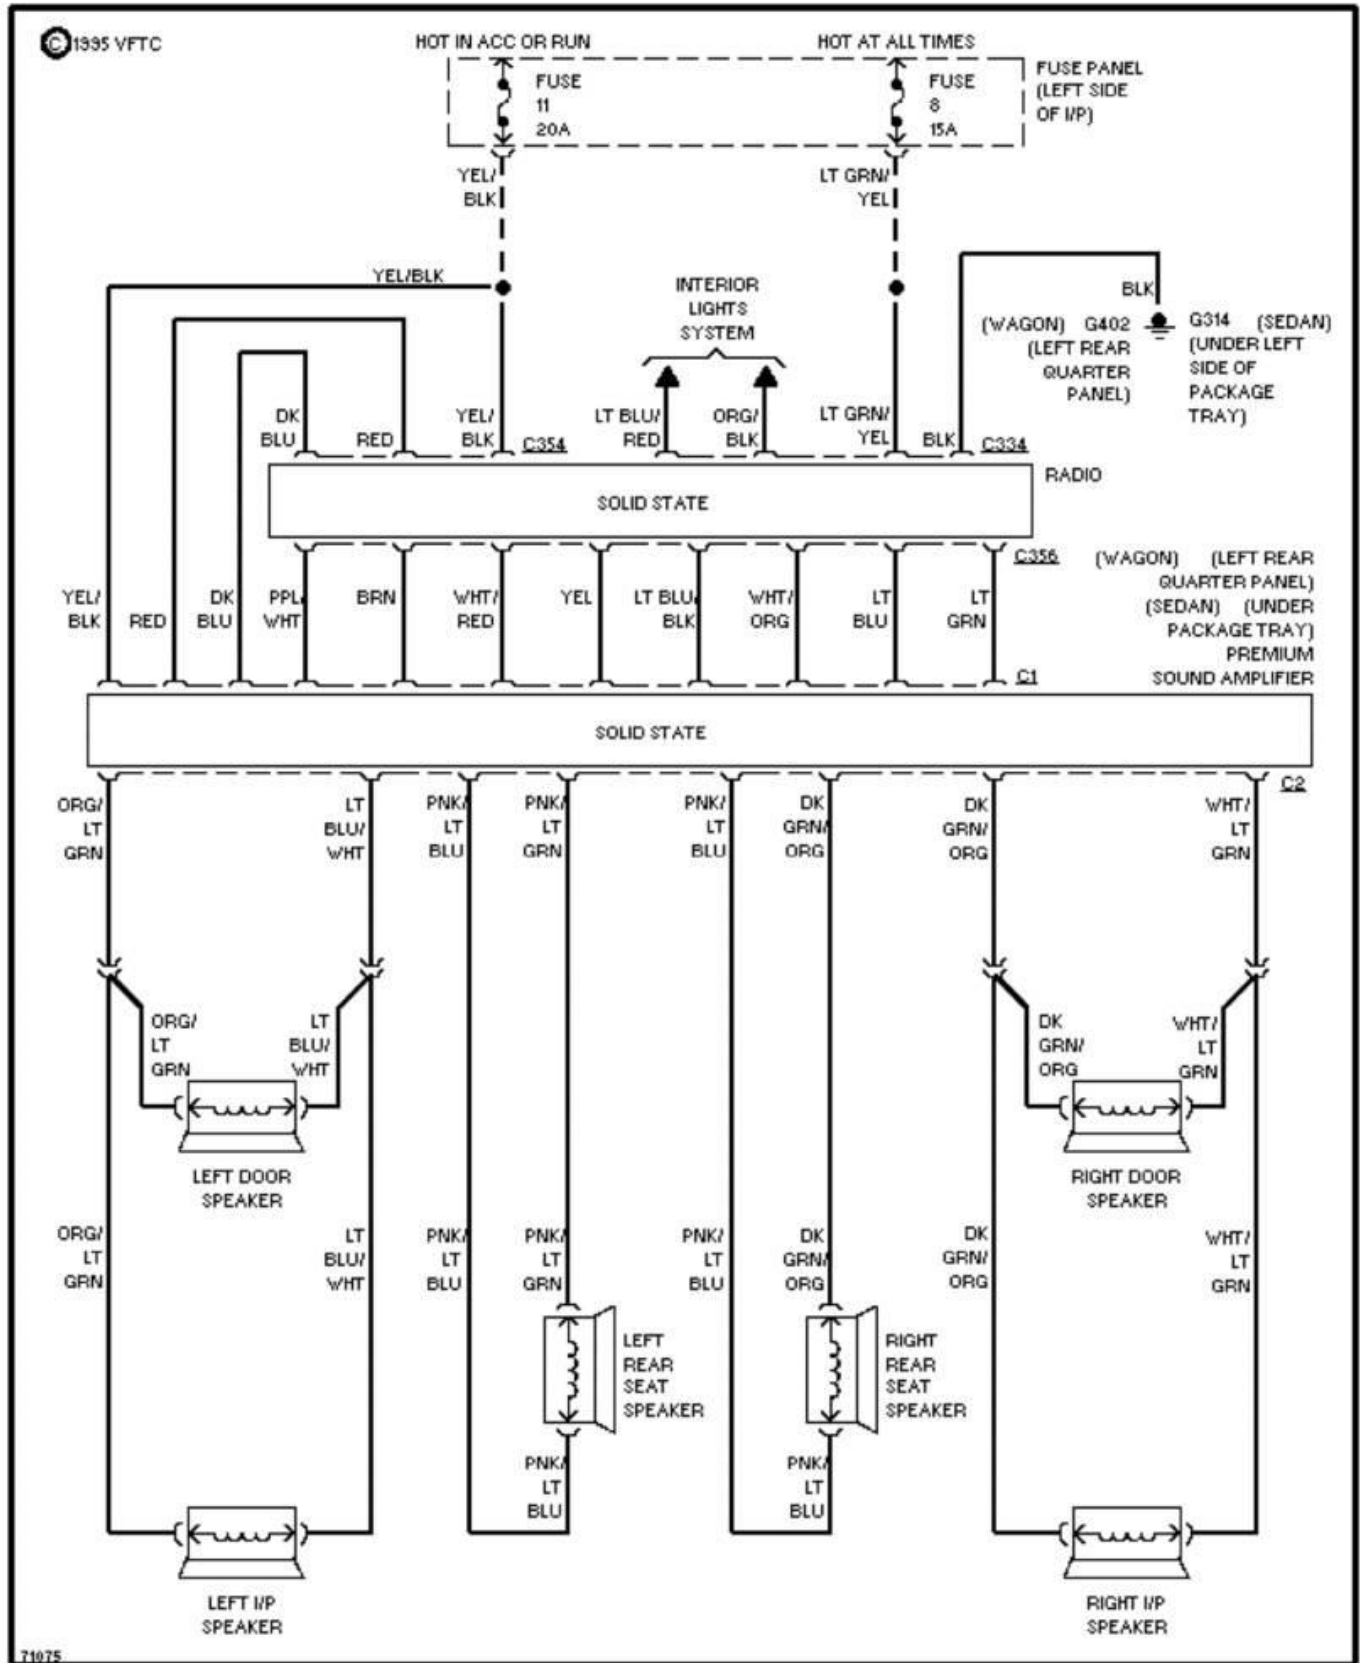

**1988 System Wiring Diagrams  
Ford - Taurus**

PAVLIN


**Fig. 14: Premium Sound Radio Circuit, Standard/AAV  
1988 Ford Taurus LX**

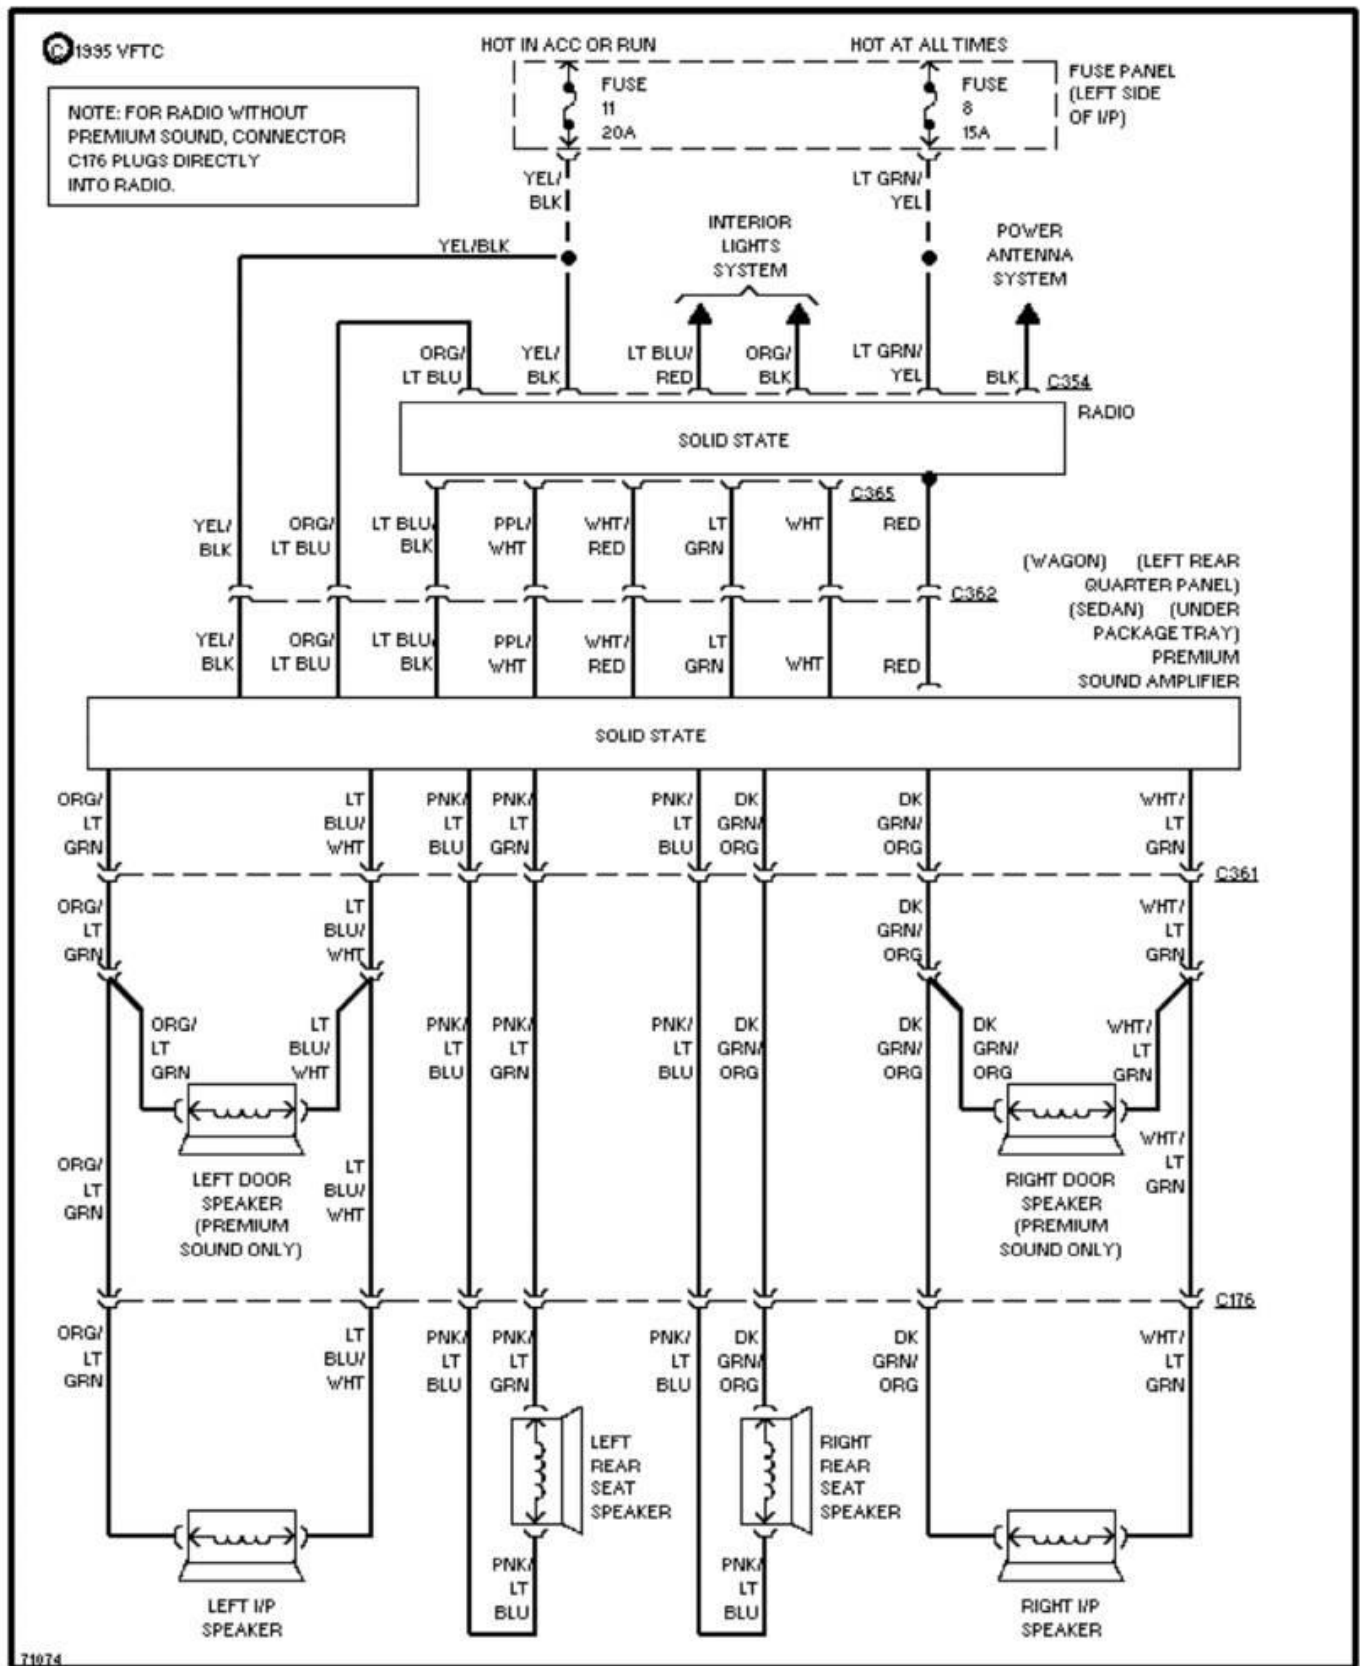

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 15: 2.5L, Charging Circuit  
1988 Ford Taurus LX

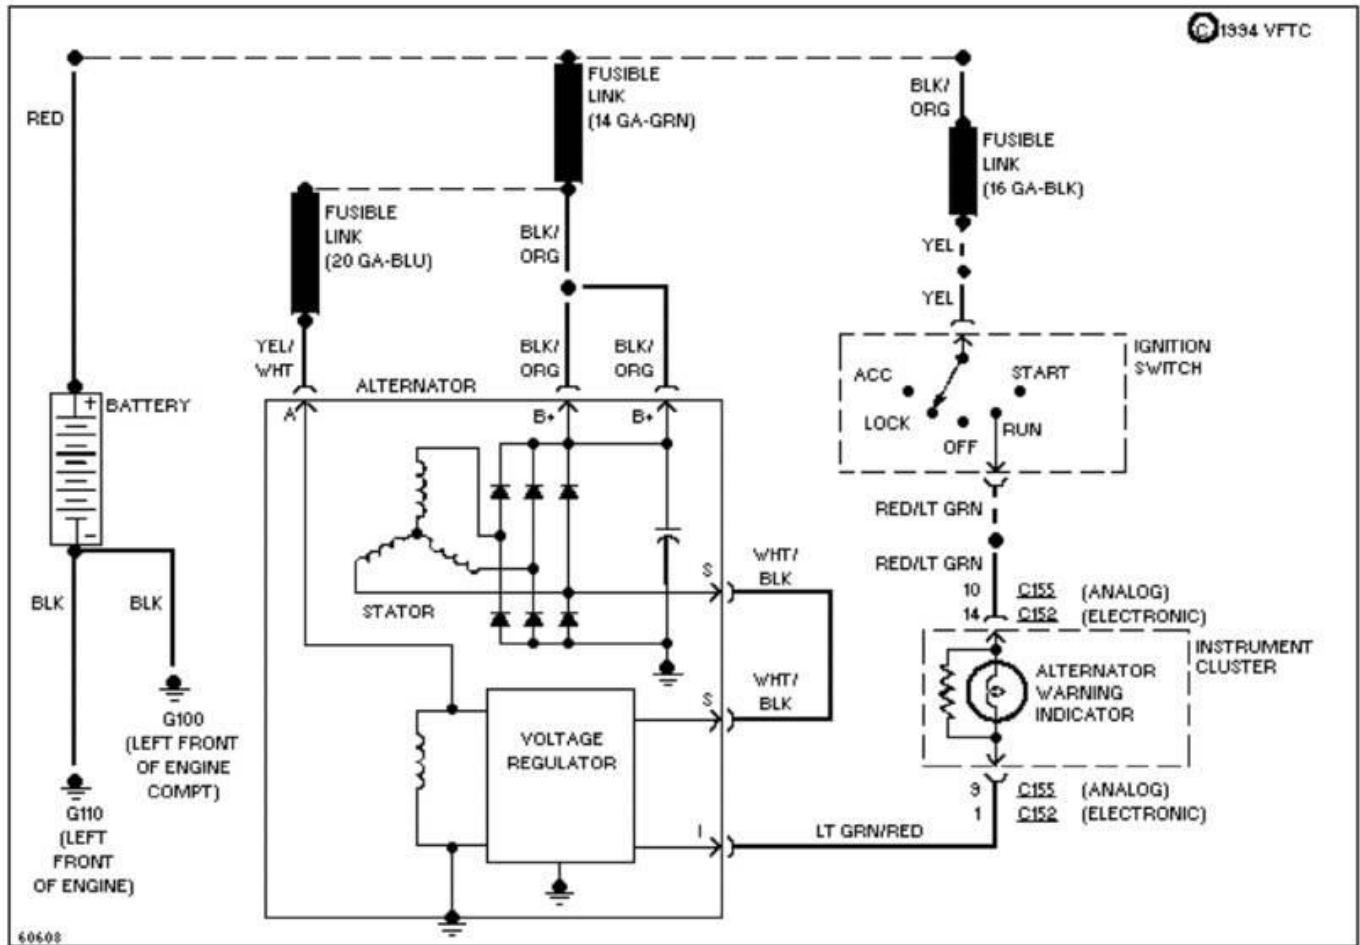




1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 16: Starting Circuit  
1988 Ford Taurus LX

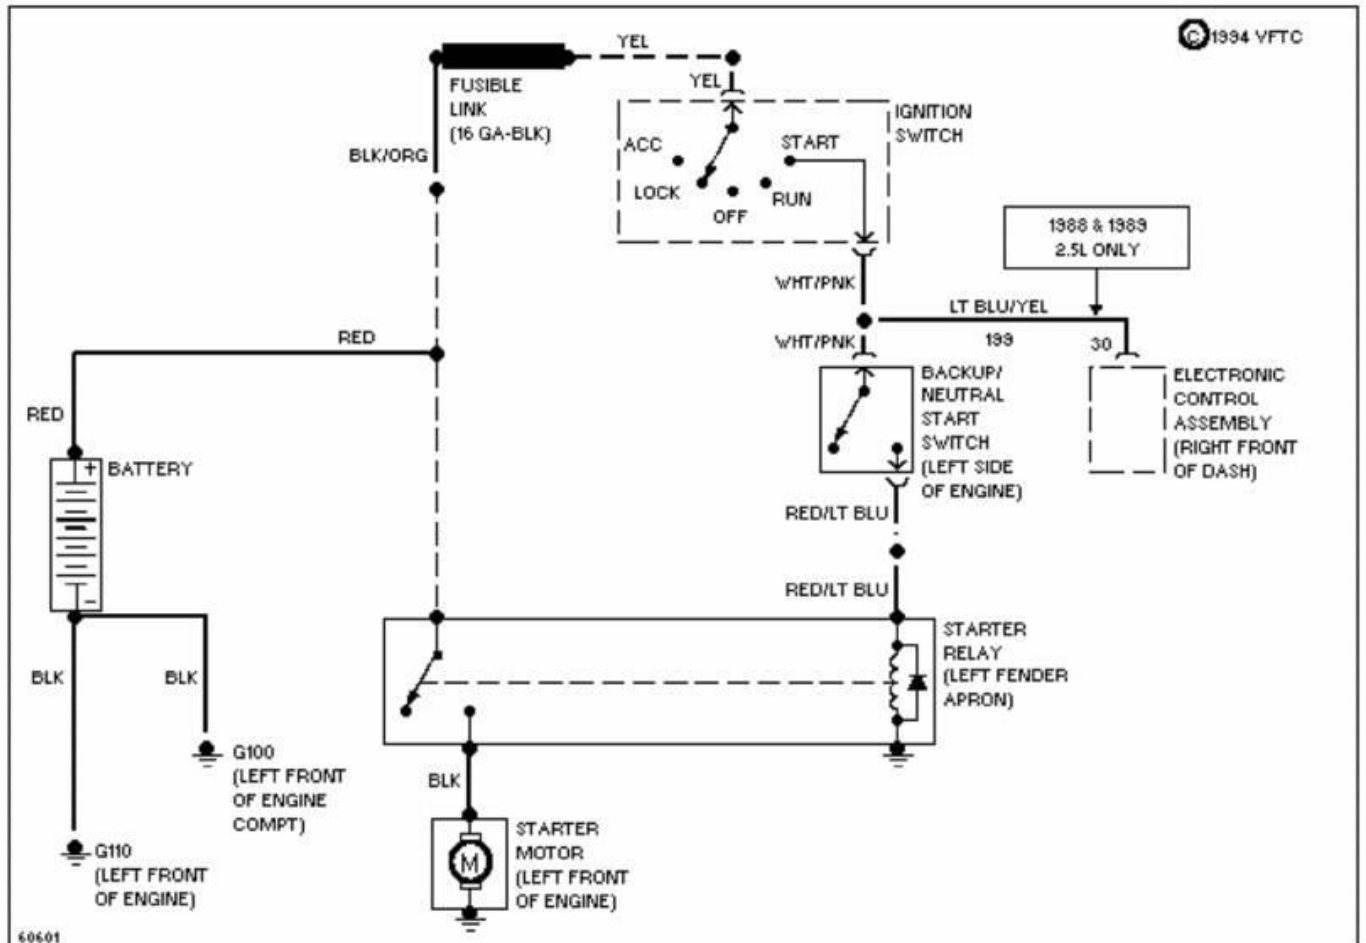

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 17: 3.0L, Charging Circuit, W/ Heated Windshield  
1988 Ford Taurus LX

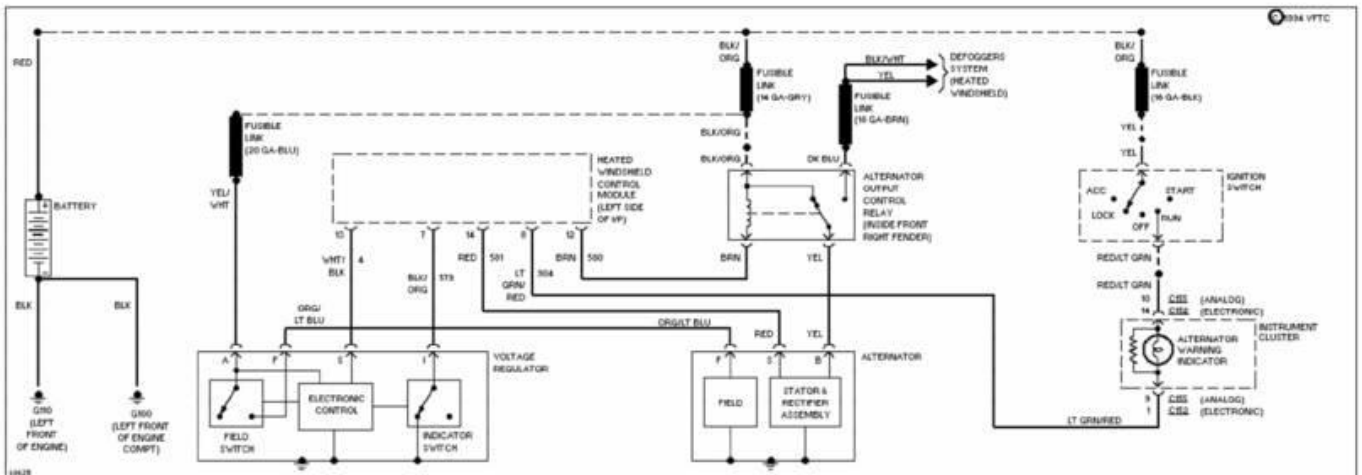

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 18: 3.0L, Charging Circuit, W/O Heated Windshield  
1988 Ford Taurus LX

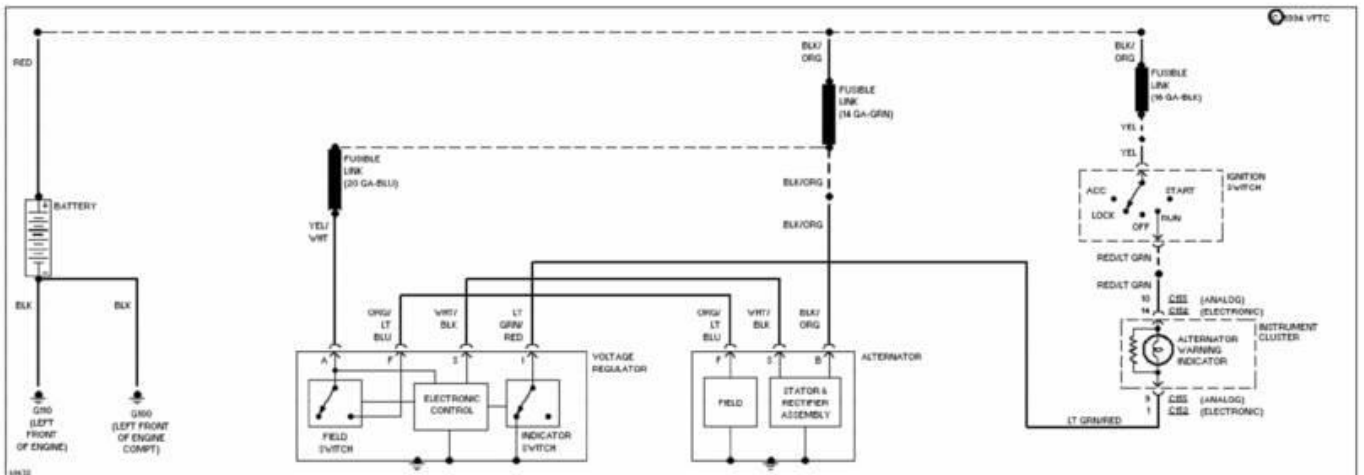

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 19: Starting Circuit  
1988 Ford Taurus LX

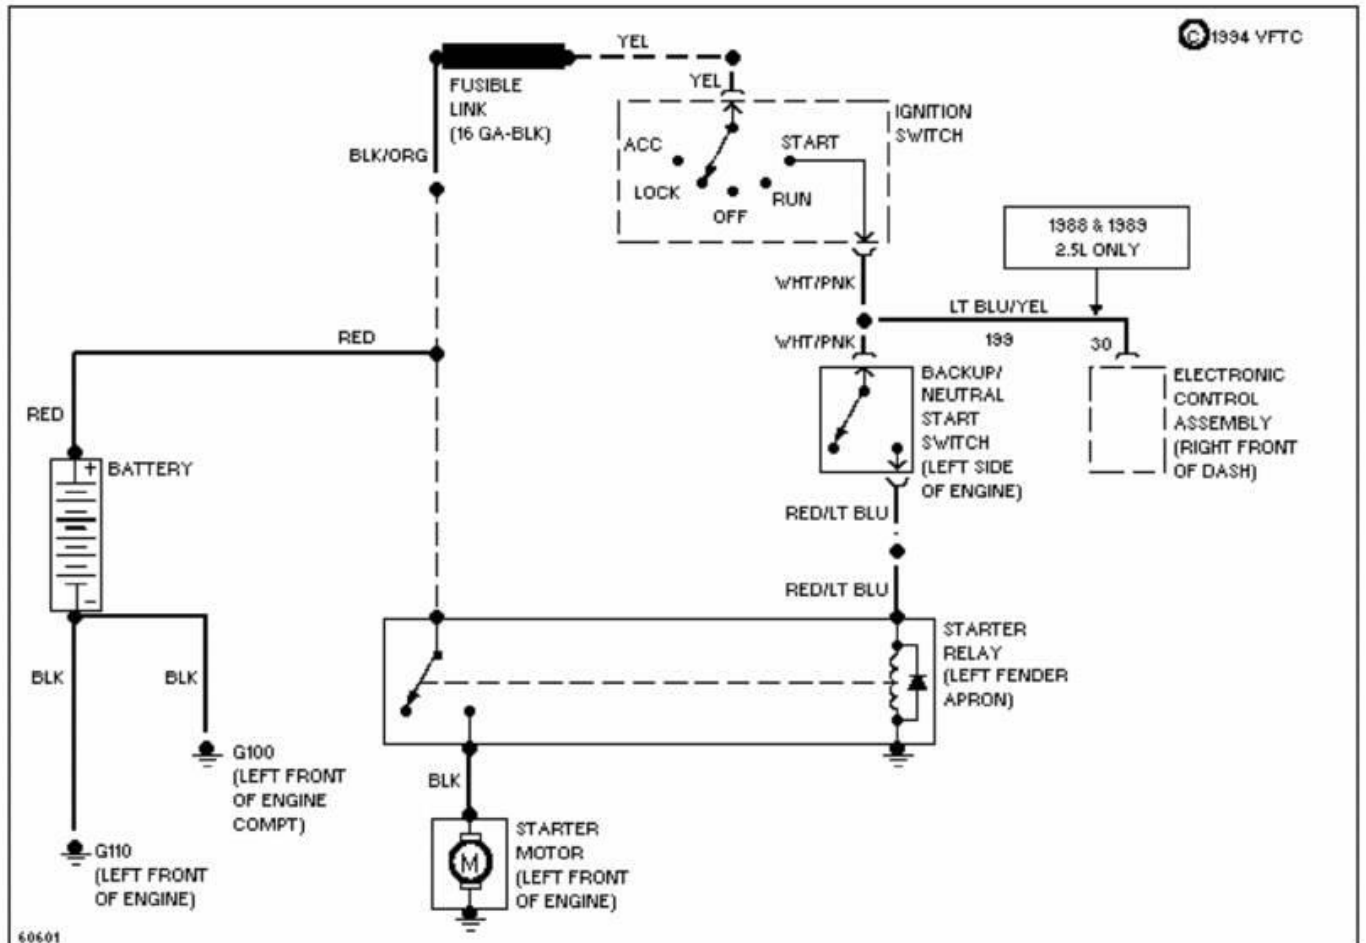

**1988 System Wiring Diagrams  
Ford - Taurus**

**PAVLIN**


**Fig. 20: 3.8L, Charging Circuit, W/ Heated Windshield  
1988 Ford Taurus LX**

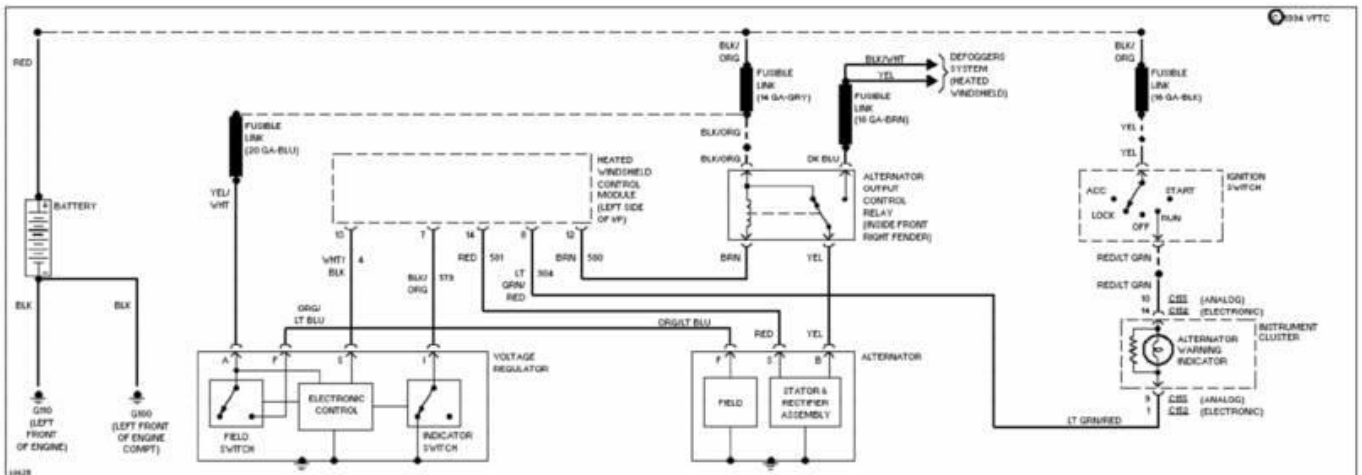

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 21: 3.8L, Charging Circuit, W/O Heated Windshield  
1988 Ford Taurus LX

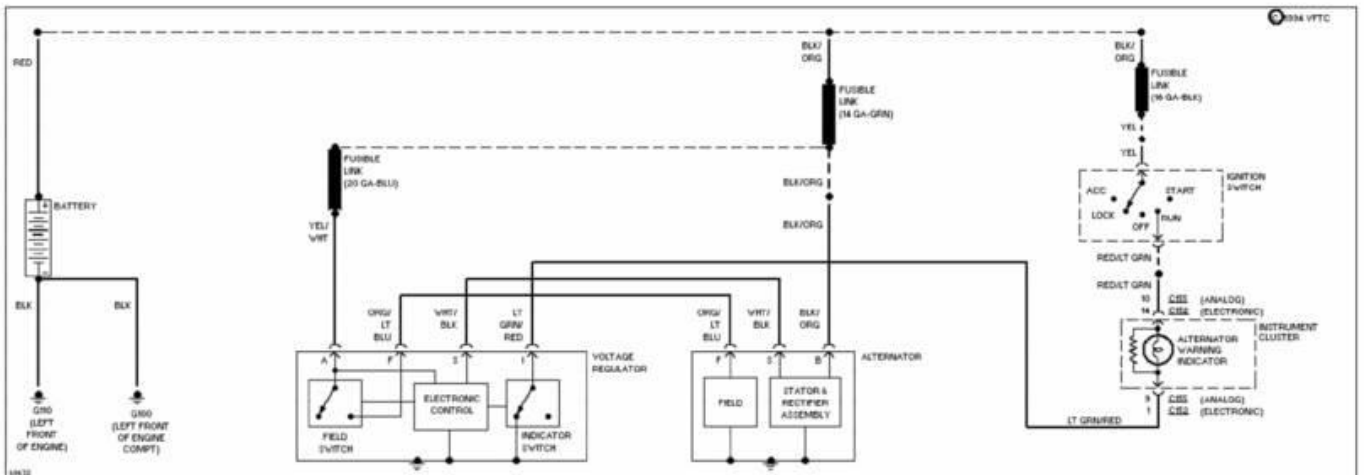

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 22: Starting Circuit  
1988 Ford Taurus LX

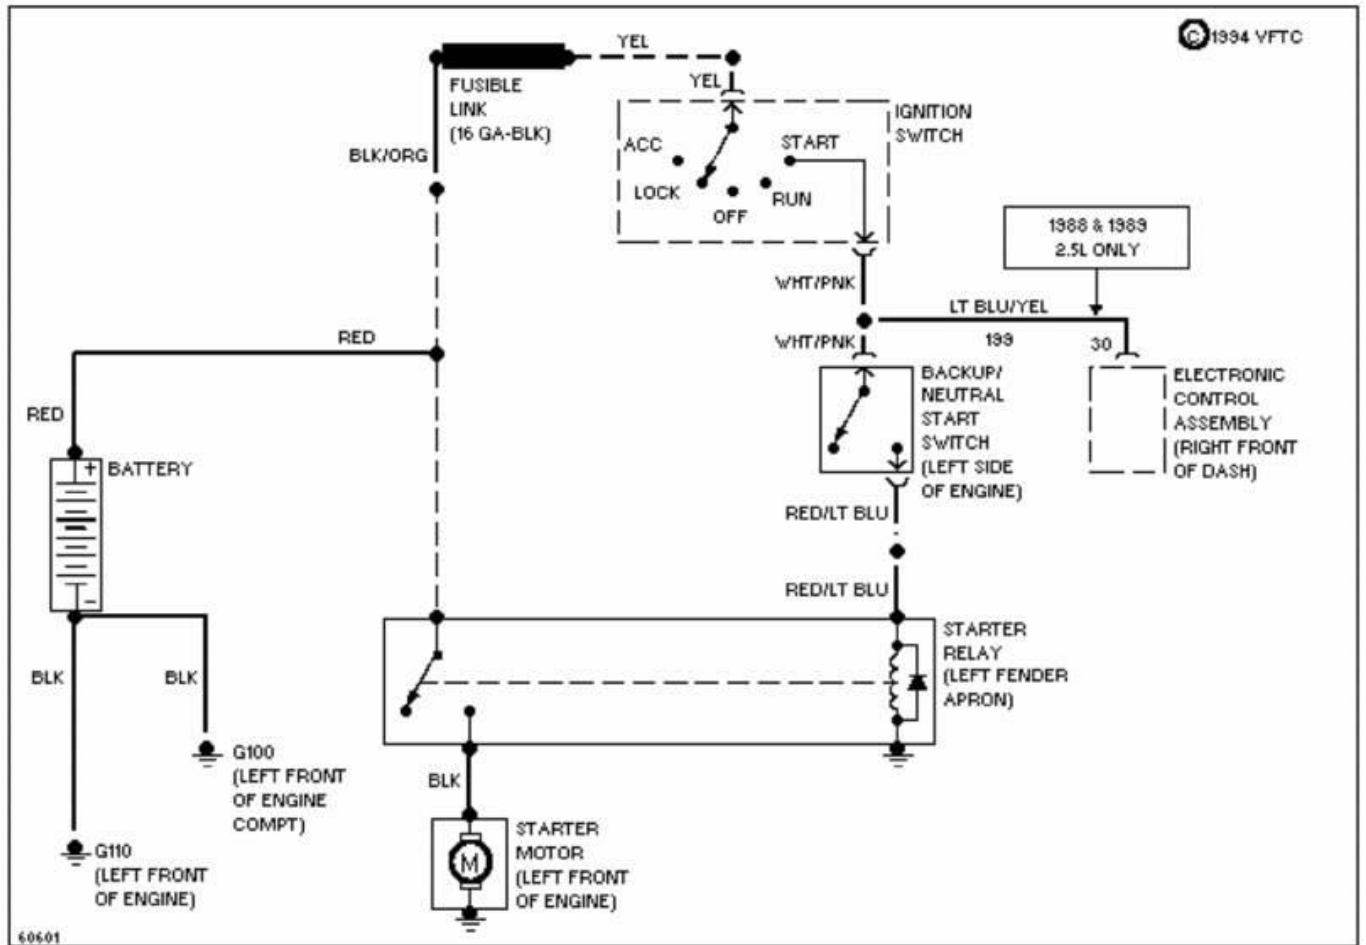

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 23: Trunk Release Circuit  
1988 Ford Taurus LX

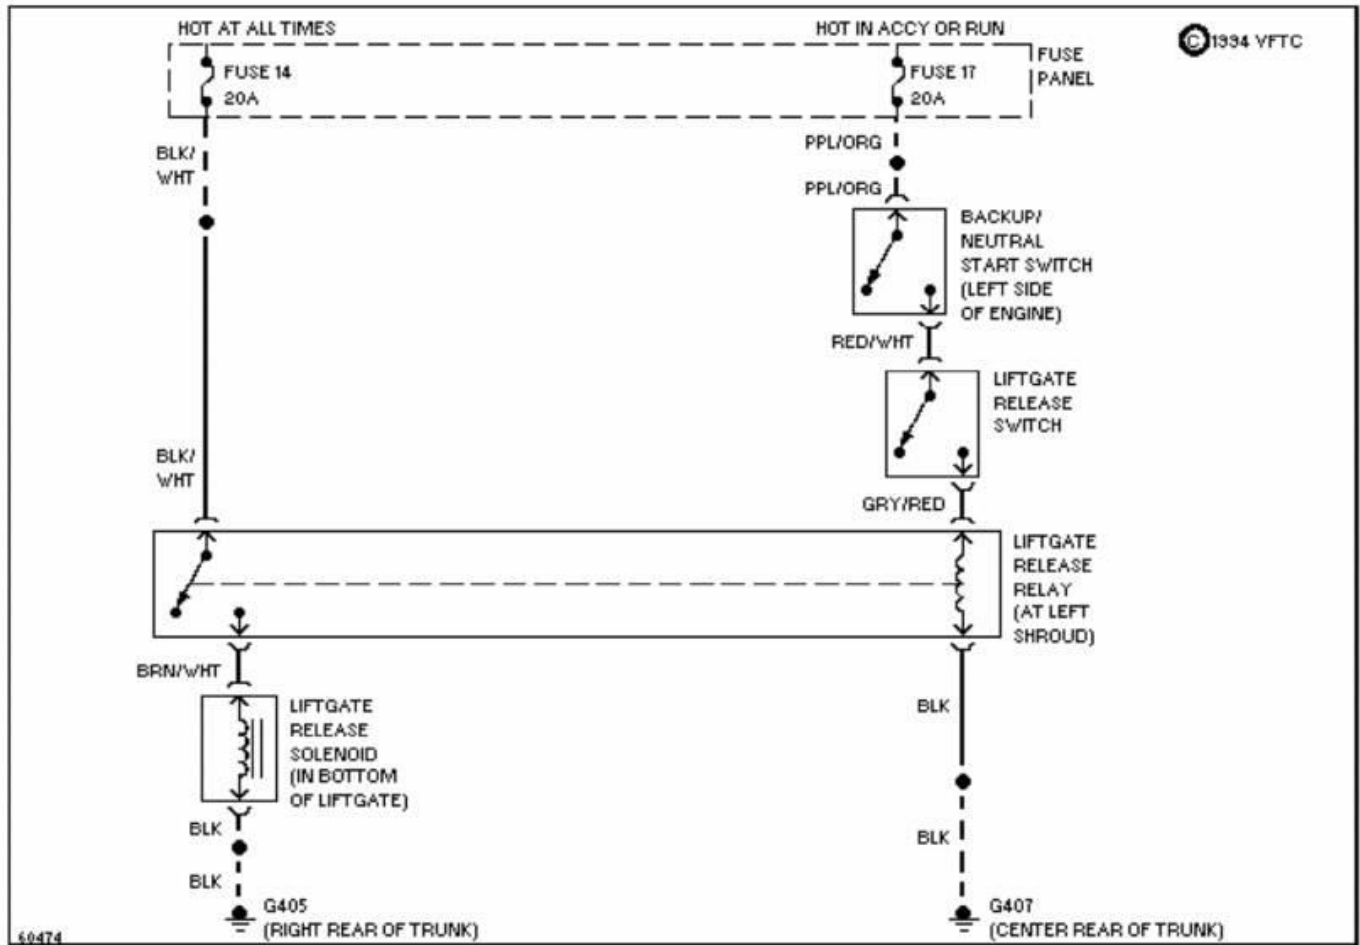




1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 24: 2-Speed Wiper/Washer Circuit  
1988 Ford Taurus LX

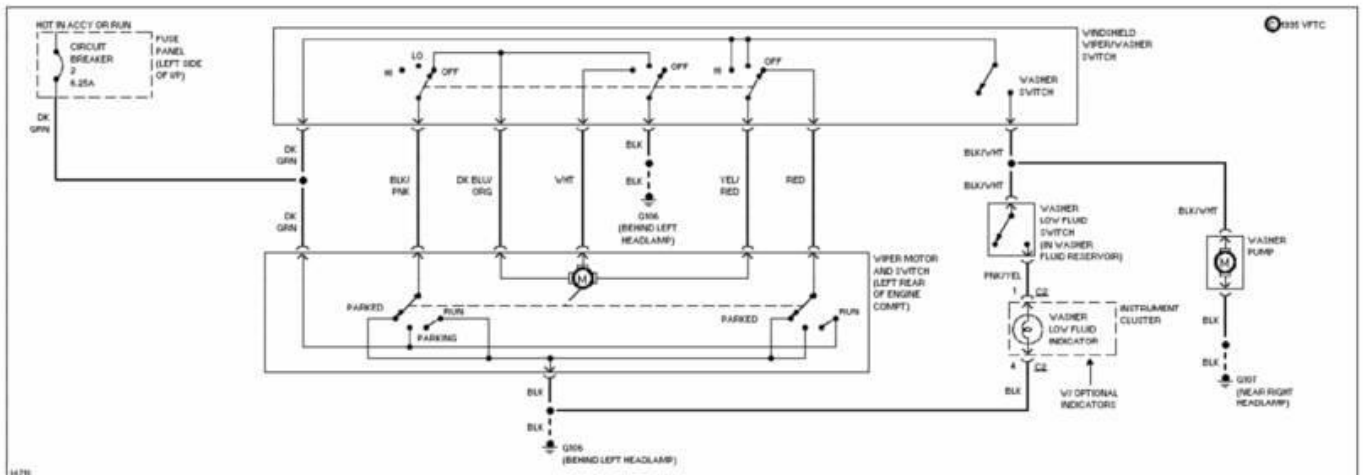


LN76

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 25: Interval Wiper/Washer Circuit  
1988 Ford Taurus LX

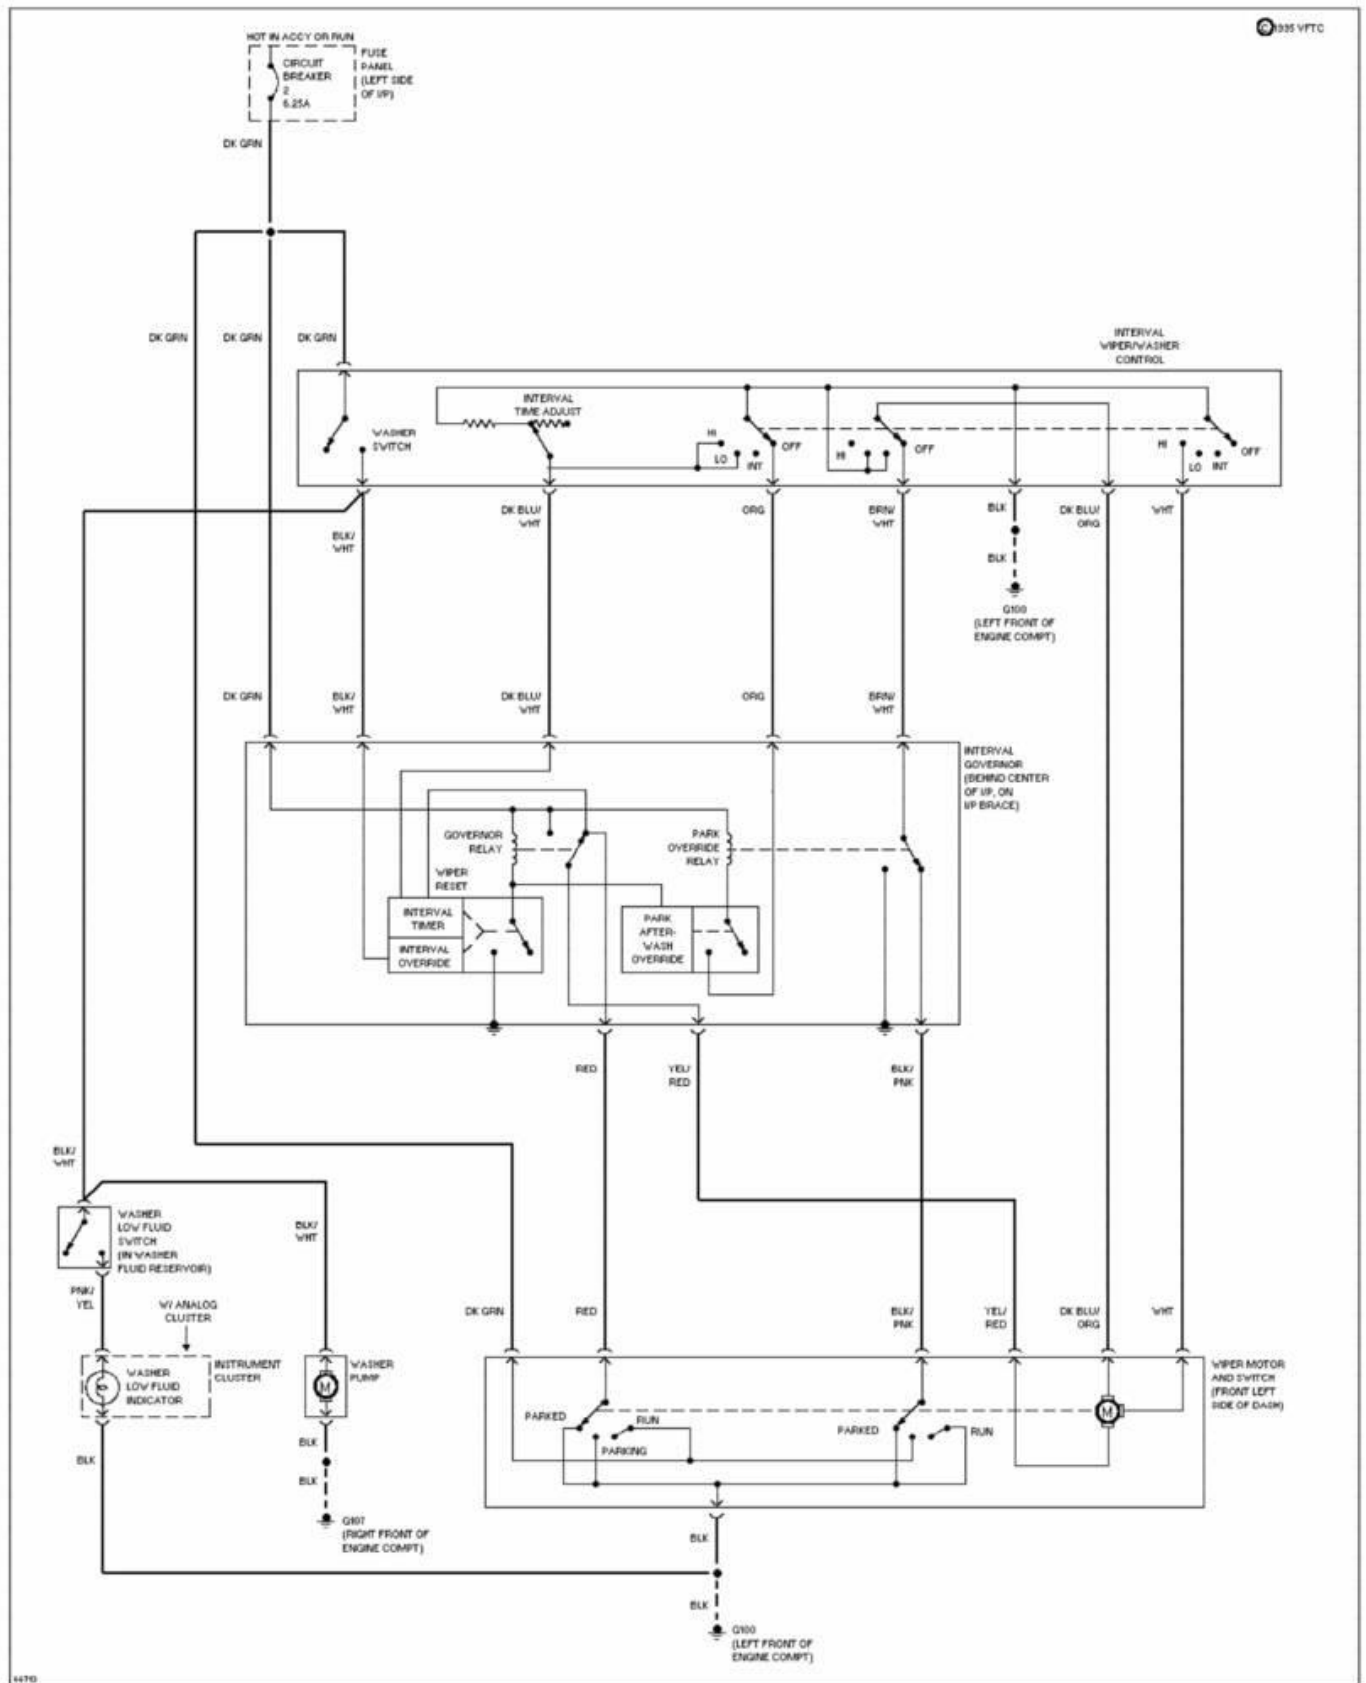

1988 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 26: Rear Wiper/Washer Circuit  
1988 Ford Taurus LX

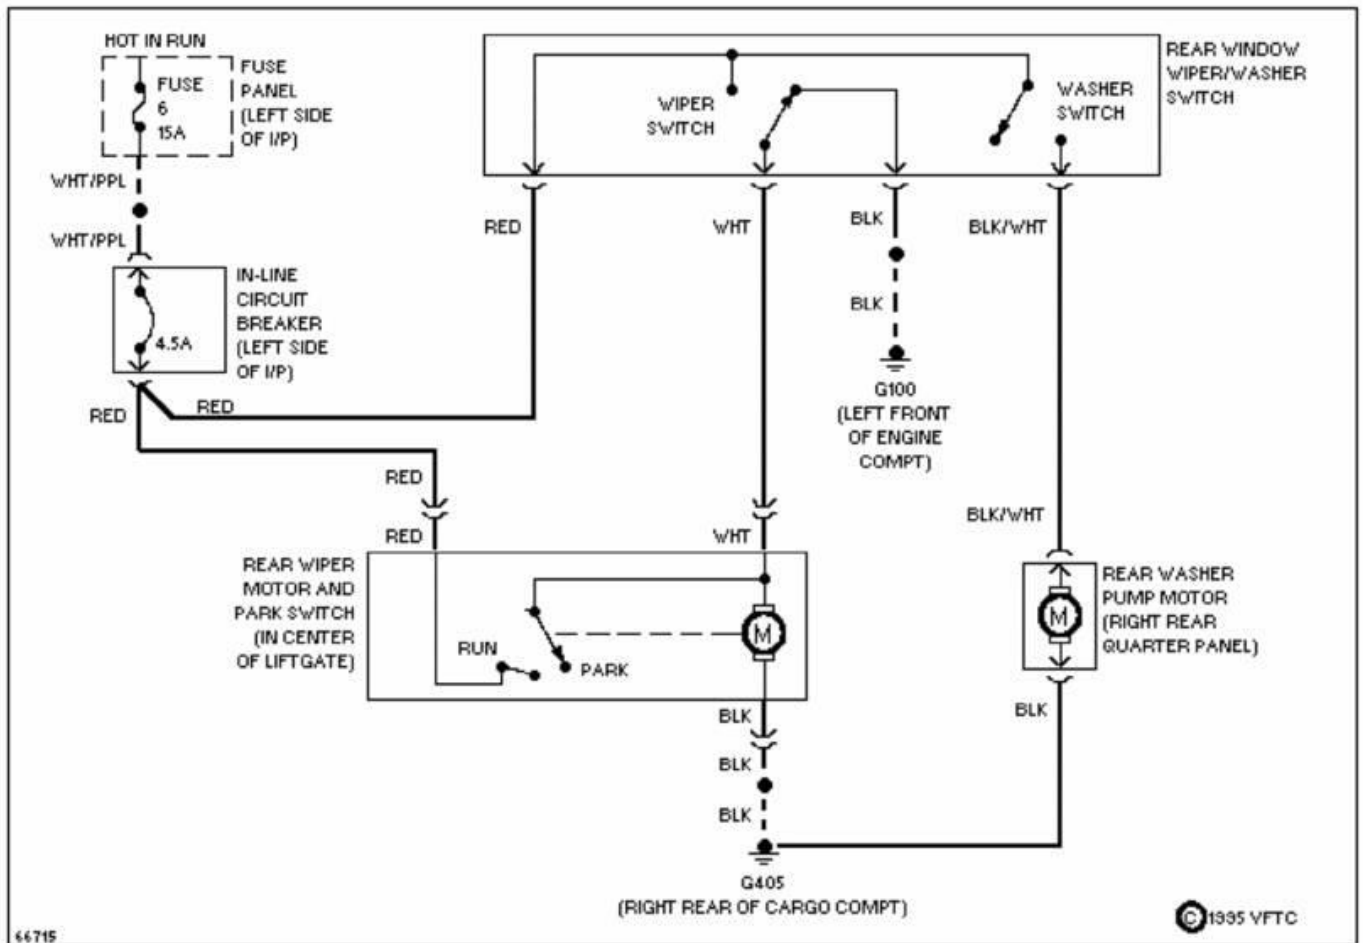

# WIRING DIAGRAMS


## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 1: Engine Compartment & Headlights  
1988 Ford Taurus LX

**COMPONENT LOCATOR:**

A/C CONTROL SYSTEM	.....	B-C 24-25
ALTERNATOR	.....	C-E 3
ALT OUTPUT CTRL RLY	.....	E 3
AUTO LAMP RLY #S 1 & 2	.....	A-B 20
AUTO LAMP TIME CTRL SW	.....	A 23
AUTO TEMP CTRL SYSTEM (EATC)	.....	A 25-27
BACK-UP LT SW	.....	C 40
BATTERY	.....	A 2
CIG LTR	.....	A 28, C 22
CLOCK	.....	A 28
COOLANT TEMP SENS	.....	D 29, D 30
COURTESY LTS	.....	A-C 37-38
CRACKED W/SHIELD SENSOR RESISTOR	.....	E 22
CRUISE CTRL SERVO	.....	A 12
CRUISE CTRL SW	.....	B 28
DEFOGGER SW	.....	C 28
DIAGNOSTIC WARNING MOD	.....	A-E 16
DIMMER SW (MULTI-FUNCTION SW)	.....	C-D 26-27
DIRECTIONAL FLASHER	.....	C 13
DIRECTIONAL SWITCH (MULTI-FUNCTION SW)	.....	C-D 26-27
DISTRIBUTOR	.....	B 3
DOOR HANDLE SWITCHES	.....	D 38
DOOR LOCK SWS	.....	D 32-33, E 37-38
DOOR SWS	.....	A 26-37, B 39, A-B 40
DUAL BRAKE WARN SW	.....	A-B 15
EATC CTRL HEAD	.....	A 28
ECCIV SELF TEST CONNECTOR	.....	B-C 6, B-C 10
ELECT CTRL ASSY (2.5L)	.....	A-D 7
ELECT CTRL ASSY (3.0/3.8L)	.....	A-D 11
ENGINE COMPT LT	.....	E 1
FUEL TANK SENDER	.....	D 30, D 28
FUS LINKS	.....	A-B 2-3
FUSE BLOCK	.....	C 13-14
GLOVE BOX LT/SW	.....	C 39
HAZARD SWITCH (MULTI-FUNCTION SW)	.....	C-D 26-27
HEADLIGHT SWITCH	.....	A 21
HEATED EXH GAS O <sub>2</sub> SENS	.....	E 5
HEATED W/SHIELD CTRLS	.....	D-E 22-23
HEATER CTRL SYSTEM	.....	A-B 24-25
HORN RELAY	.....	D 14-15
IGNITION COIL	.....	C 3
IGN KEY REMINDER SW	.....	E 12, E 15
IGNITION SW	.....	A 14-15
ILLUM LTS	.....	B-D 21-23
INST PANEL DIMMER SW	.....	A 22
INST CLSTR STD/ELEC	.....	A-E 29-31
INTEGRATED CTRLLR MOD	.....	B-D 4
INTERVAL GOVERNOR	.....	E 25
KEYLESS ENTRY CTRL SYSTEM	.....	D-E 36-39
LCD DIMMER RELAY (W/AUTO LAMPS)	.....	B-C 20
LIGHT SENSOR AMPLIFIER	.....	A 22-23
LIFTGATE AJAR SW	.....	B 30, D 28-29
LIFTGATE RELAY/SOL/SW	.....	D-E 20
LOW OIL LEVEL RELAY	.....	C-D 12
LOW OIL LEVEL SW	.....	D 12
LOW WSHR FLUID LVL SWITCH	.....	C 29, C 30
LUMBAR SUPPORT SVS	.....	A 34-35
MULTI-FUNCTION SW	.....	C-D 26-27
NEUT SAFETY/BACK-UP LT SW	.....	B 15
OIL PRES SW	.....	B 30, D 28-29
PARK BRAKE SW	.....	A 15
POWER ANTENNA SWITCH	.....	B 34
POWER DOOR LOCK SYS	.....	D-E 32-33
POWER MIRROR CTRL SYSTEM	.....	B-C 32-34
POWER SEAT CTRL SVS	.....	A-B 32-34
POWER WINDOW CTRL SYSTEM	.....	C-D 33-35
RADIO NOISE CAP	.....	C 3
SEAT BELT SW	.....	E 12, E 13
STARTER RELAY	.....	A 2
STOP LT SWITCH	.....	D-E 26
UPSHIFT DIMMER RLY (M/T)	.....	D 12
VOLTAGE REGULATOR	.....	D 3
WARNING BUZZER	.....	E 12
WARNING CHIME	.....	E 13
WASHER MOTOR (FNT)	.....	C 2
WINDOW SAFETY RELAY	.....	A 34
WIPER MOTOR (FNT)	.....	C 1-2
WIP/WSHR CTRL SYS (FNT)	.....	D-E 24
WIP/WSHR CTRL SYSTEM (REAR)	.....	E 34-35

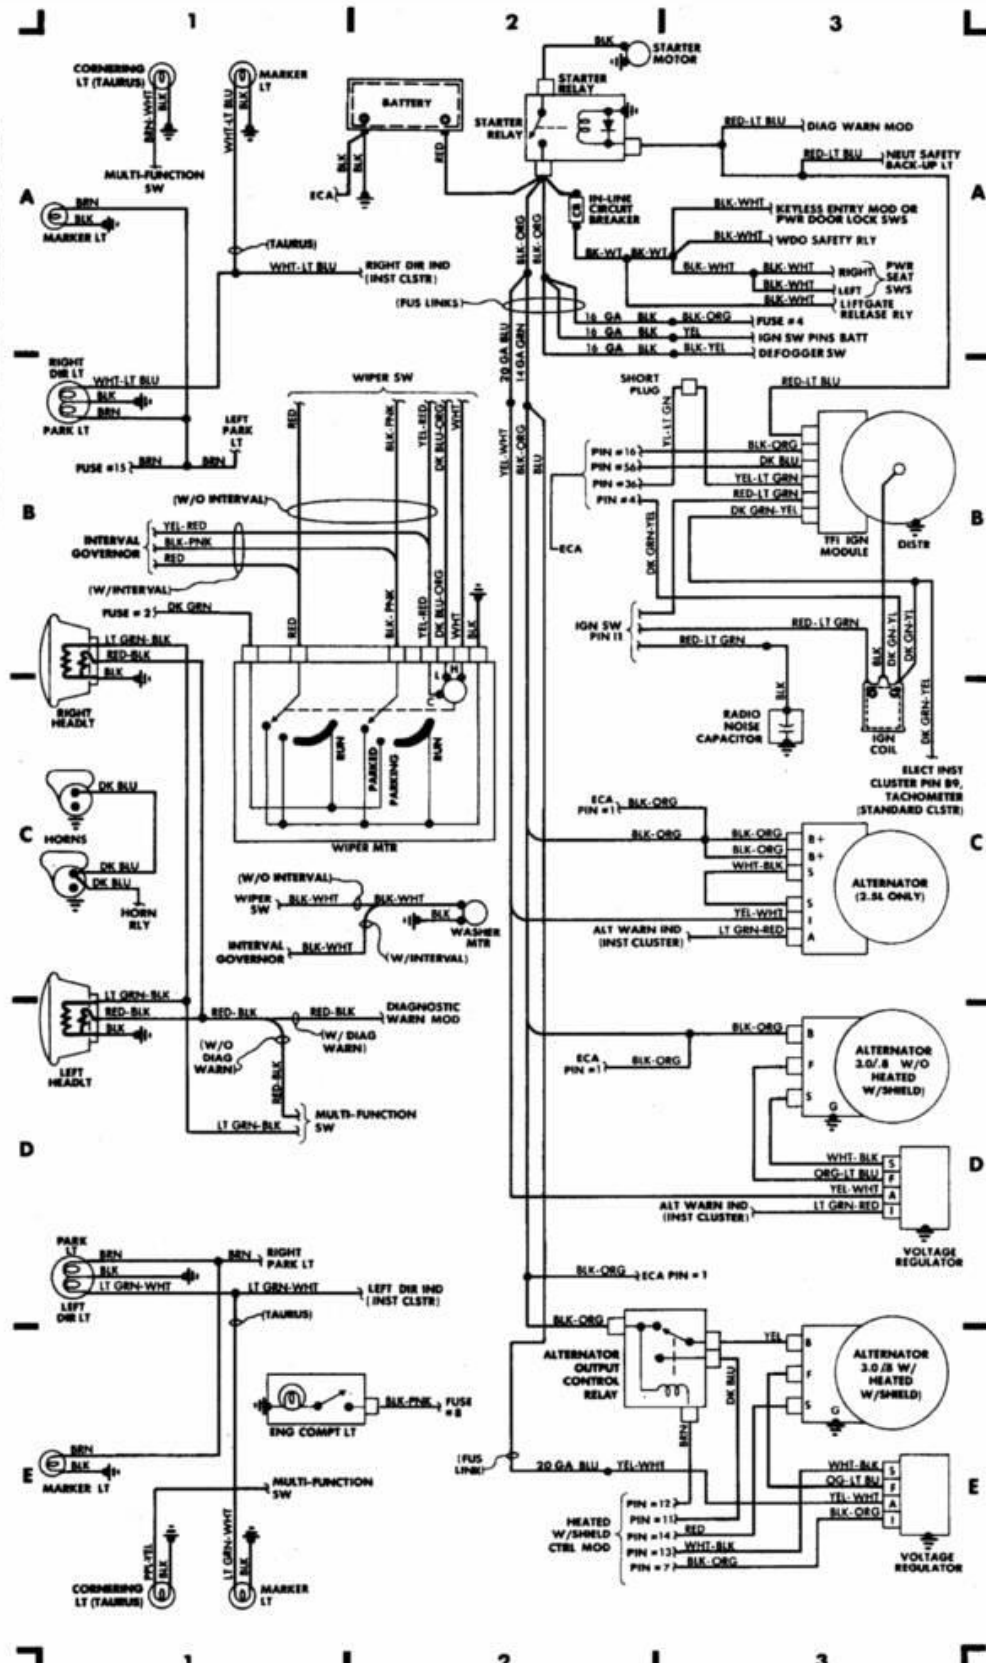

98477




# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 3: Computer Engine Control (3.0L 3.8L V6)  
1988 Ford Taurus LX

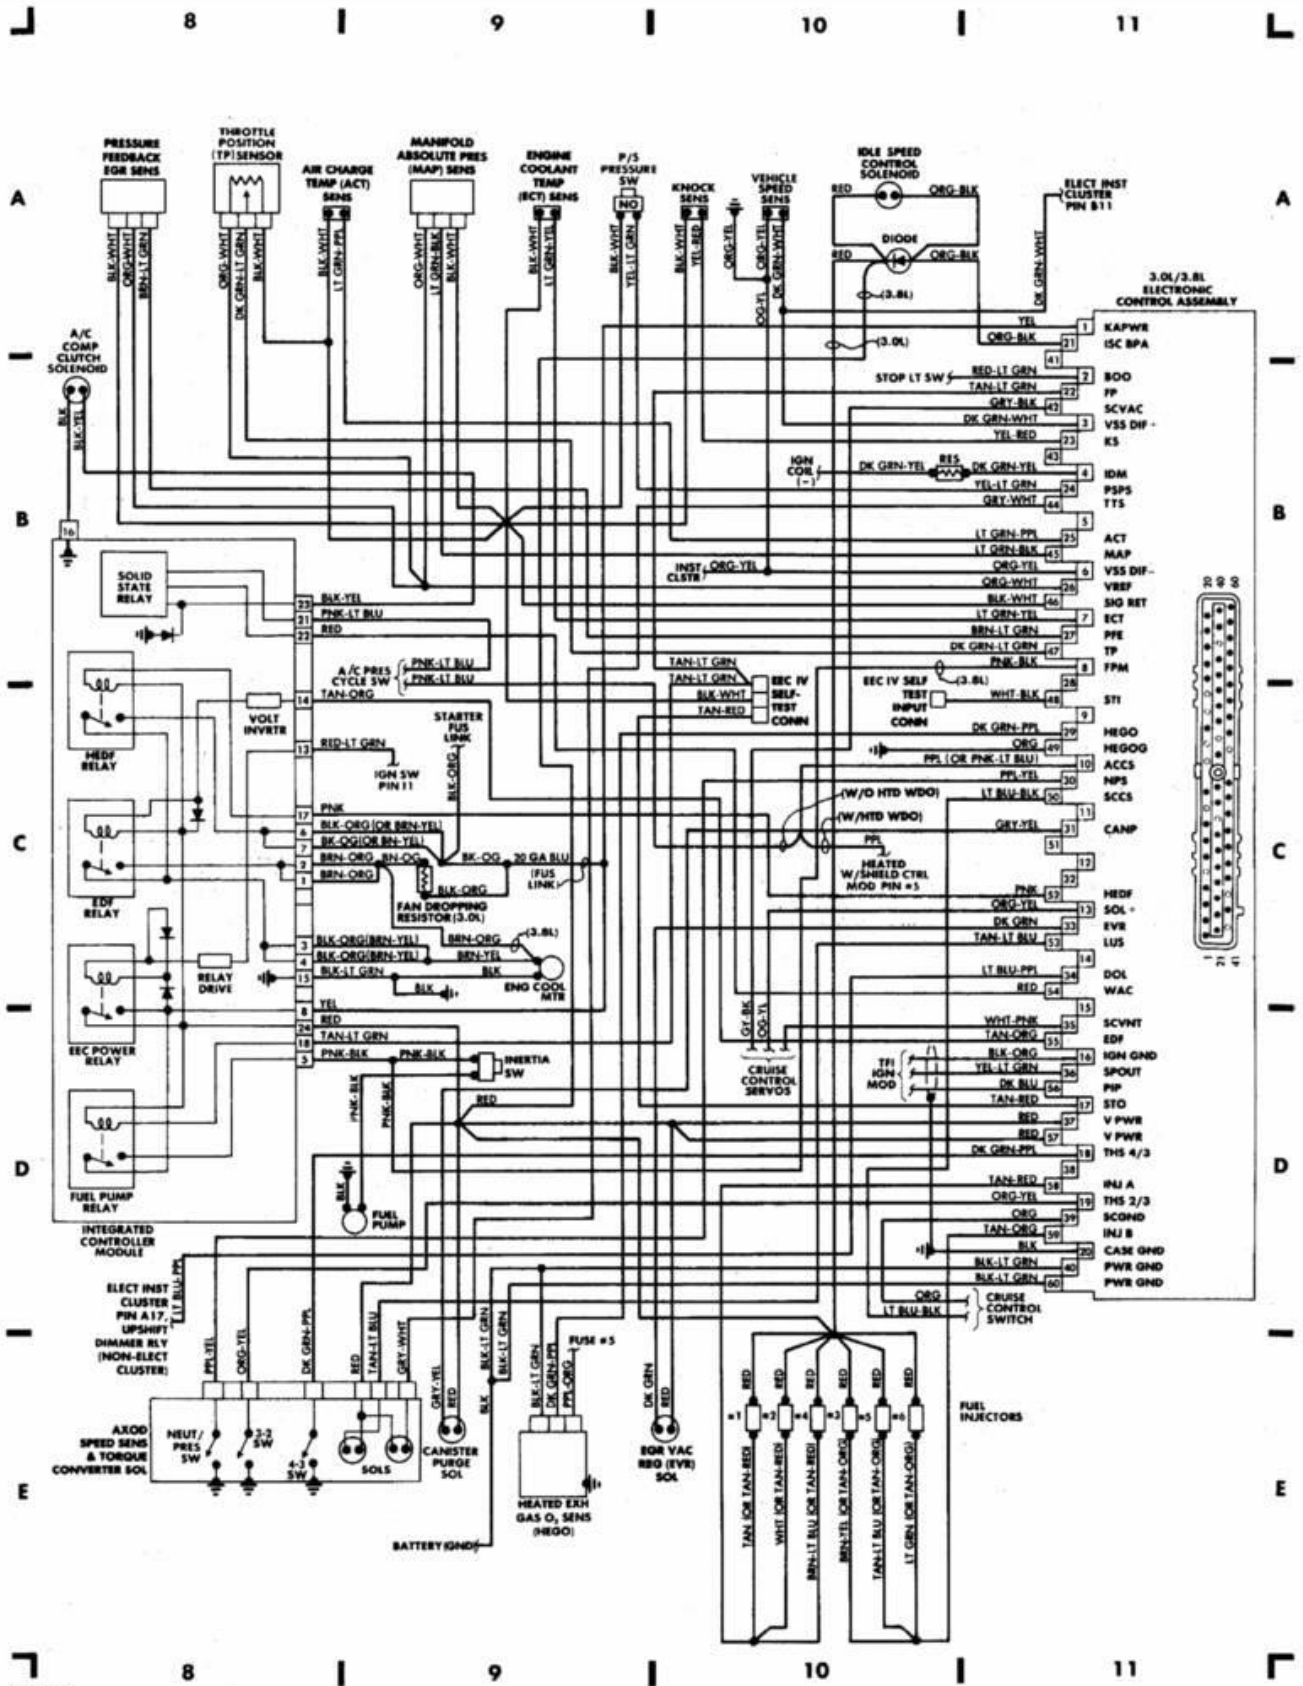


98479

# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 4: Fuse Block  
1988 Ford Taurus LX

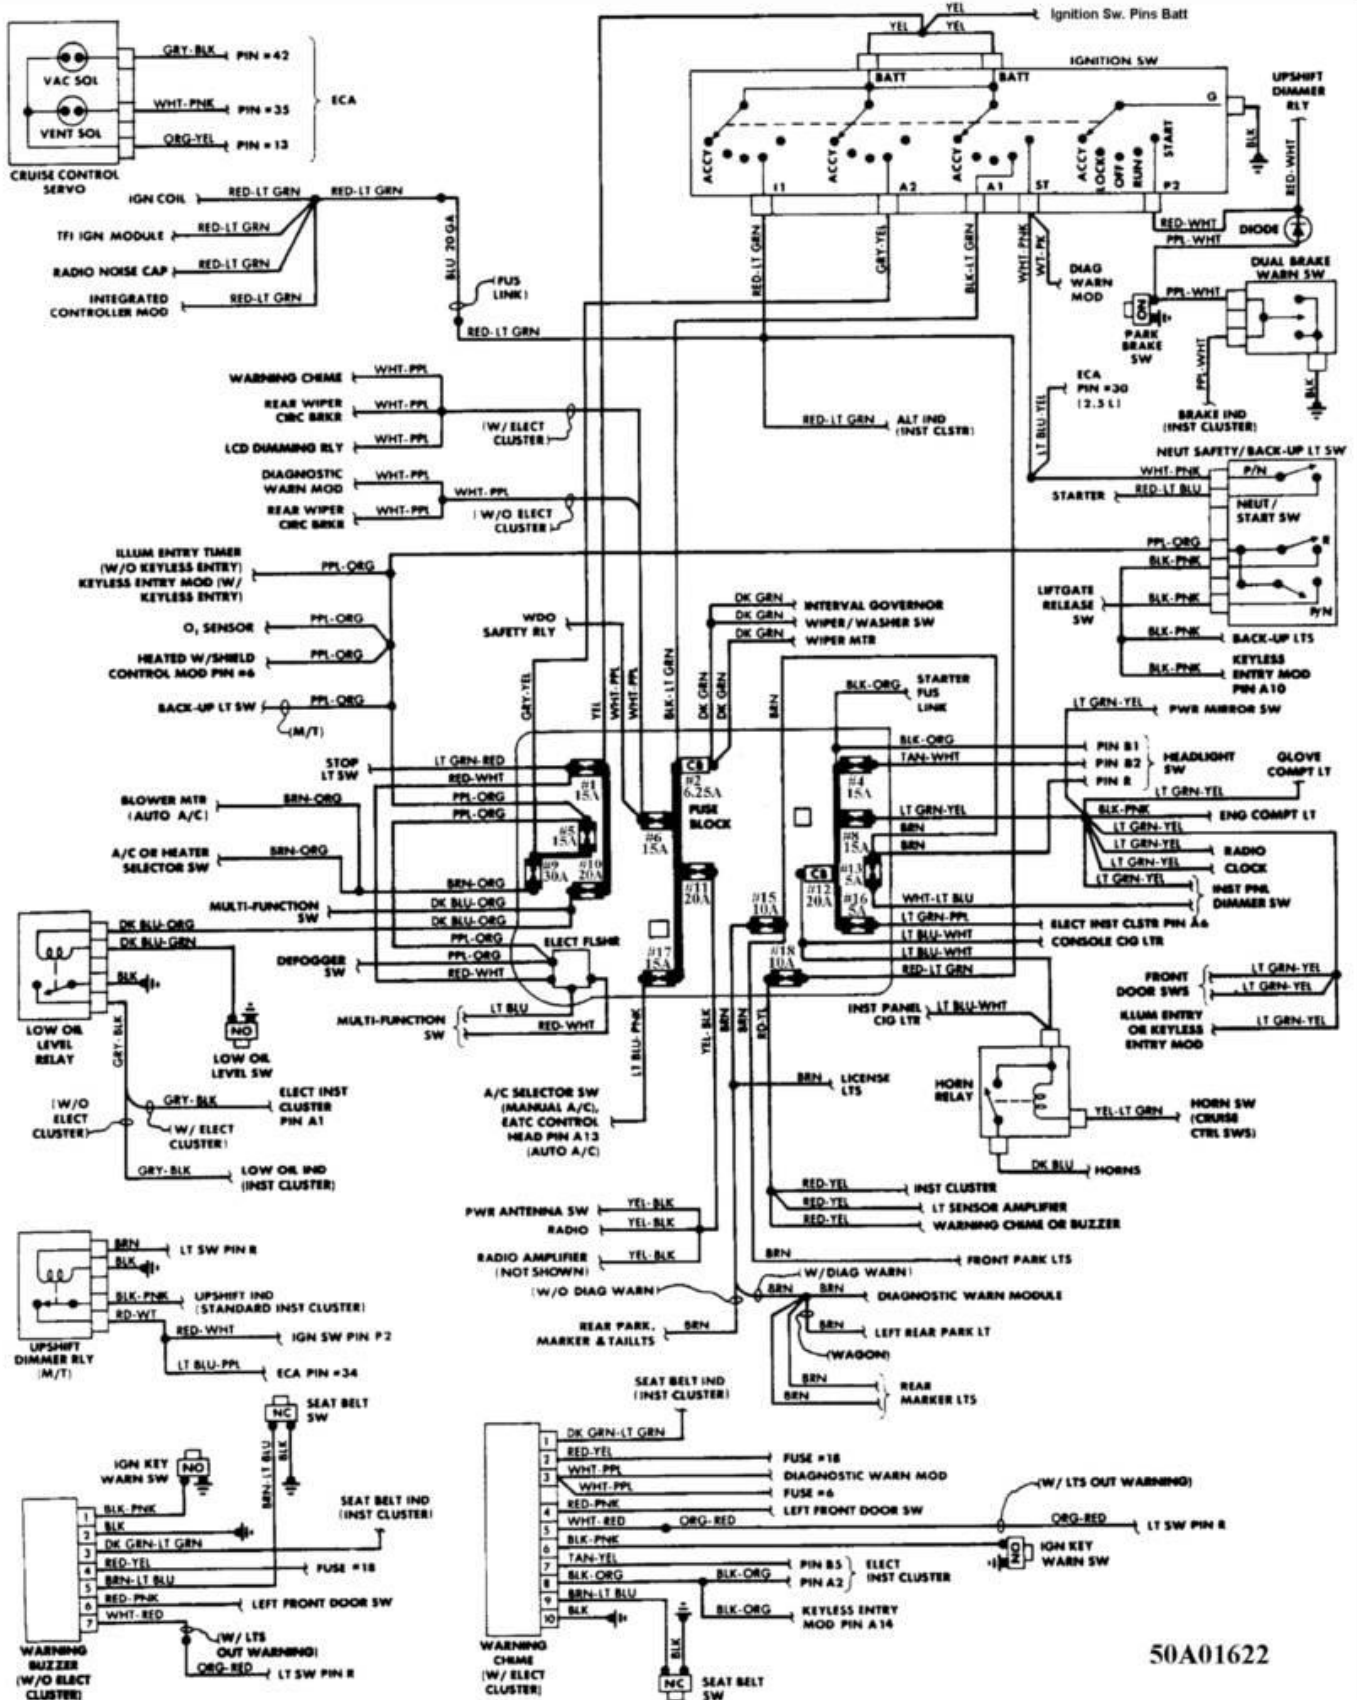


50A01622

# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 5: Diagnostic Warning System  
1988 Ford Taurus LX

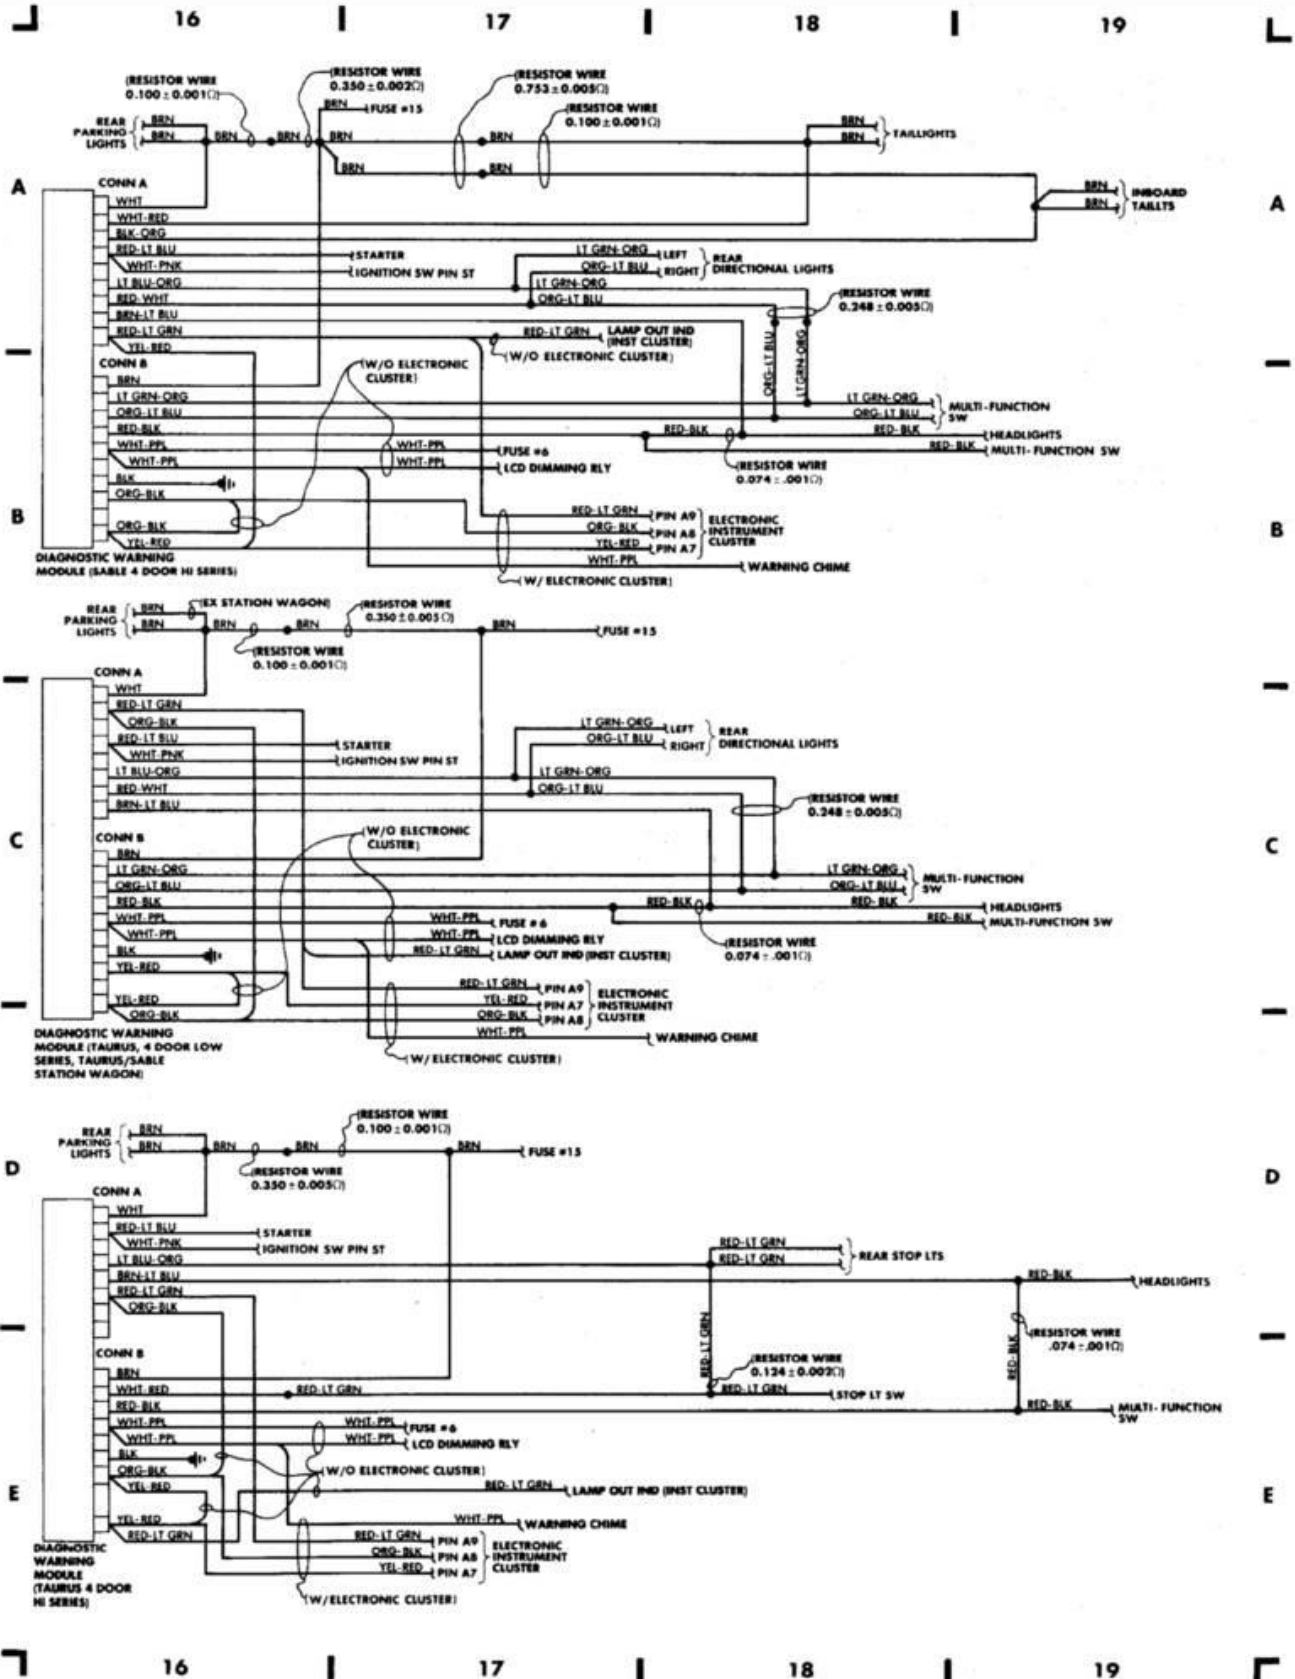


98481



**WIRING DIAGRAMS**  
1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 6: Underdash  
1988 Ford Taurus LX

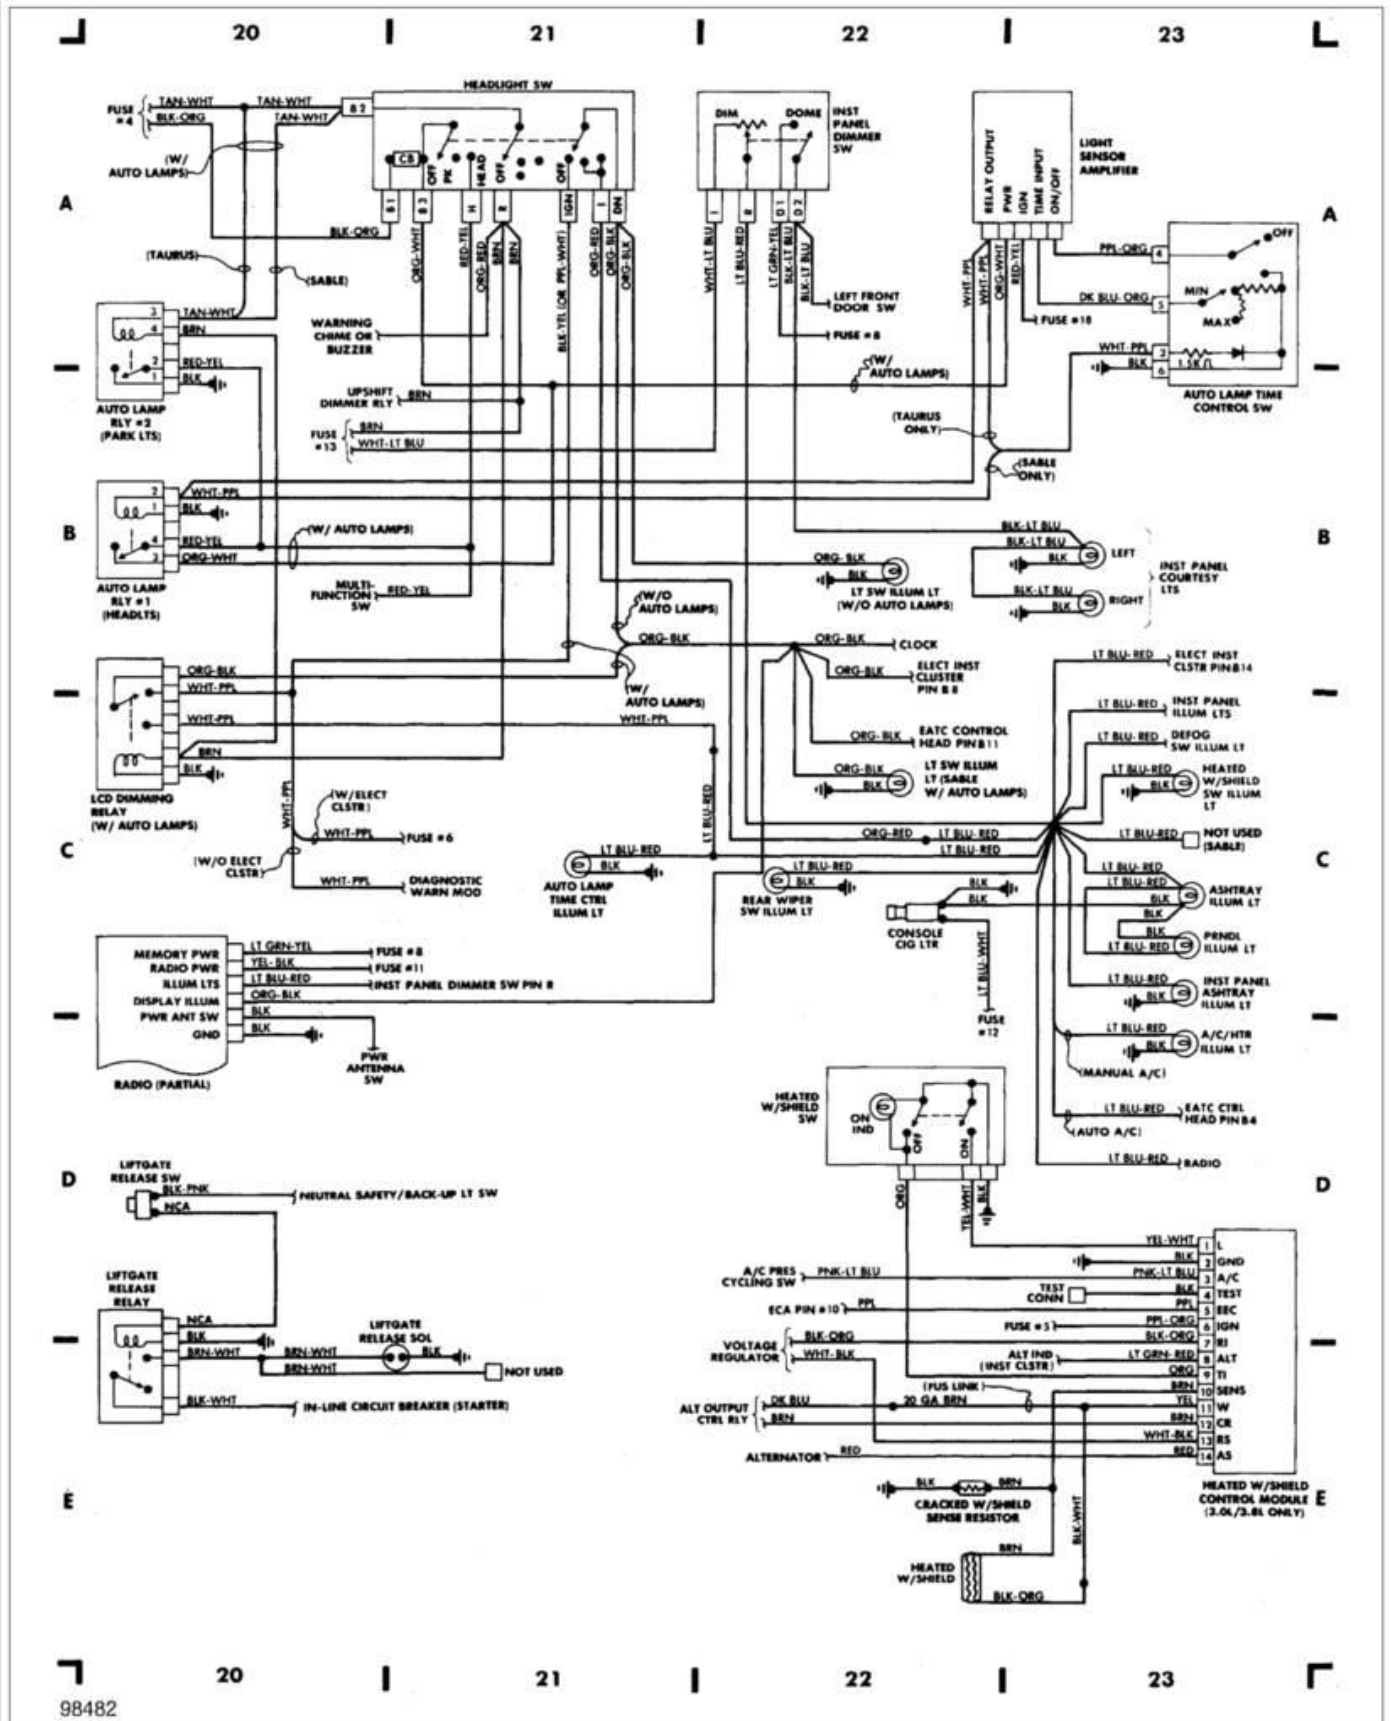


98482

# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 7: Electronic Instrument Panel  
1988 Ford Taurus LX

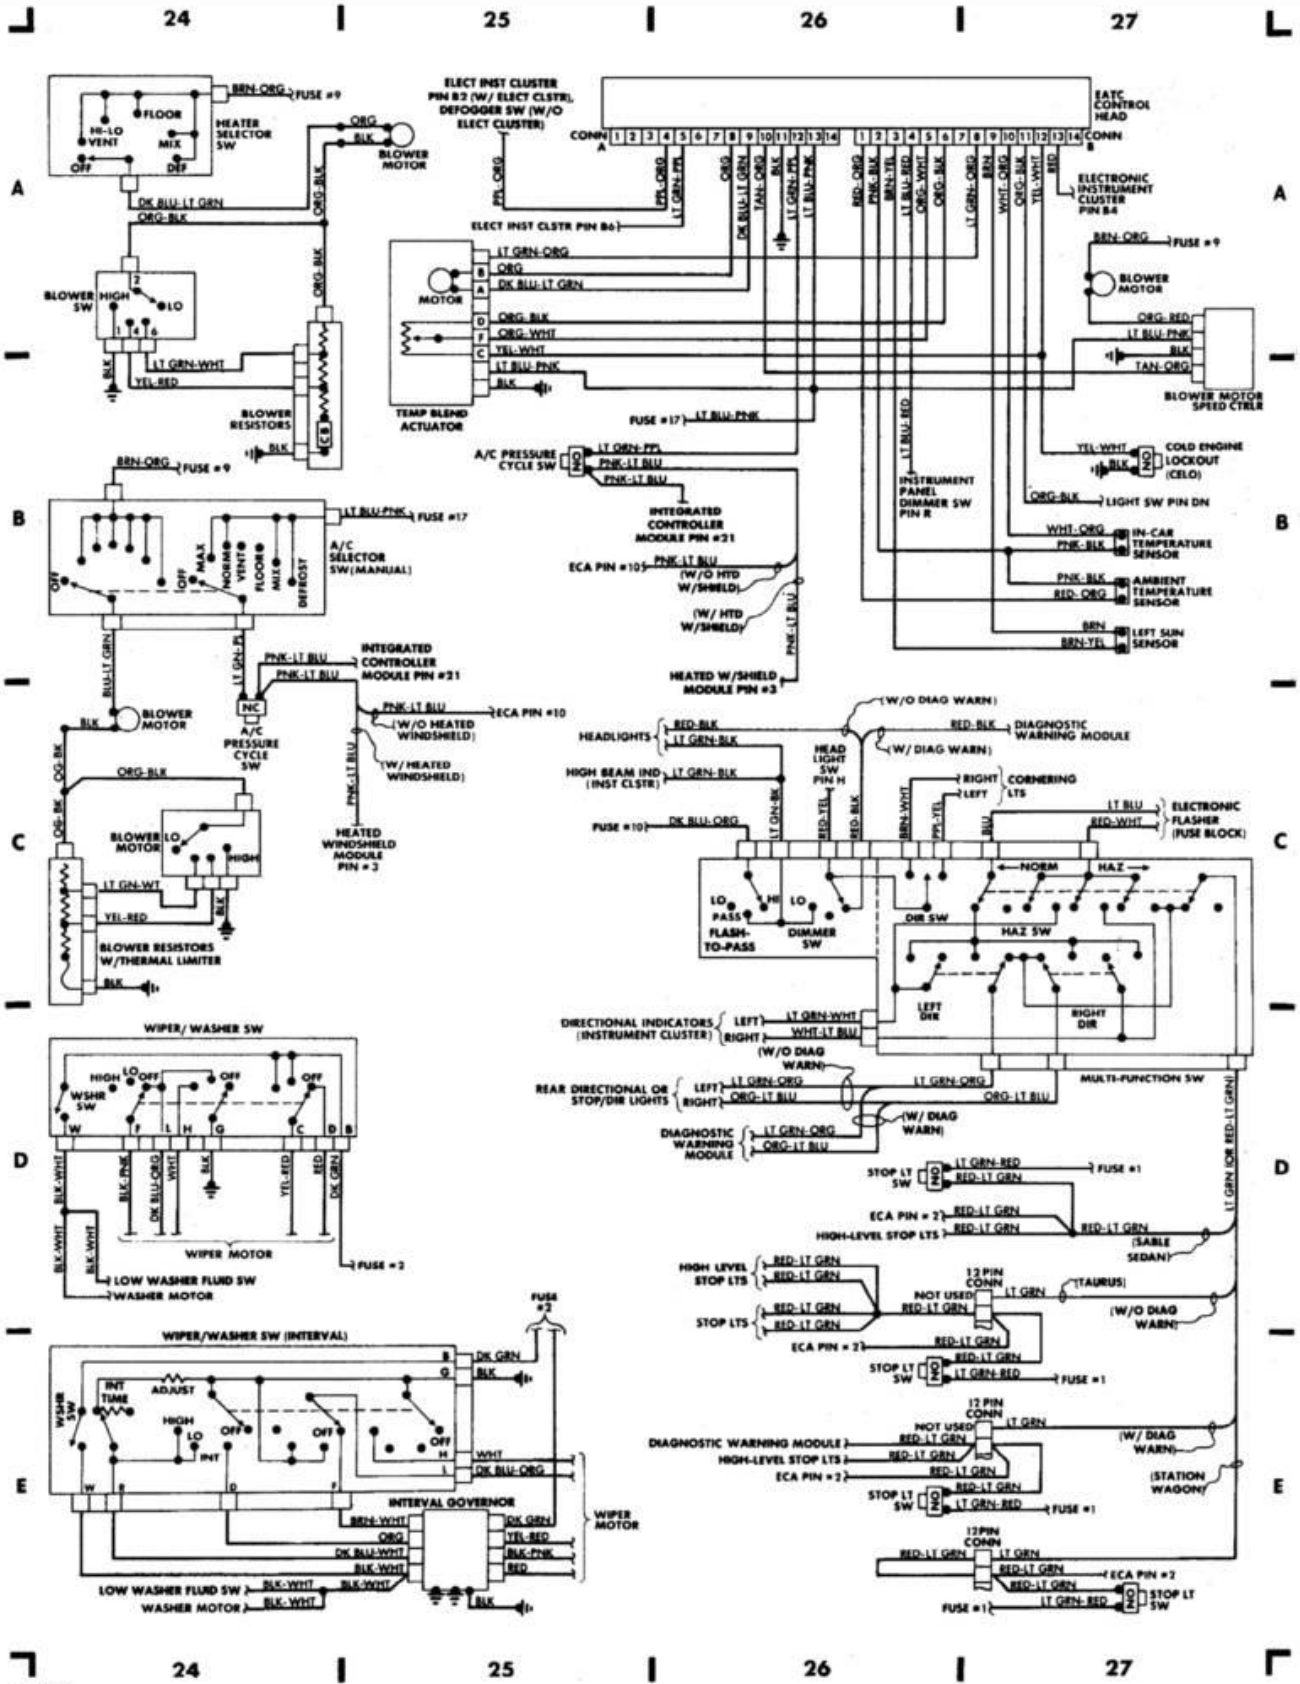


98483

# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 8: Standard Instrument Panel  
1988 Ford Taurus LX

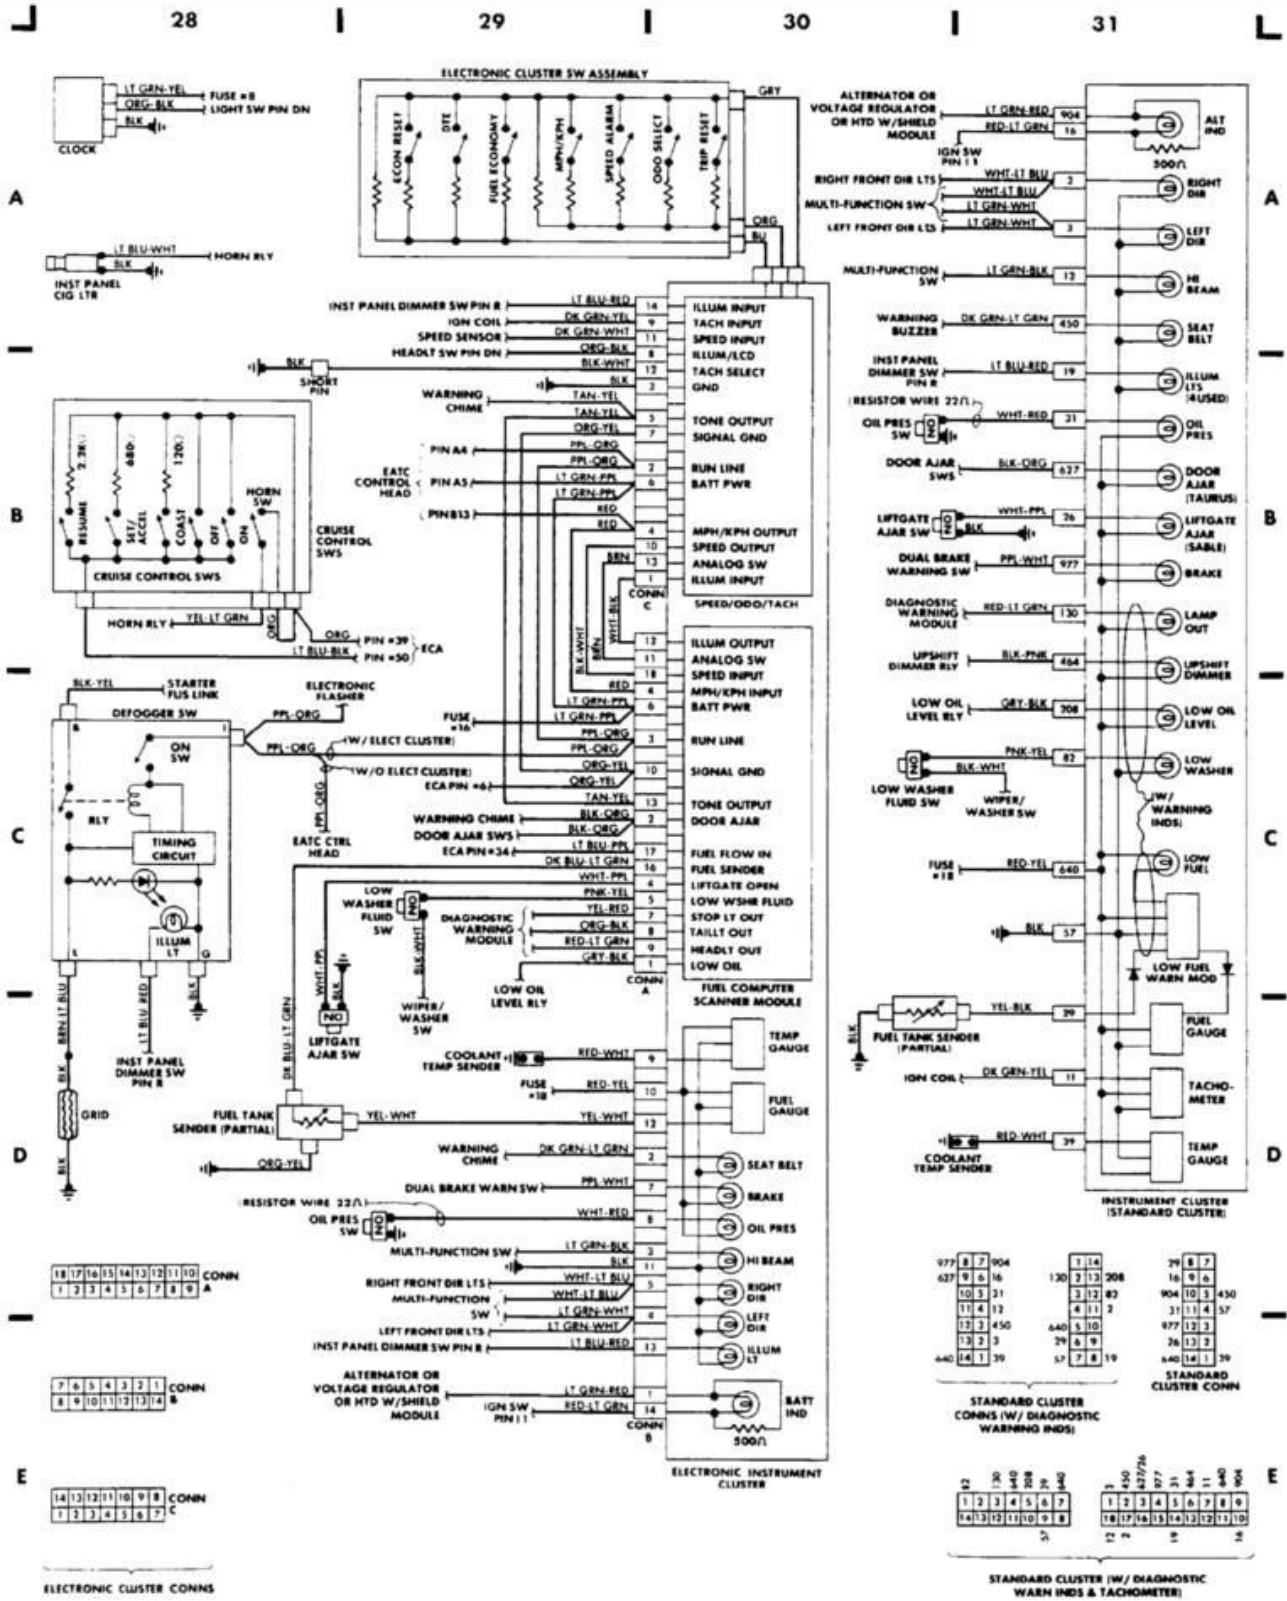


50C01623

**WIRING DIAGRAMS**  
1988 Wiring Diagrams Ford Motor Co.

PAVLIN

**Fig. 9: Electric Seats & Windows**  
1988 Ford Taurus LX

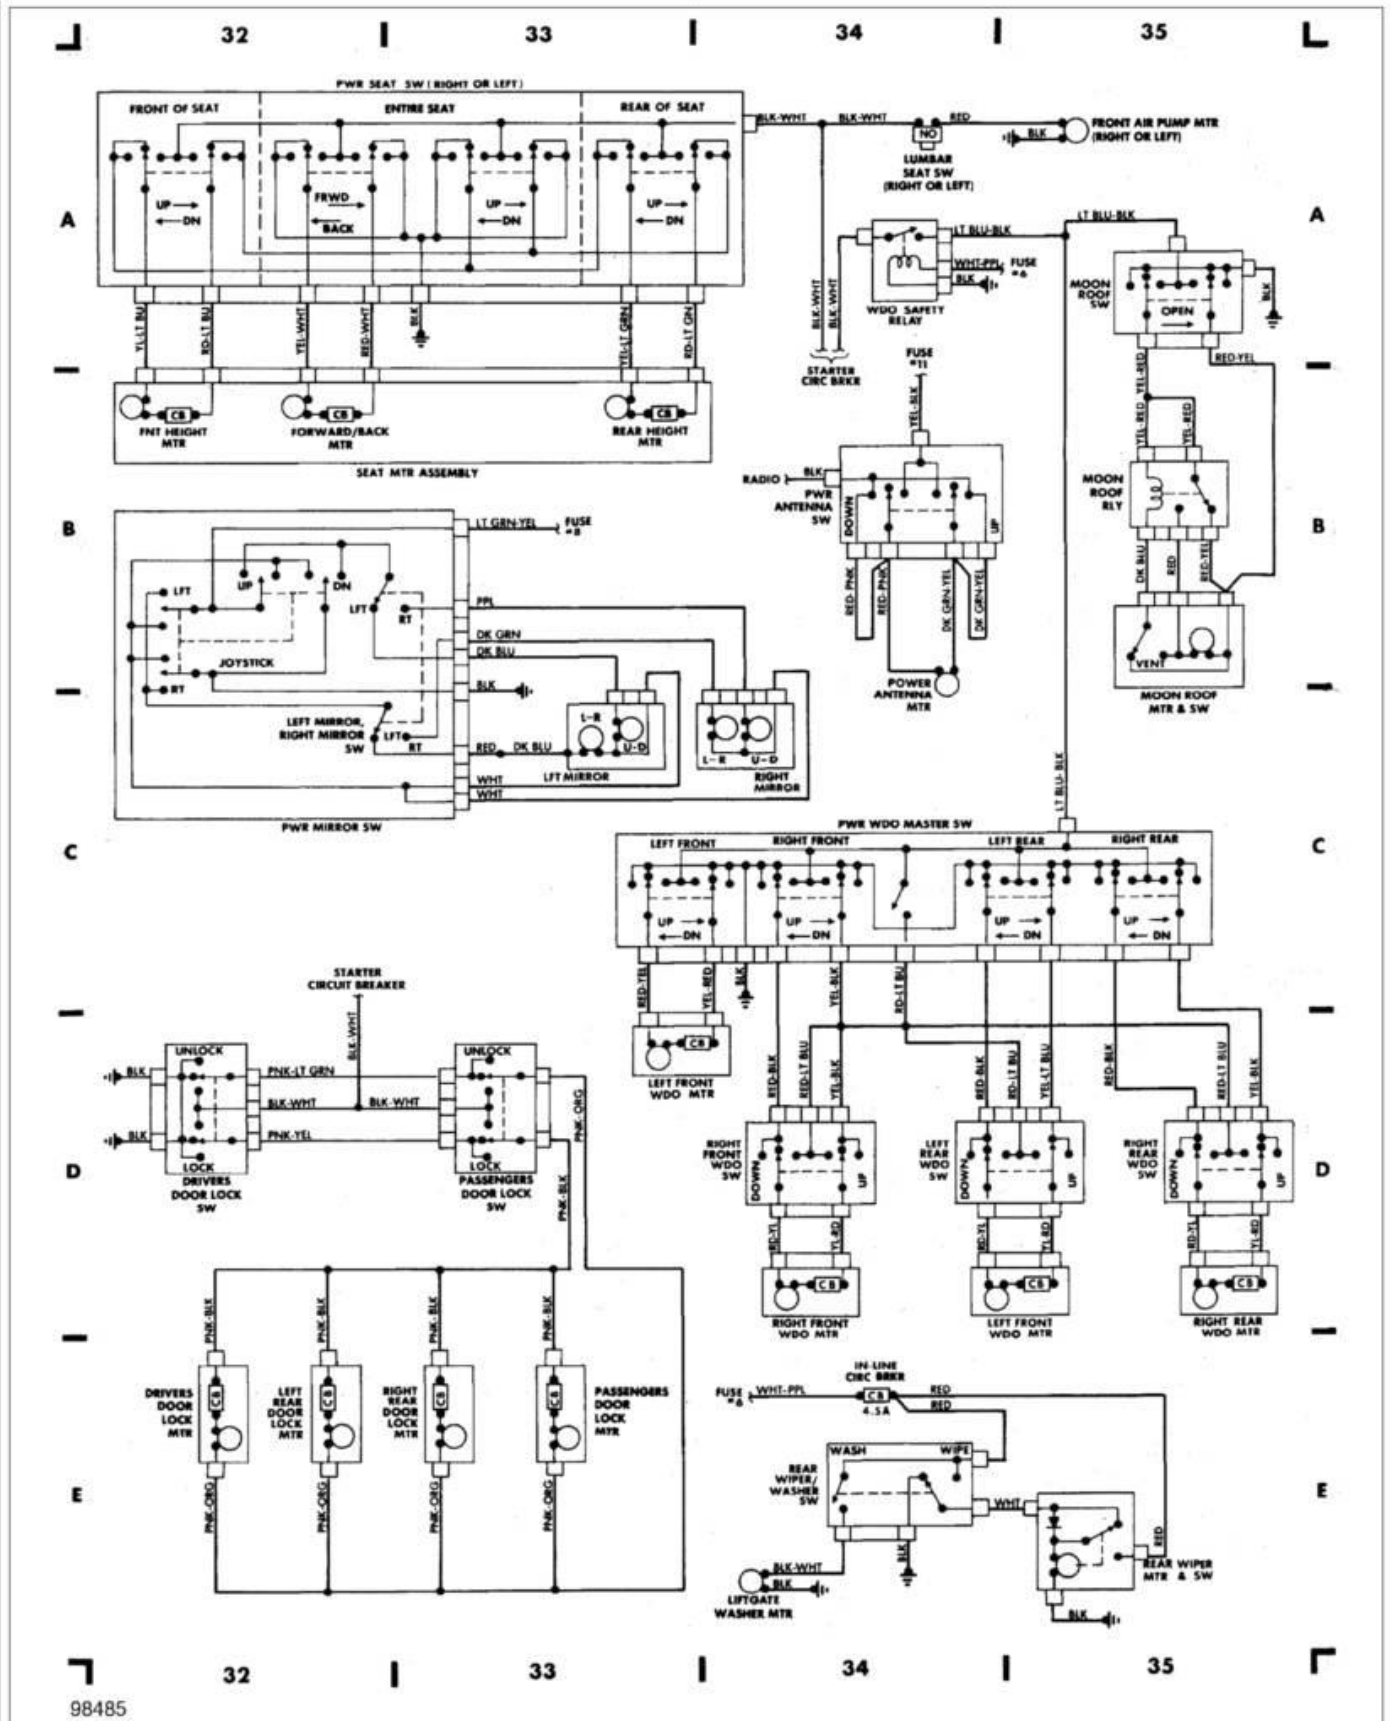


98485

**WIRING DIAGRAMS**  
1988 Wiring Diagrams Ford Motor Co.

PAVLIN

**Fig. 10: Passenger Compartment**  
1988 Ford Taurus LX

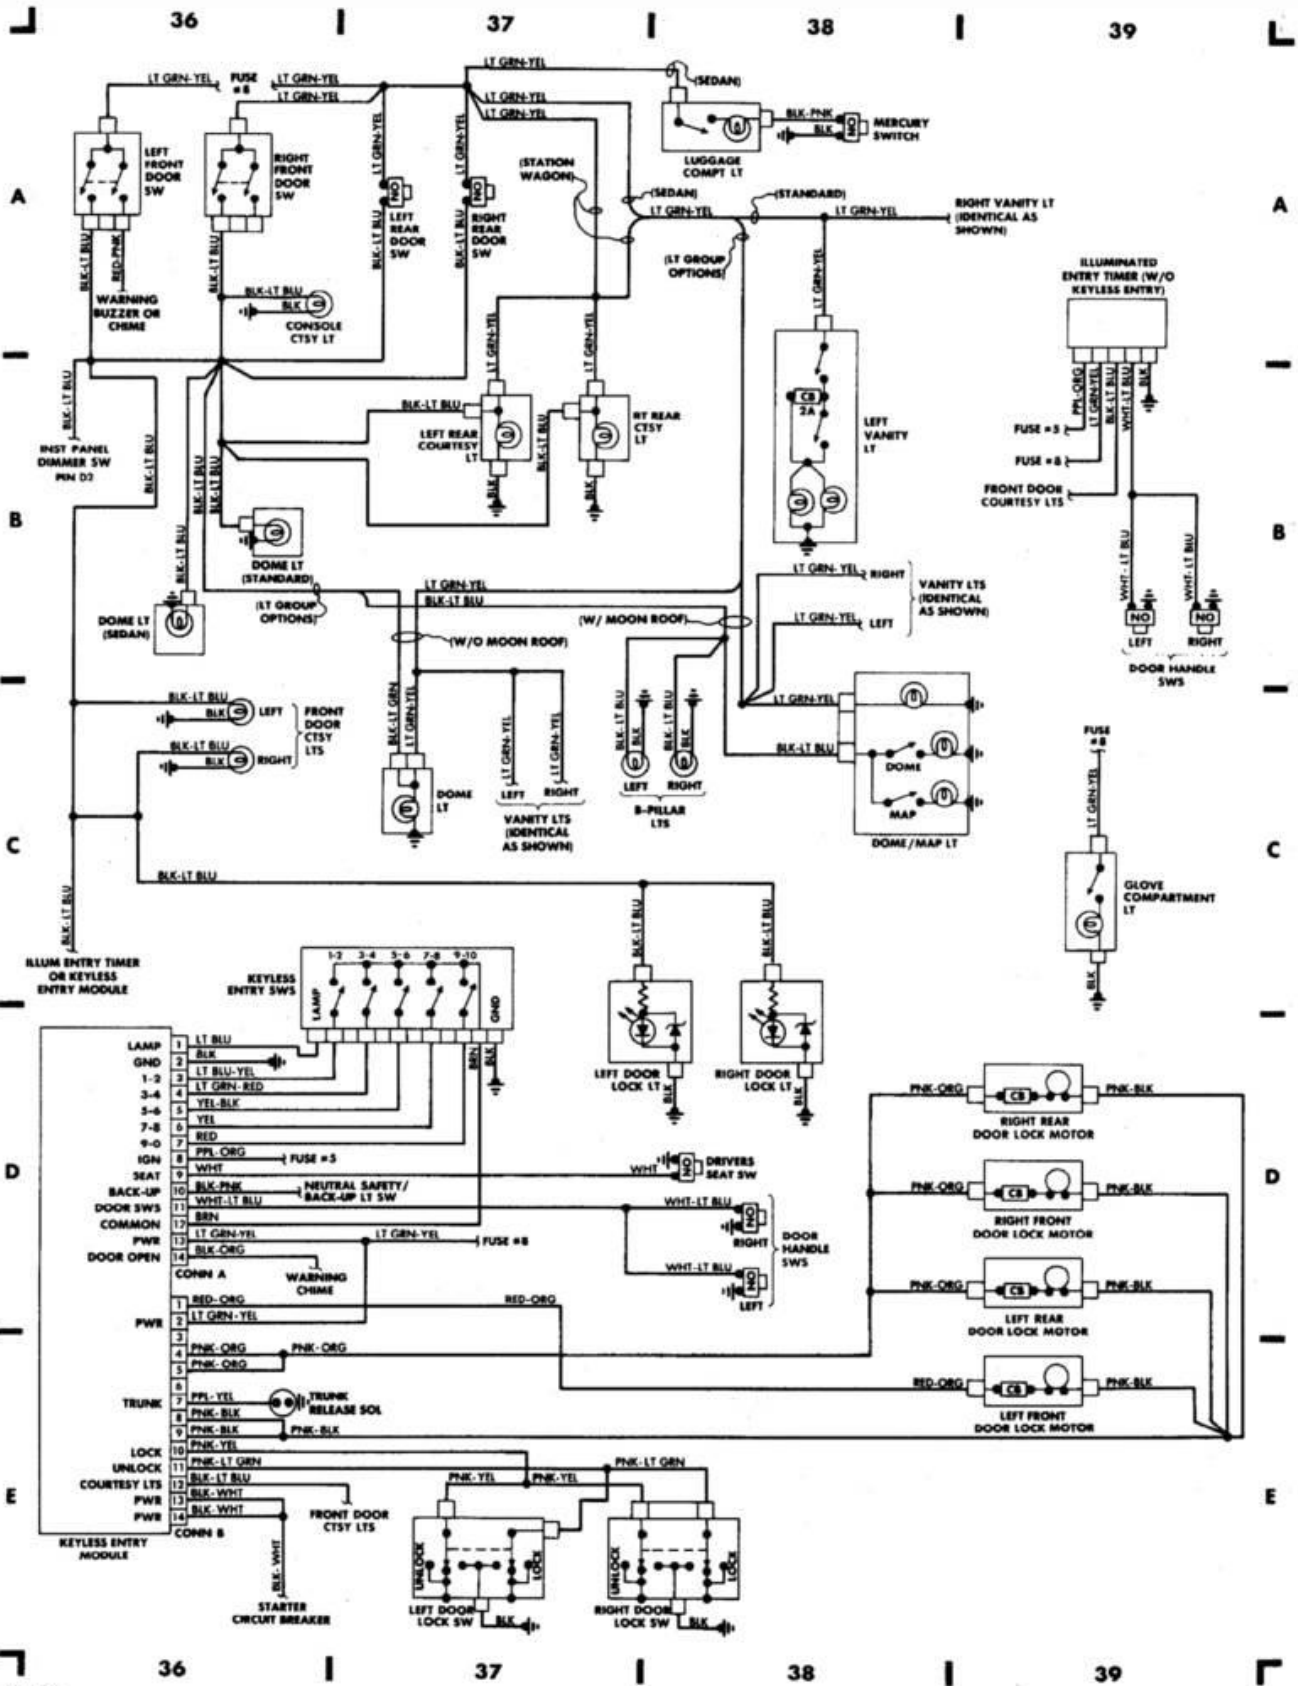


98486

# WIRING DIAGRAMS

## 1988 Wiring Diagrams Ford Motor Co.

PAVLIN

Fig. 11: Taillights  
1988 Ford Taurus LX

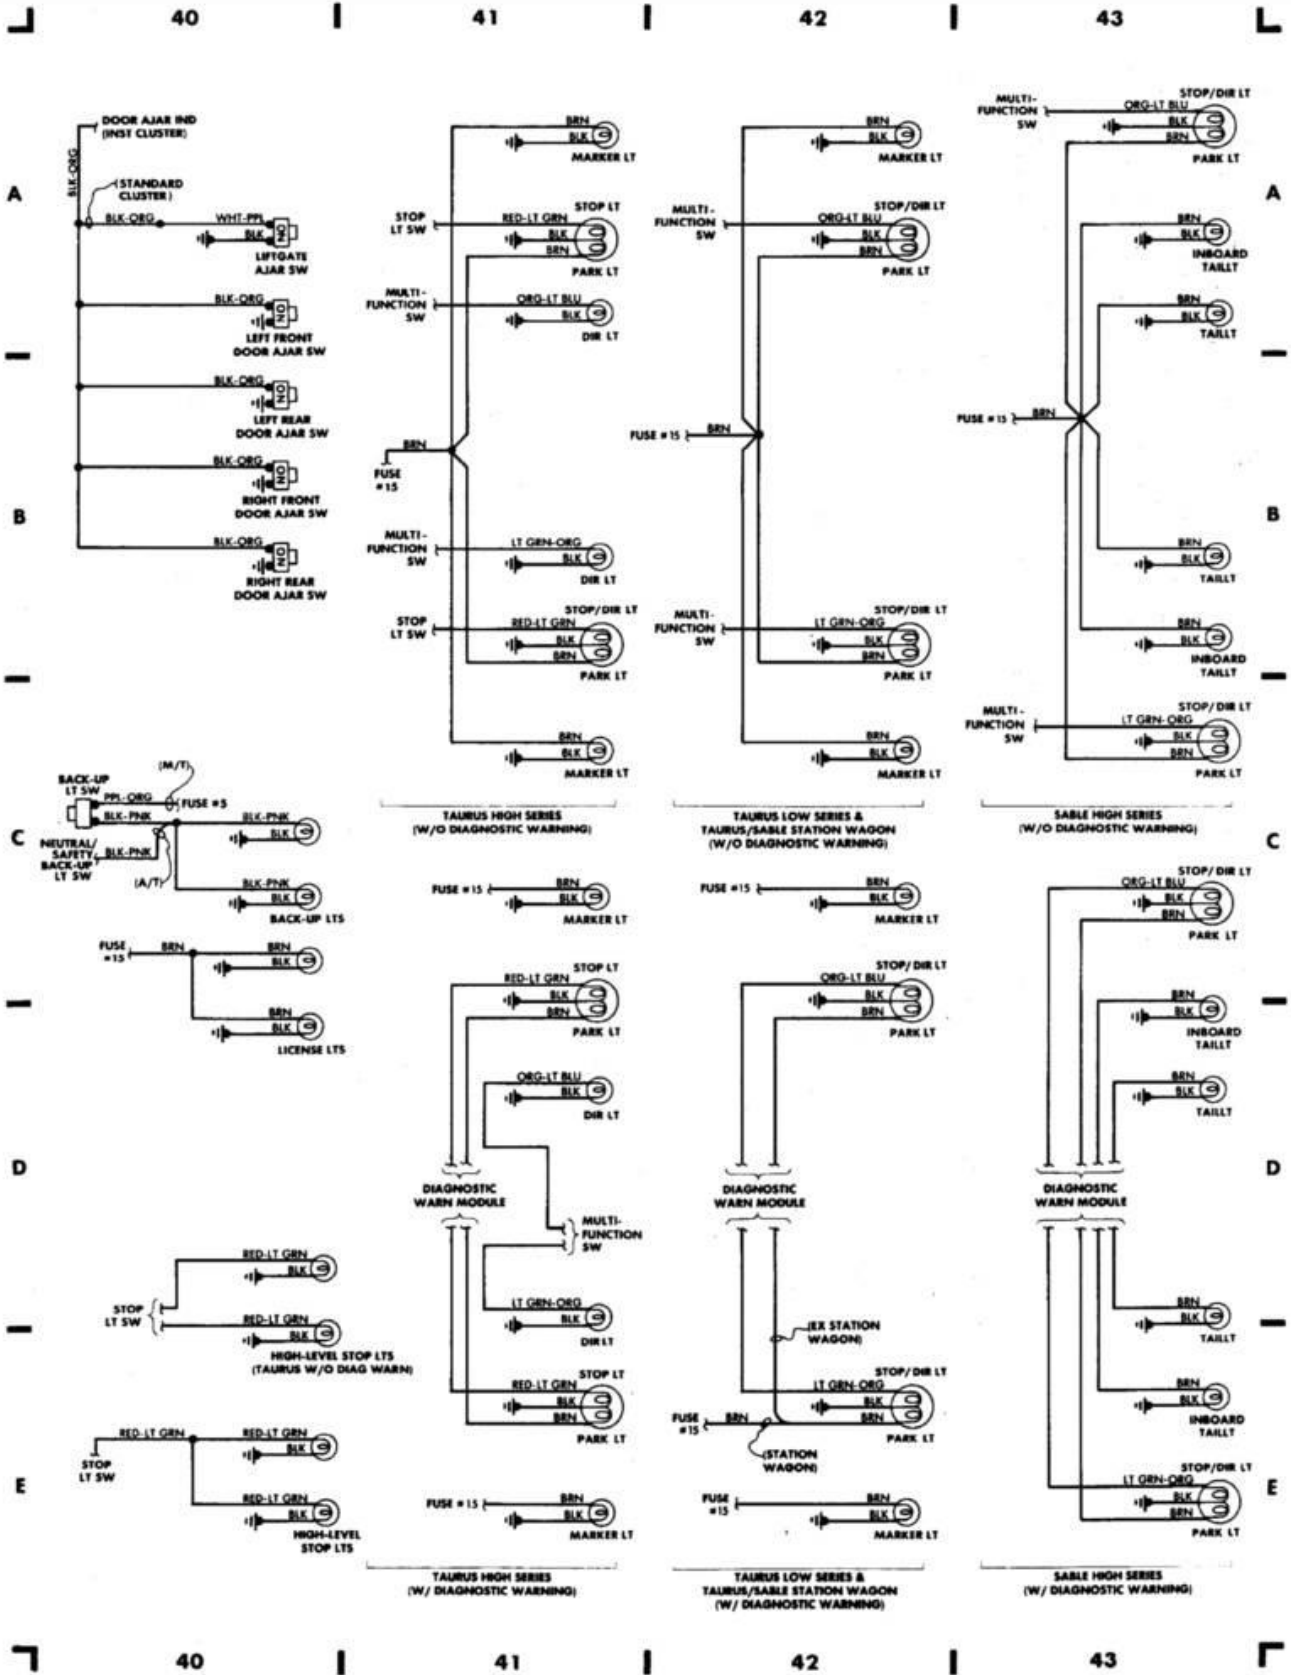

98487