


1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 1: 3.0L SHO, Cooling Fan Circuit  
1993 Ford Taurus LX

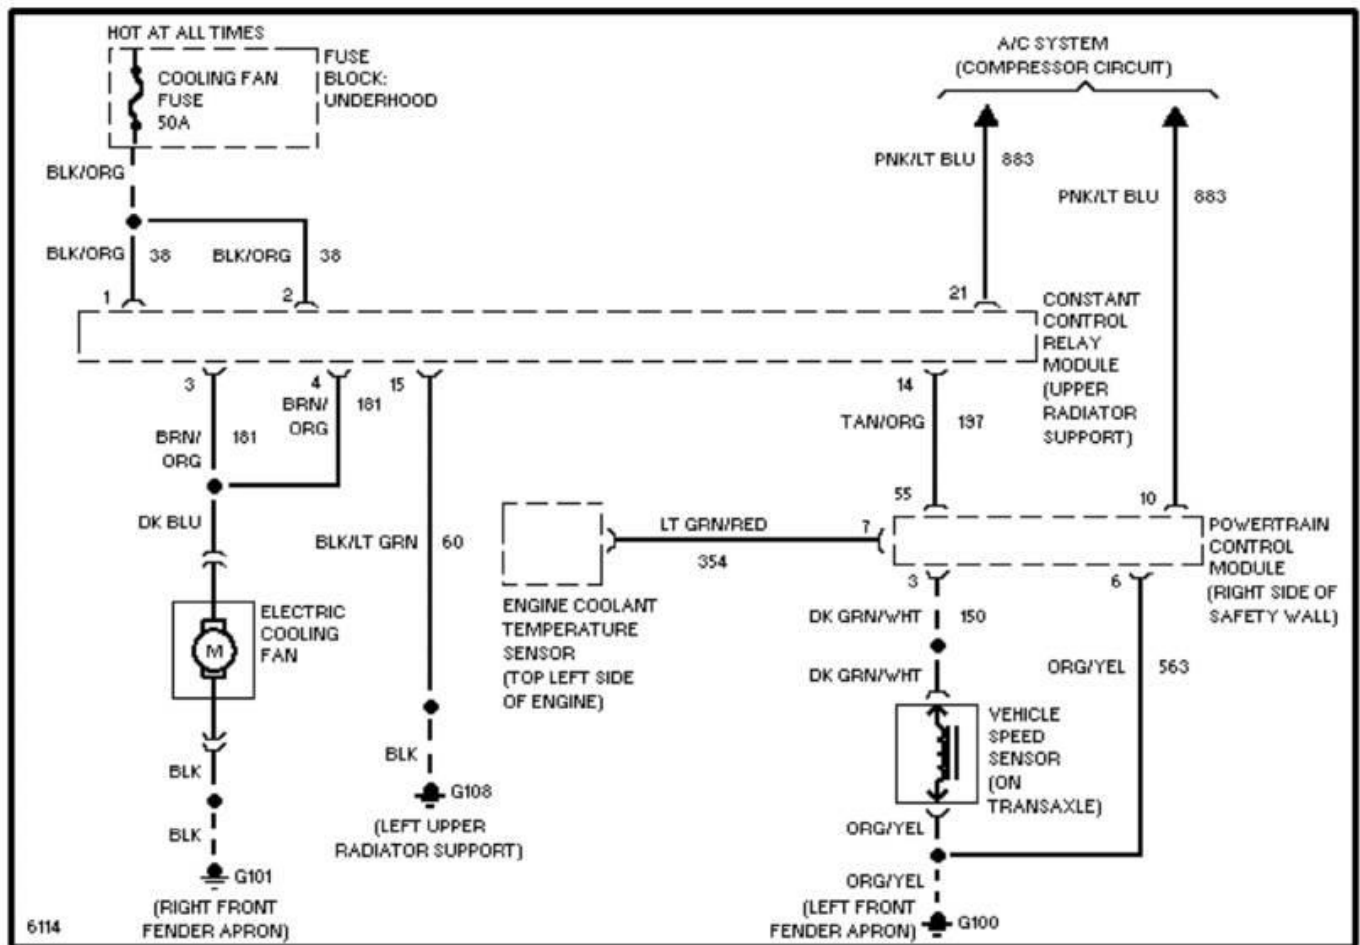

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 2: 3.0L, Cooling Fan Circuit  
1993 Ford Taurus LX

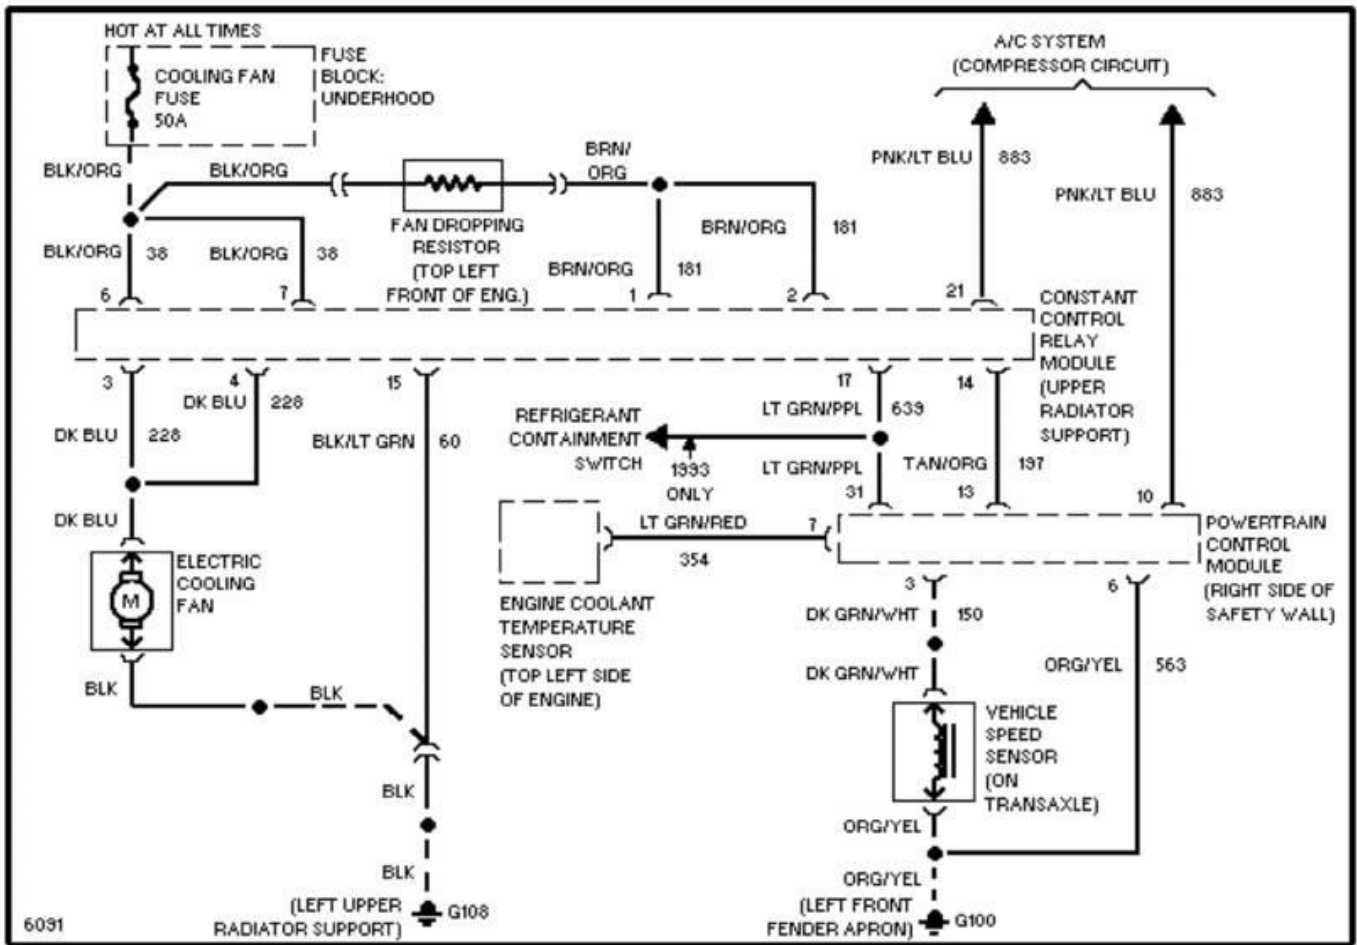

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 3: 3.2L SHO, Cooling Fan Circuit  
1993 Ford Taurus LX

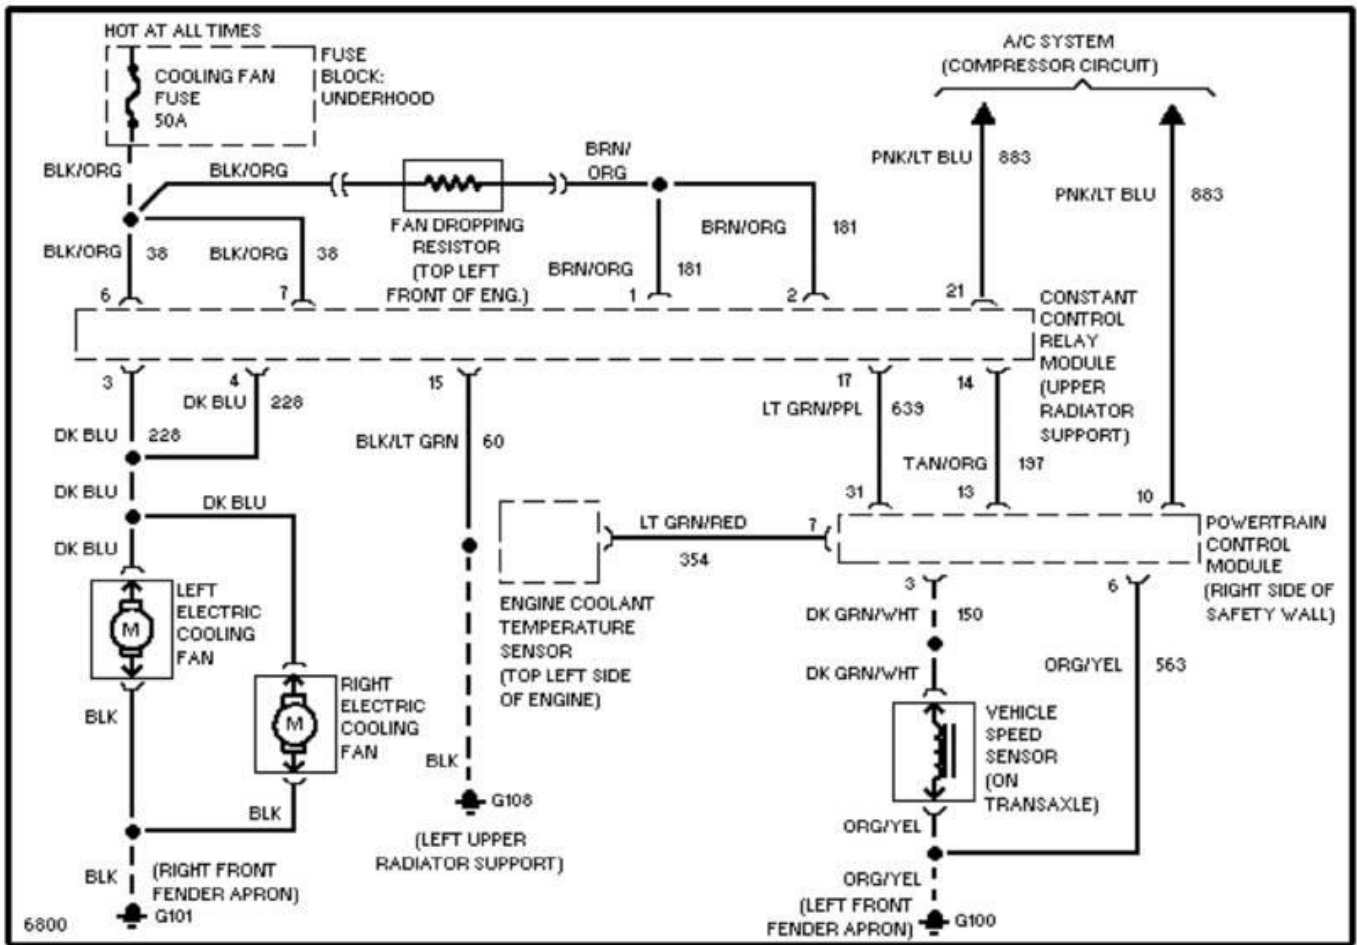

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 4: 3.8L, Cooling Fan Circuit  
1993 Ford Taurus LX

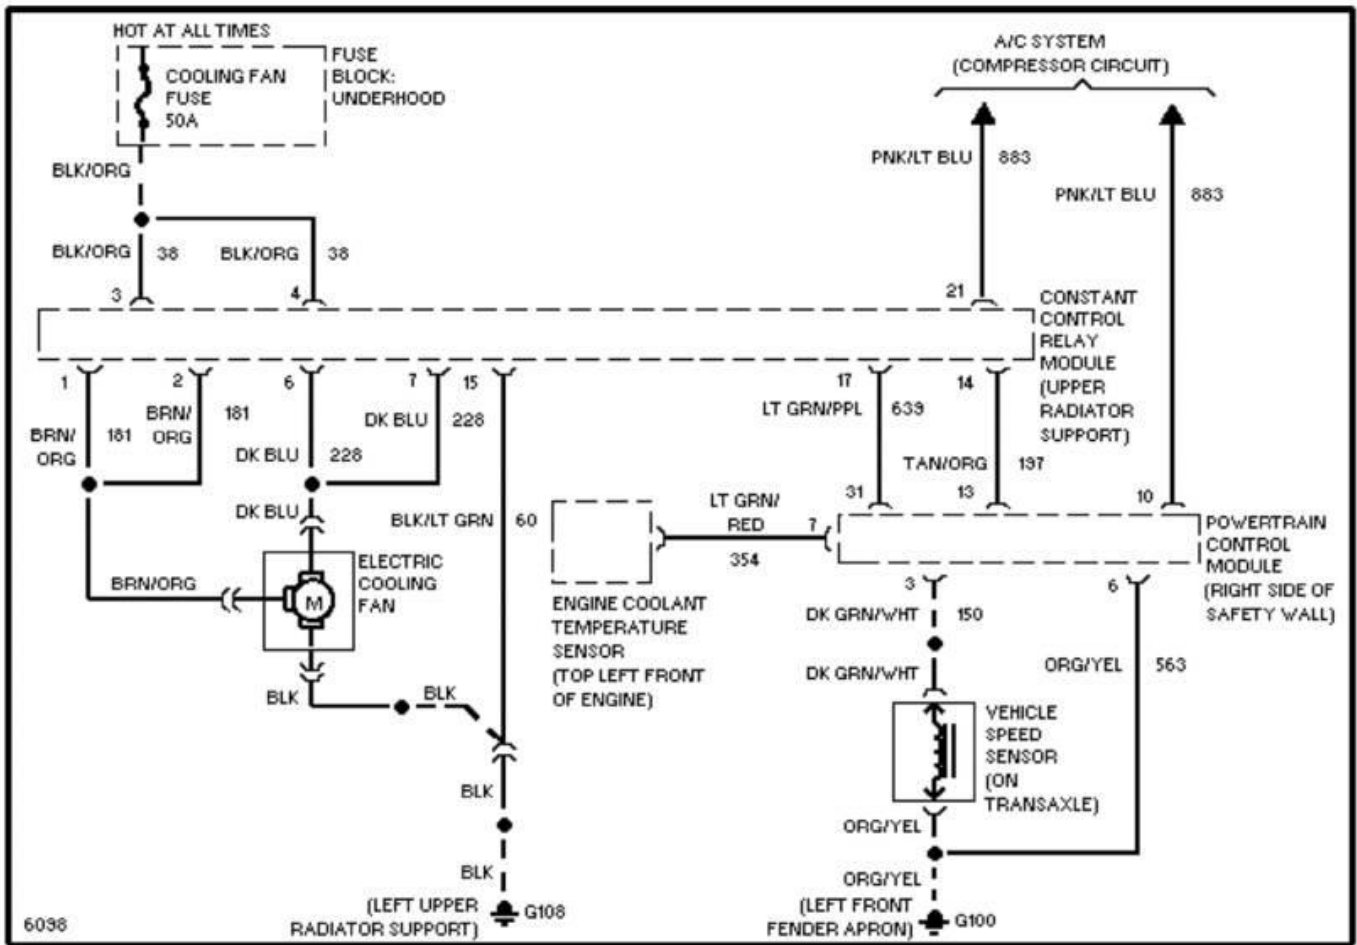




1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 5: Defogger Circuit  
1993 Ford Taurus LX

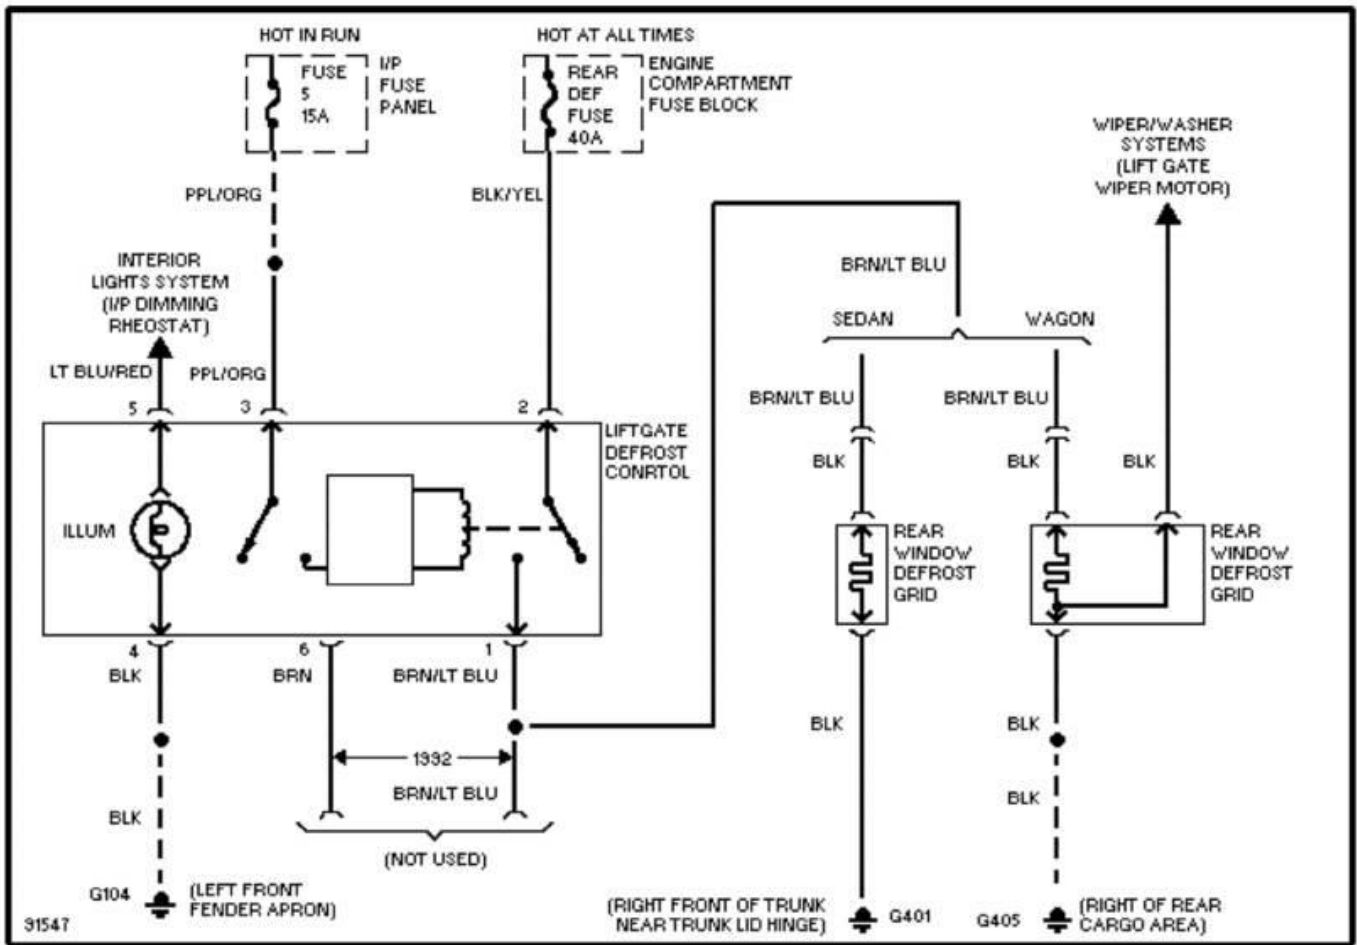




1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 7: Courtesy Lamp Circuit, Sedan W/ Remote/Keyless Entry  
1993 Ford Taurus LX

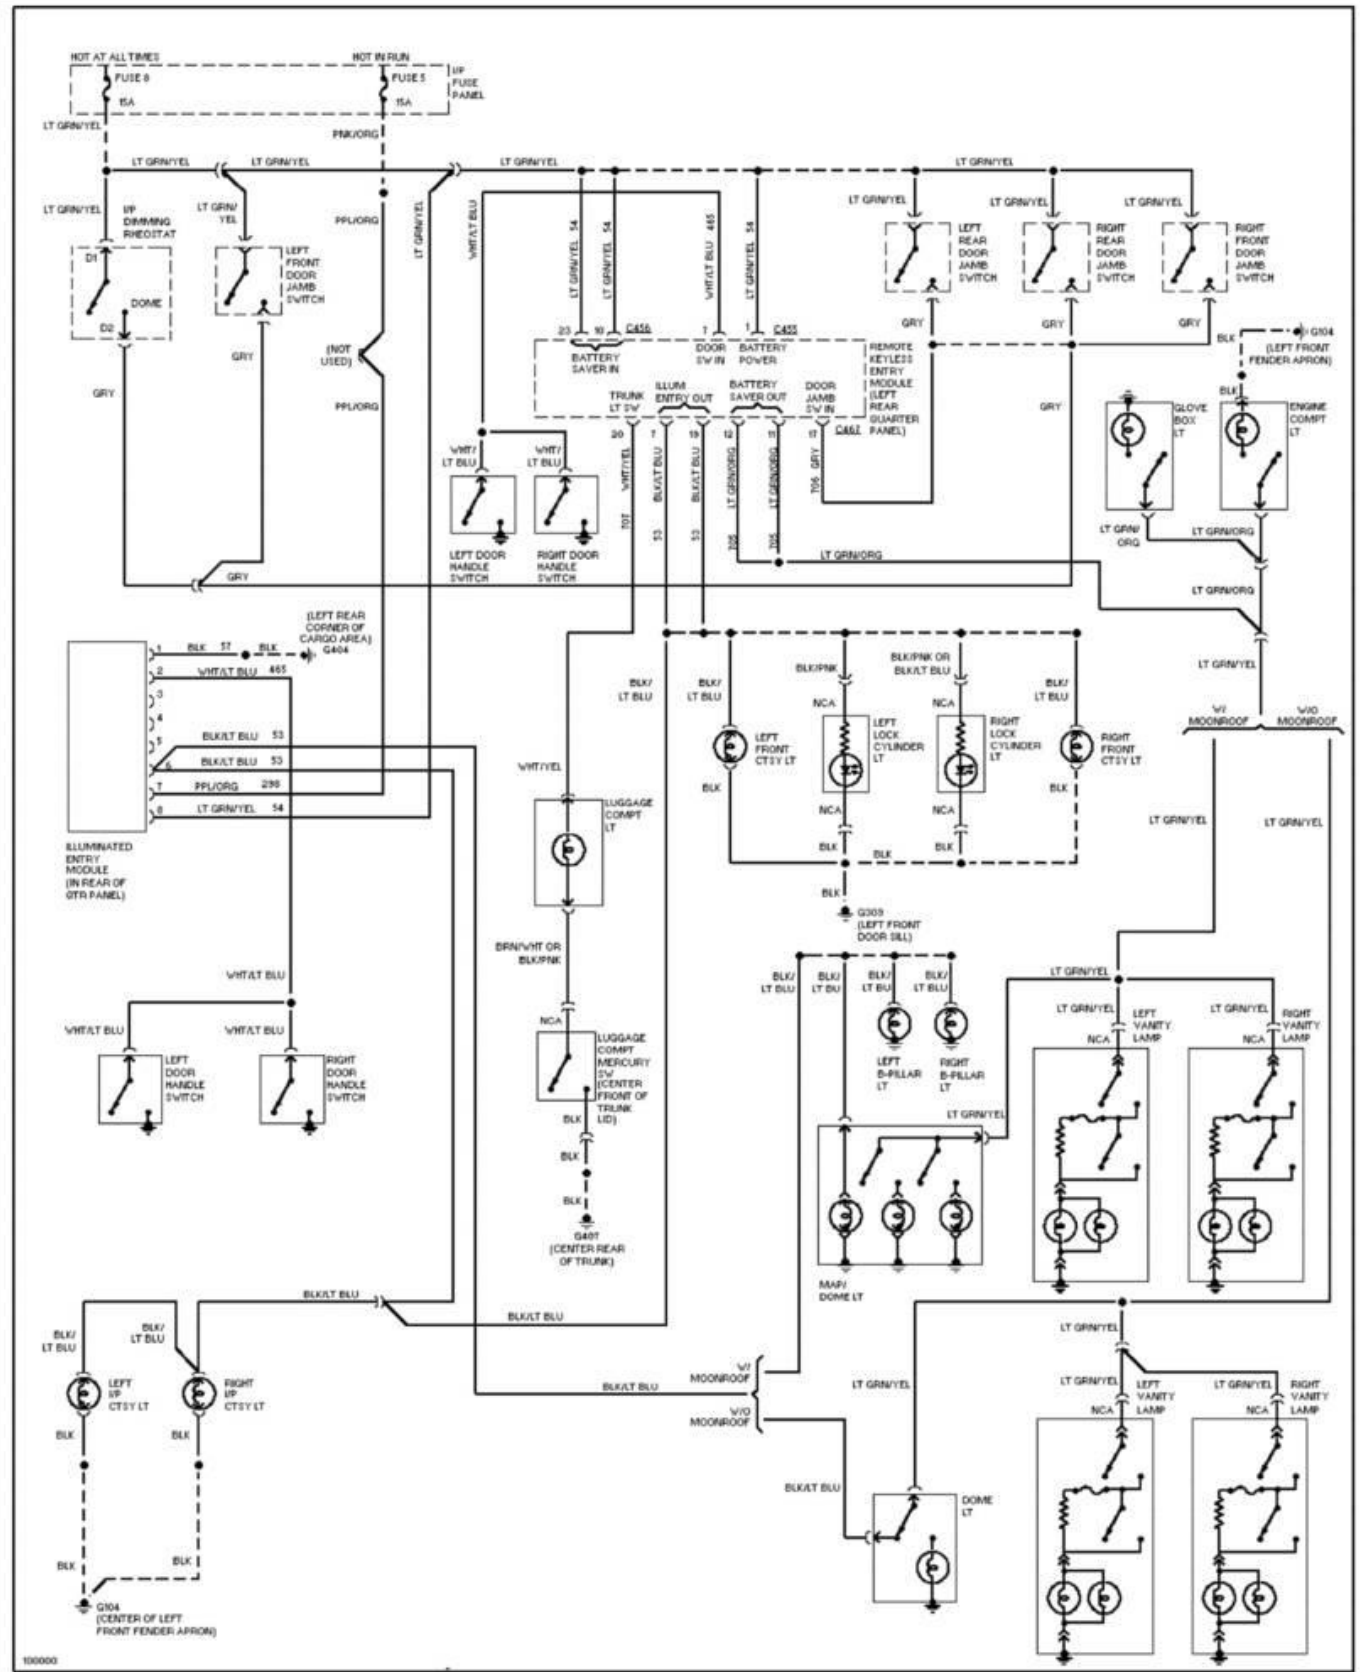

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 8: Courtesy Lamp Circuit, Sedan W/O Remote/Keyless Entry  
1993 Ford Taurus LX

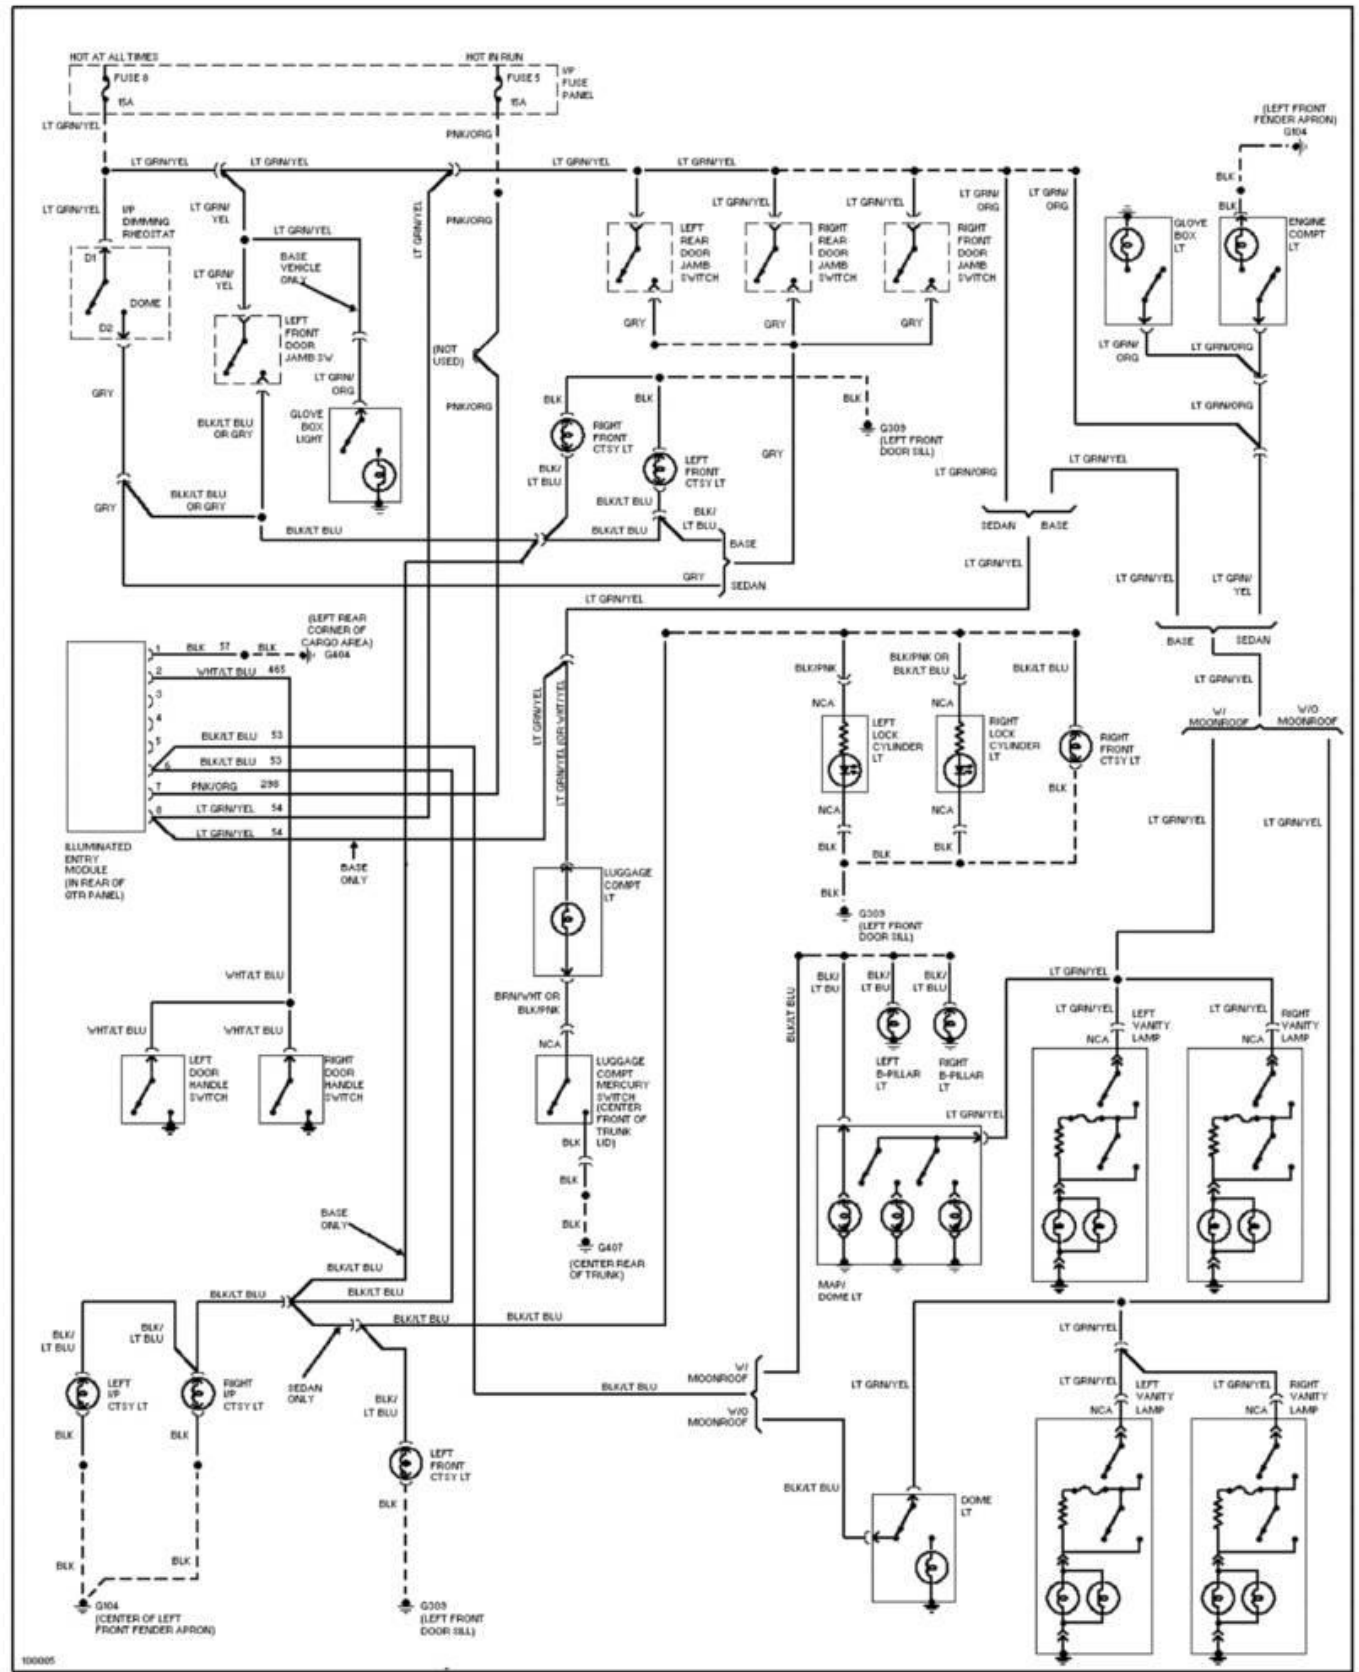

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 9: Courtesy Lamp Circuit, Wagon  
1993 Ford Taurus LX

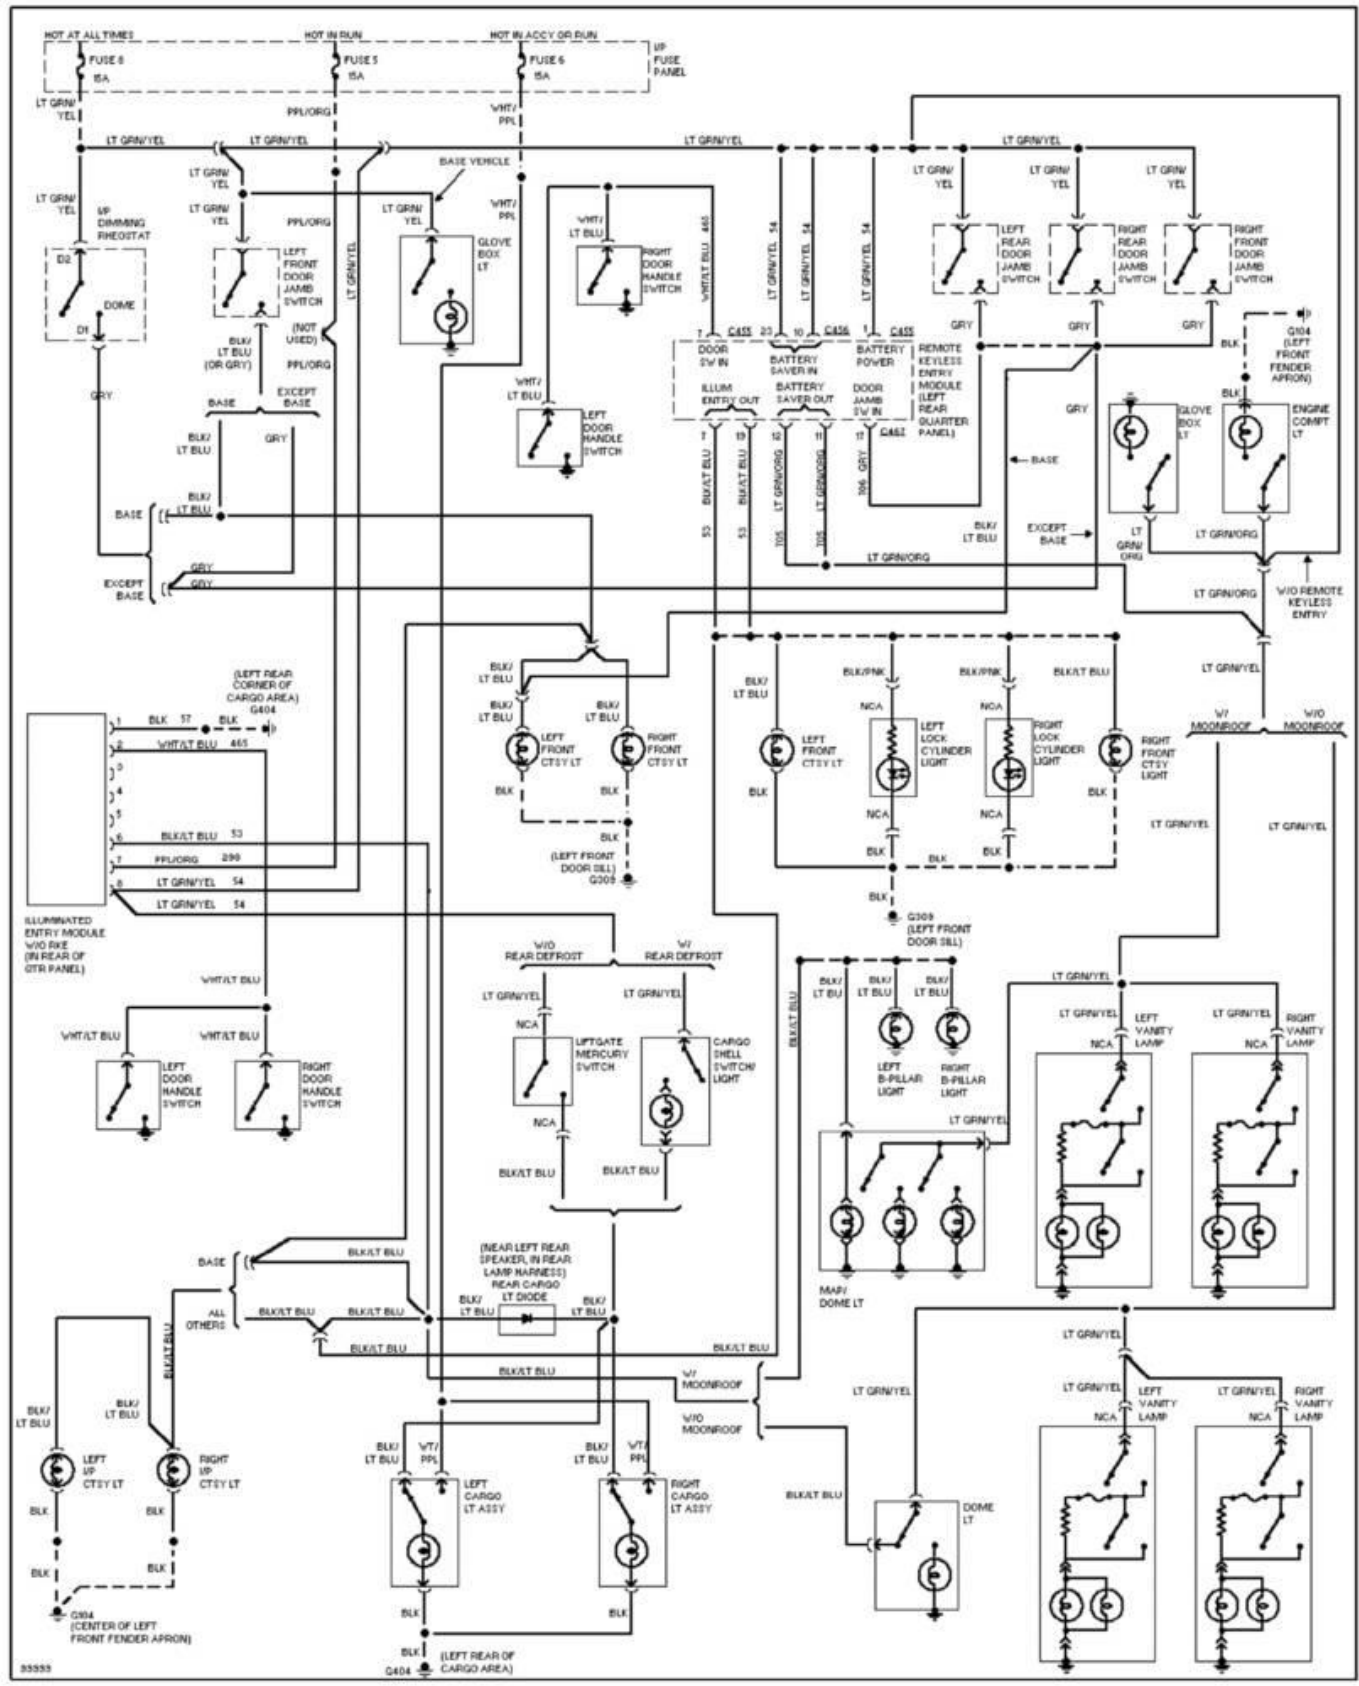

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 10: Instrument Illumination Circuit  
1993 Ford Taurus LX

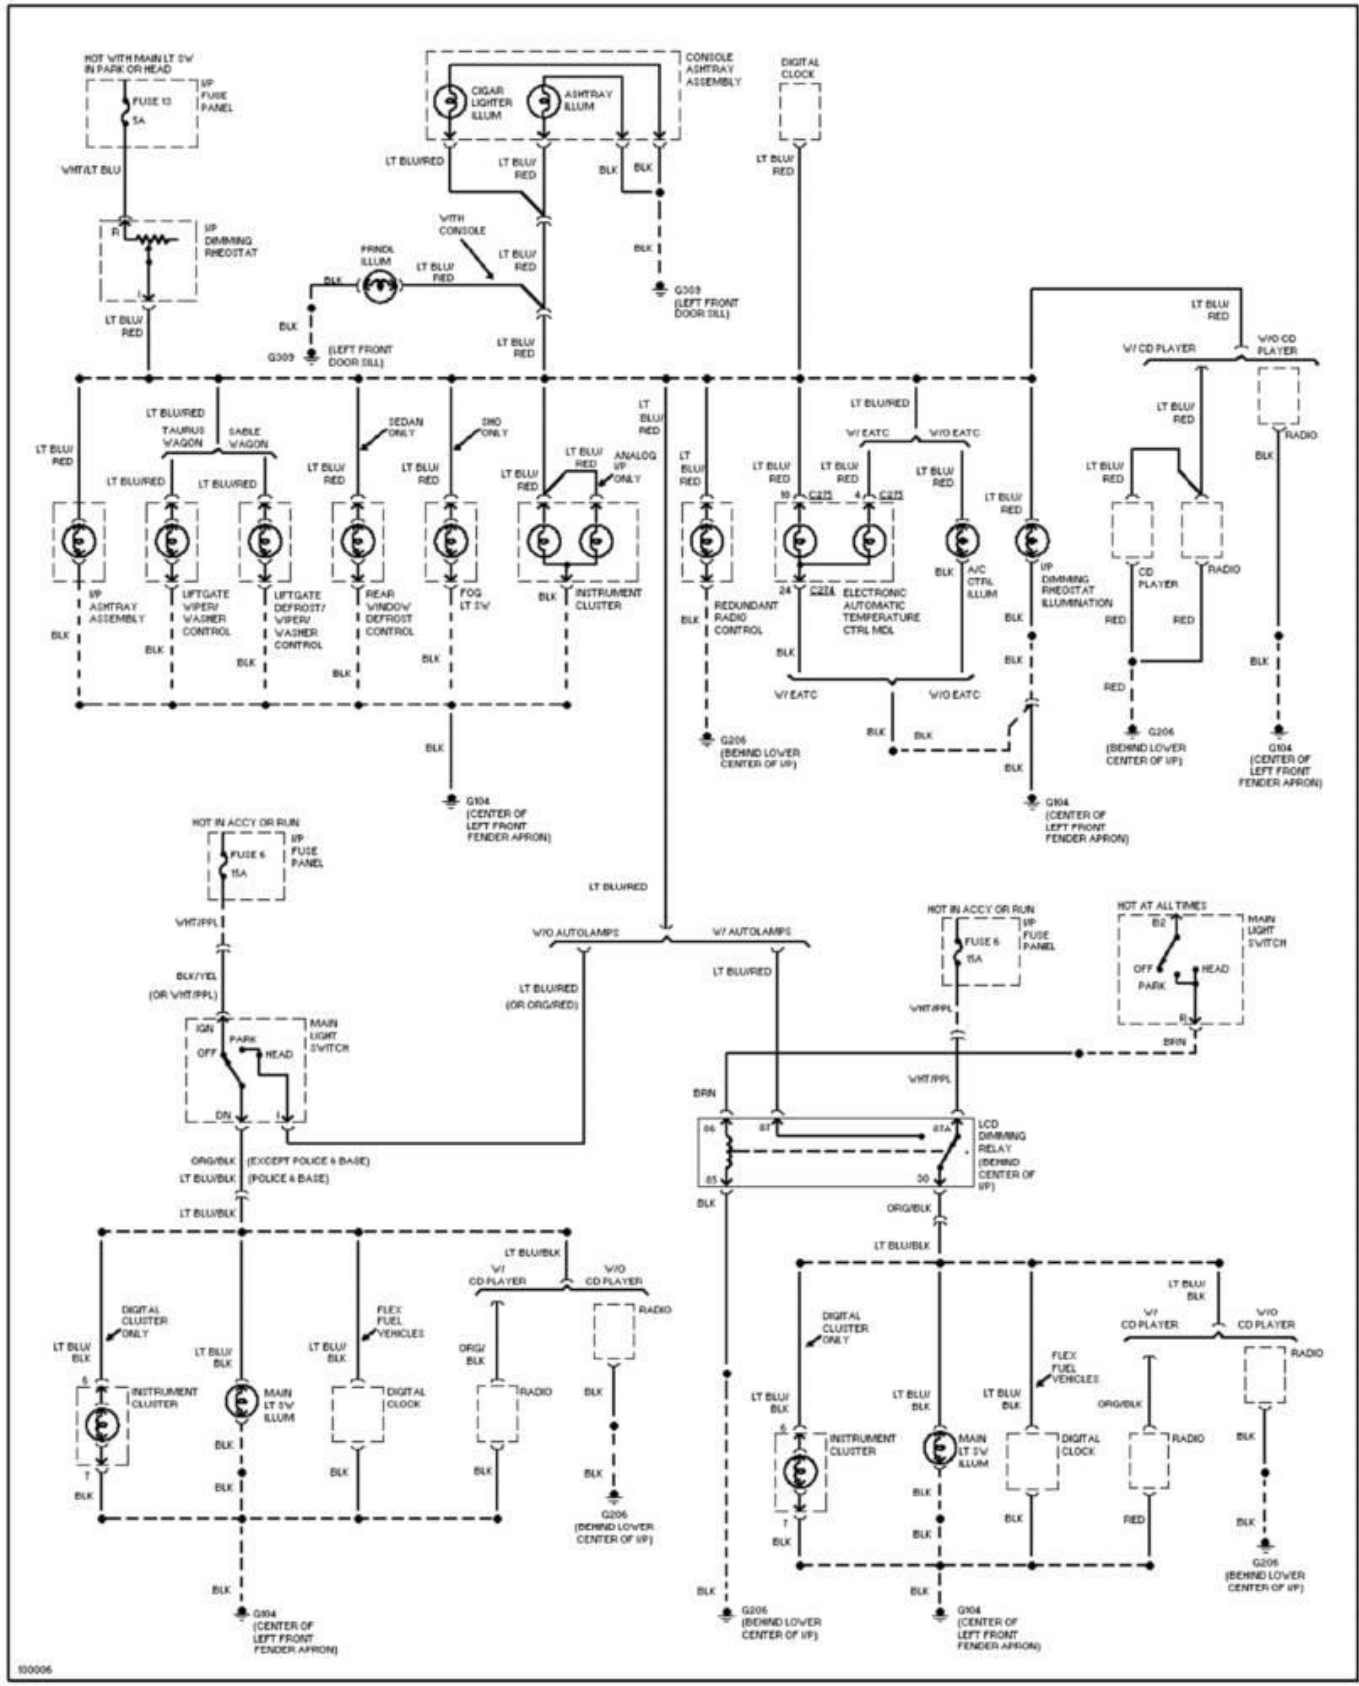

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 11: Power Antenna Circuit  
1993 Ford Taurus LX

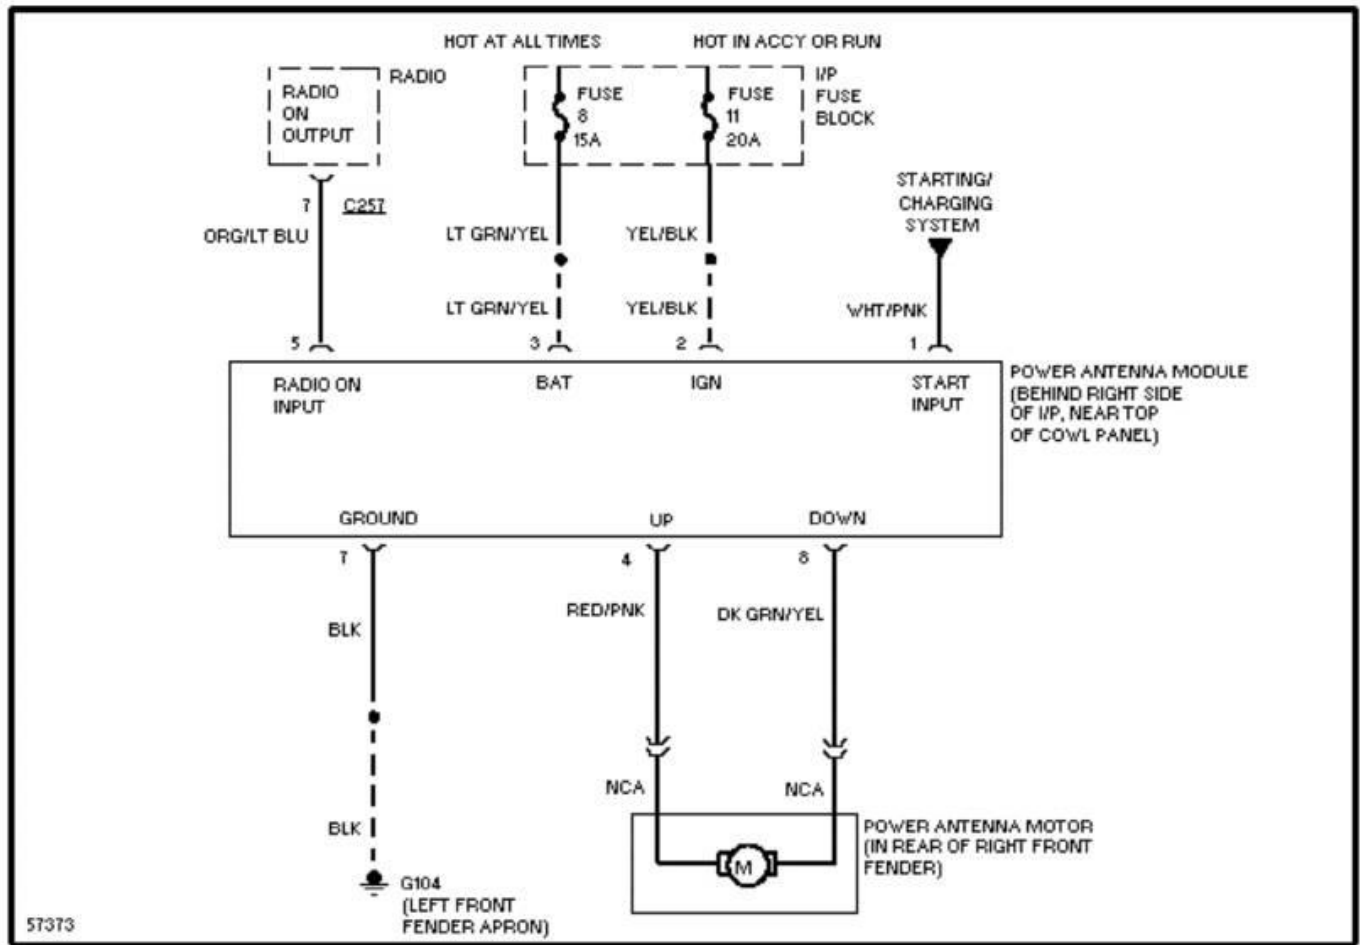

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 12: Door Lock Circuit, W/ Power Windows  
1993 Ford Taurus LX

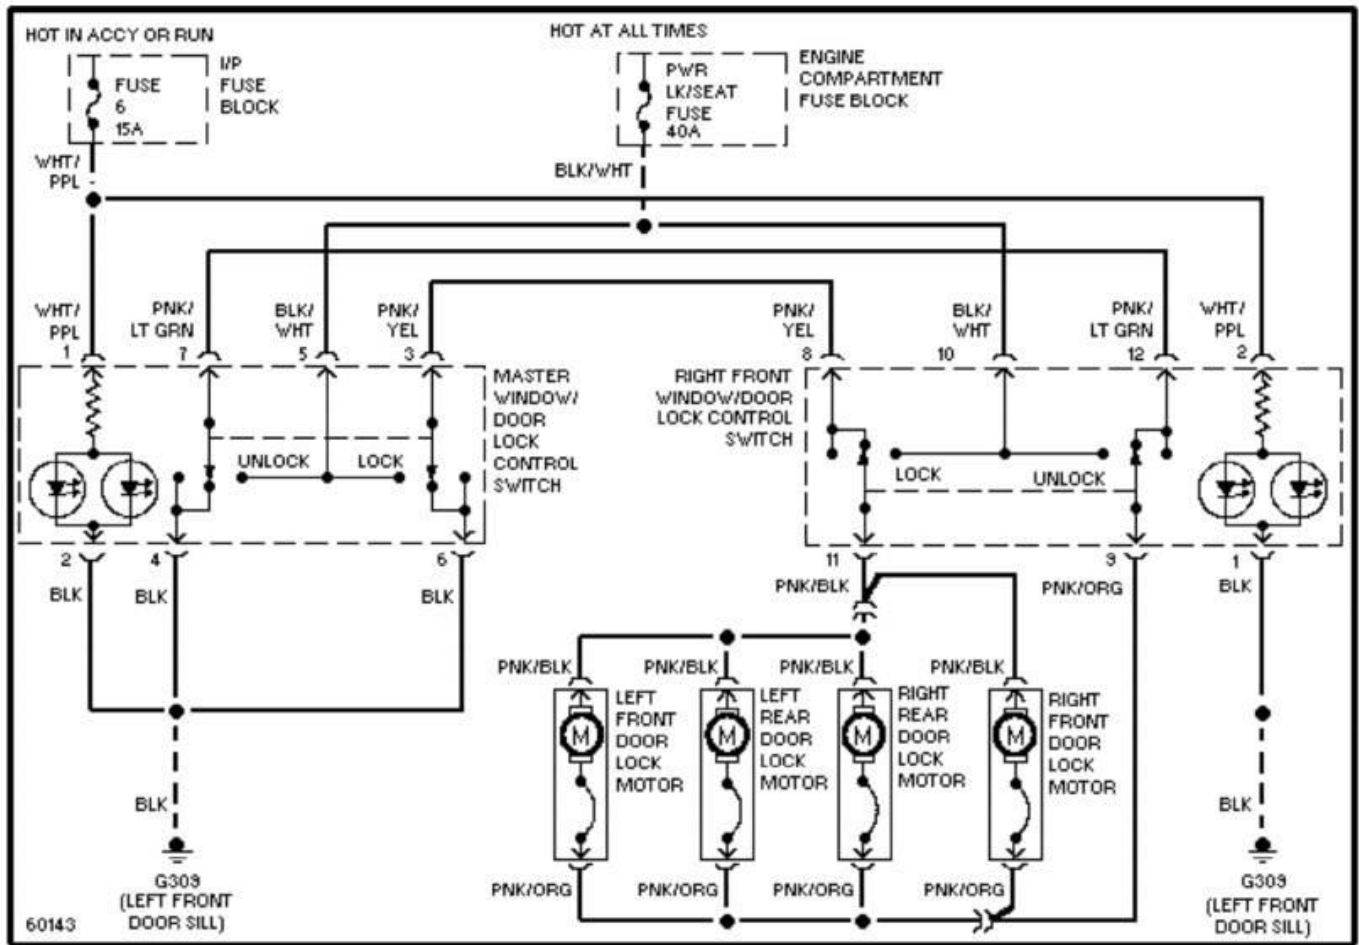




1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 13: Door Lock Circuit, W/O Power Windows  
1993 Ford Taurus LX

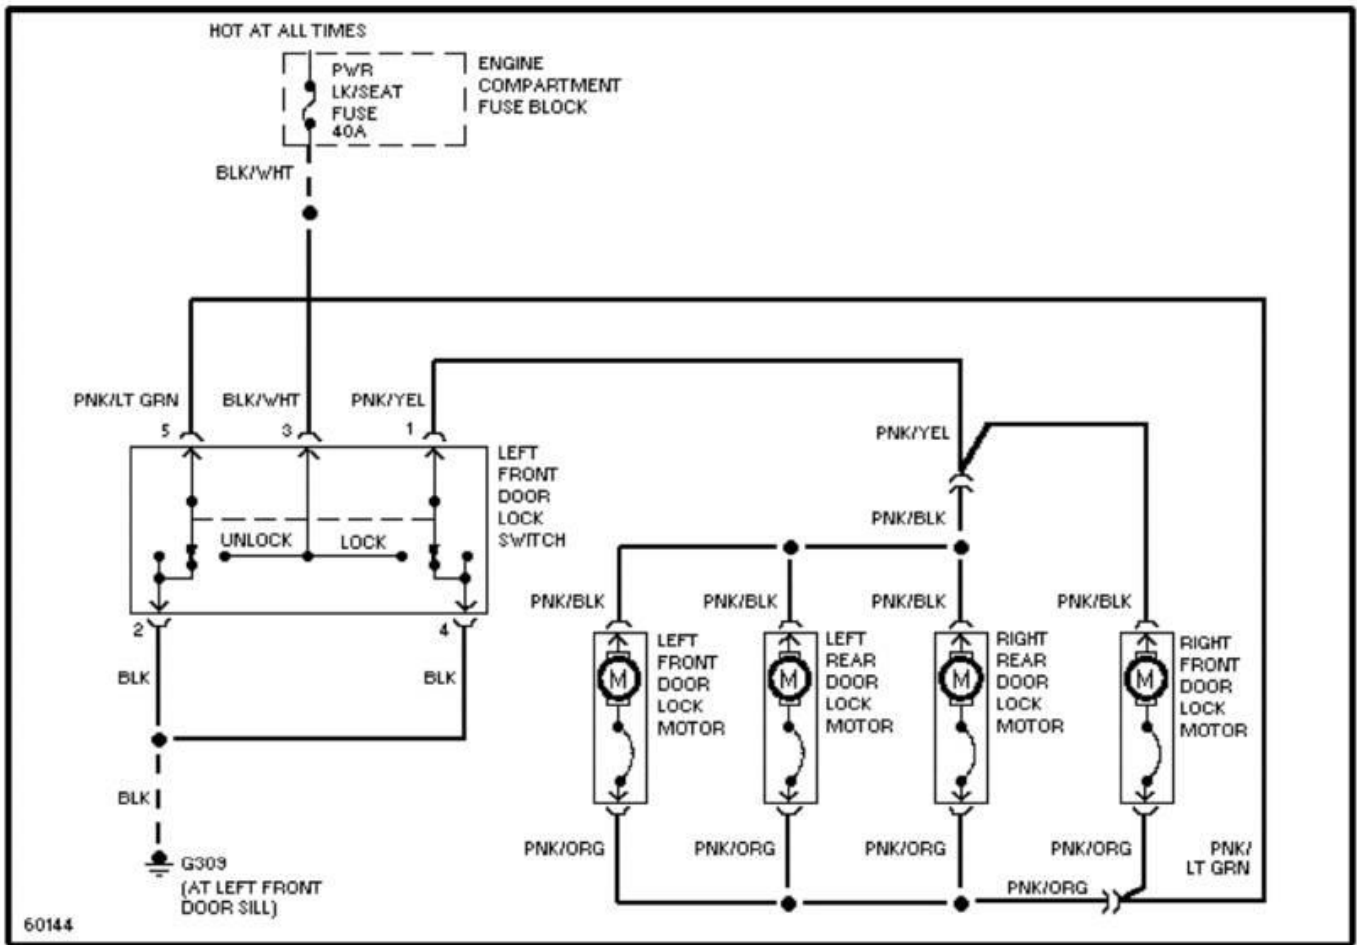

# 1993 System Wiring Diagrams Ford - Taurus

PAVLIN


**Fig. 14: Keyless Entry Circuit**  
1993 Ford Taurus LX

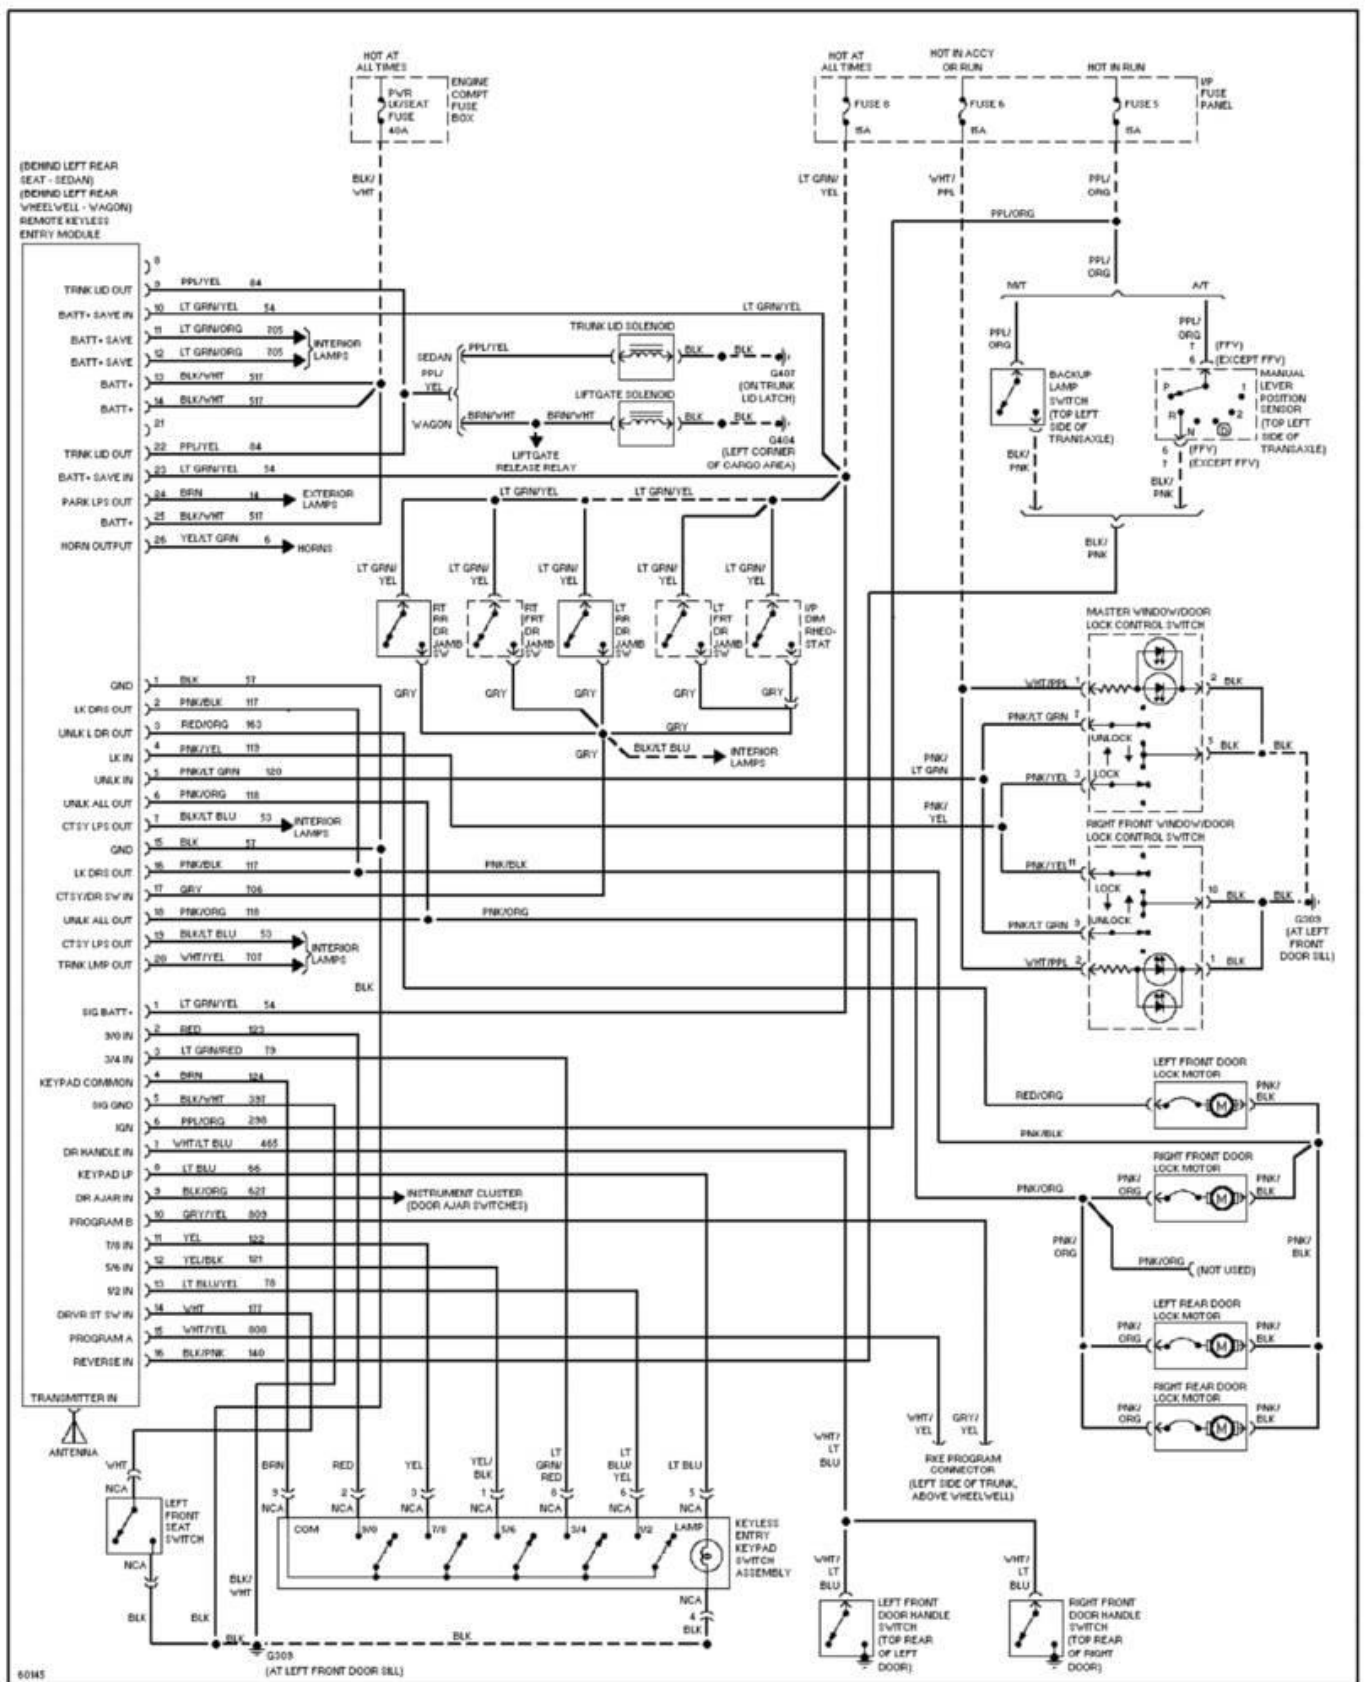

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 15: Power Door Lock Circuit, W/ Power Windows  
1993 Ford Taurus LX

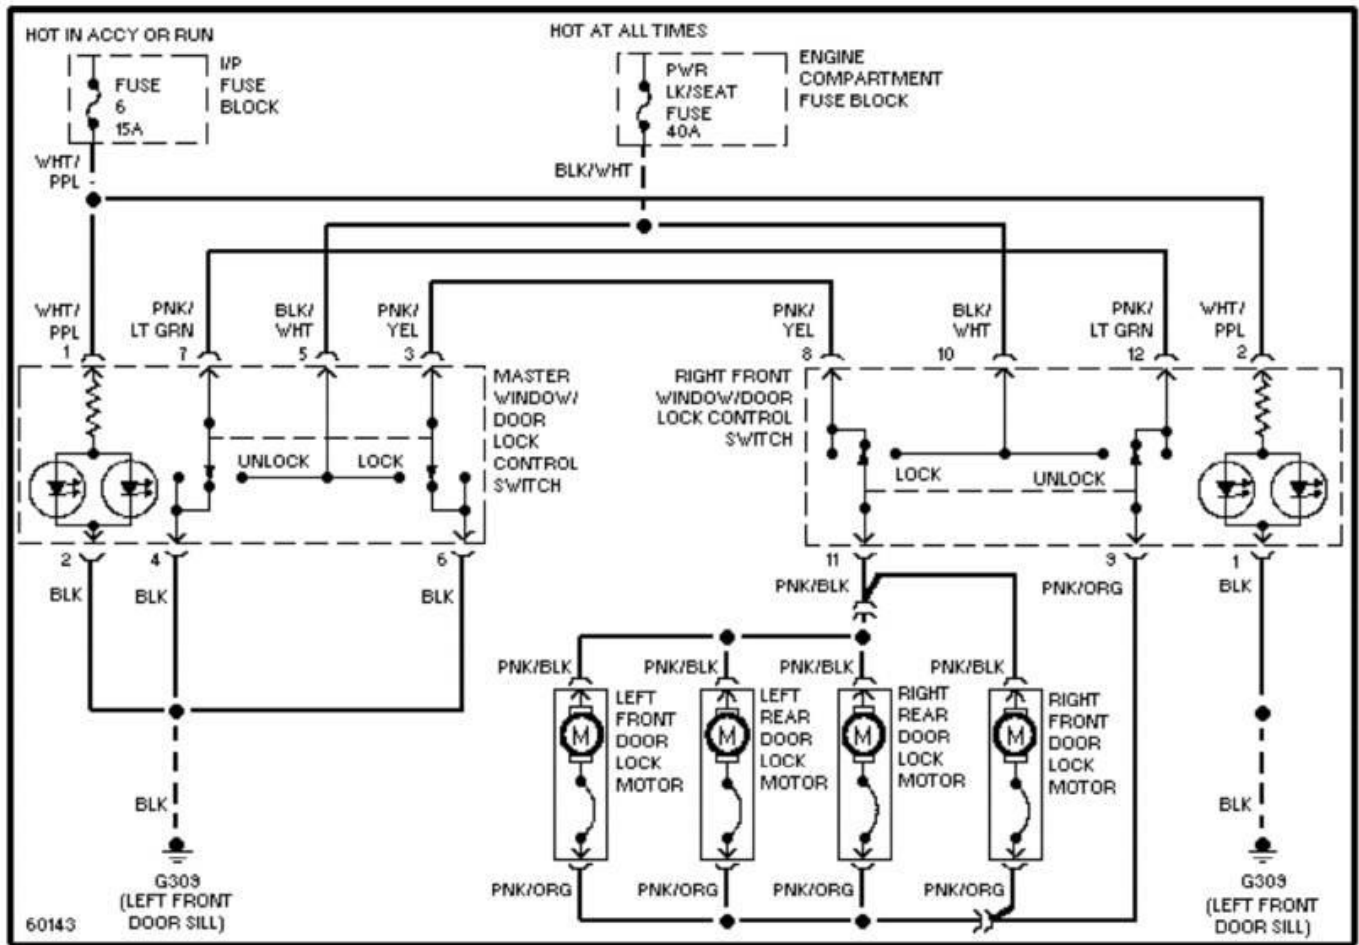




1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 17: Power Mirror Circuit  
1993 Ford Taurus LX

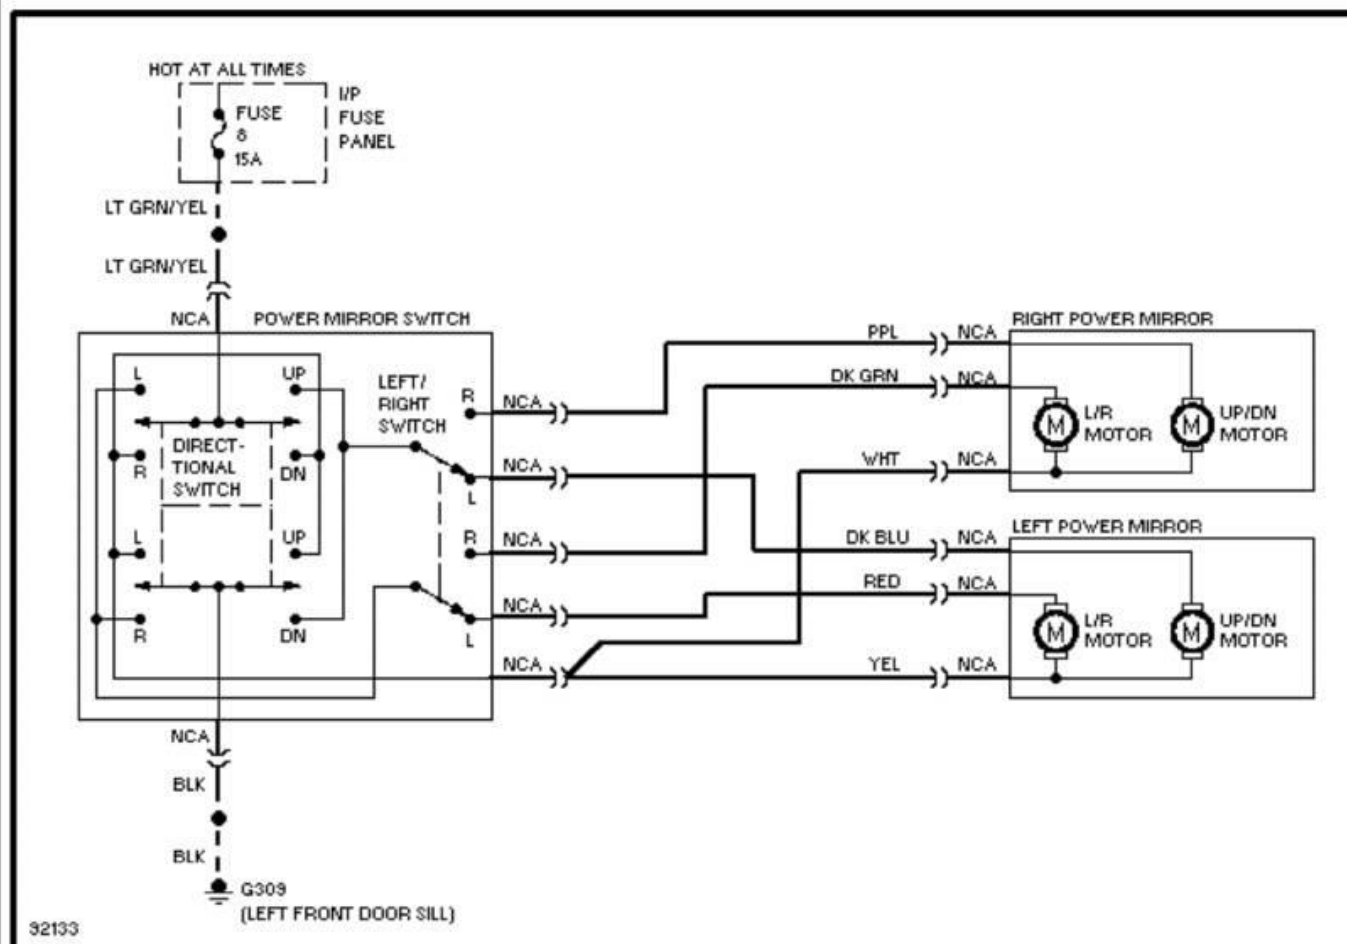

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 18: Lumbar Circuit  
1993 Ford Taurus LX

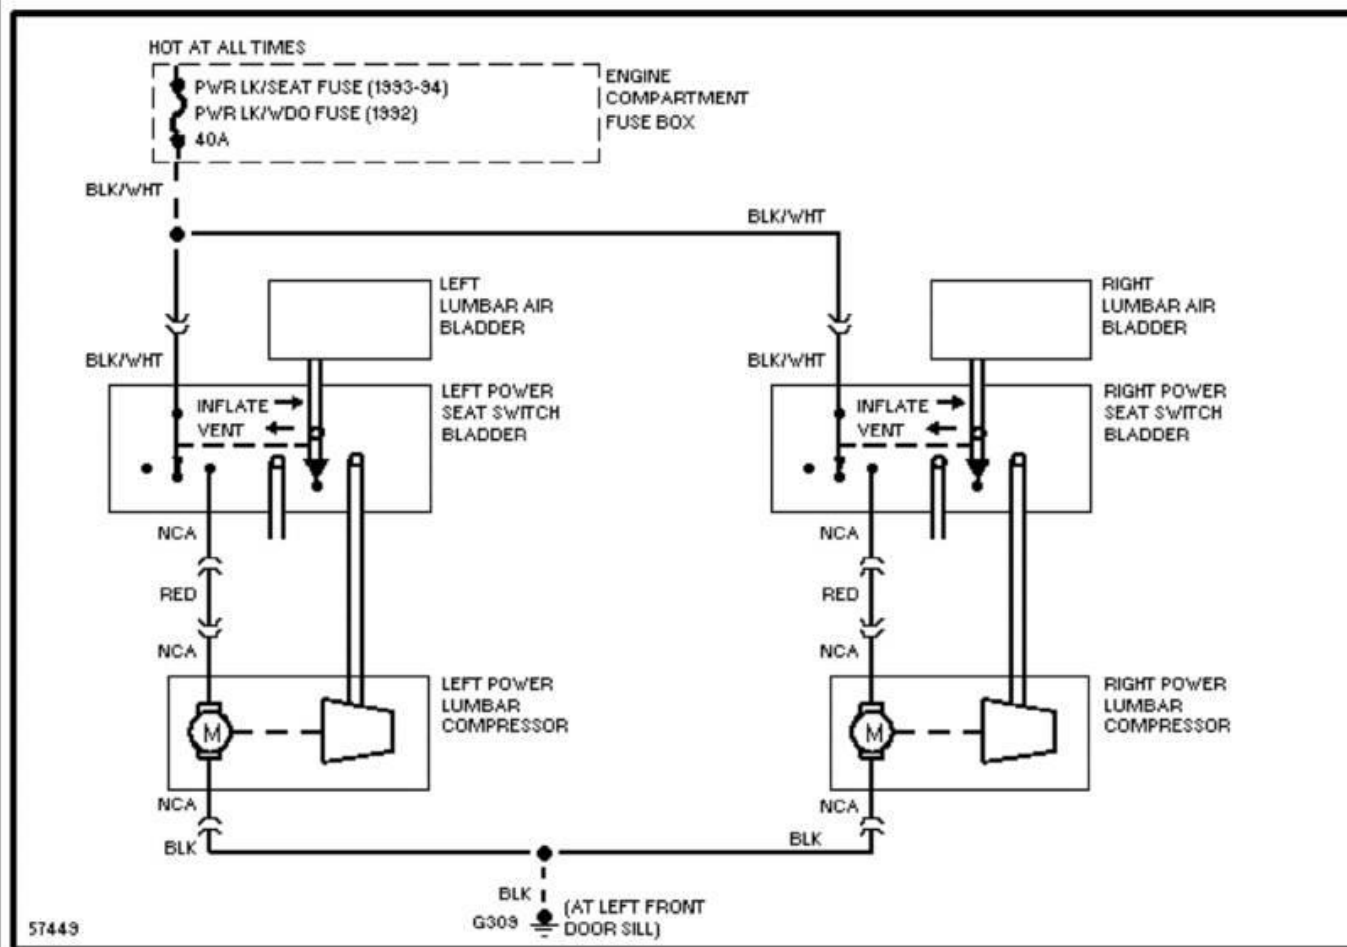

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 19: Power Seat Circuit  
1993 Ford Taurus LX

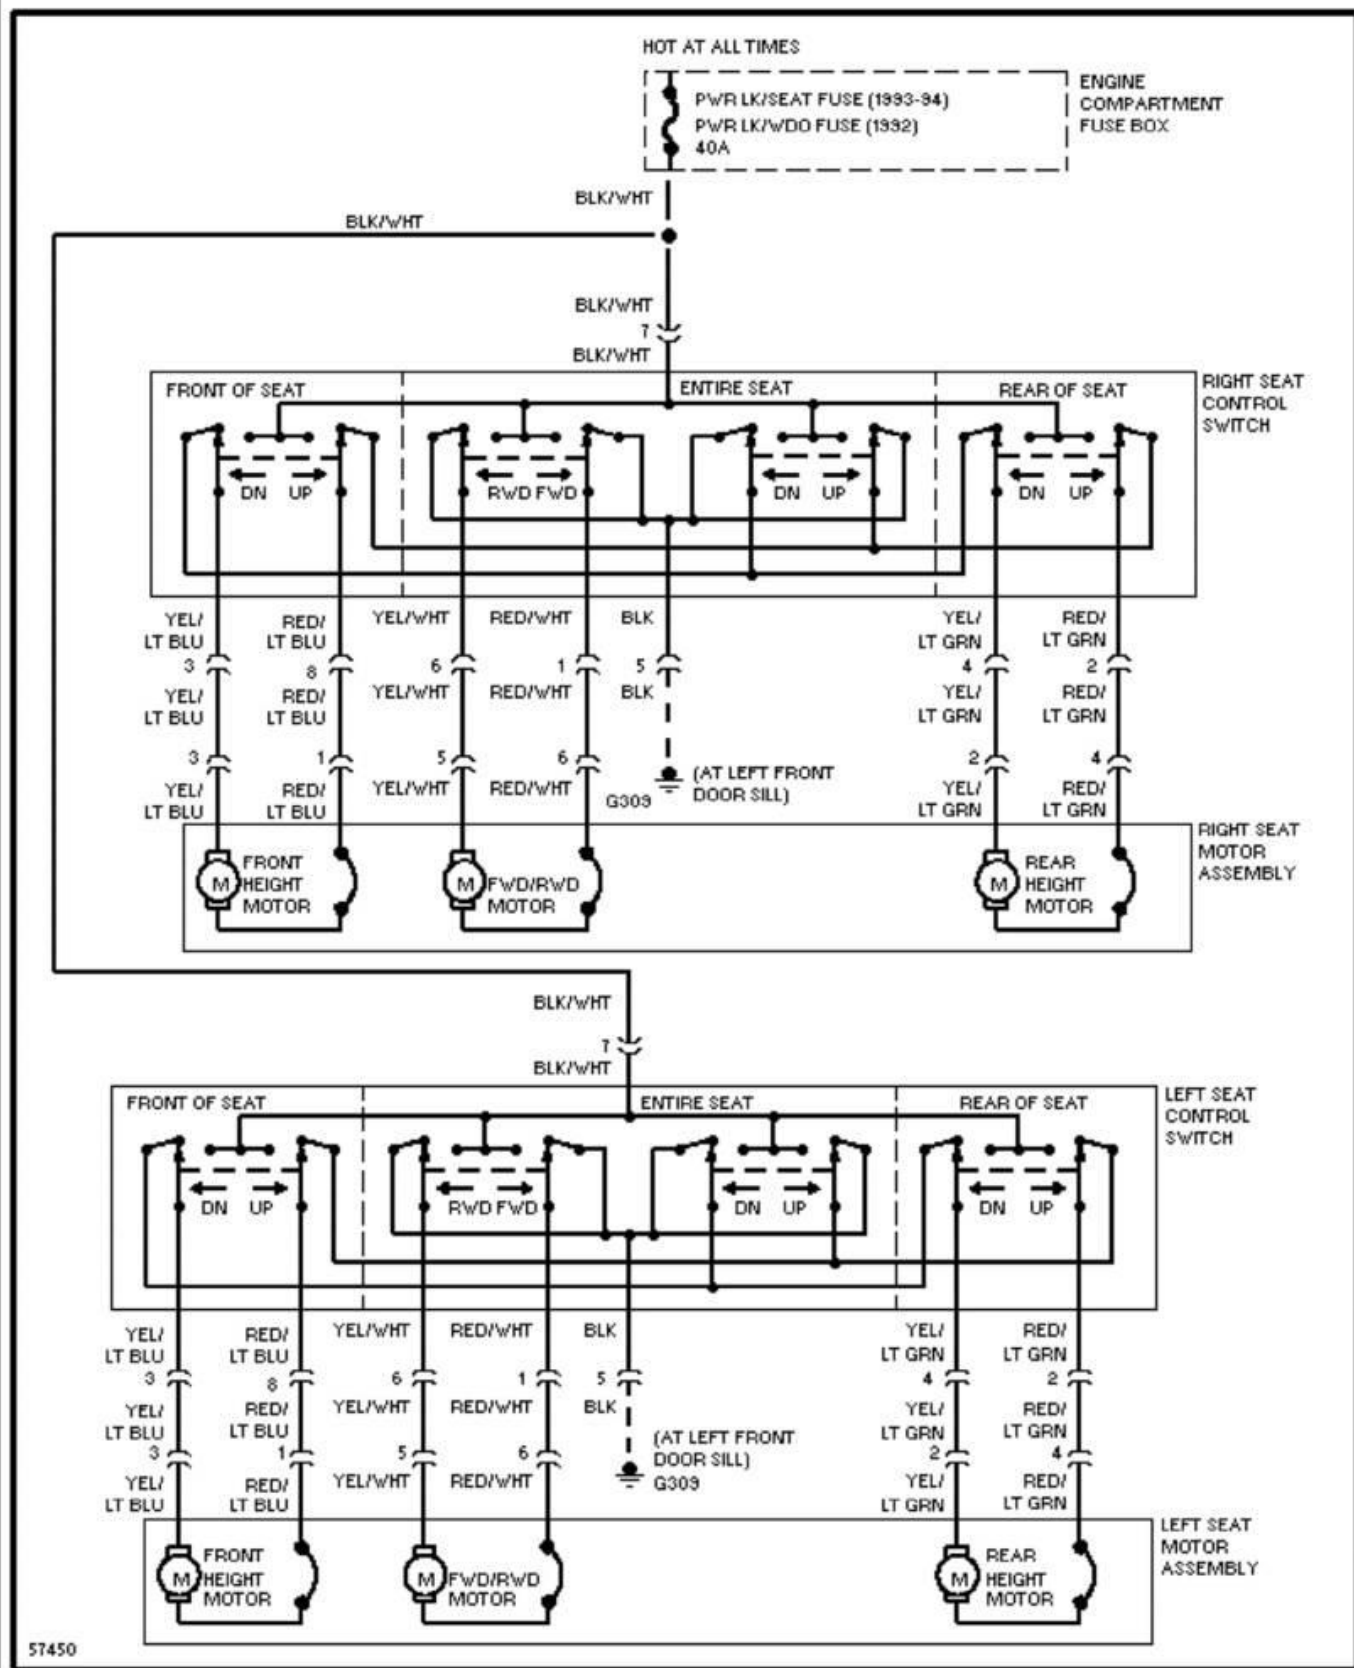






1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 21: Radio Circuits, Base Radio W/ Cassette Deck  
1993 Ford Taurus LX

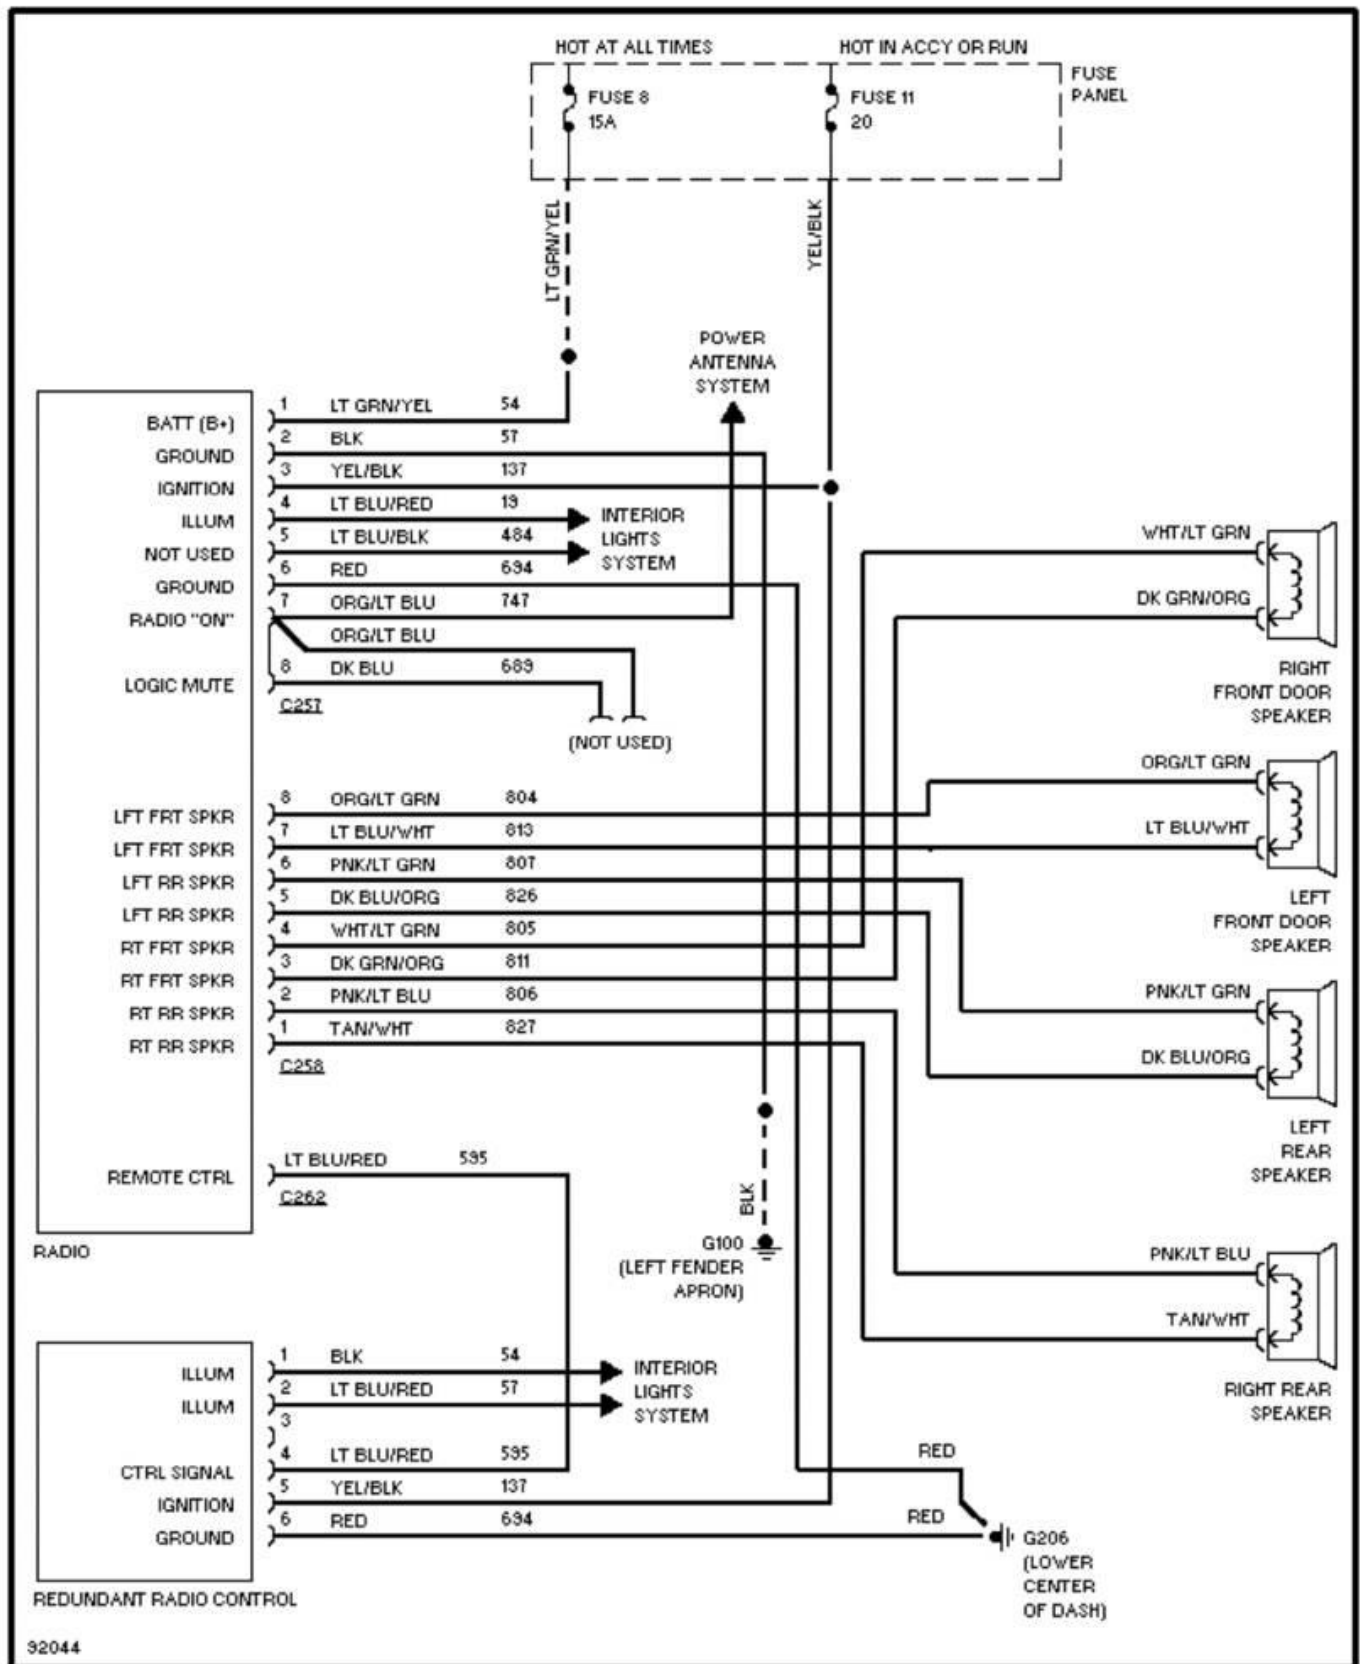

# 1993 System Wiring Diagrams Ford - Taurus

PAVLIN


**Fig. 22: Radio Circuits, W/ Cellular Telephone**  
1993 Ford Taurus LX

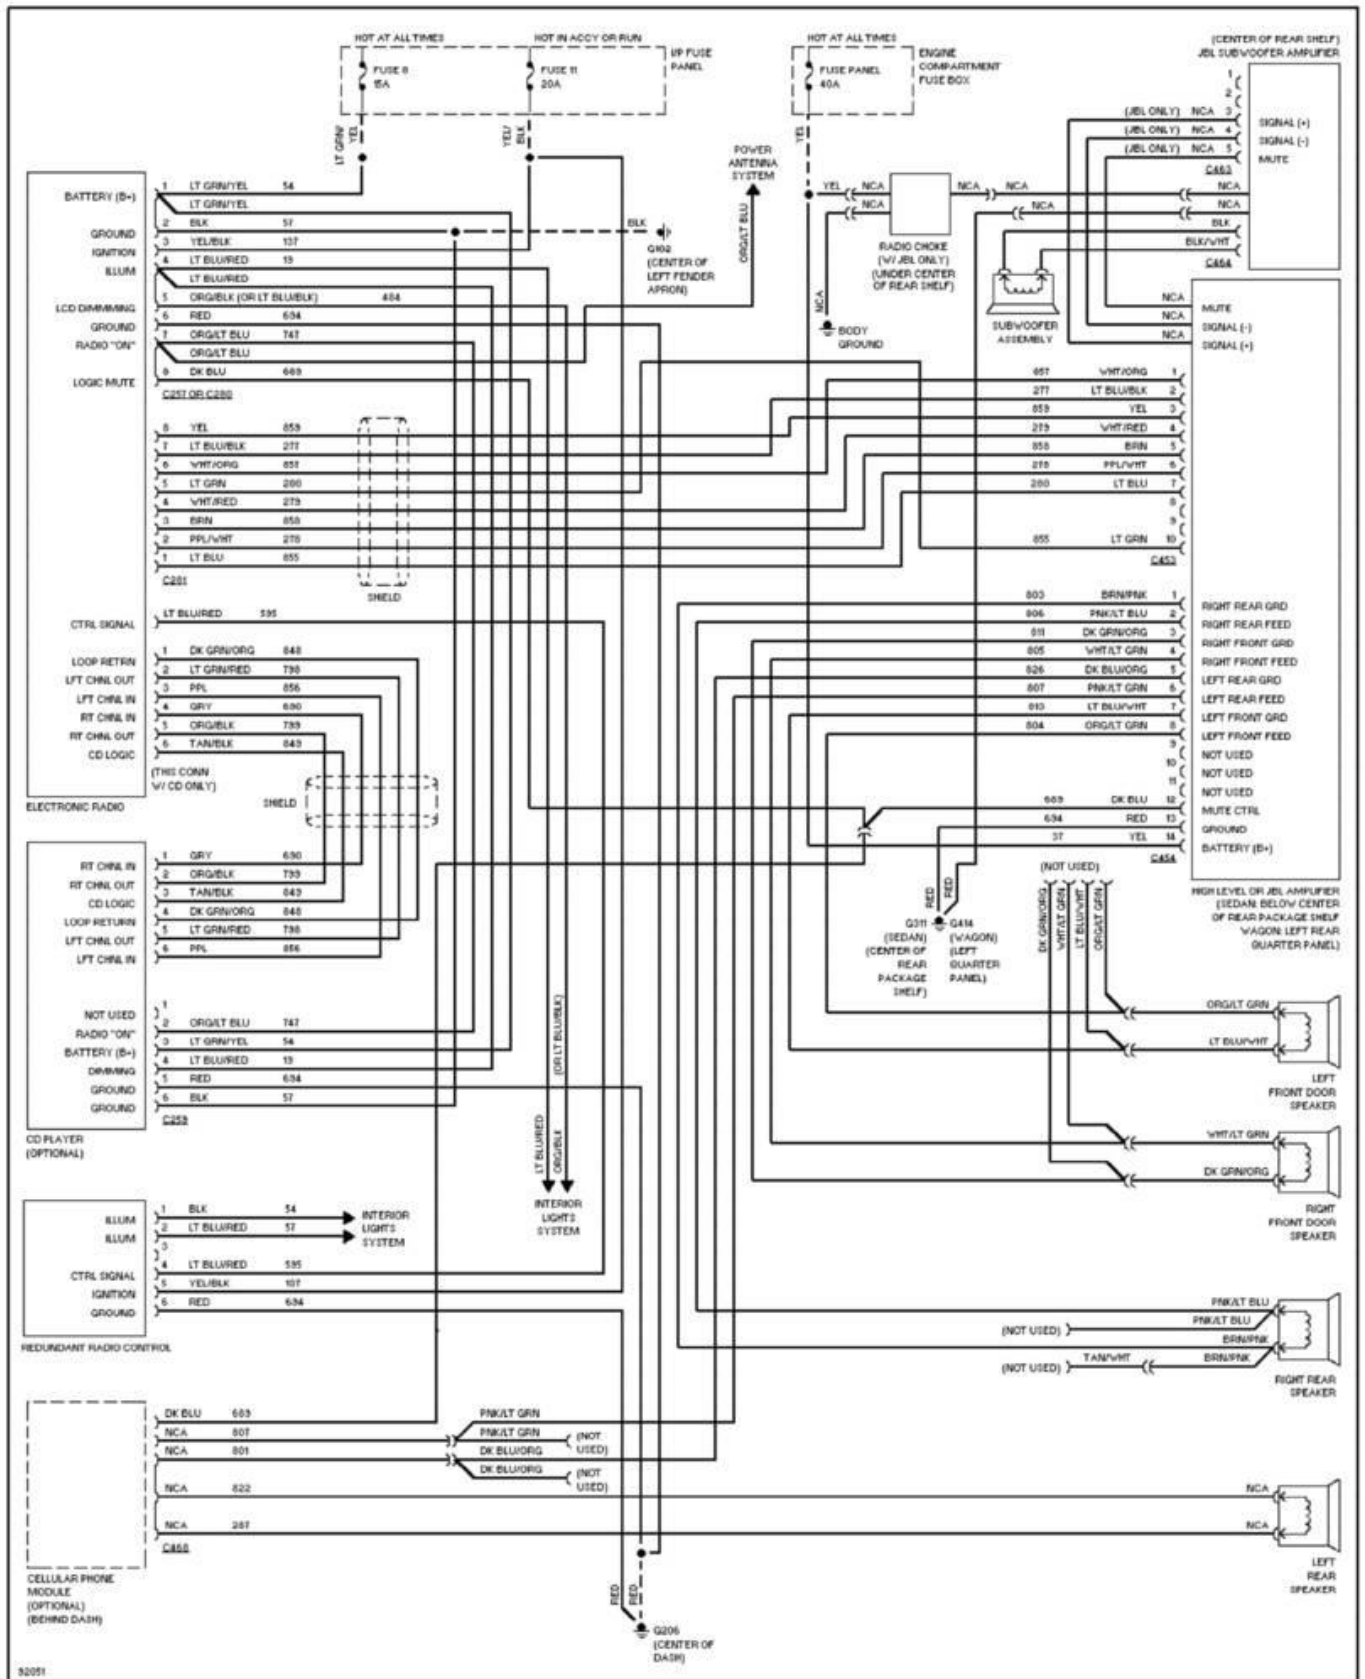

# 1993 System Wiring Diagrams Ford - Taurus

PAVLIN

**Fig. 23: Radio Circuits, W/O Cellular Telephone**  
1993 Ford Taurus LX

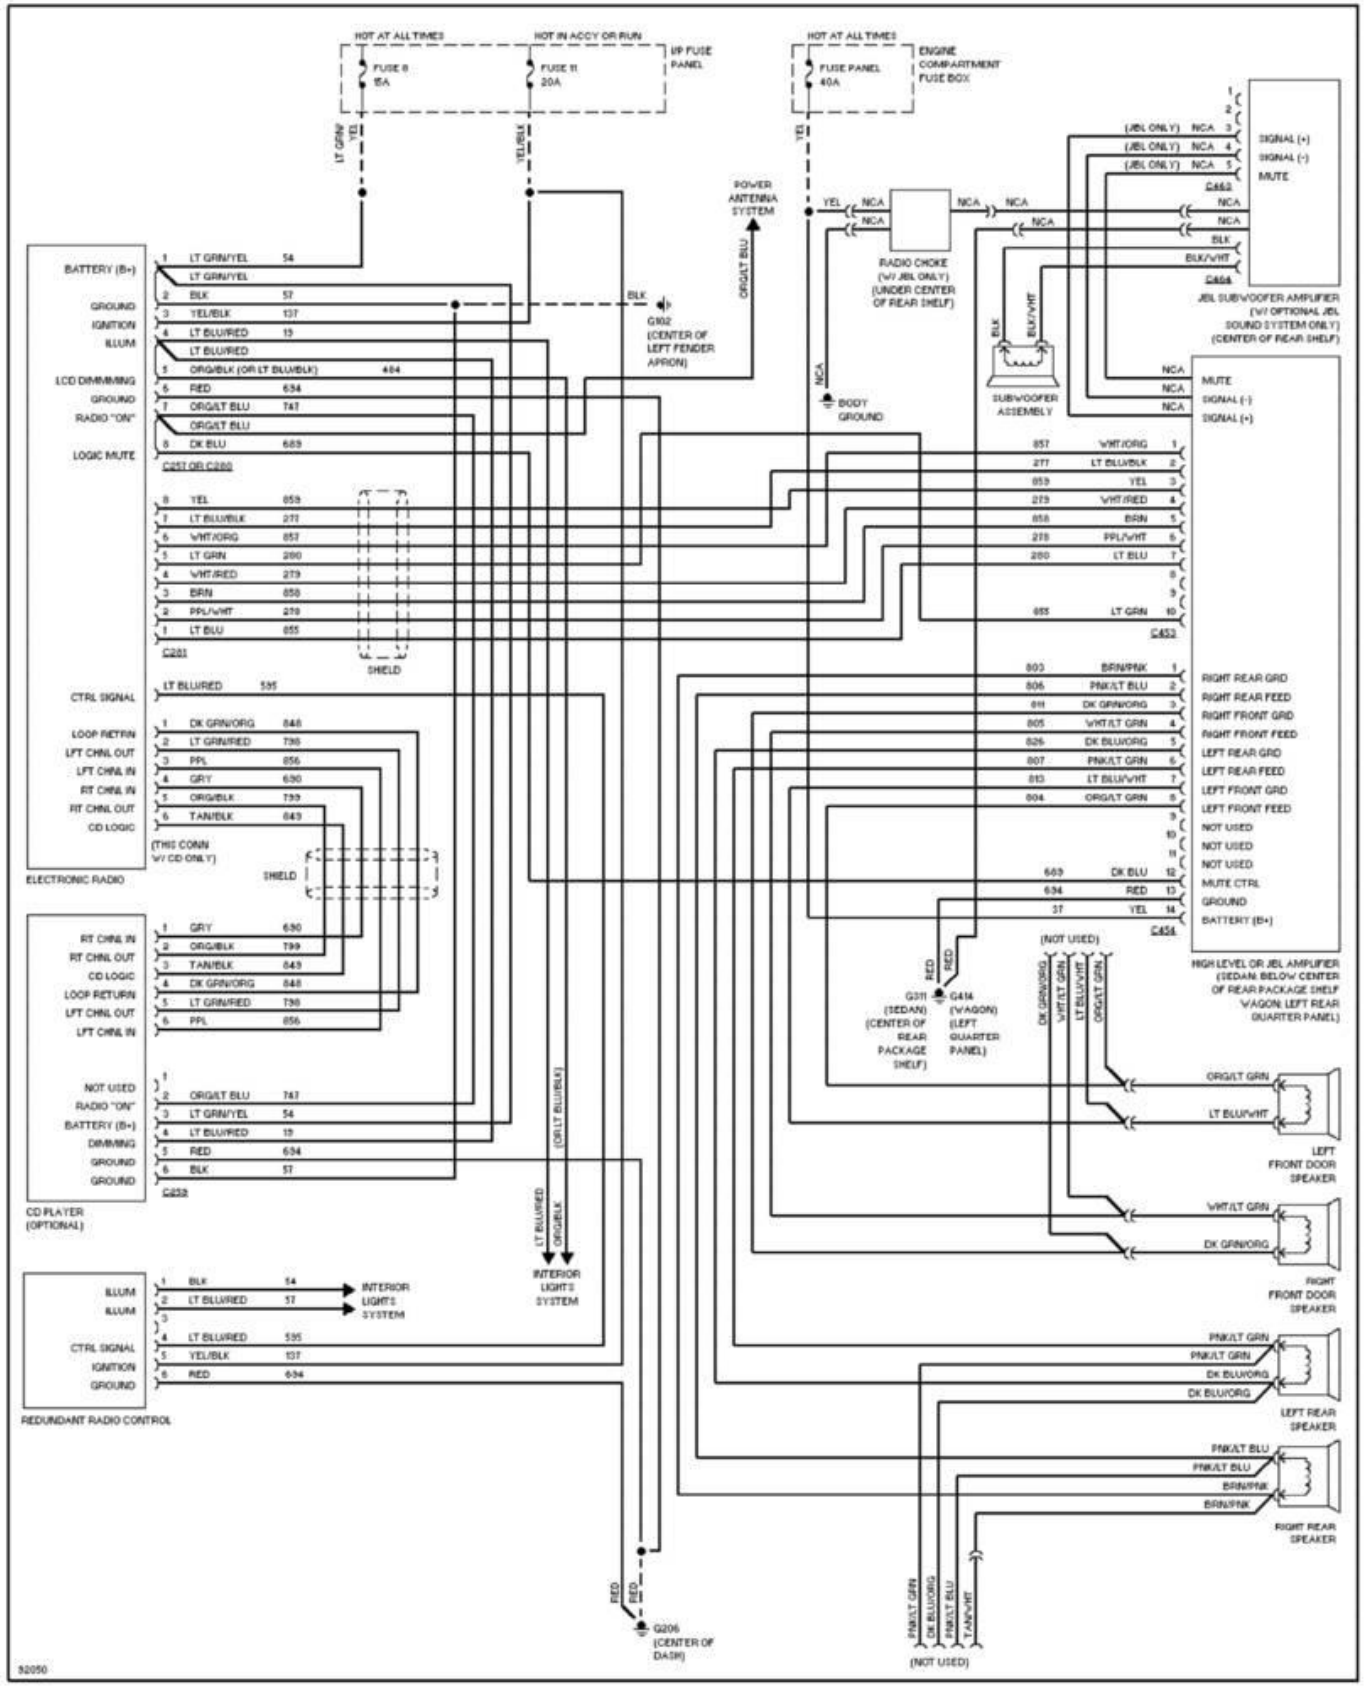


92050

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 24: Charging Circuit  
1993 Ford Taurus LX

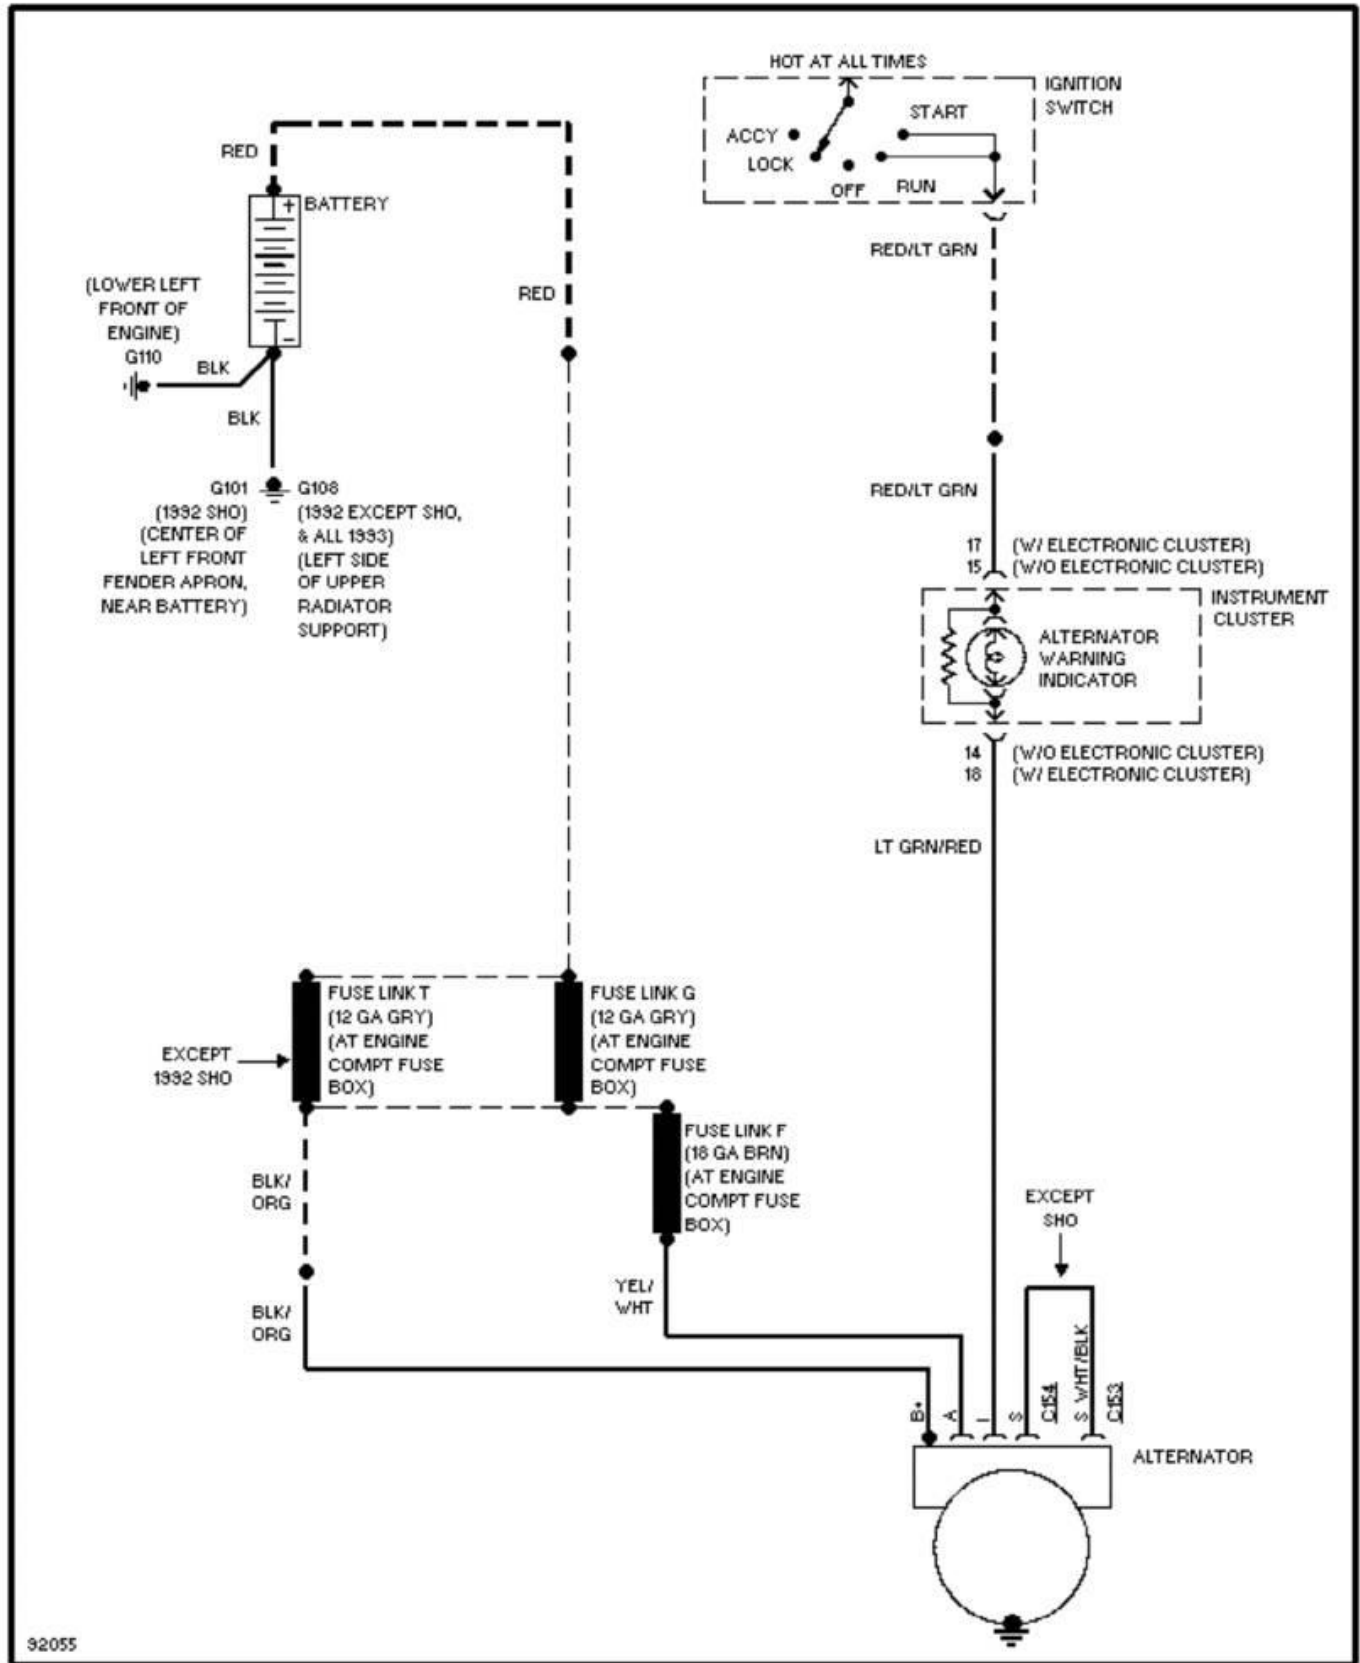


92055

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 25: Starting Circuit  
1993 Ford Taurus LX

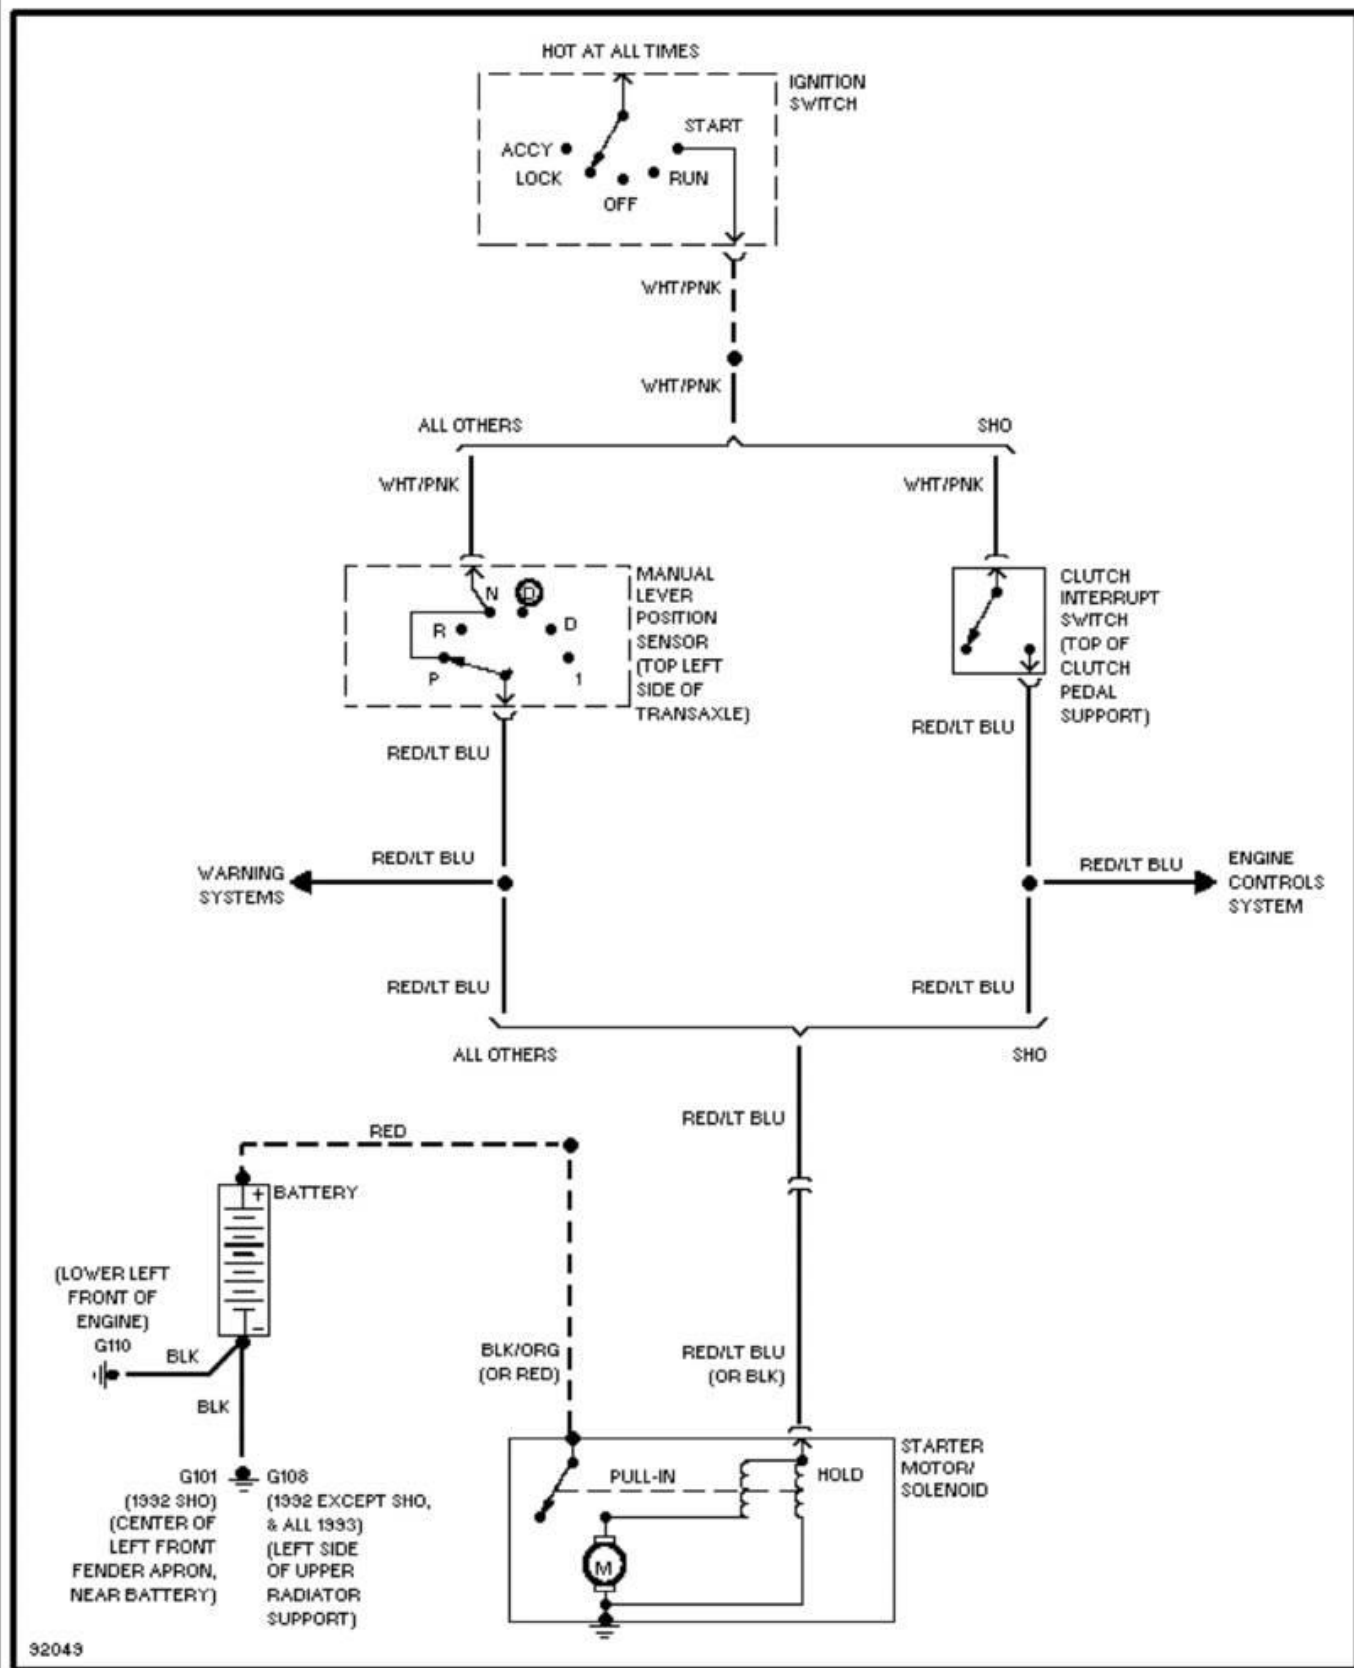

# 1993 System Wiring Diagrams Ford - Taurus

PAVLIN

**Fig. 26: Transmission Circuit**  
1993 Ford Taurus LX

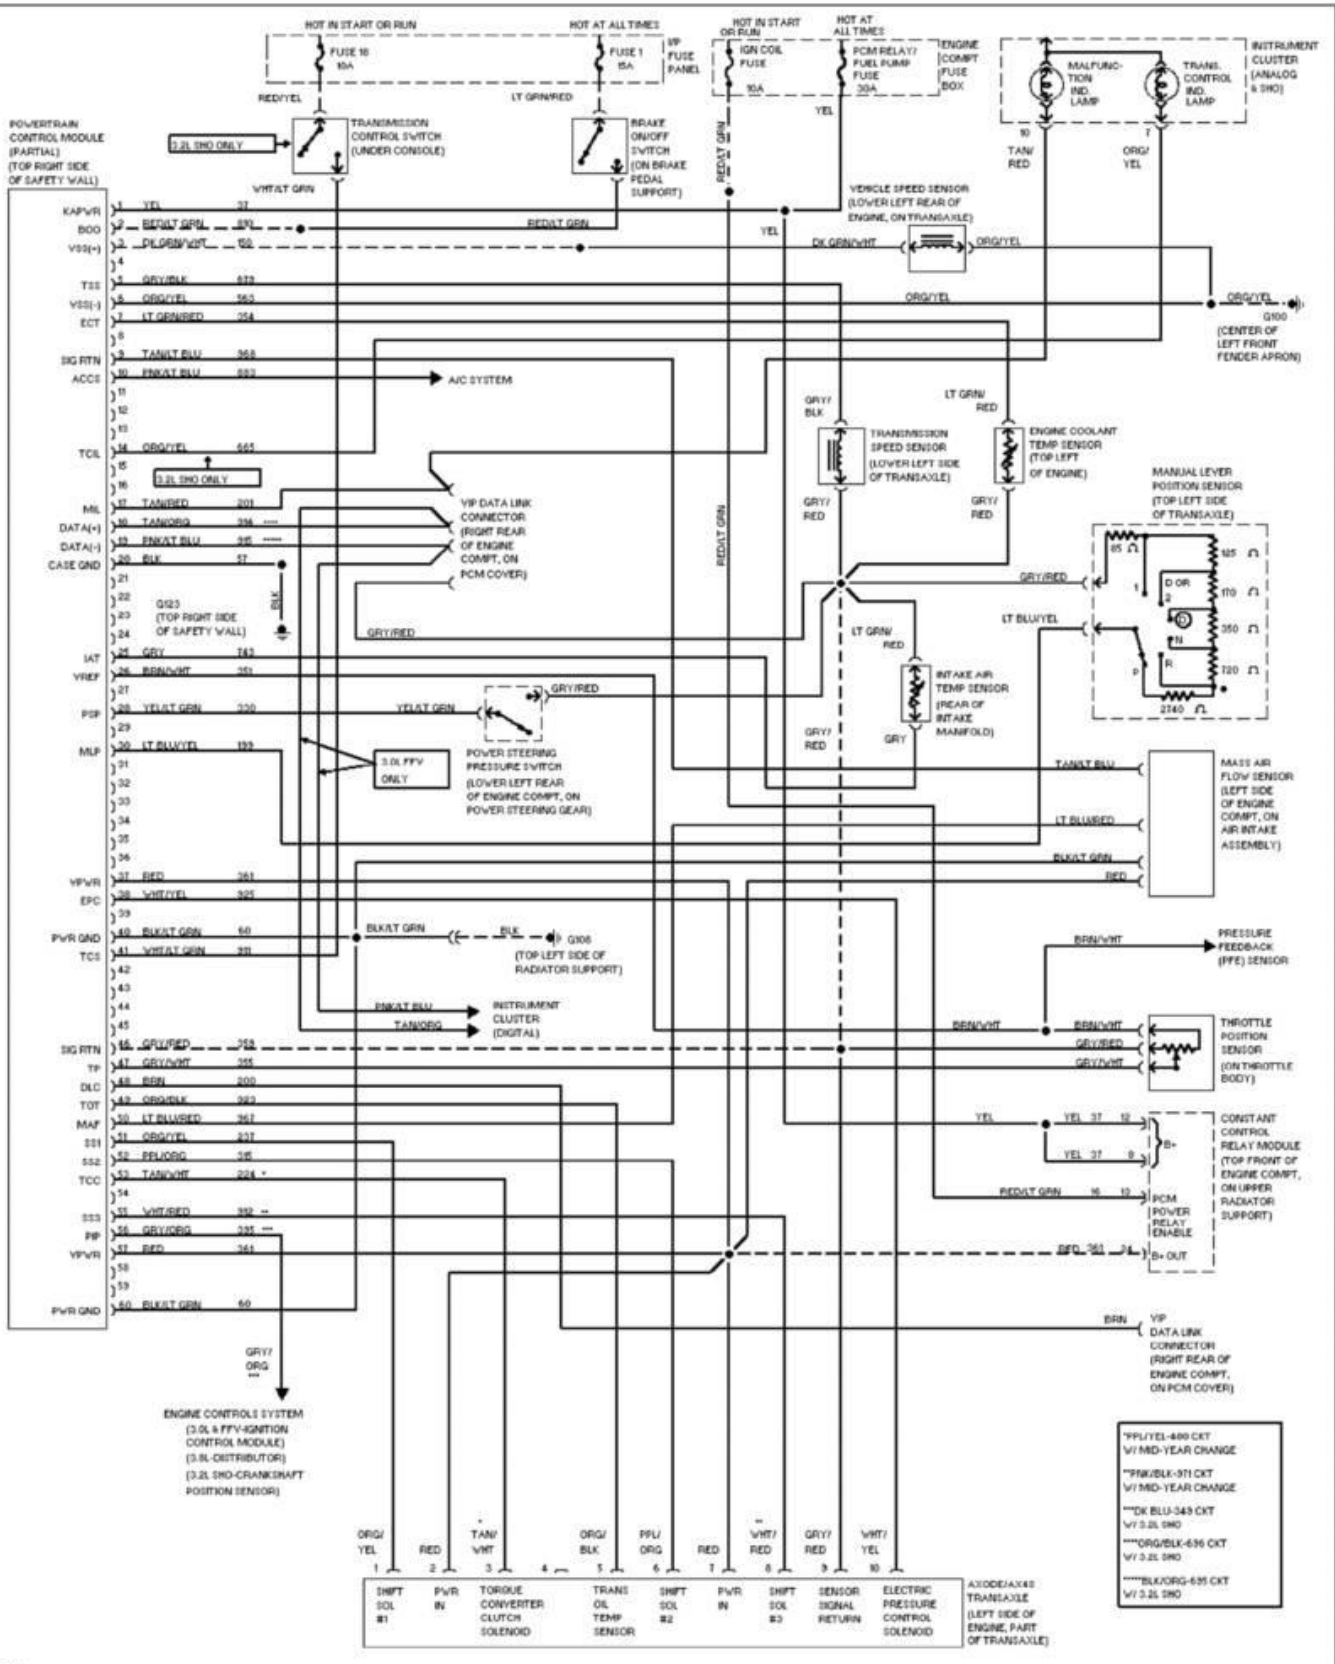


63621

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 27: Tailgate Release Circuit  
1993 Ford Taurus LX

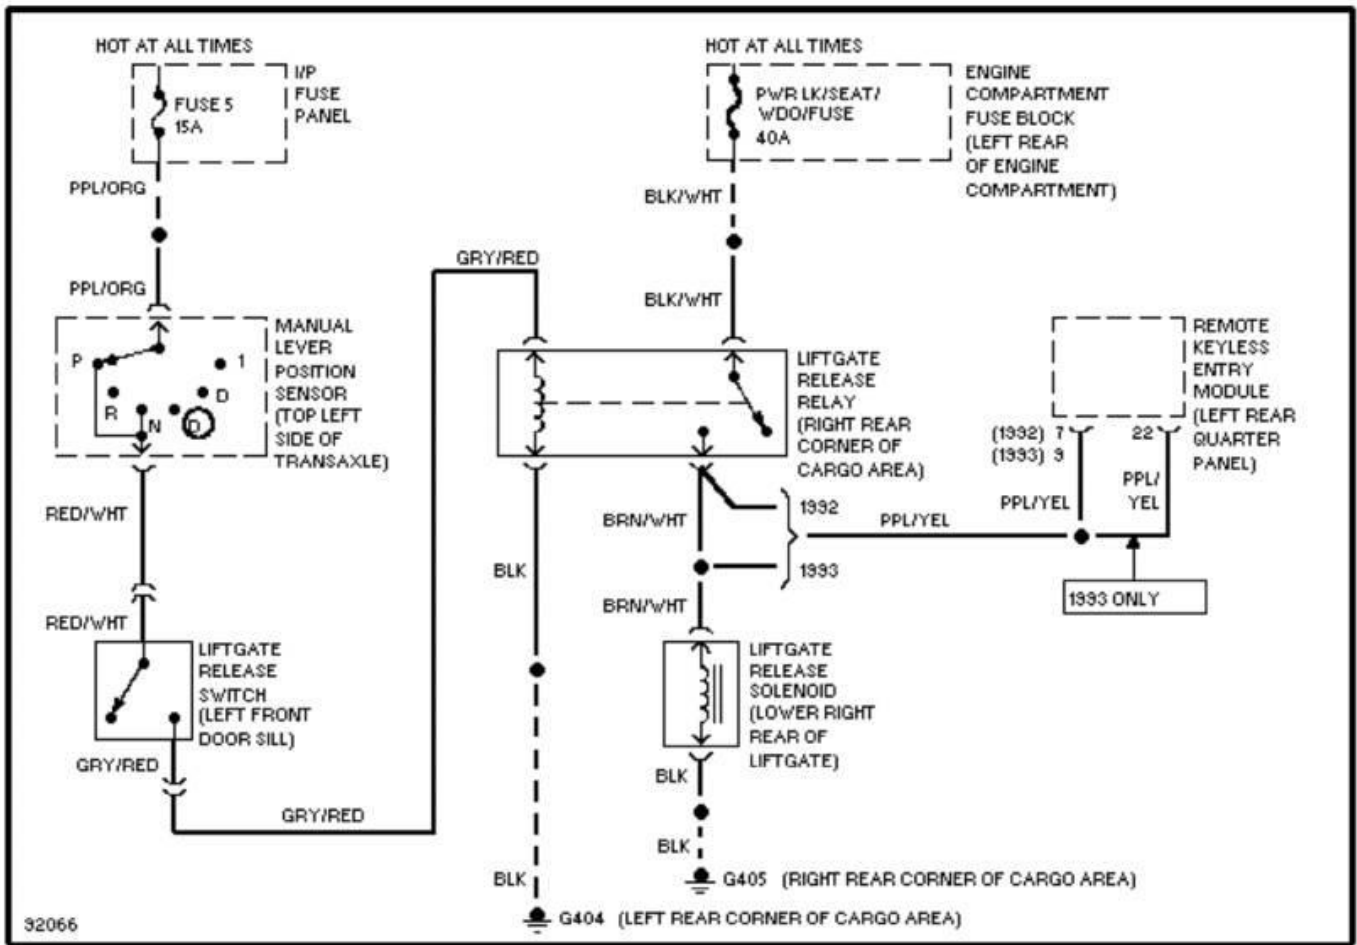

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN

Fig. 28: Trunk Release Circuit  
1993 Ford Taurus LX

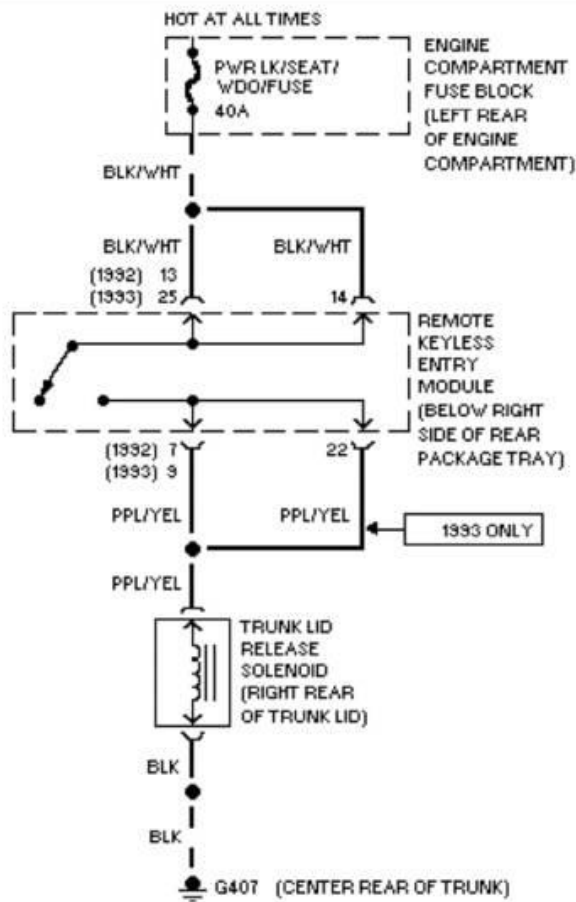


92065



# 1993 System Wiring Diagrams Ford - Taurus

PAVLIN


**Fig. 29: Interval Wiper/Washer Circuit**  
1993 Ford Taurus LX

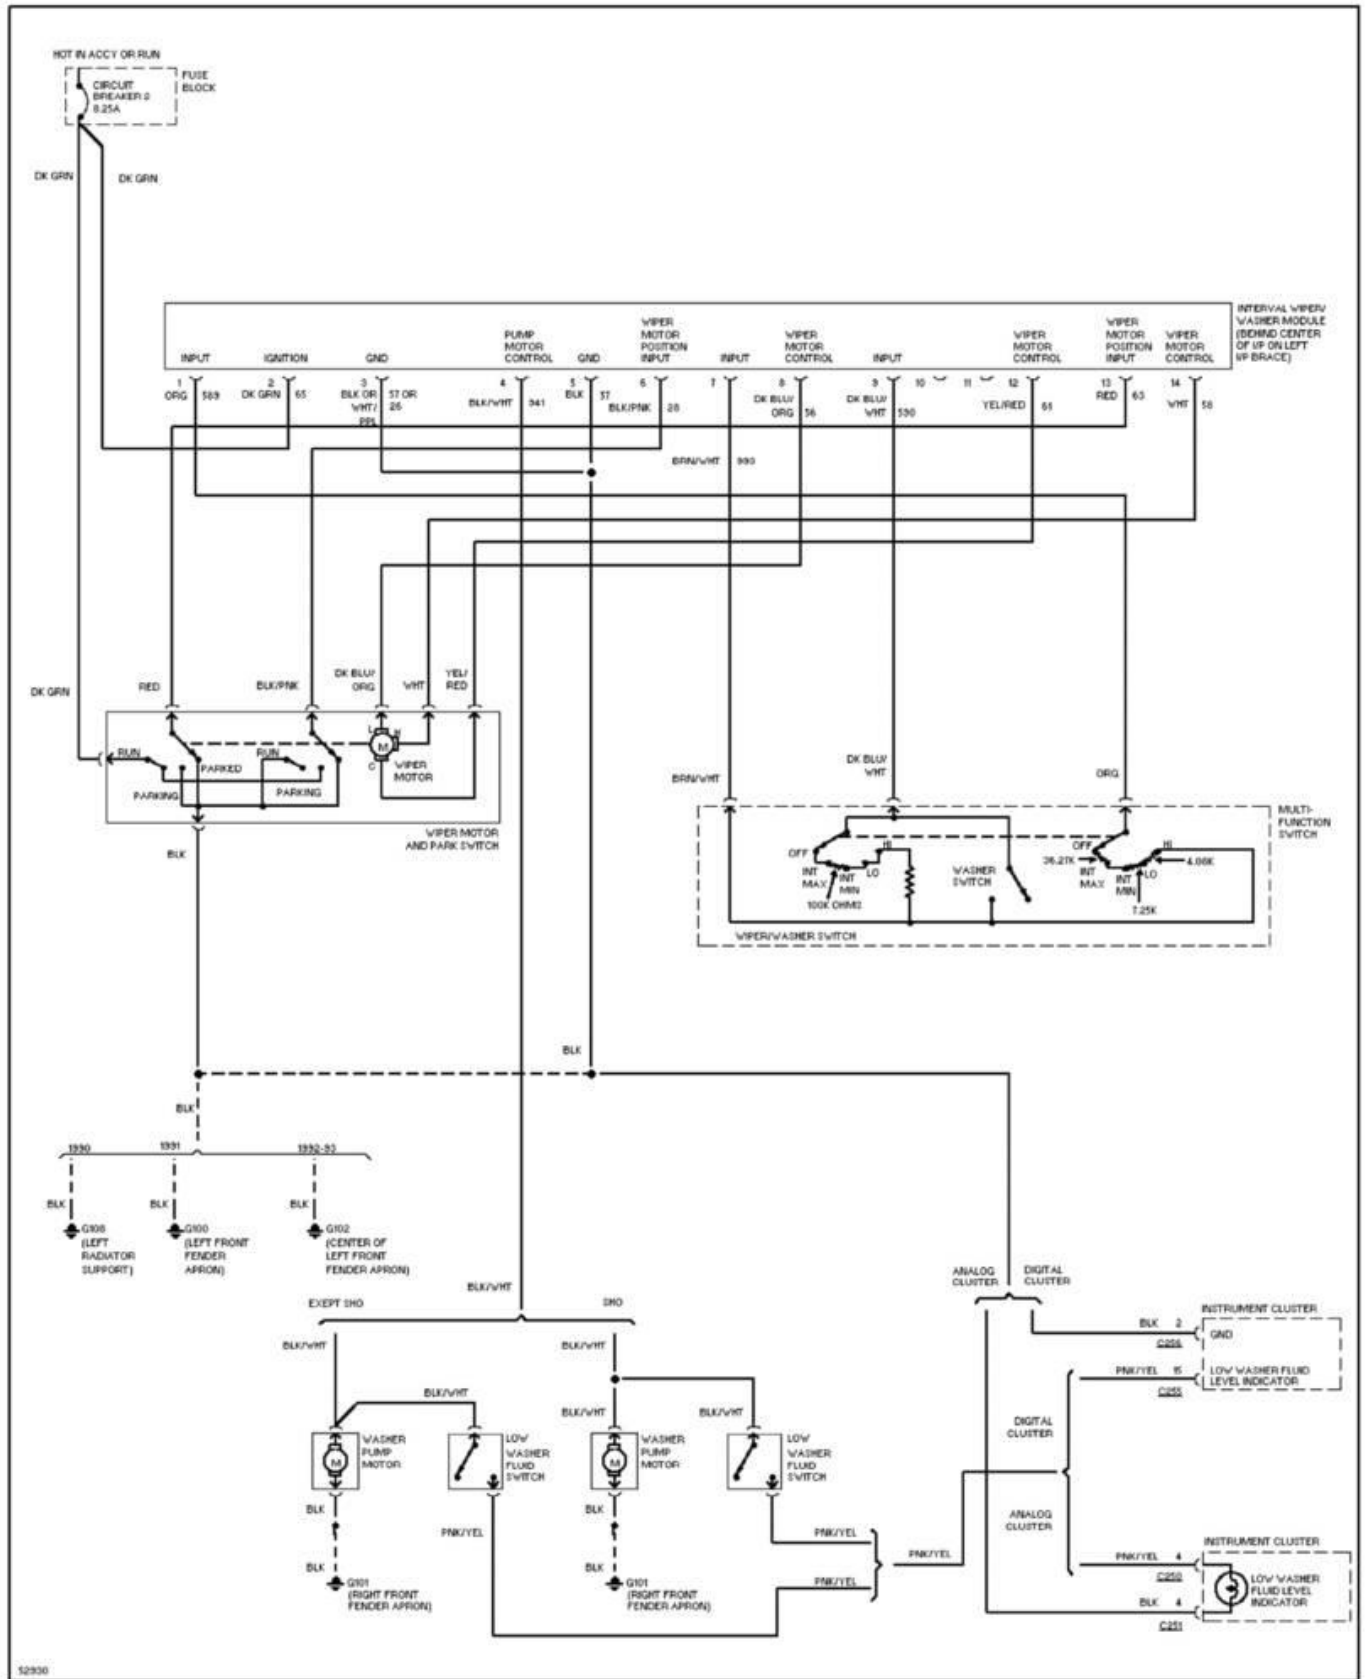

1993 System Wiring Diagrams  
Ford - Taurus

PAVLIN


Fig. 30: Rear Wiper/Washer Circuit  
1993 Ford Taurus LX

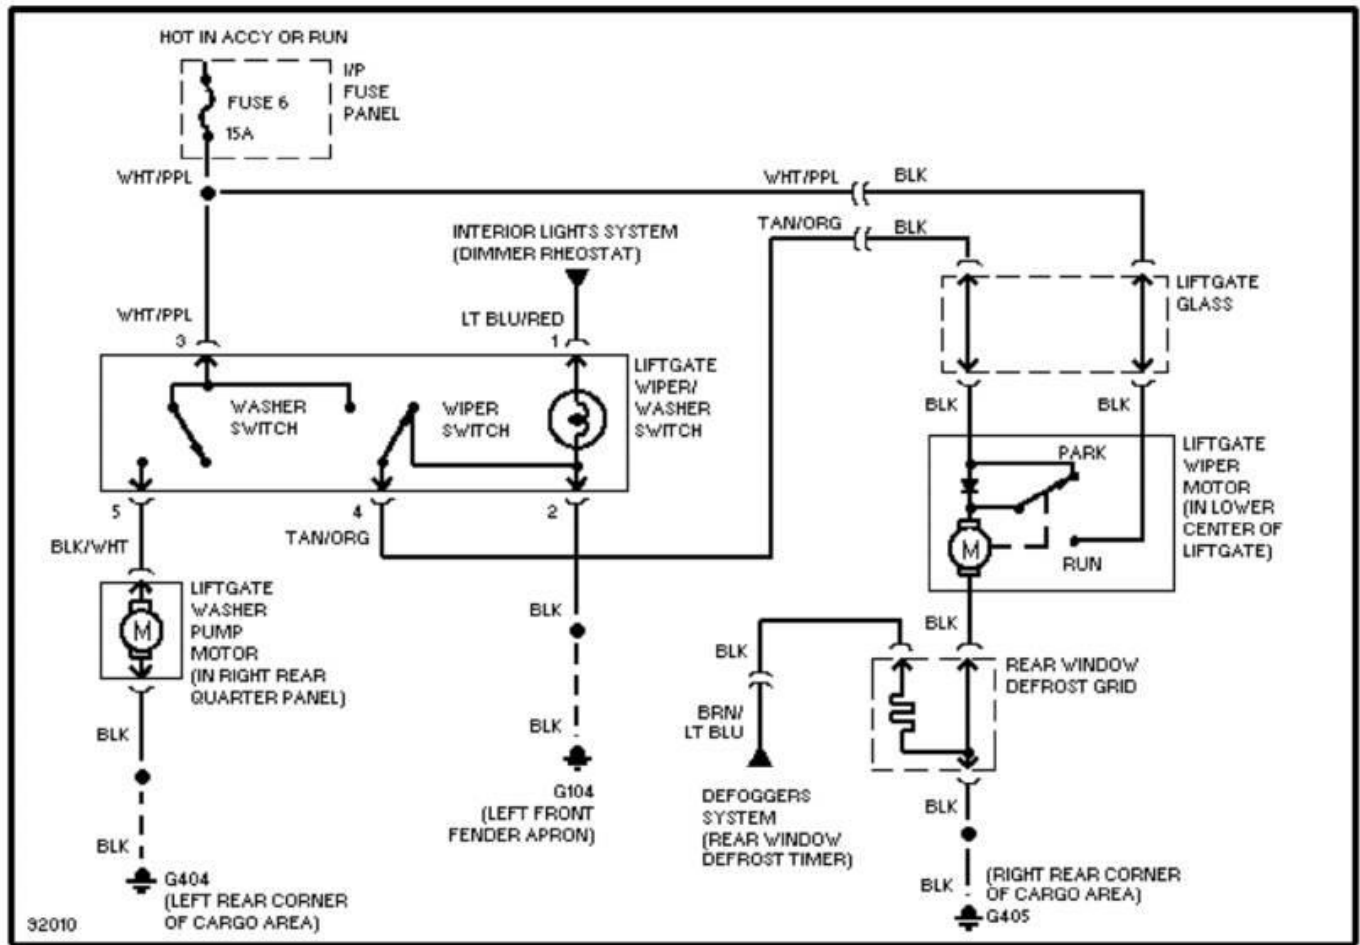

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


**Fig. 1: Data Link Connectors (Except Flex Fuel & SHO 3.0L & 3.8L)**  
1993 Ford Taurus LX

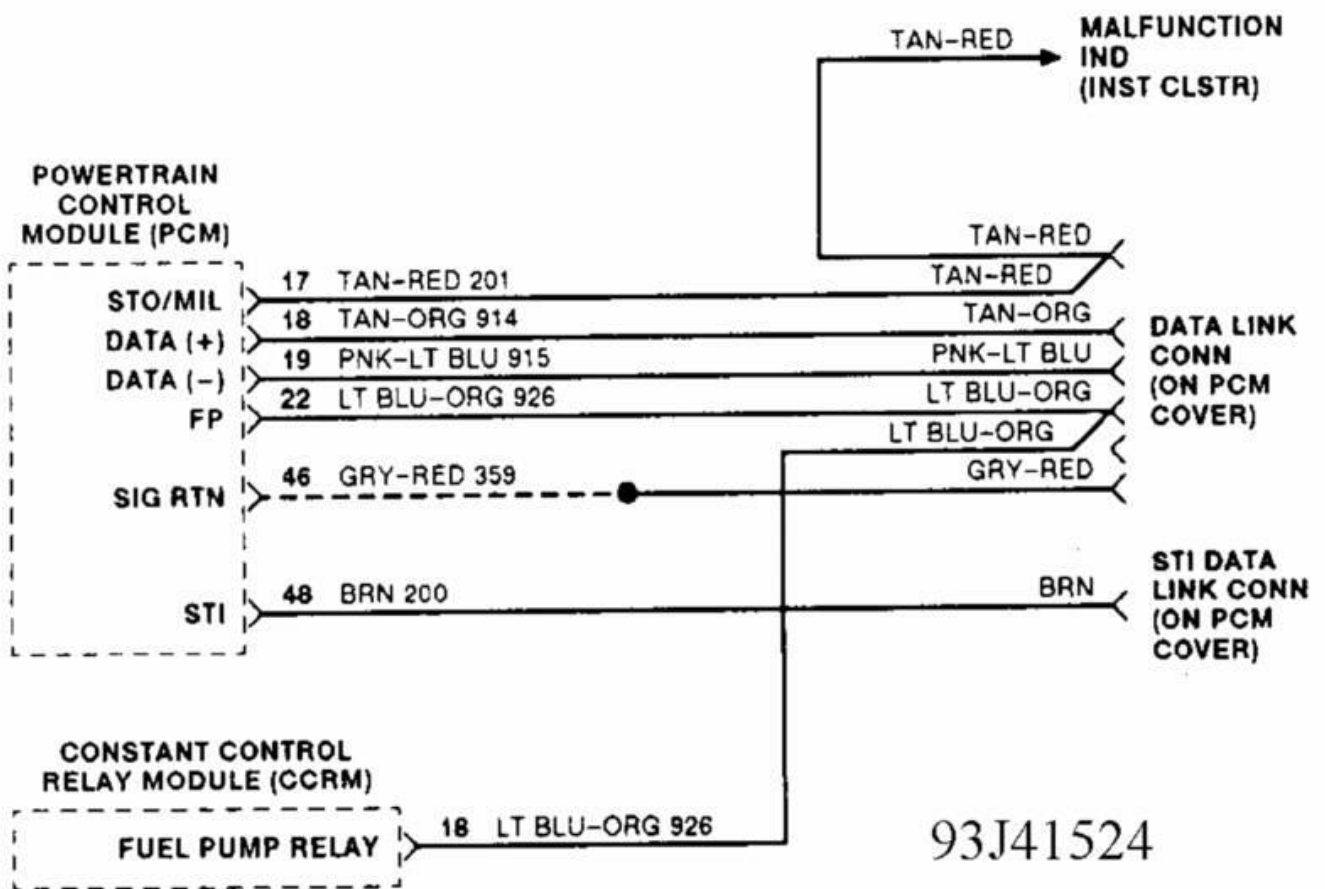

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


**Fig. 2: Data Link Connectors (SHO 3.0L & 3.2L)**  
1993 Ford Taurus LX

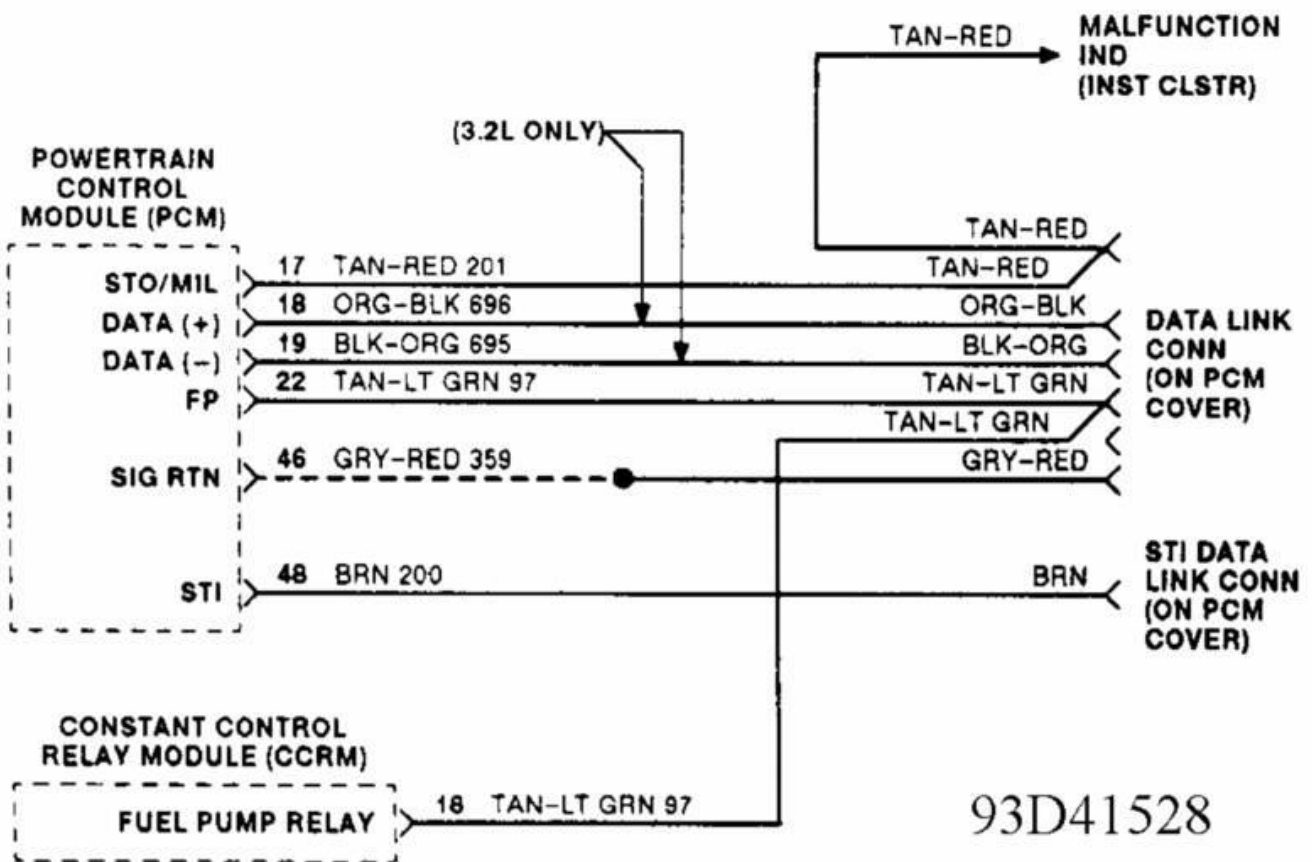

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 3: Data Link Connectors (3.0L Flex Fuel)**  
1993 Ford Taurus LX

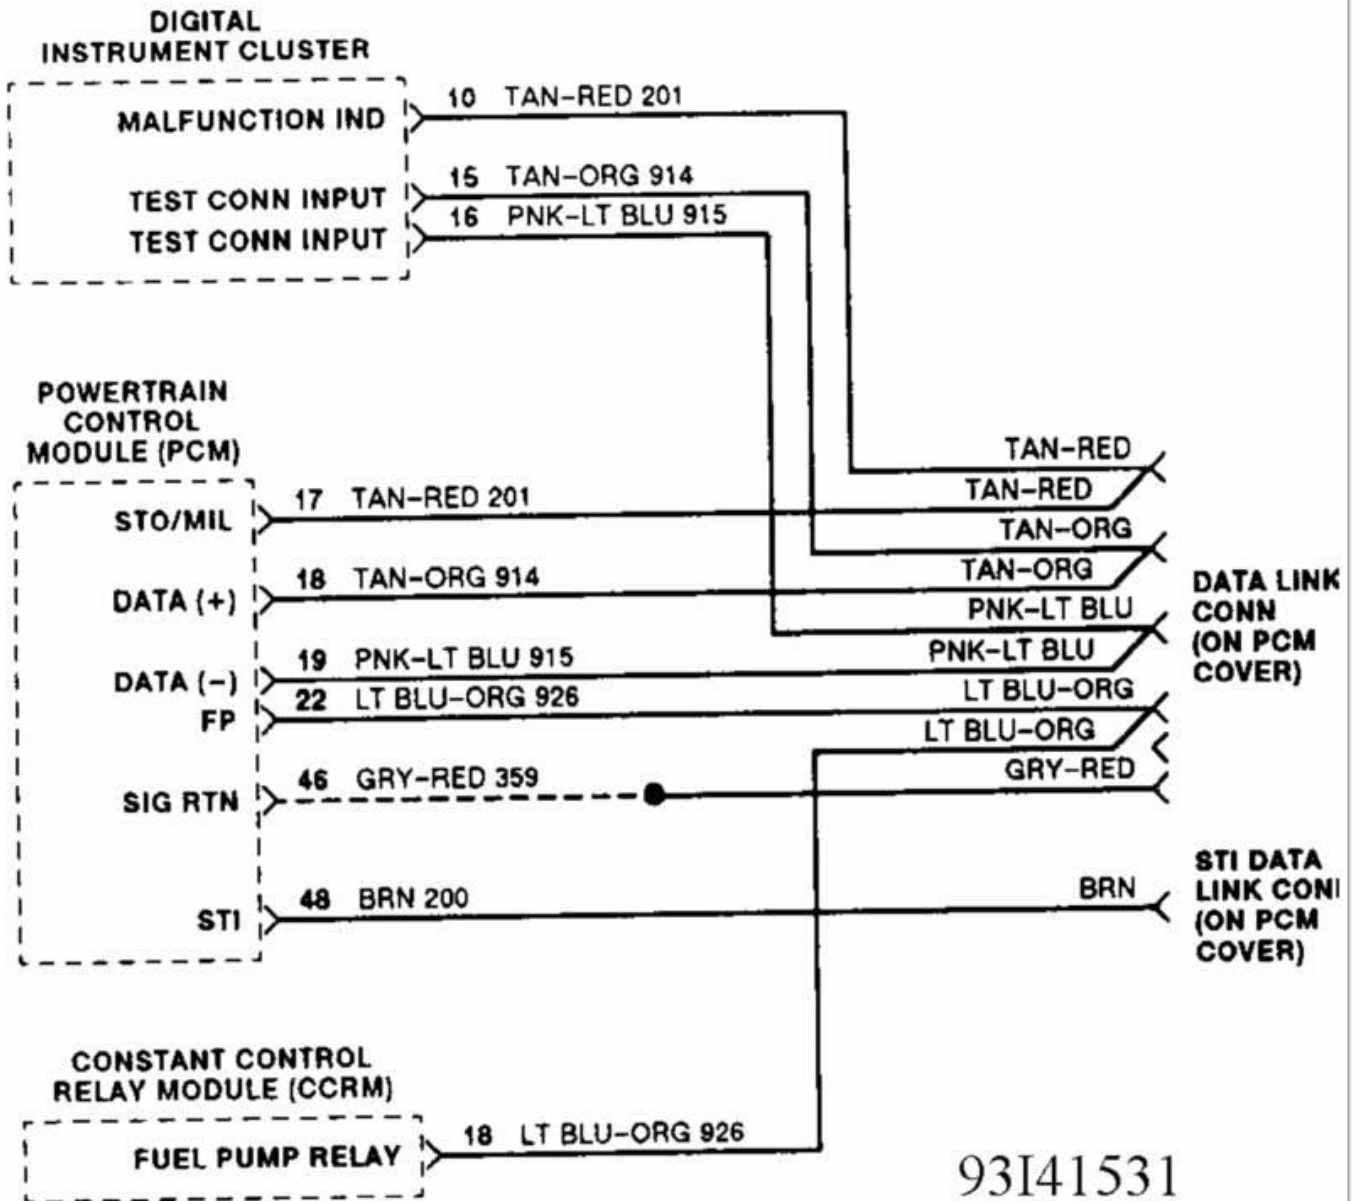


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 4: Ground Distribution (1 Of 5)**  
1993 Ford Taurus LX

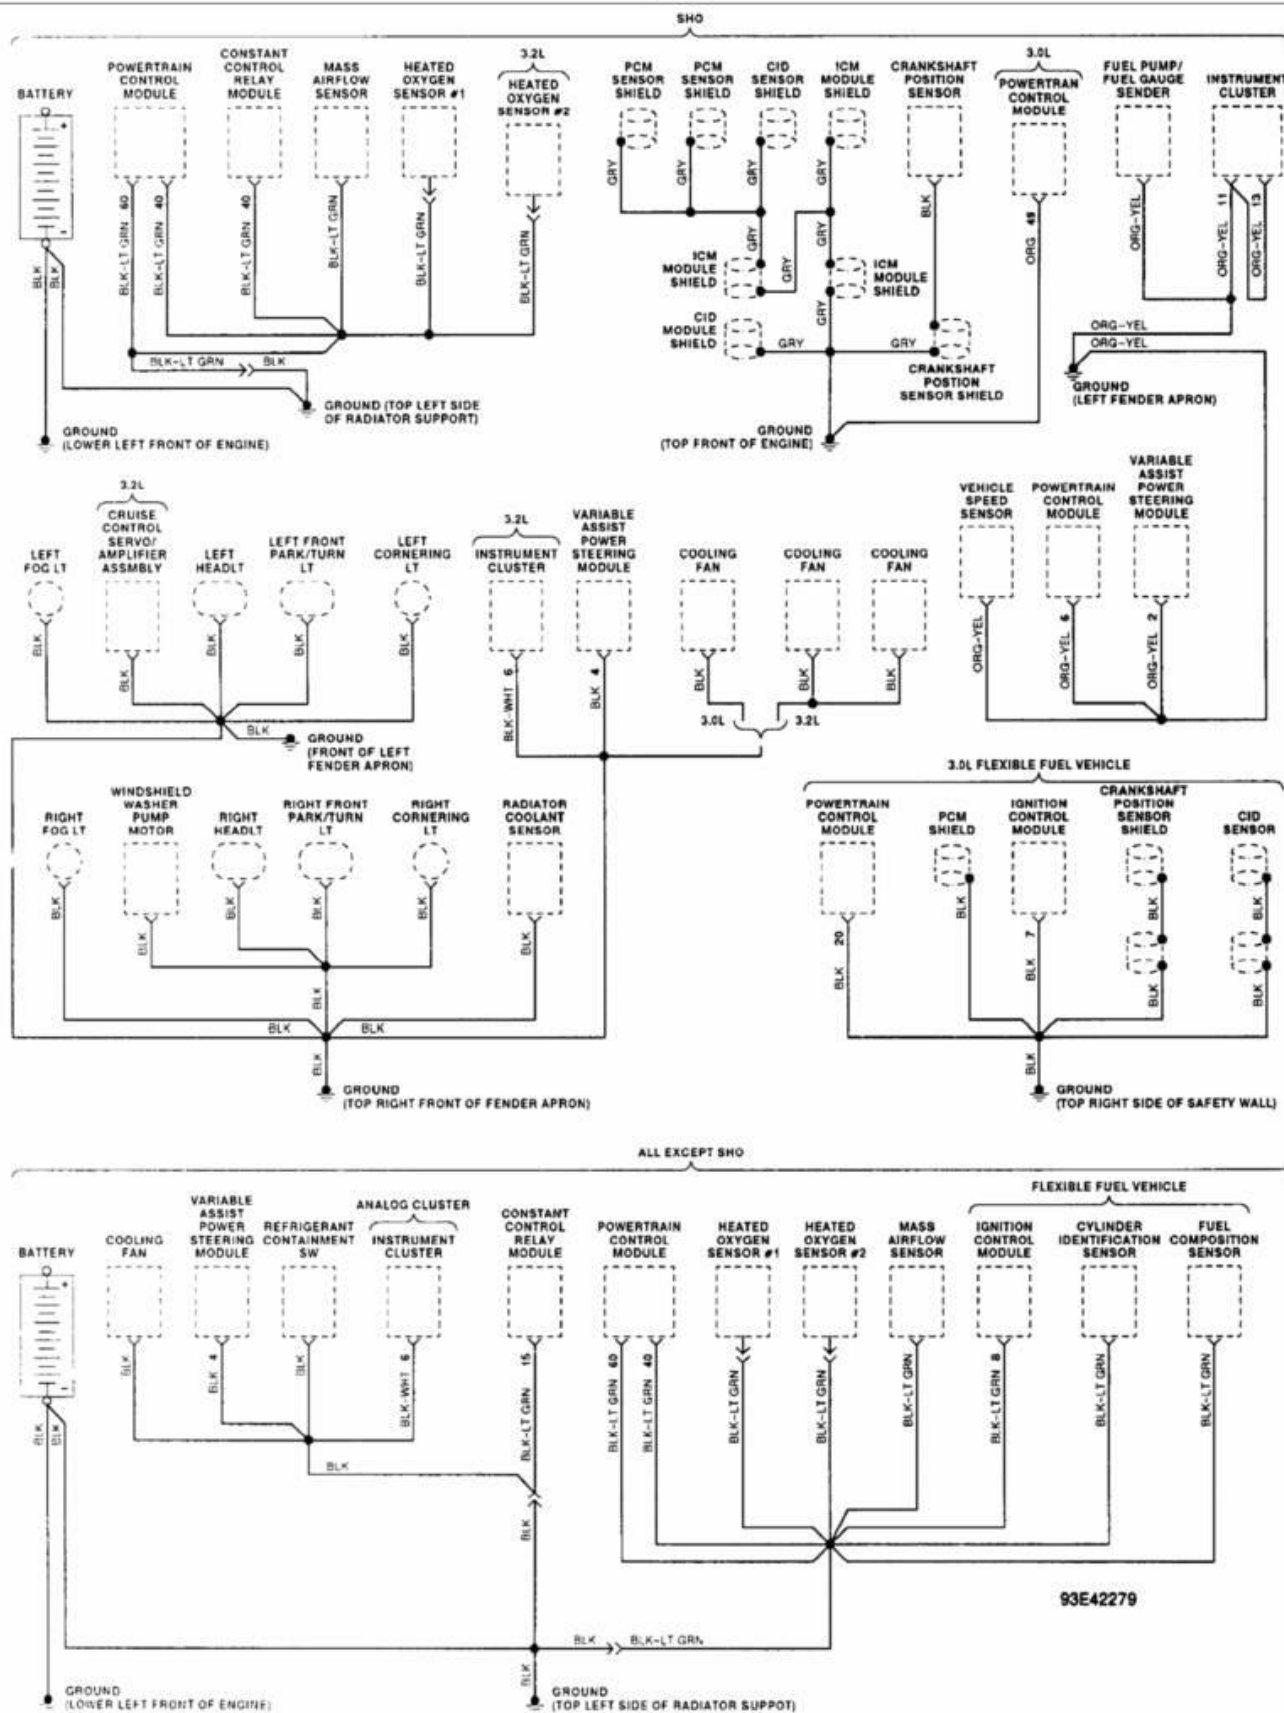


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 5: Ground Distribution (2 Of 5)**  
1993 Ford Taurus LX

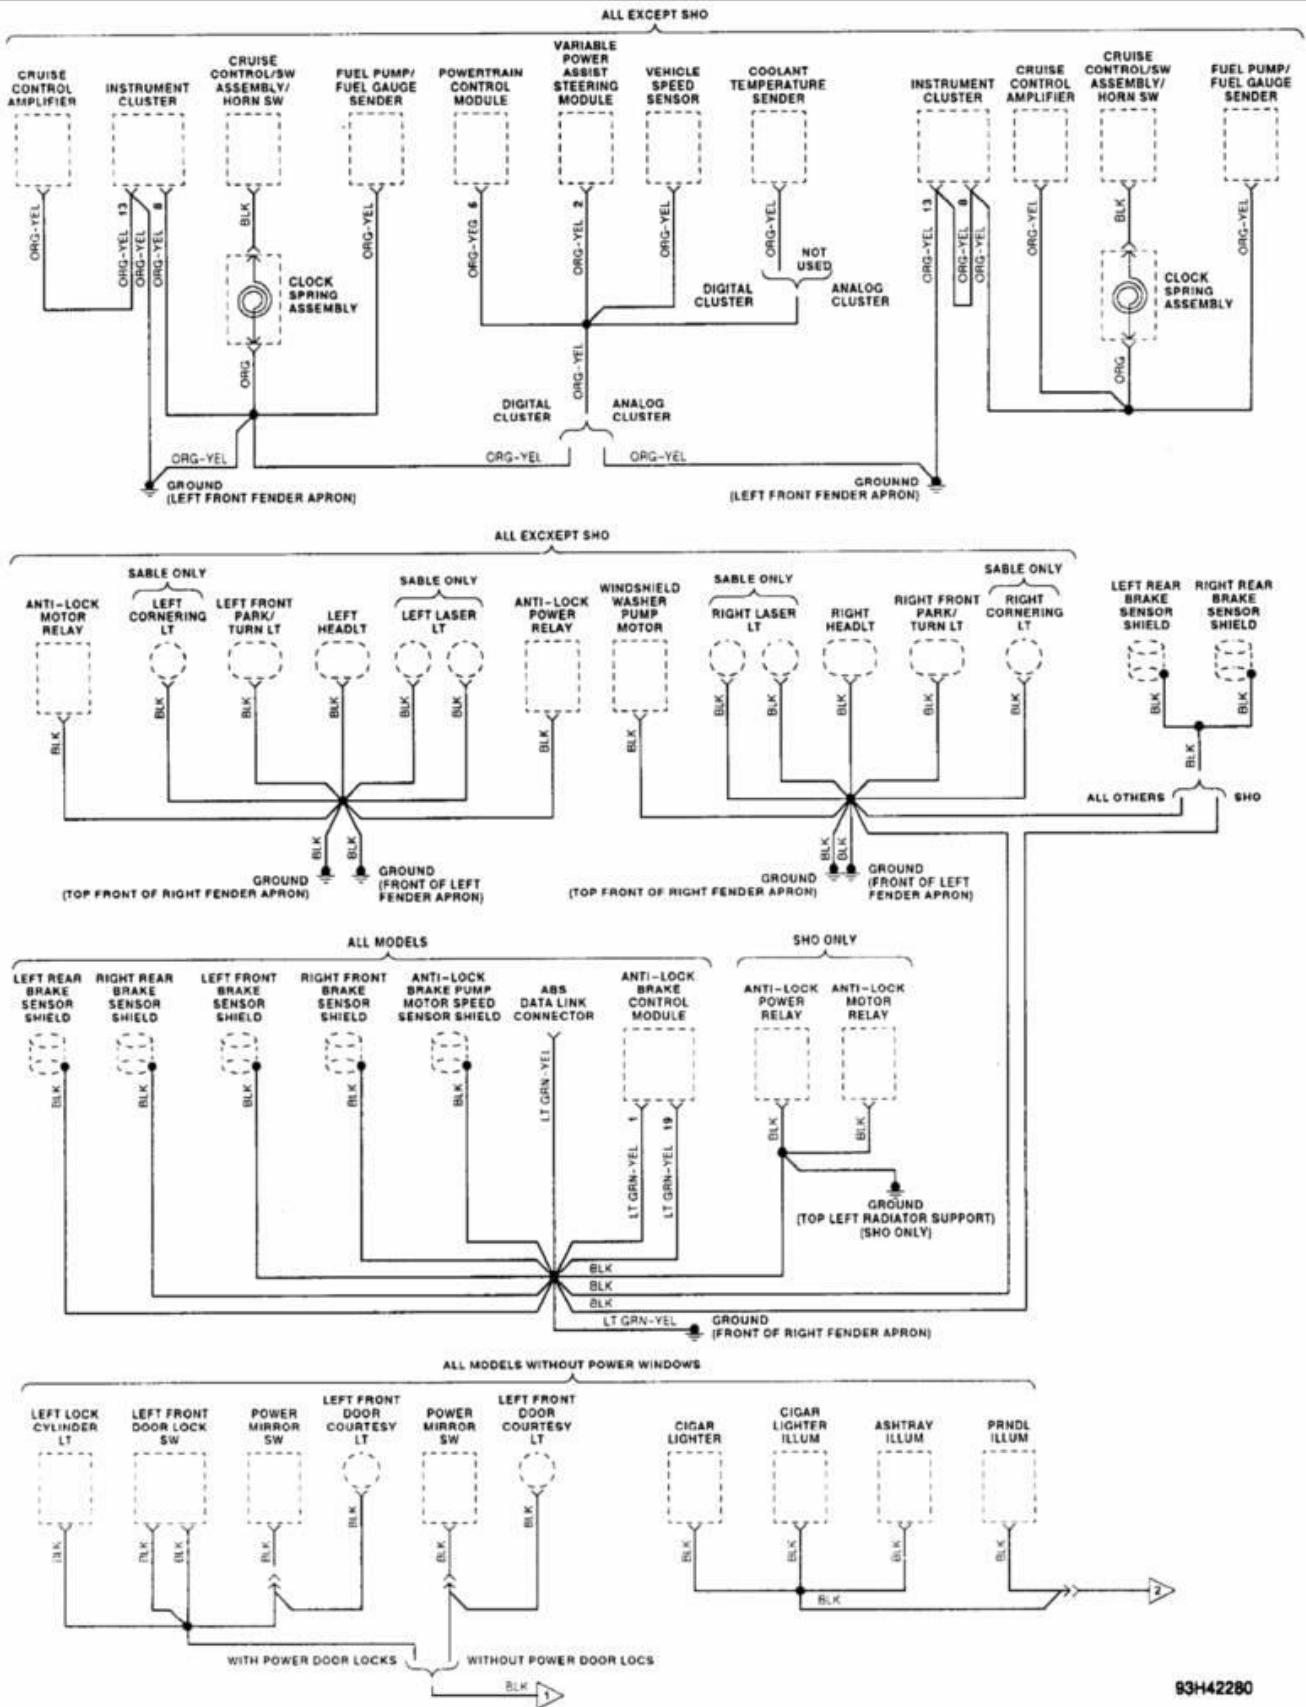


93H42280

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 6: Ground Distribution (3 Of 5)  
1993 Ford Taurus LX

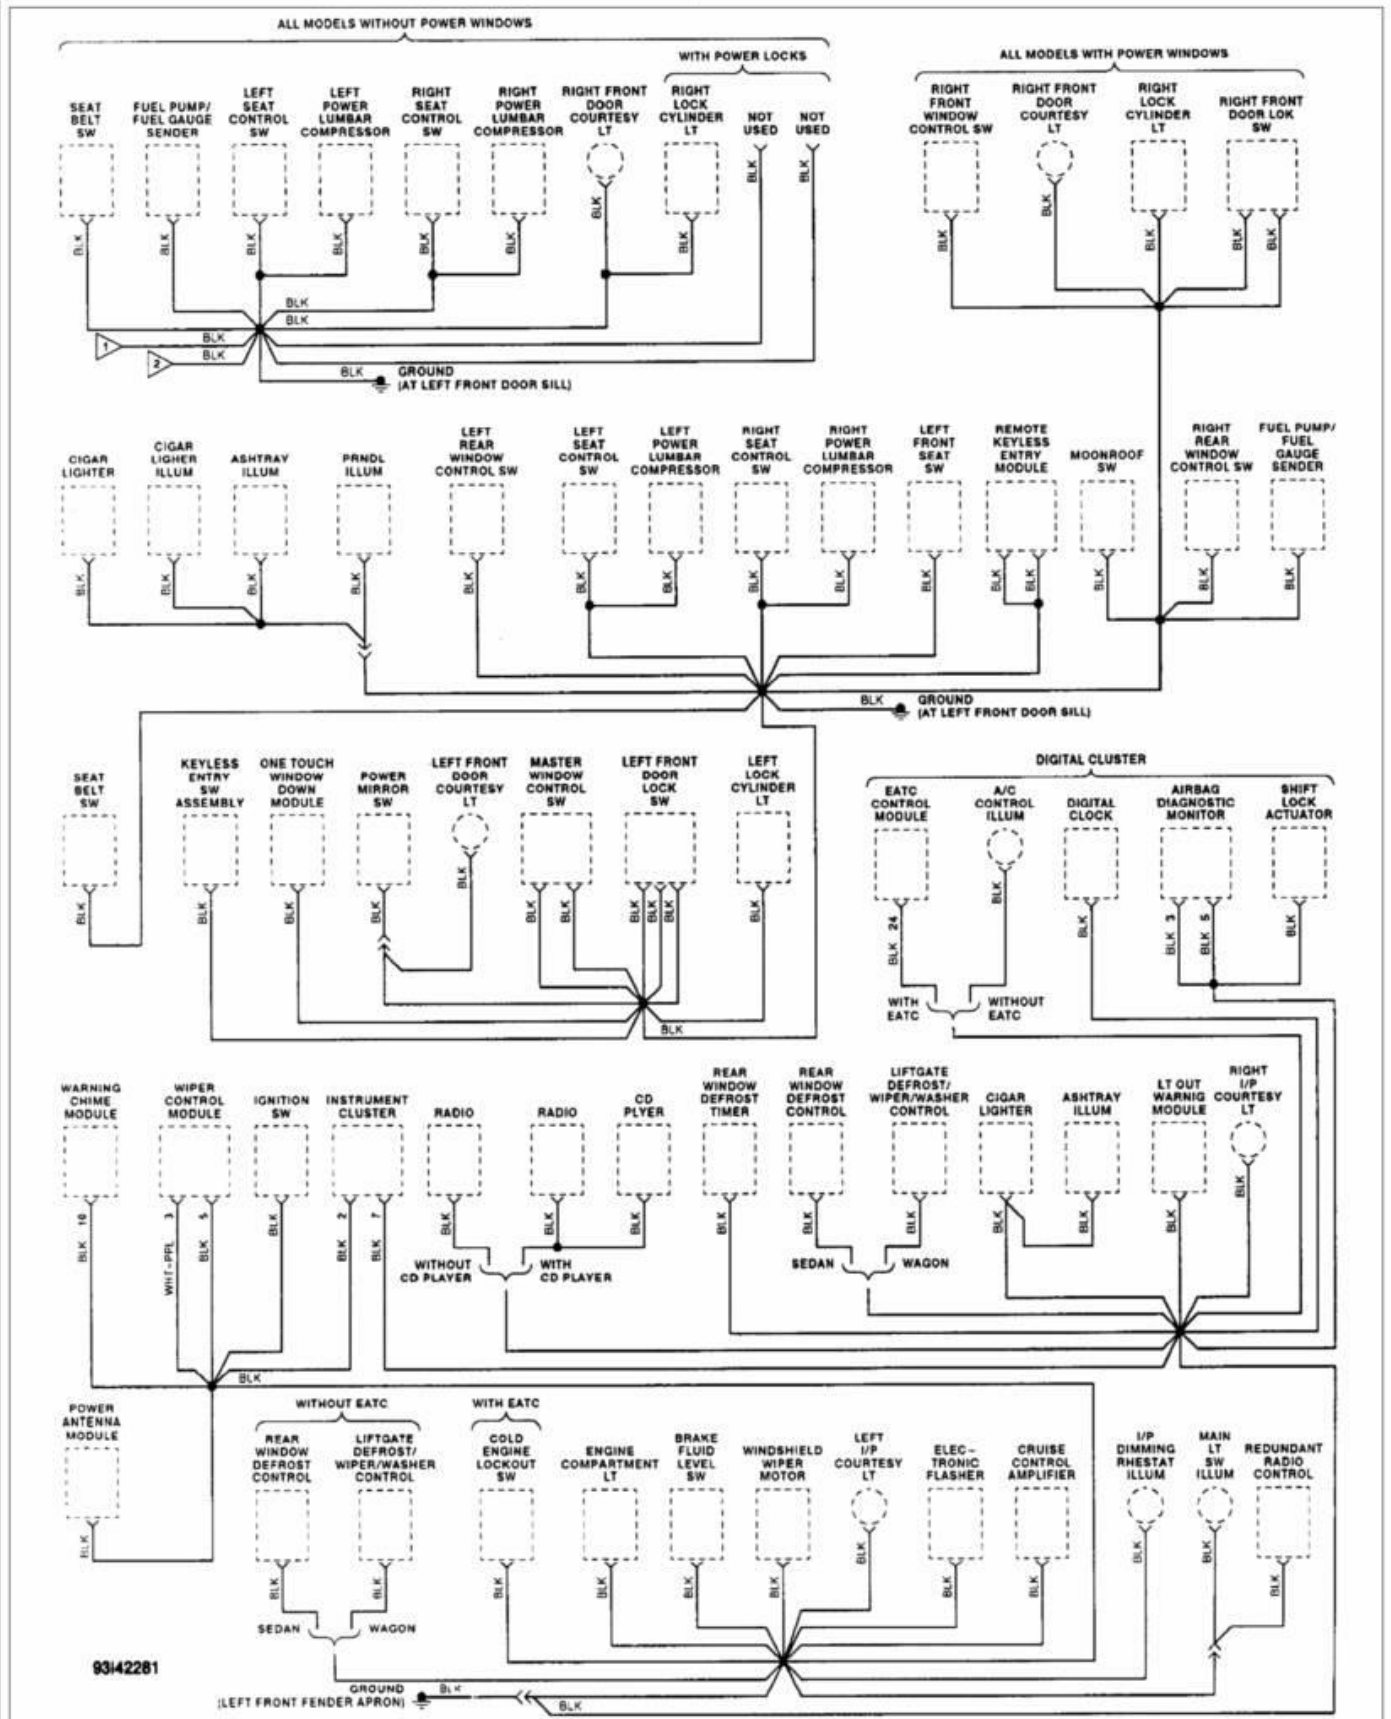




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 7: Ground Distribution (4 Of 5)  
1993 Ford Taurus LX

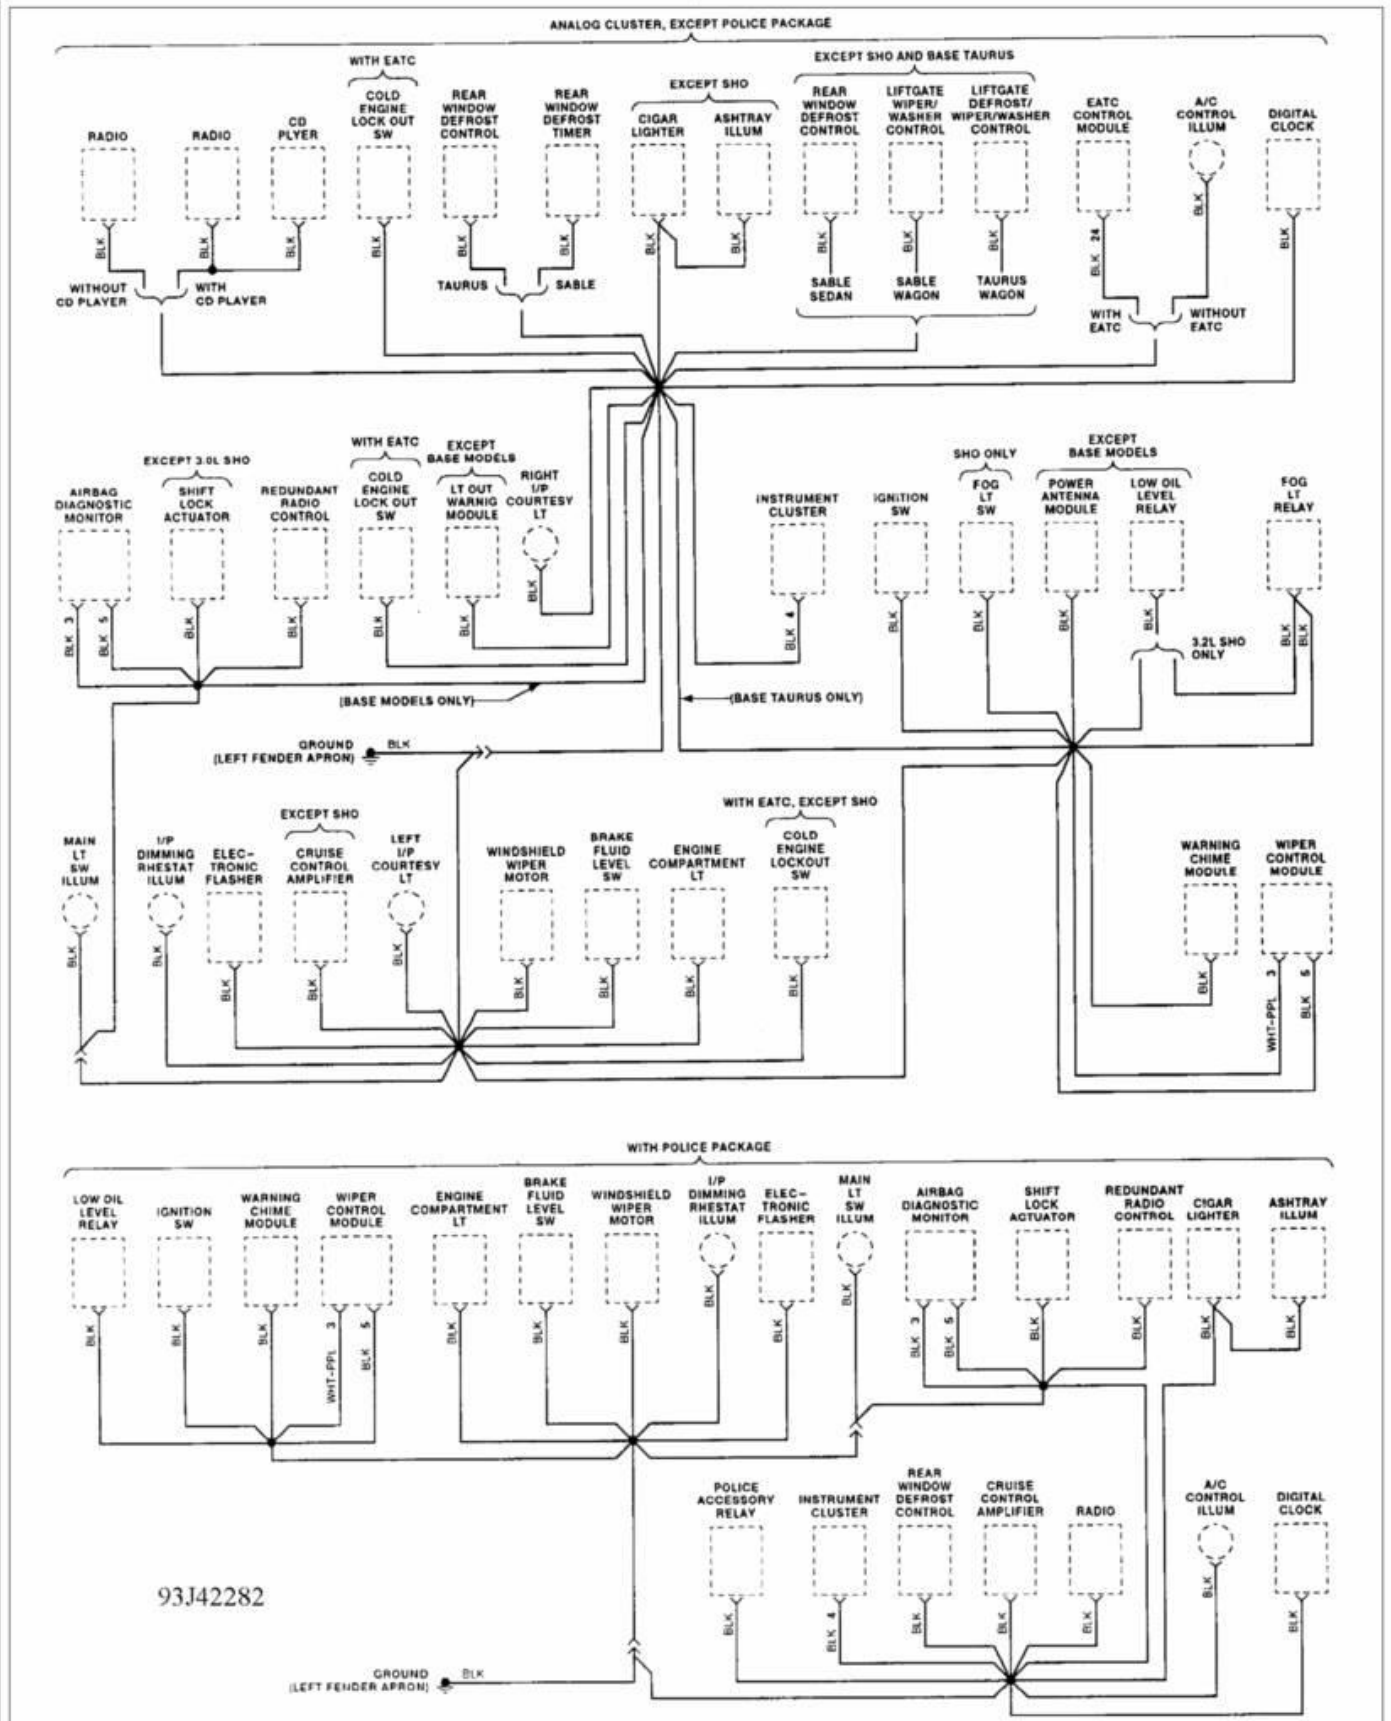


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 8: Ground Distribution (5 Of 5)**  
1993 Ford Taurus LX

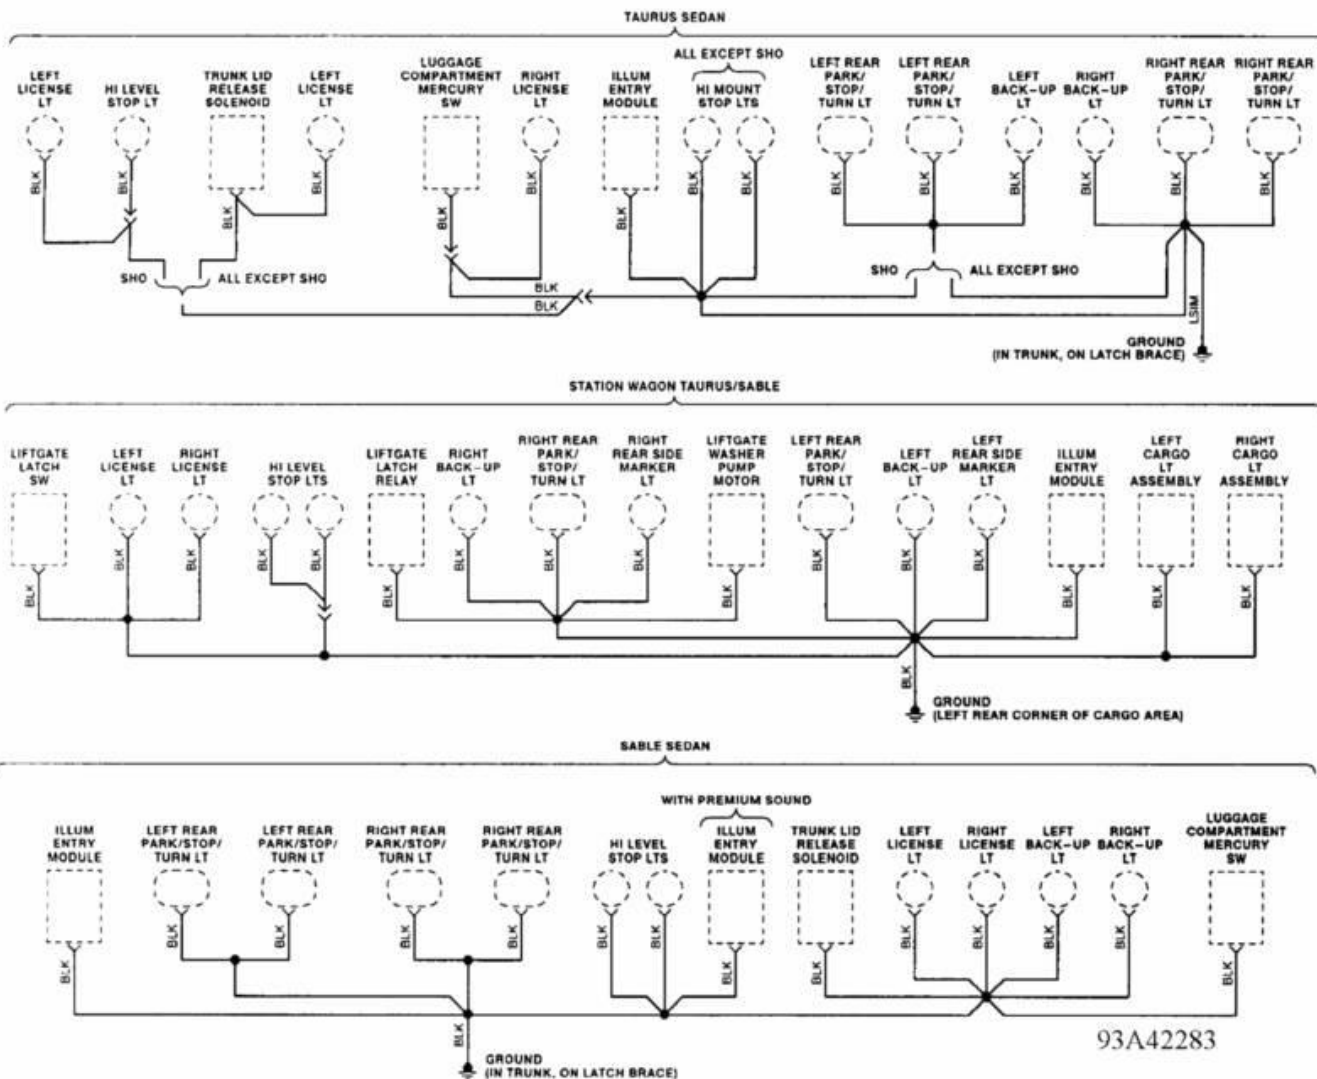


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 9: Power Distribution (1 Of 6)  
1993 Ford Taurus LX

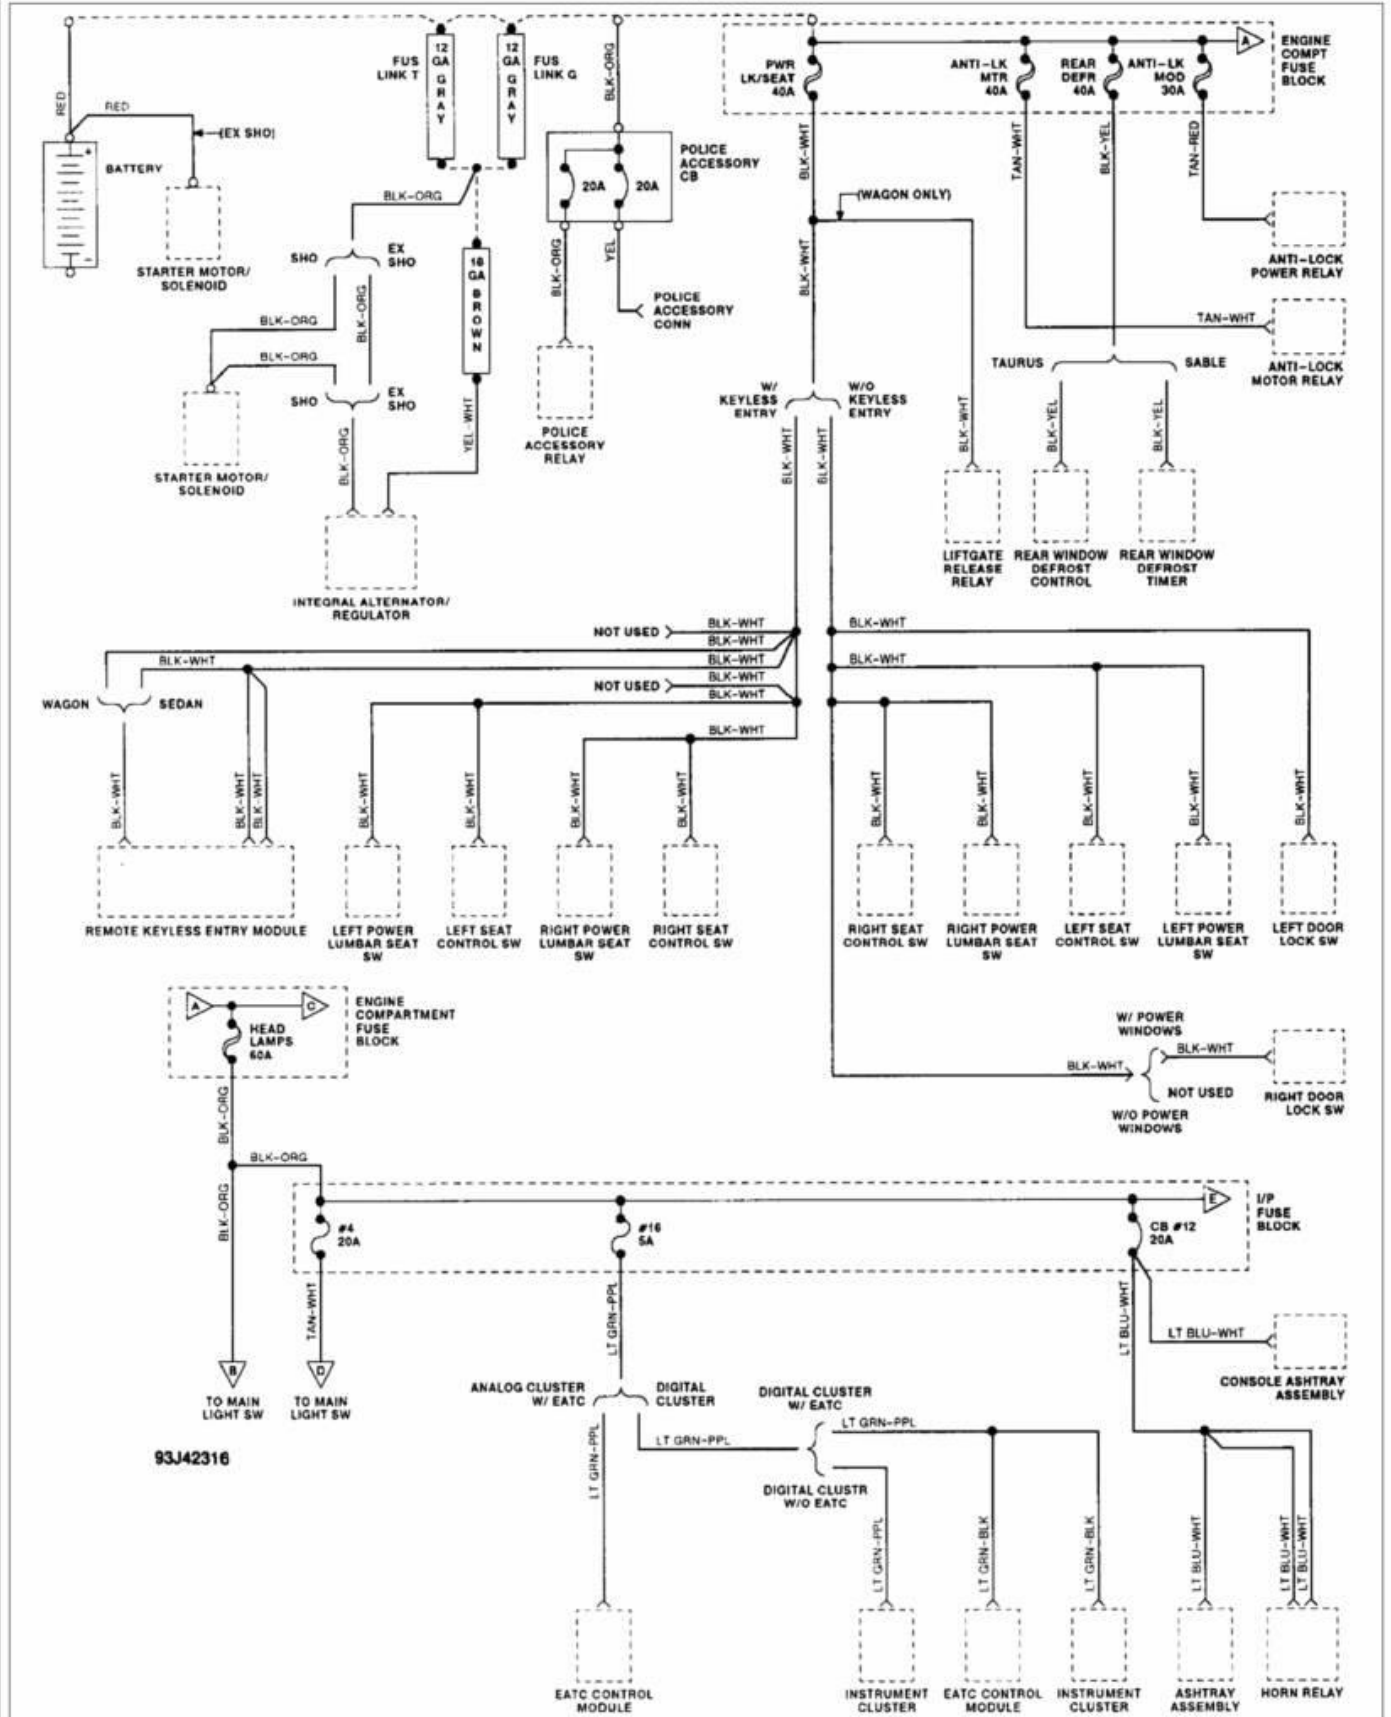


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 10: Power Distribution (2 Of 6)  
1993 Ford Taurus LX

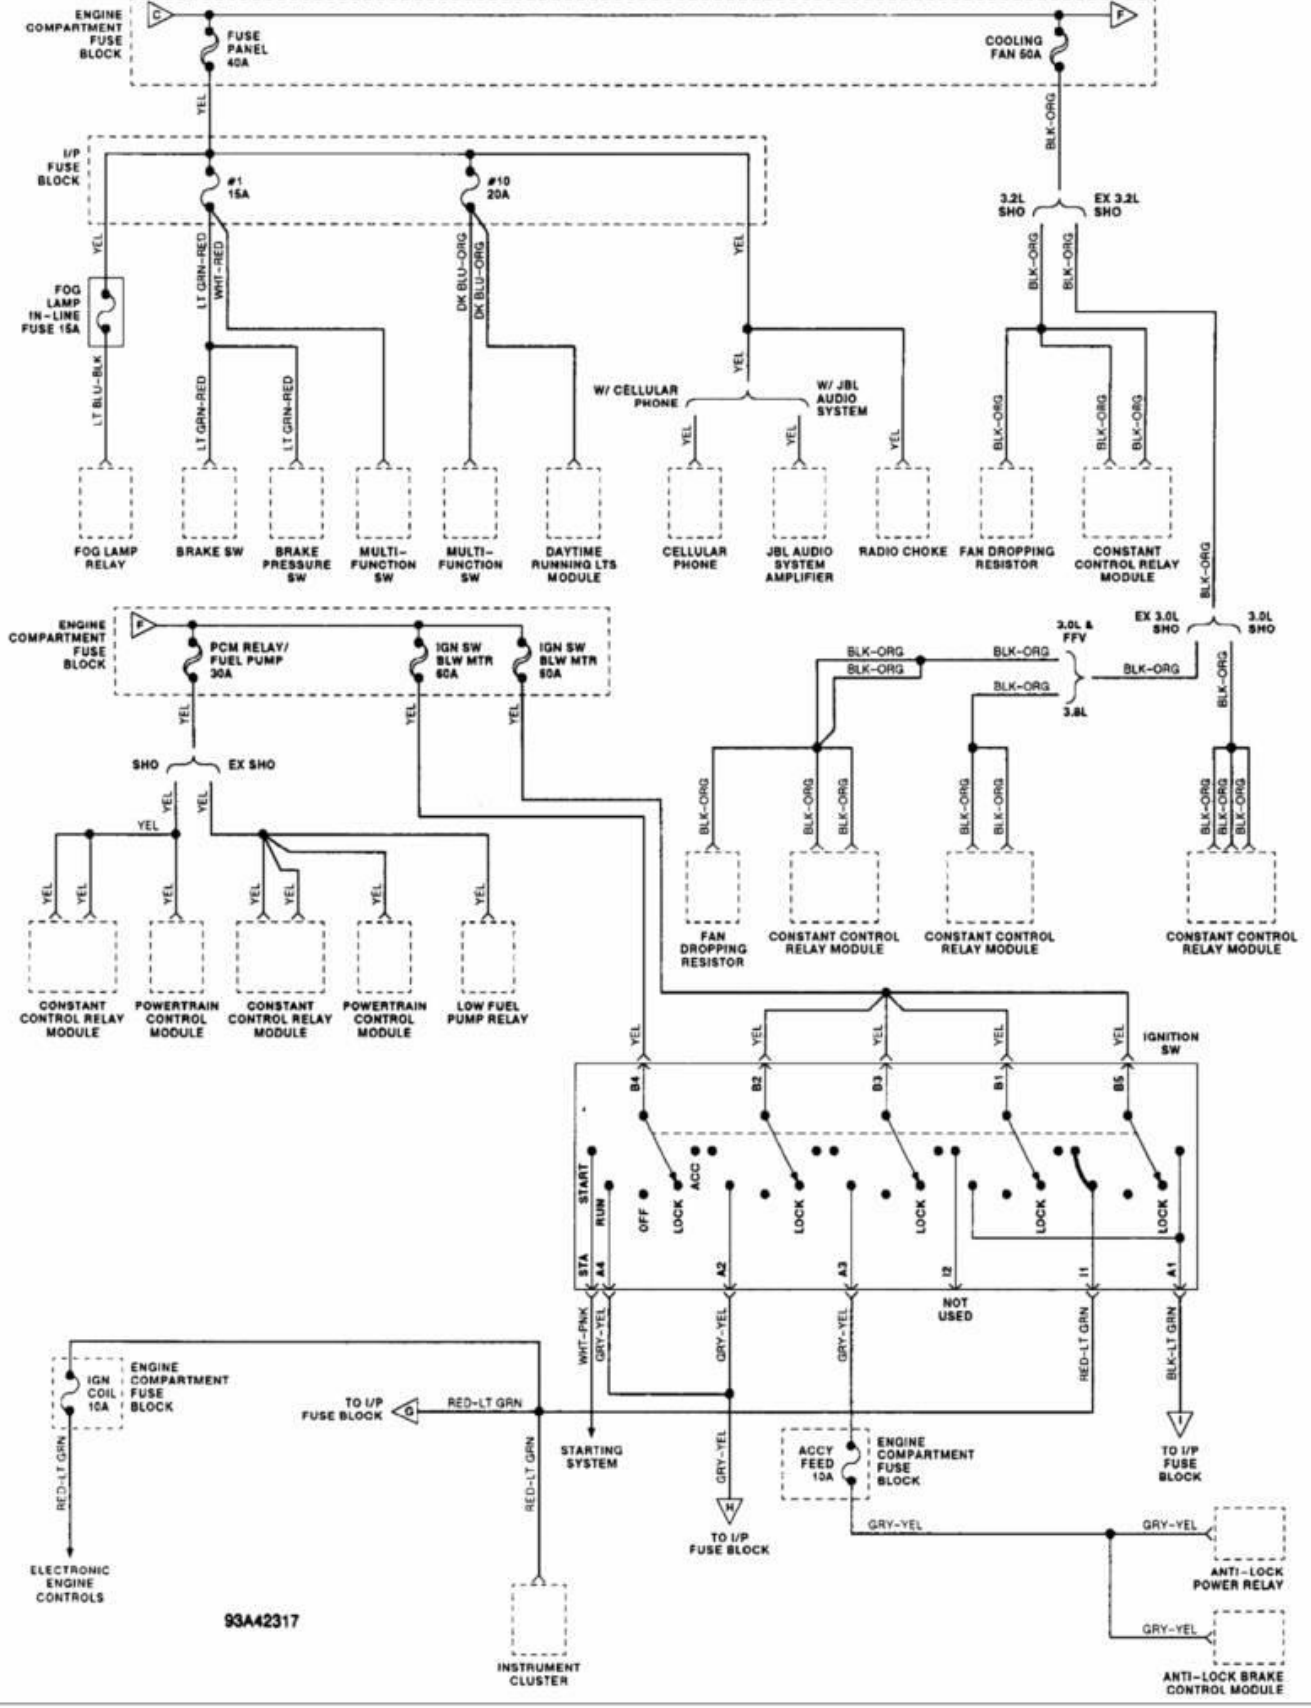


93A42317

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 11: Power Distribution (3 Of 6)  
1993 Ford Taurus LX

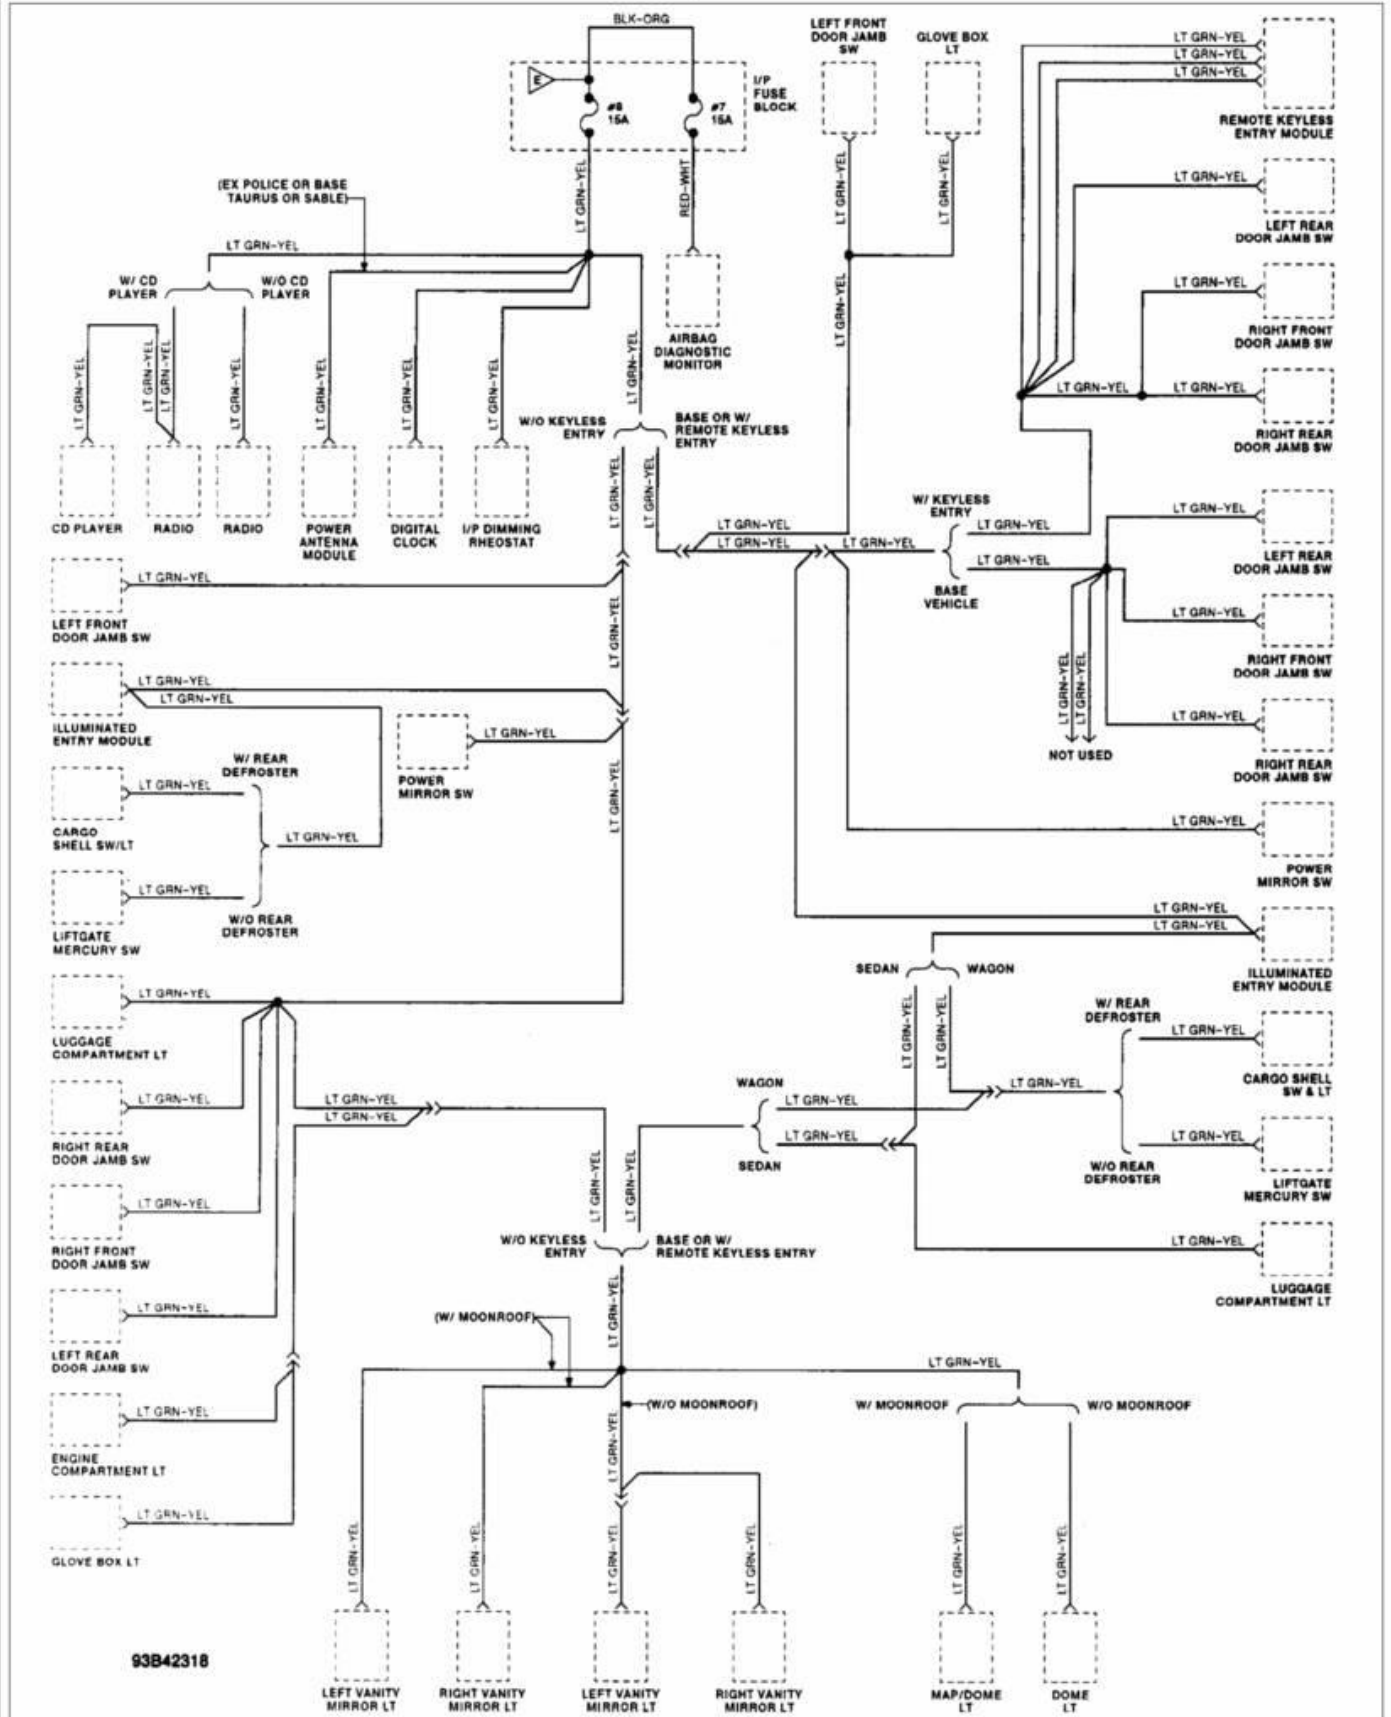


93B42318

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 12: Power Distribution (4 Of 6)  
1993 Ford Taurus LX

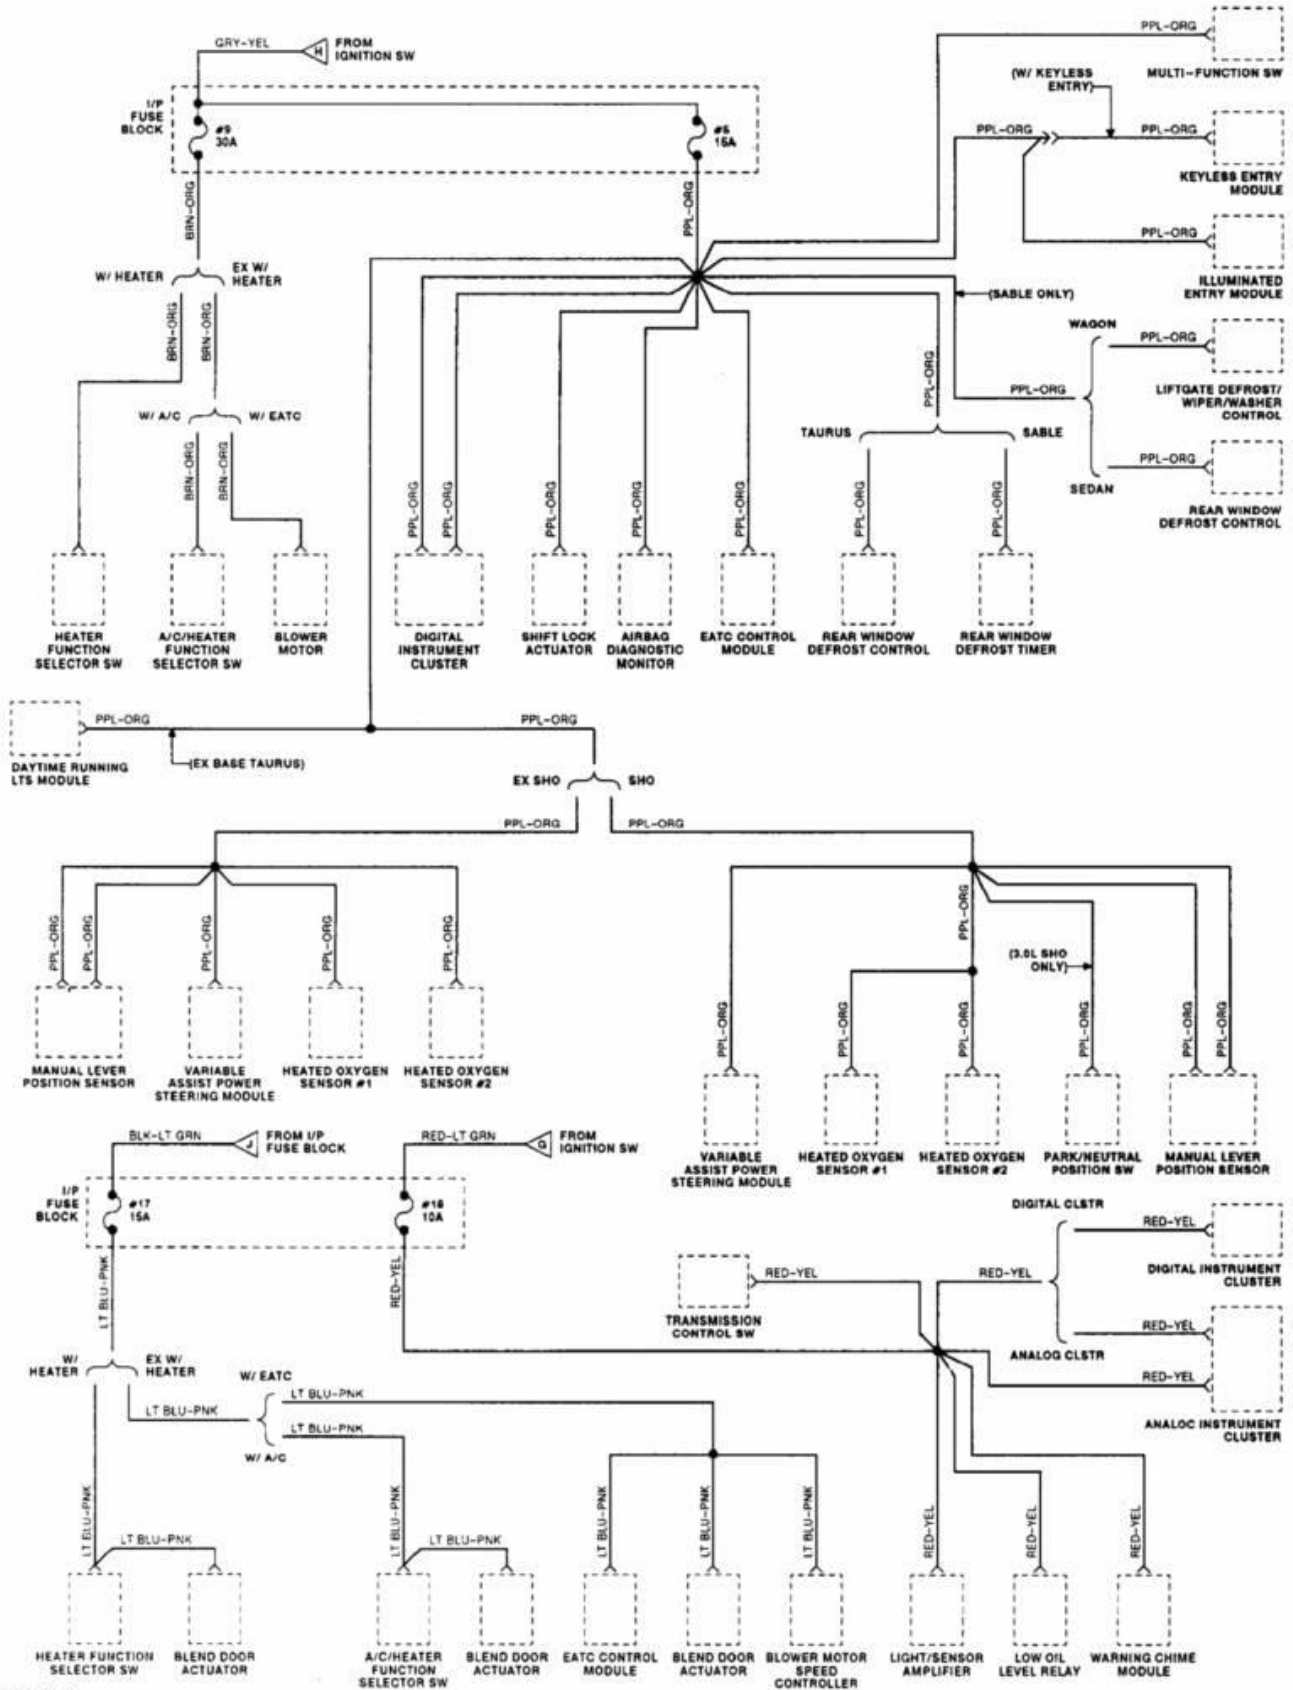


93C42319

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 13: Power Distribution (5 Of 6)**  
1993 Ford Taurus LX

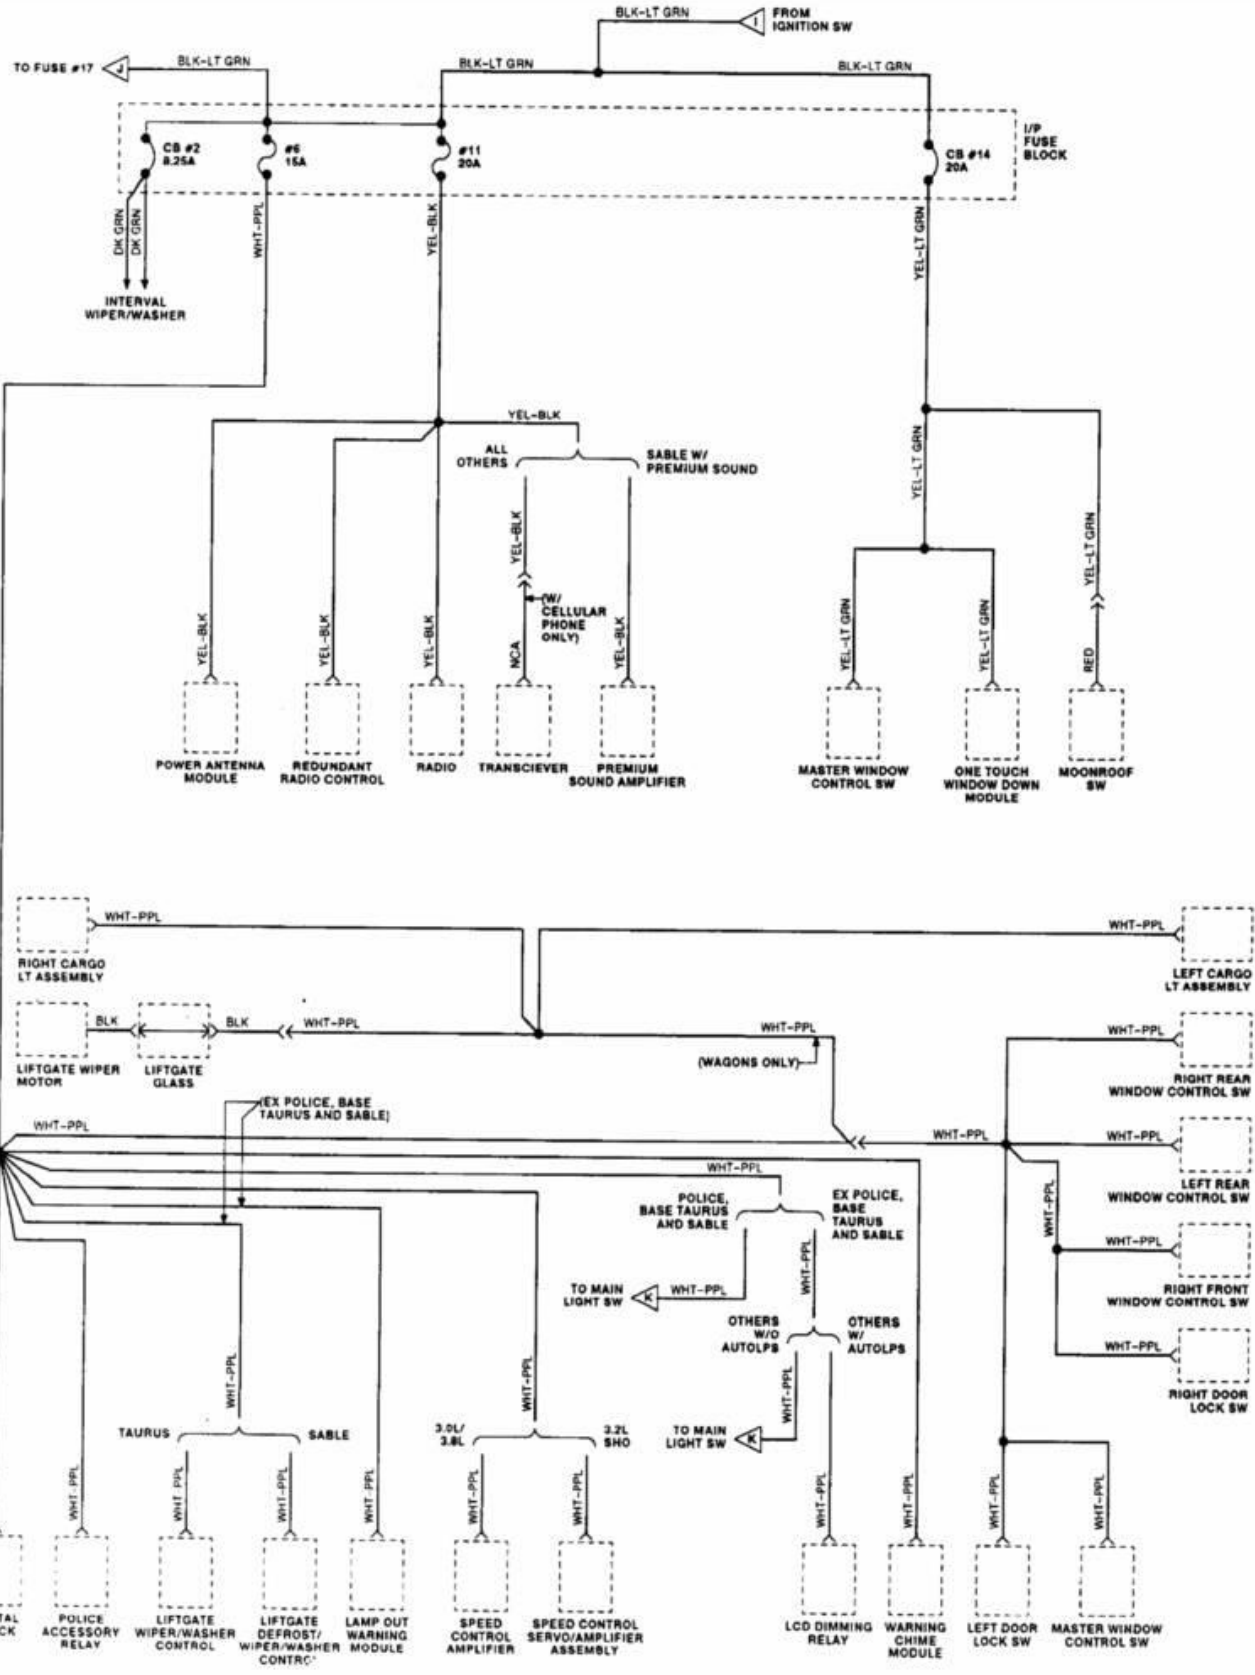


93F42320

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 14: Power Distribution (6 Of 6)  
1993 Ford Taurus LX

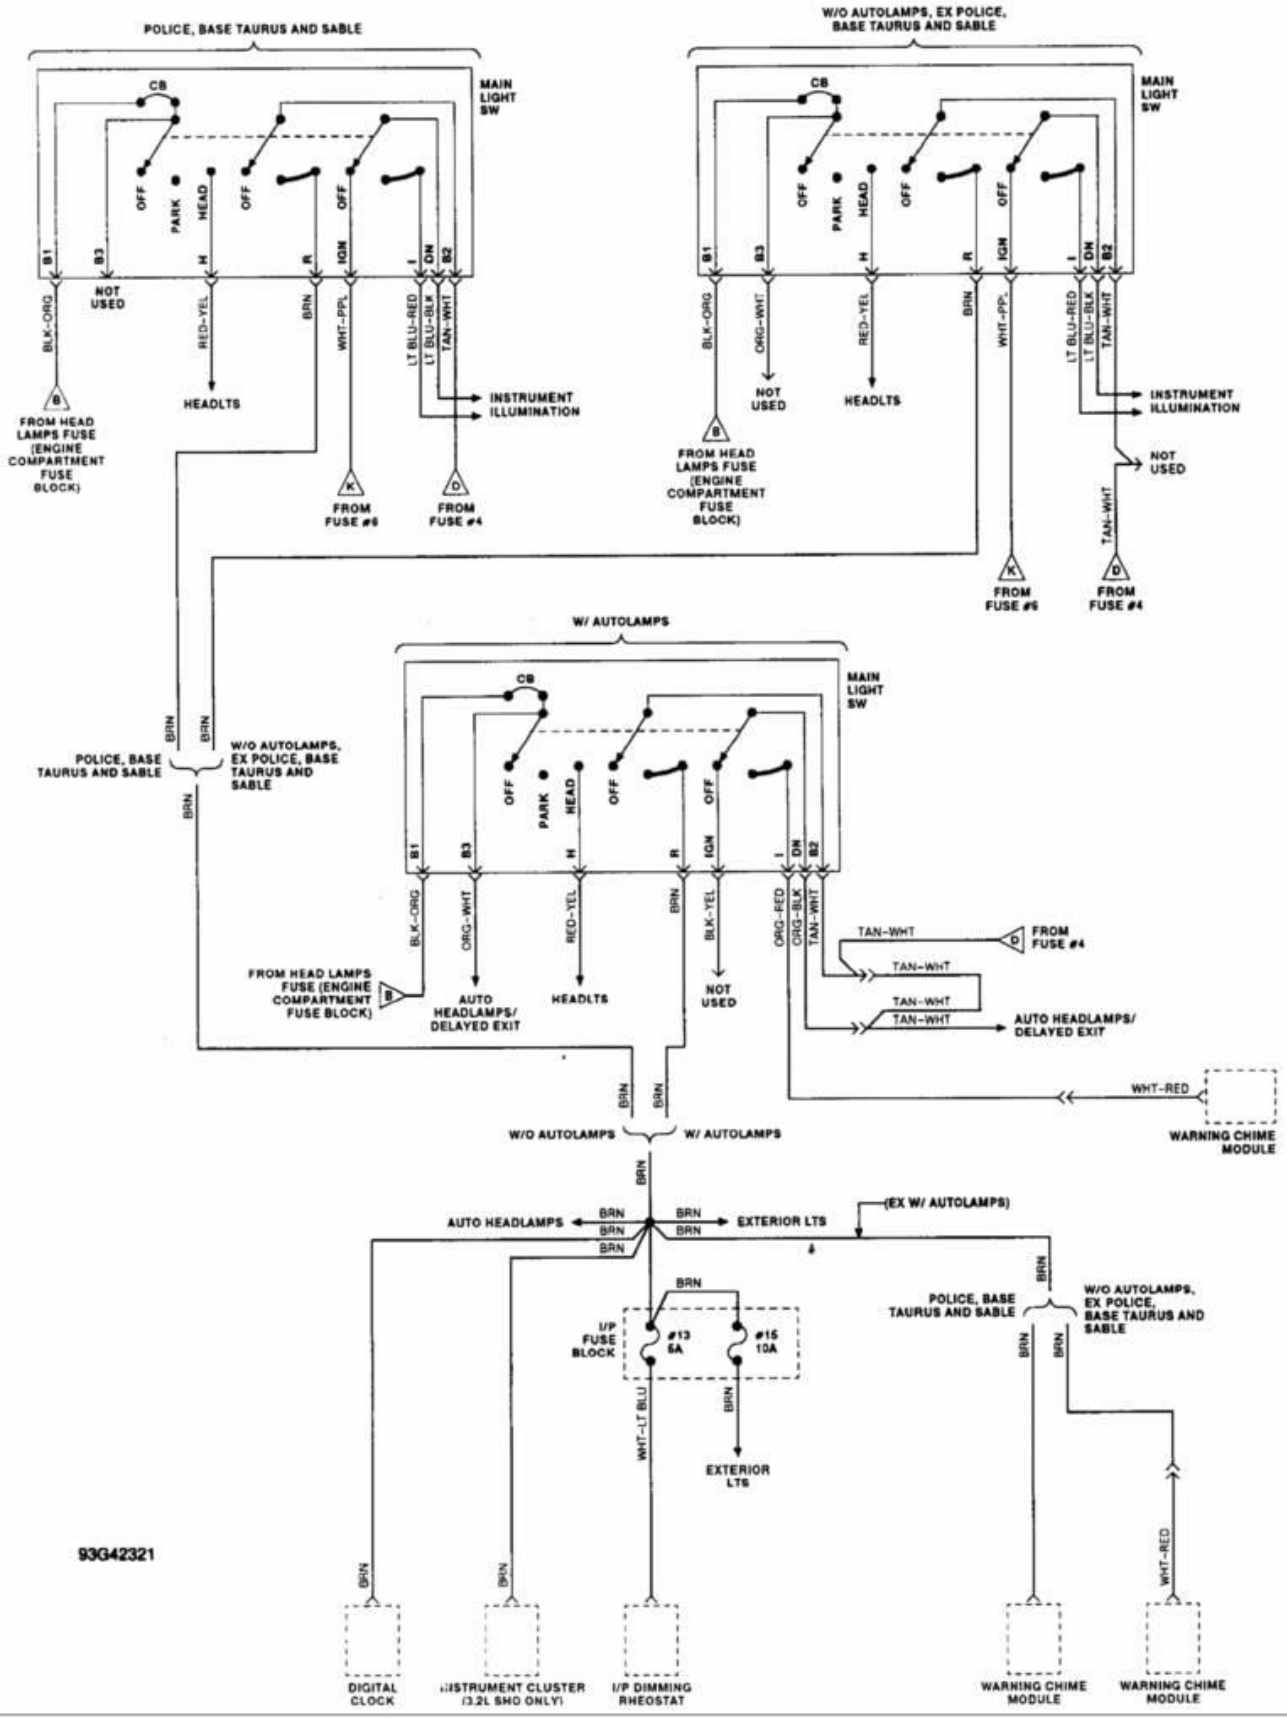


93G42321



## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN


**Fig. 15: Daytime Running Lights (Manual Base)**  
1993 Ford Taurus LX

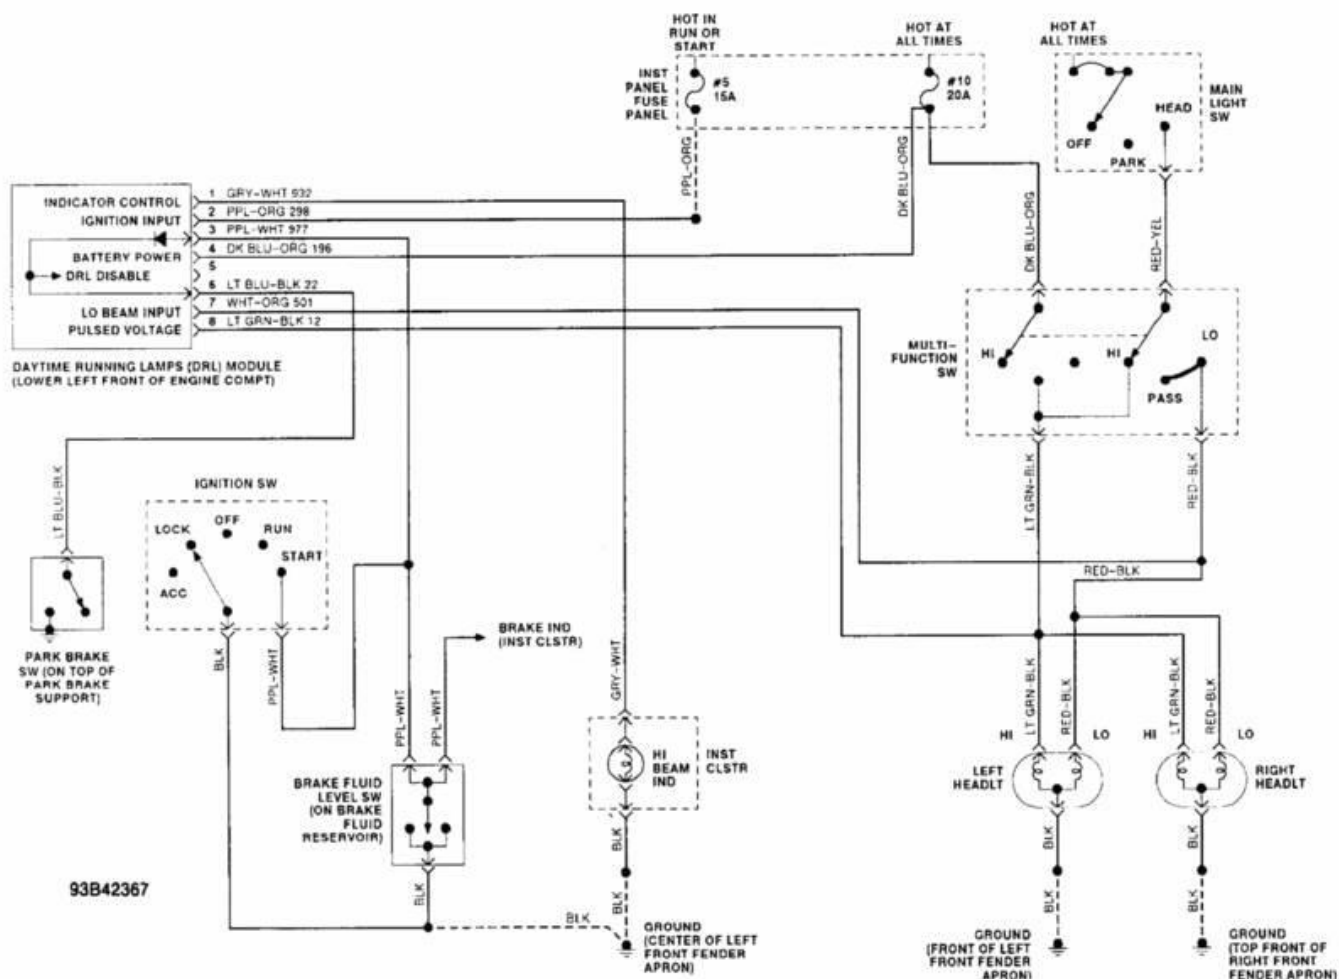

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

**Fig. 16: Daytime Running Lights (Manual - Except Base) 1993 Ford Taurus LX**

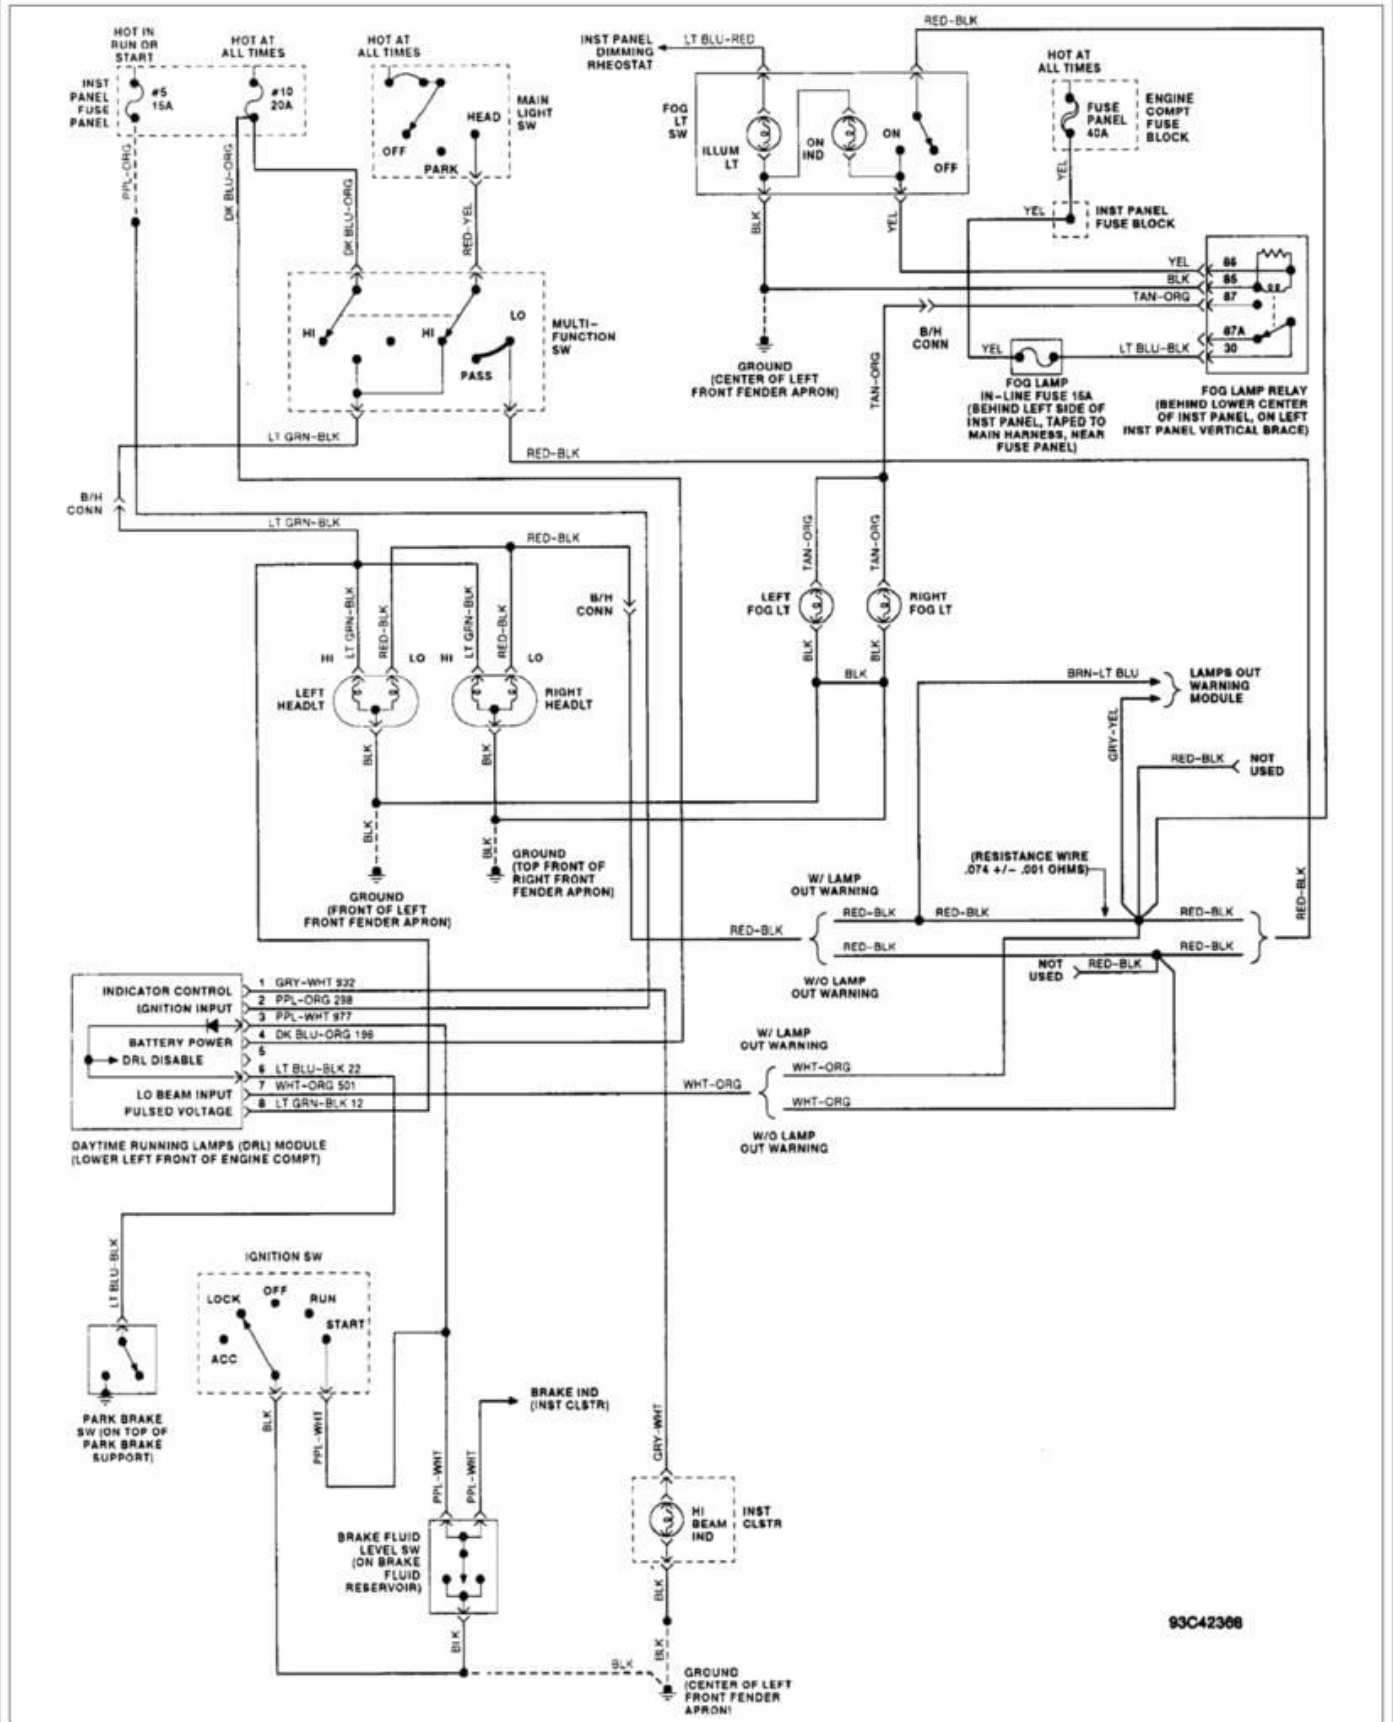


93C42368

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 17: Daytime Running Lights (Automatic)**  
1993 Ford Taurus LX

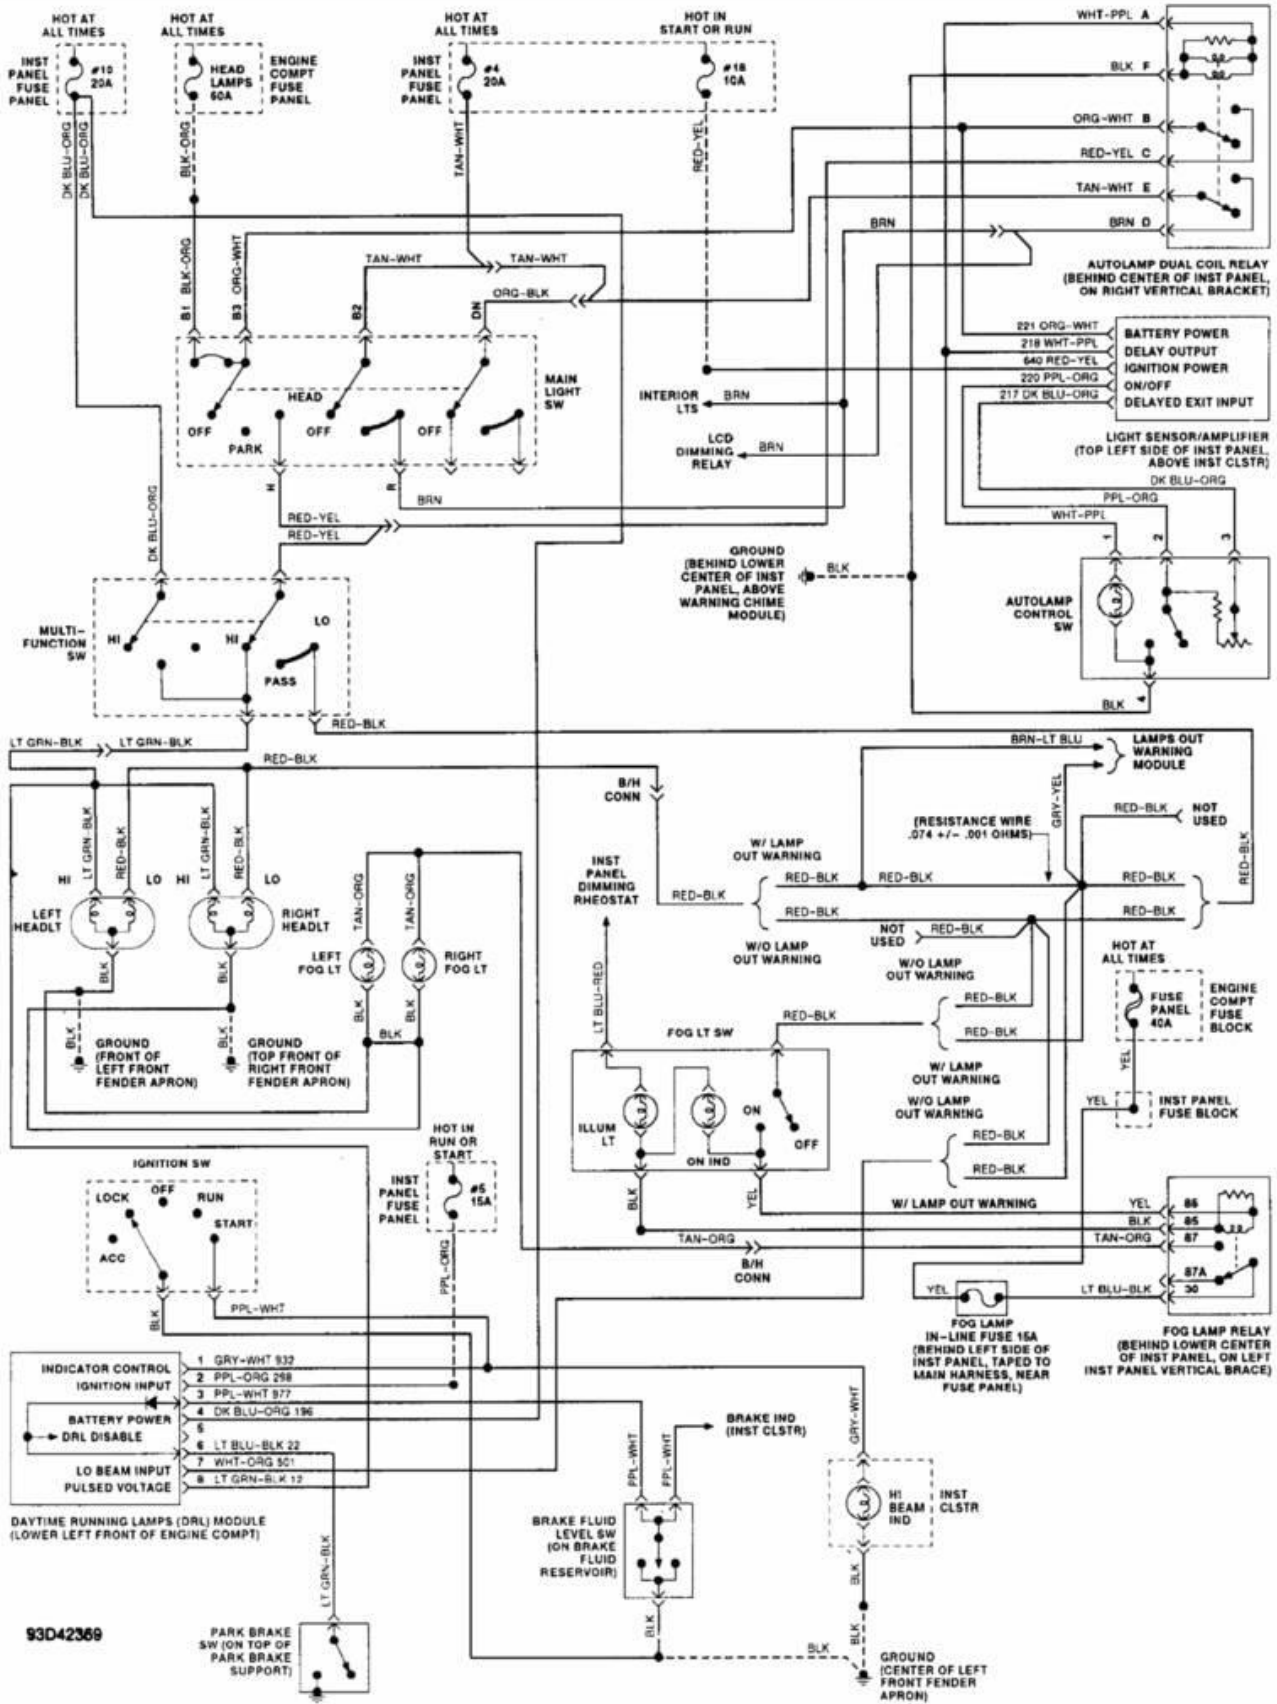


93D42369

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 18: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)  
1993 Ford Taurus LX

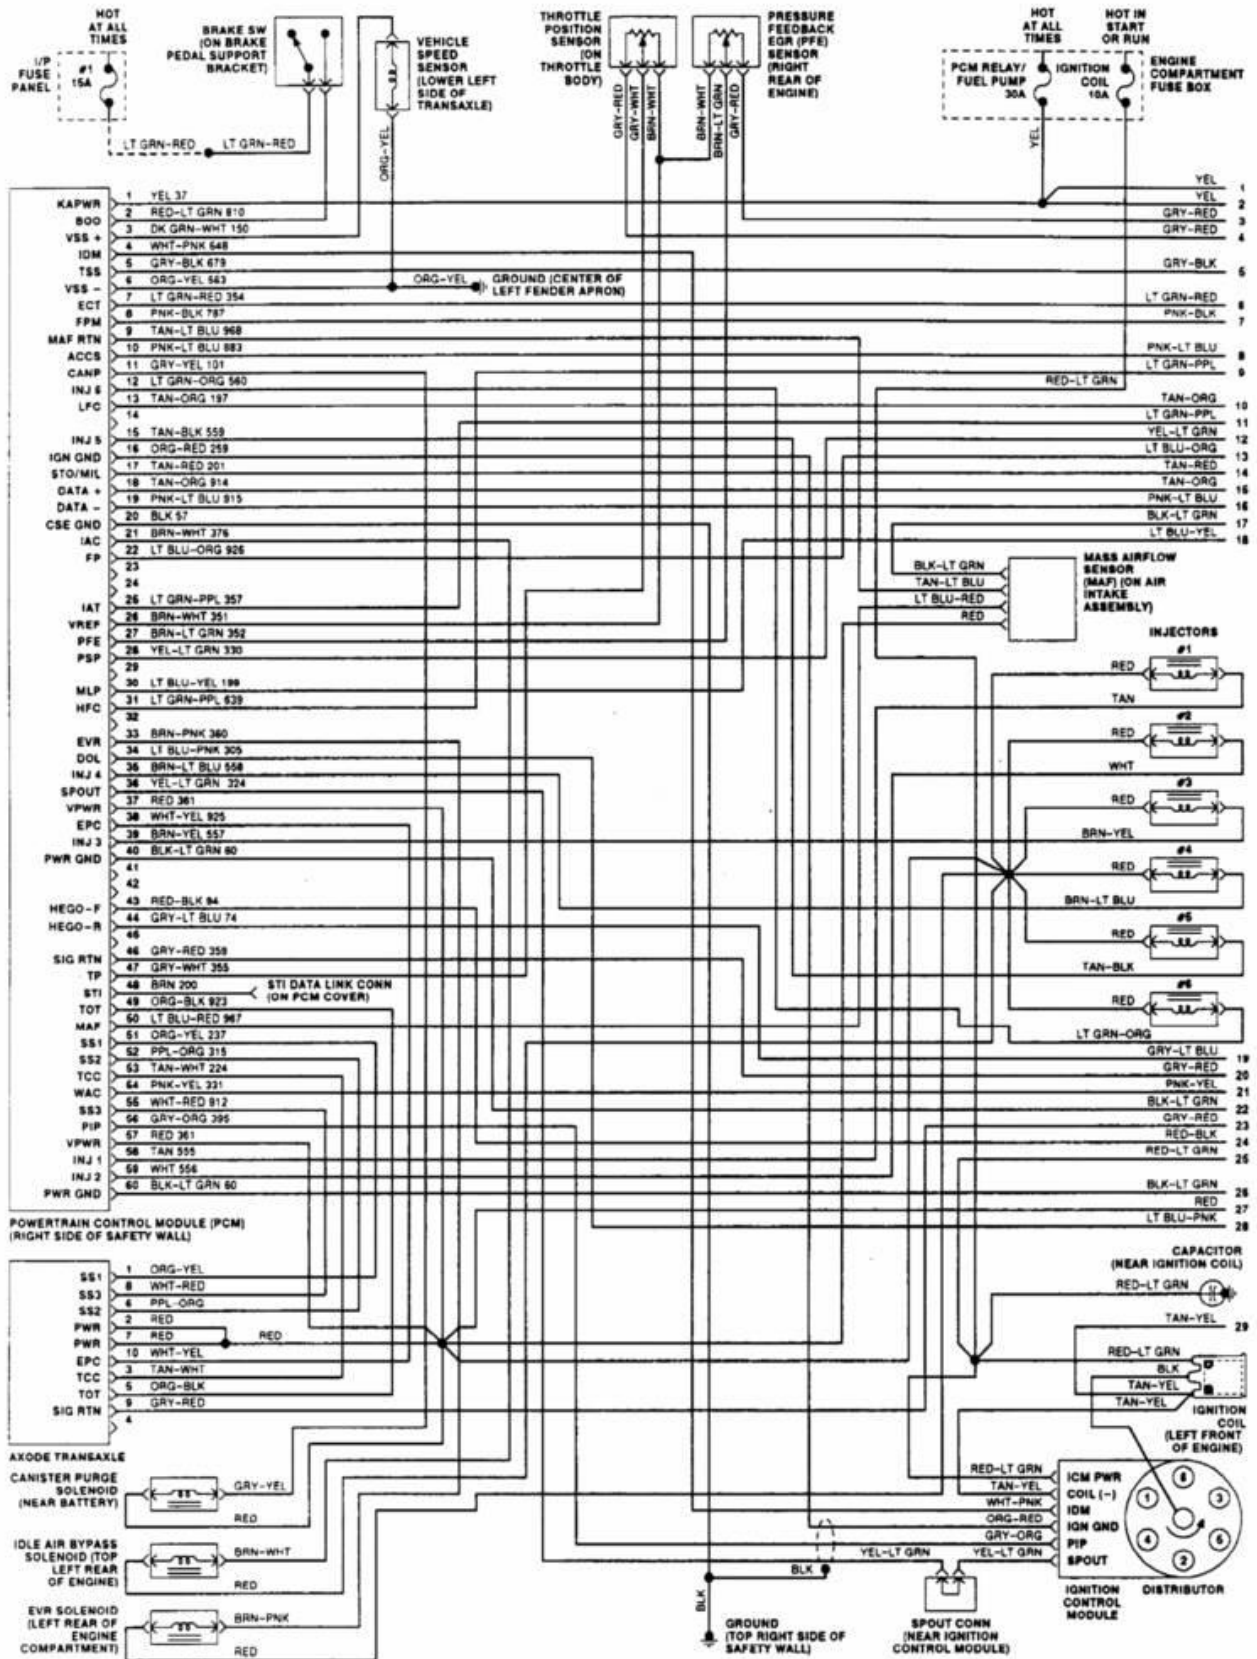


93J40658

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 19: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)  
1993 Ford Taurus LX

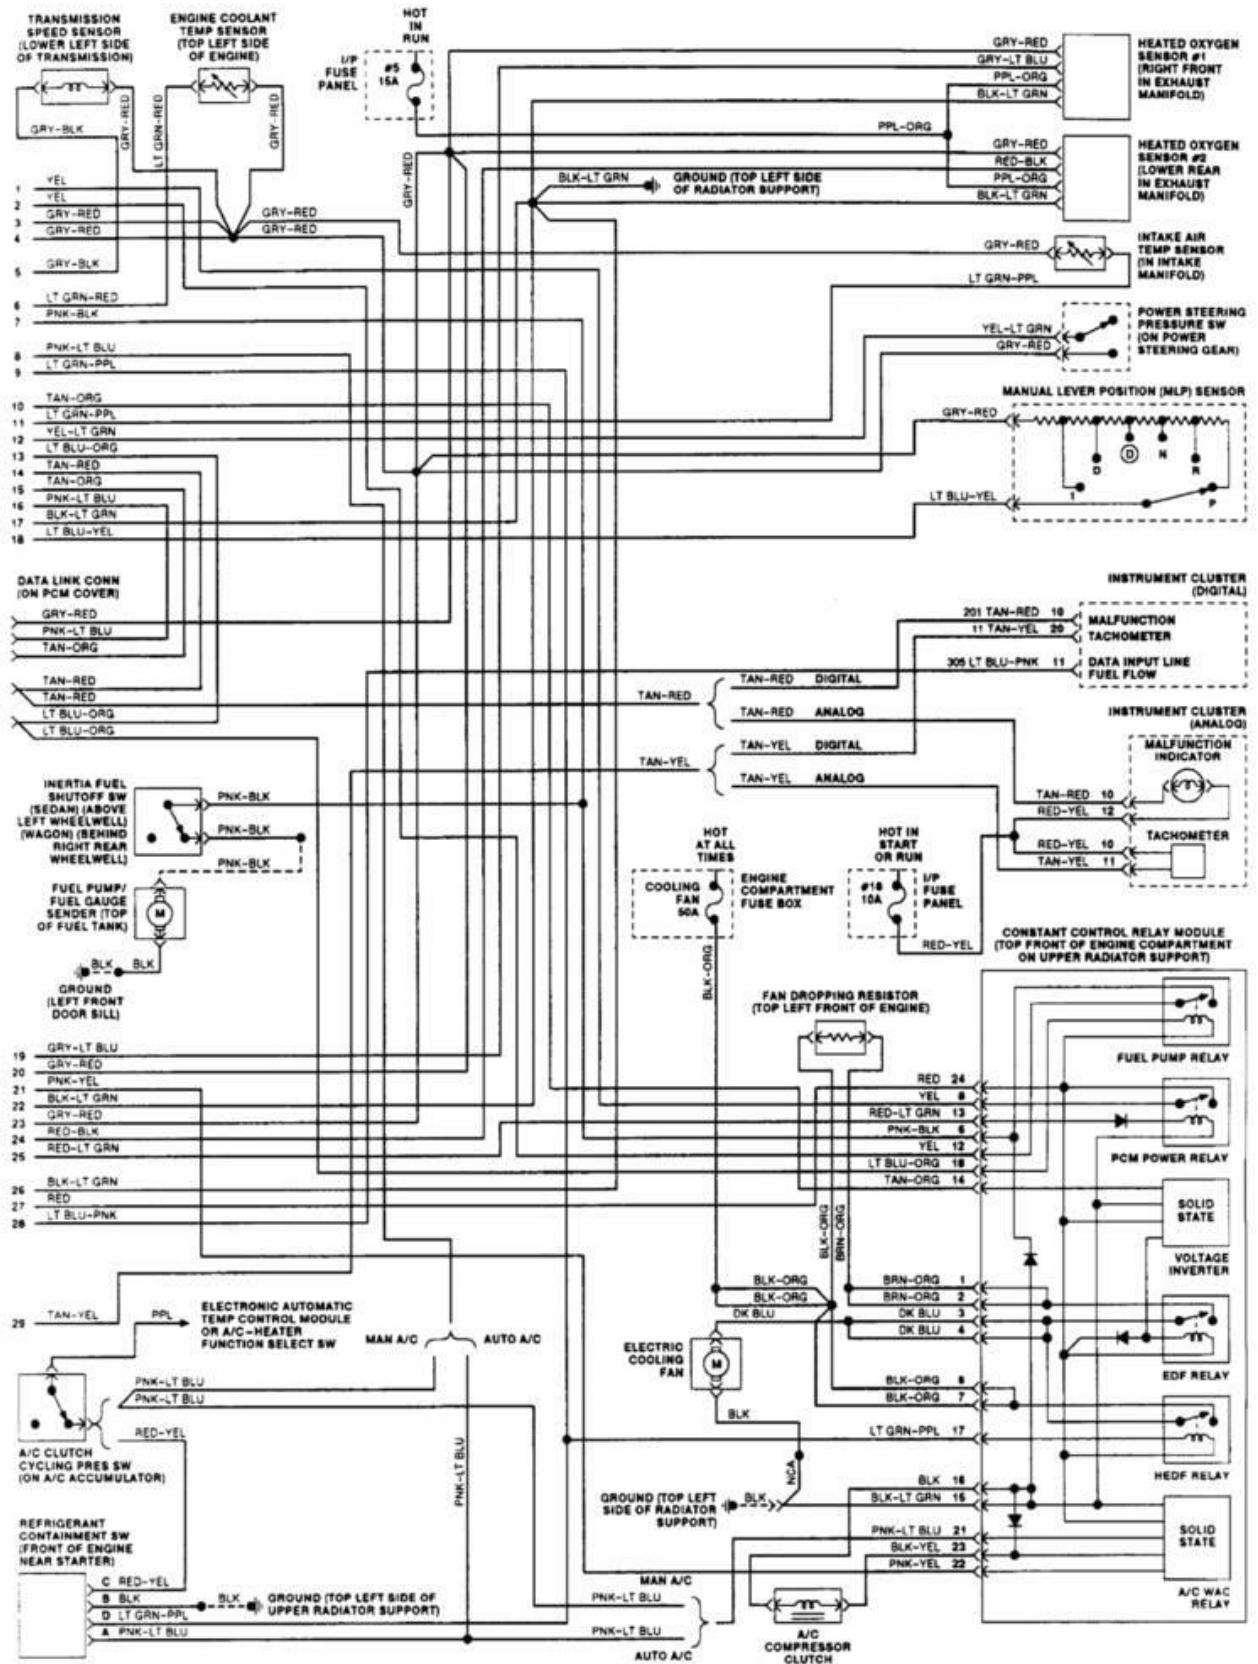


93A40659

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 20: EEC-IV Wiring Diagram (3.8L - 1 of 2)  
1993 Ford Taurus LX

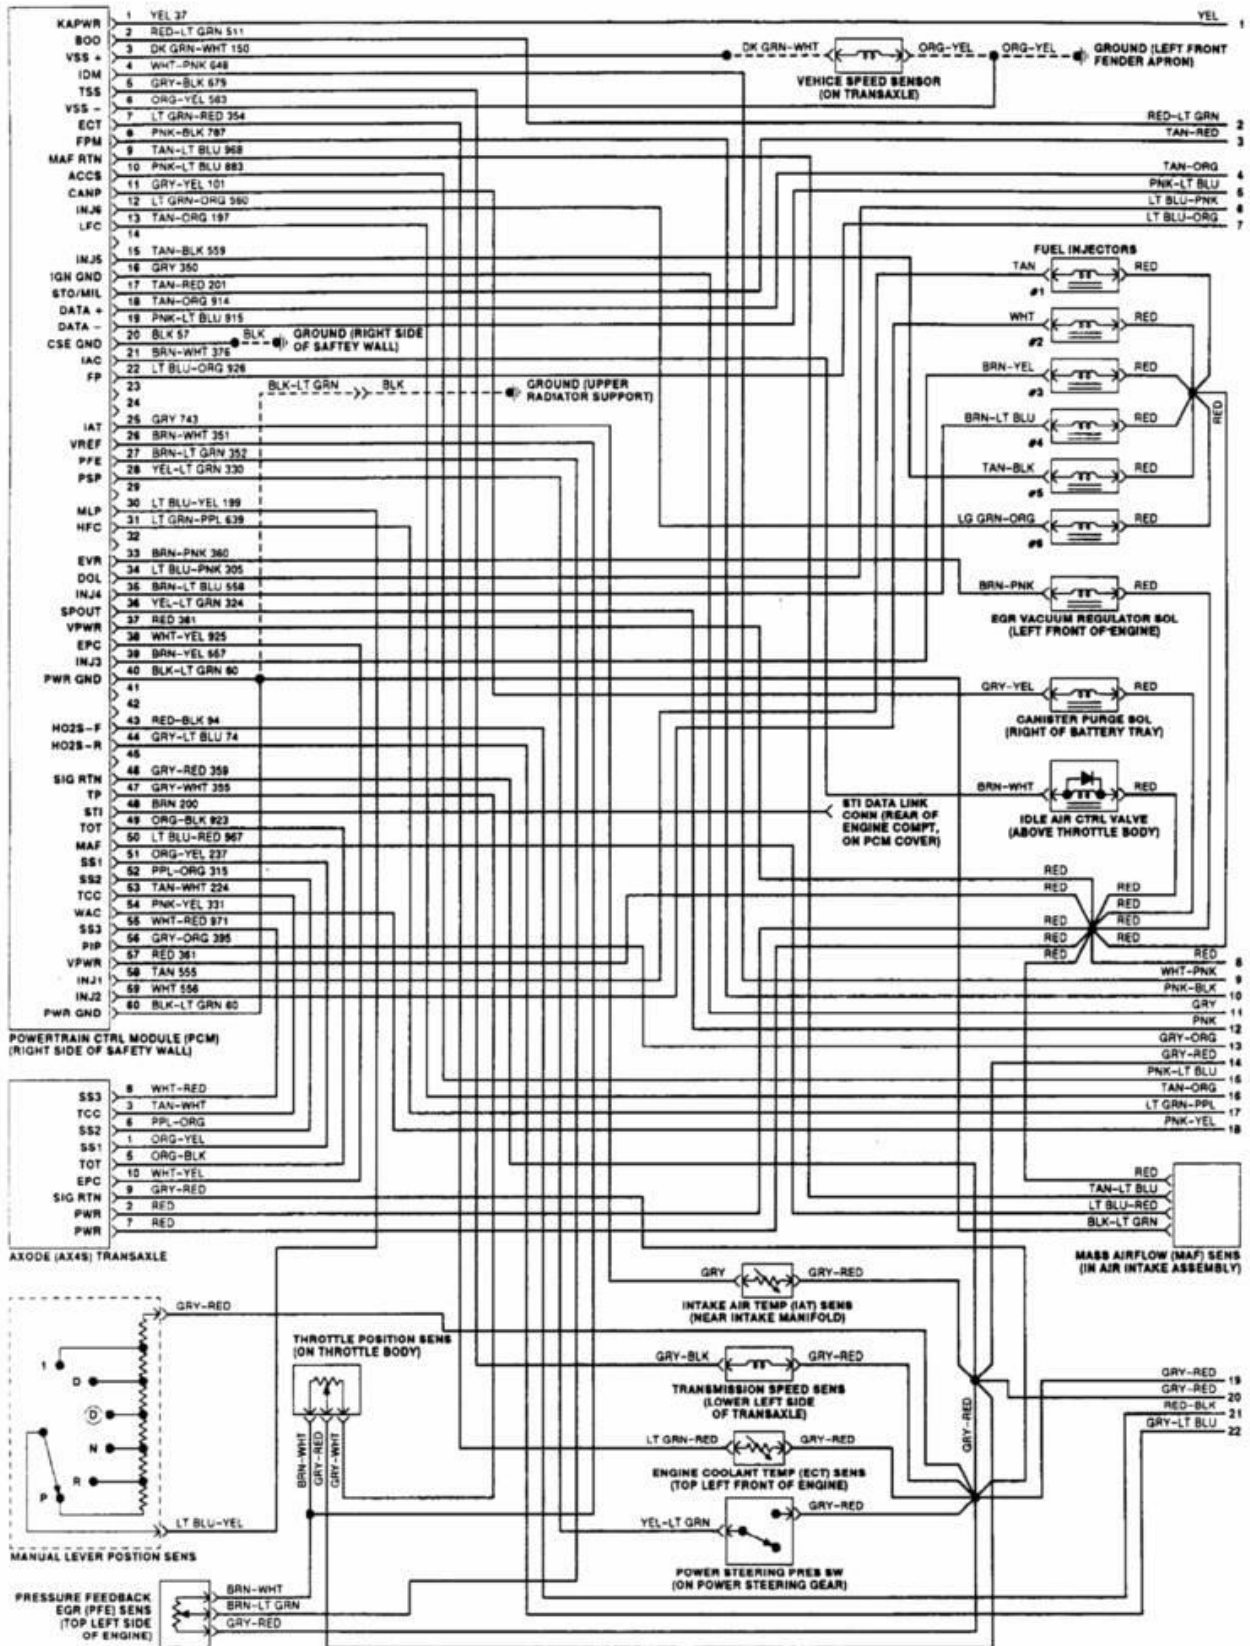

93D40660




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 21: EEC-IV Wiring Diagram (3.8L - 2 of 2)  
1993 Ford Taurus LX

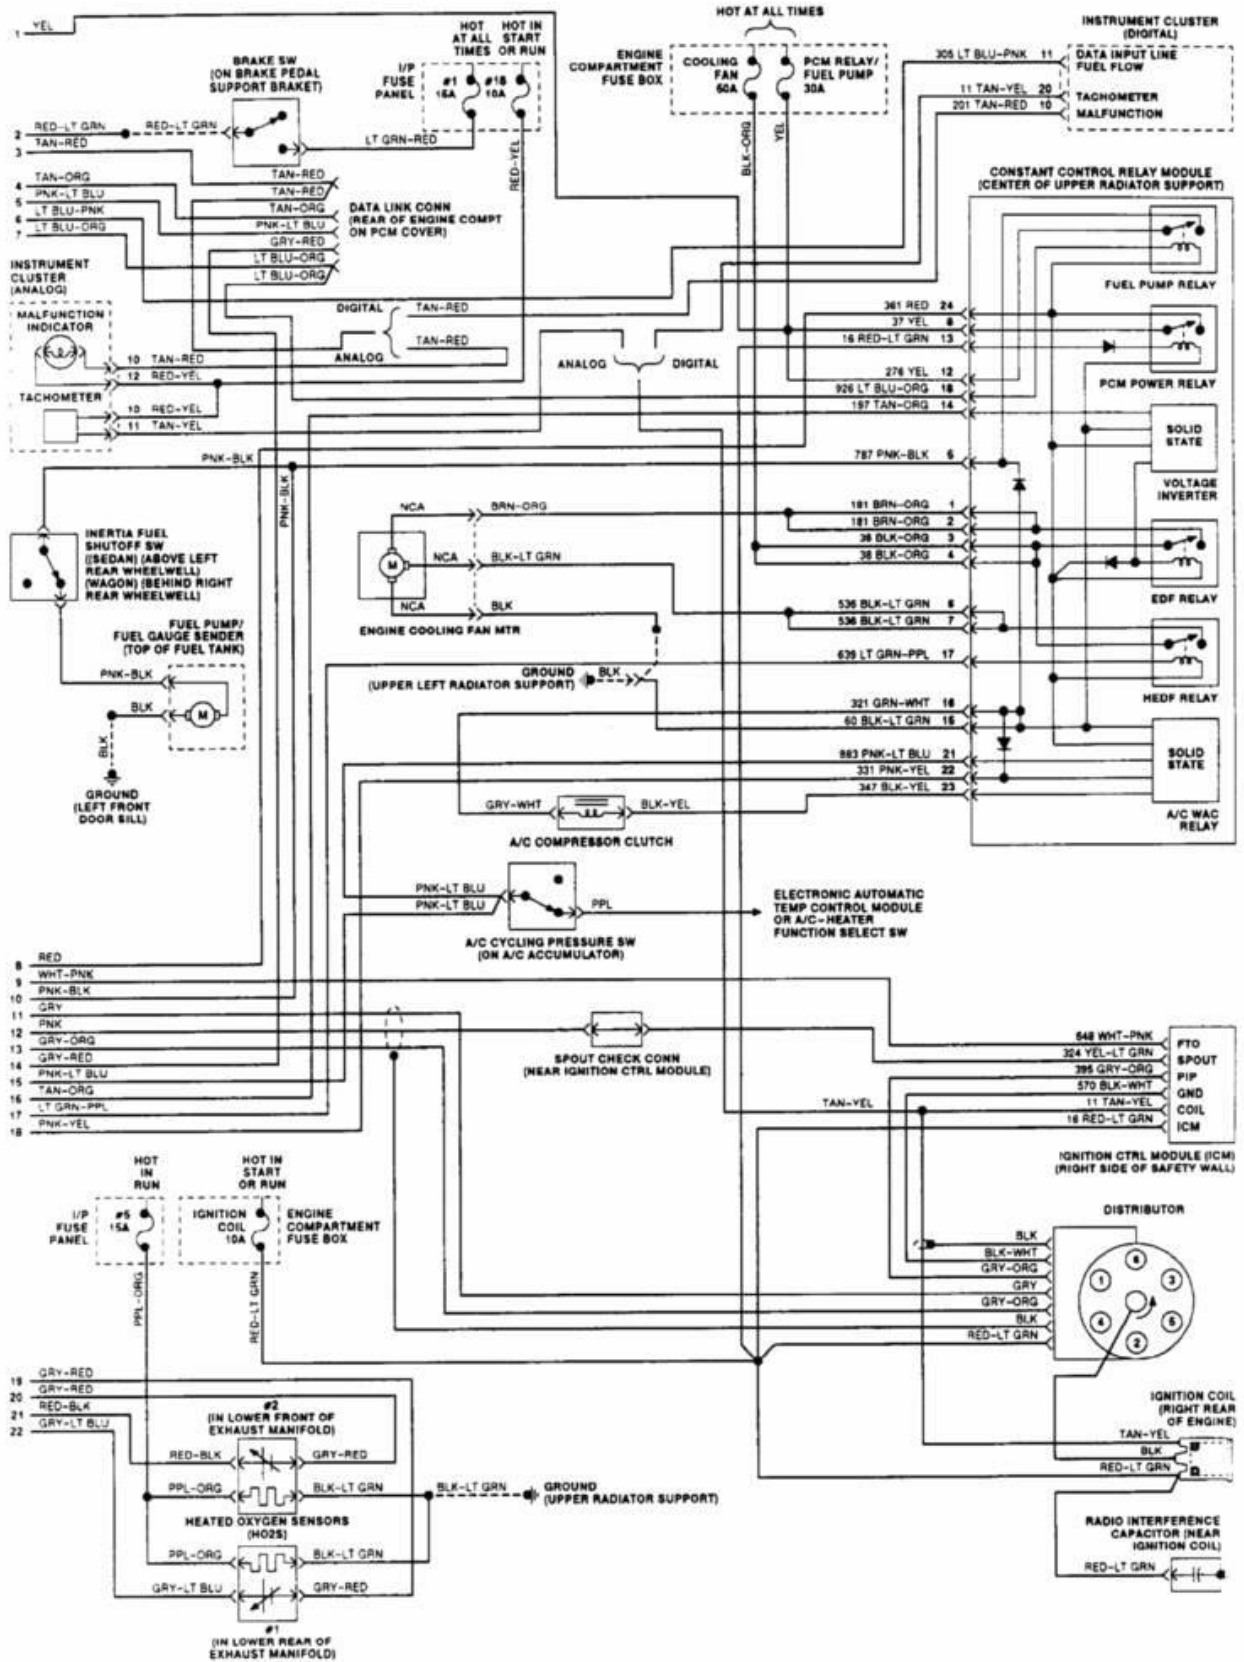


93E40661

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 22: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)  
1993 Ford Taurus LX

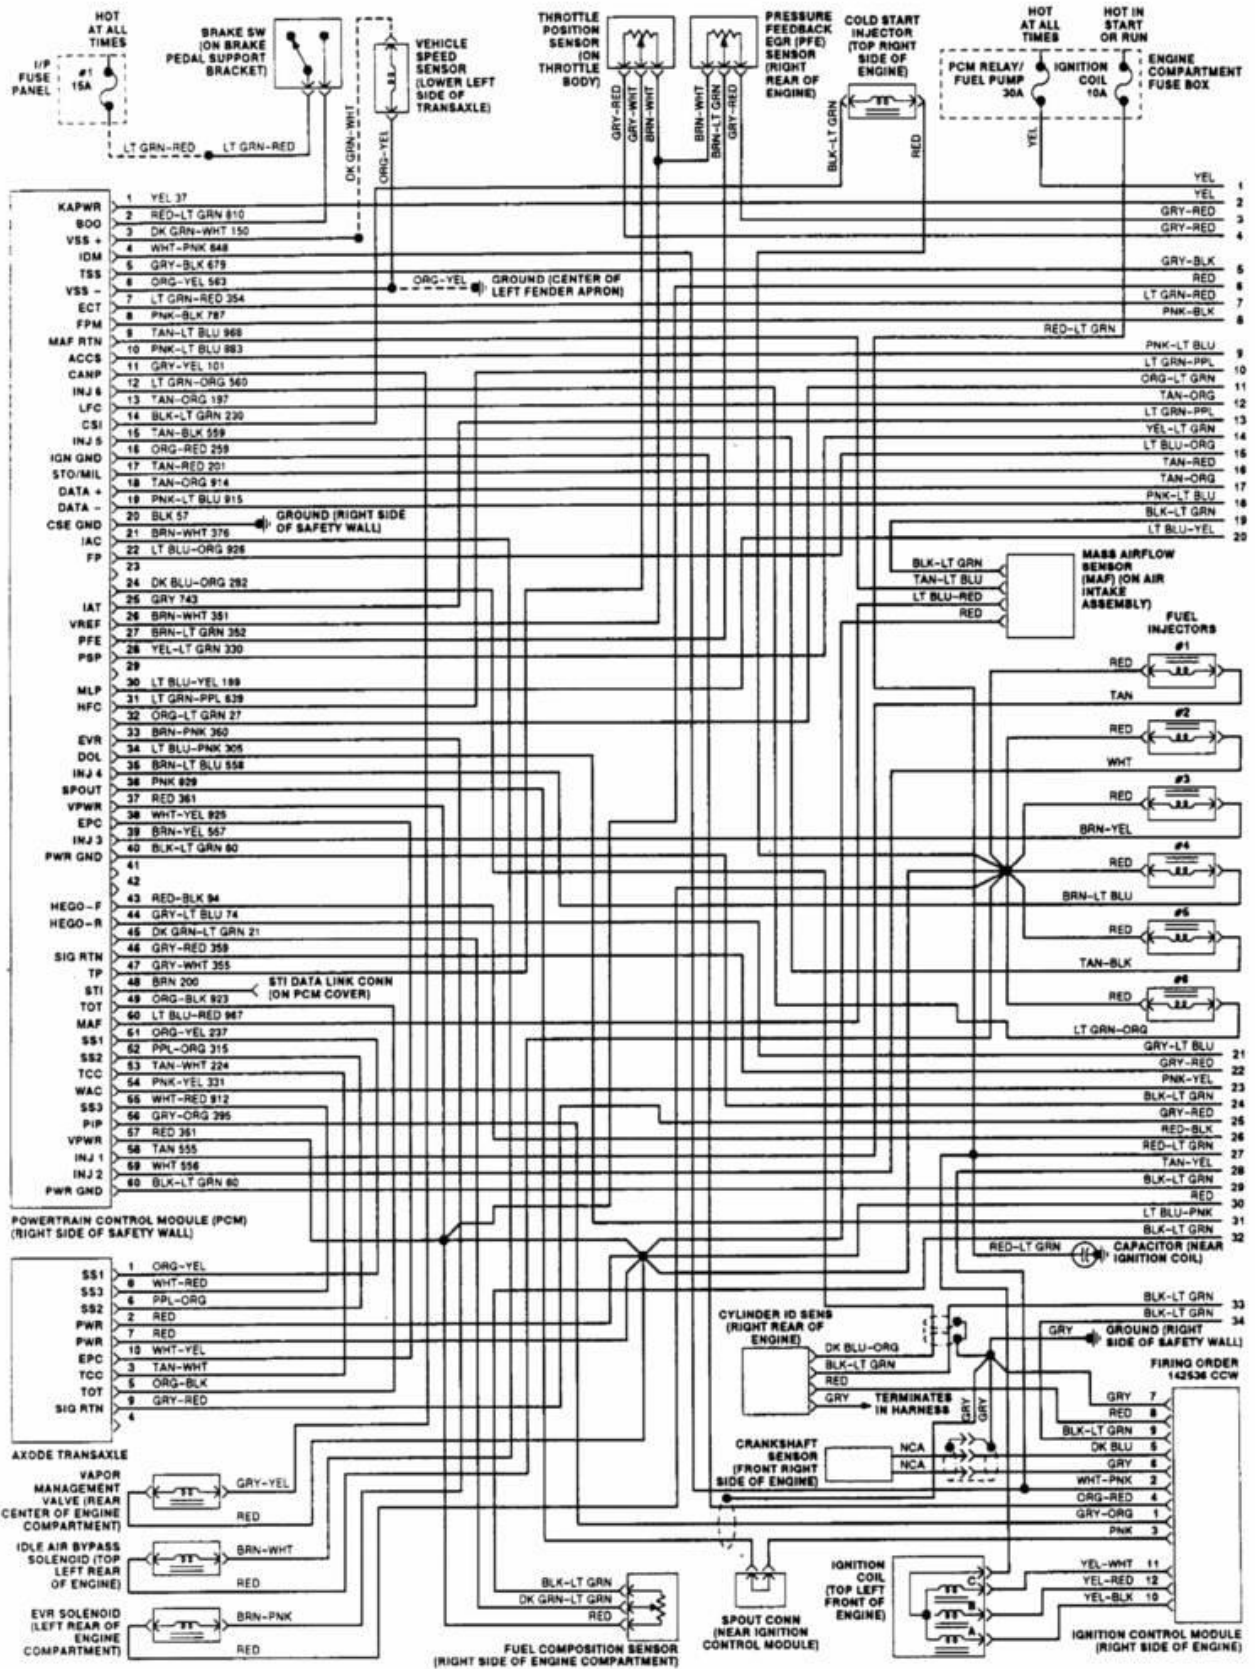

93F40682




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 23: EEC-IV Wiring Diagram (3.0L Flex Fuel - 2 of 2)  
1993 Ford Taurus LX

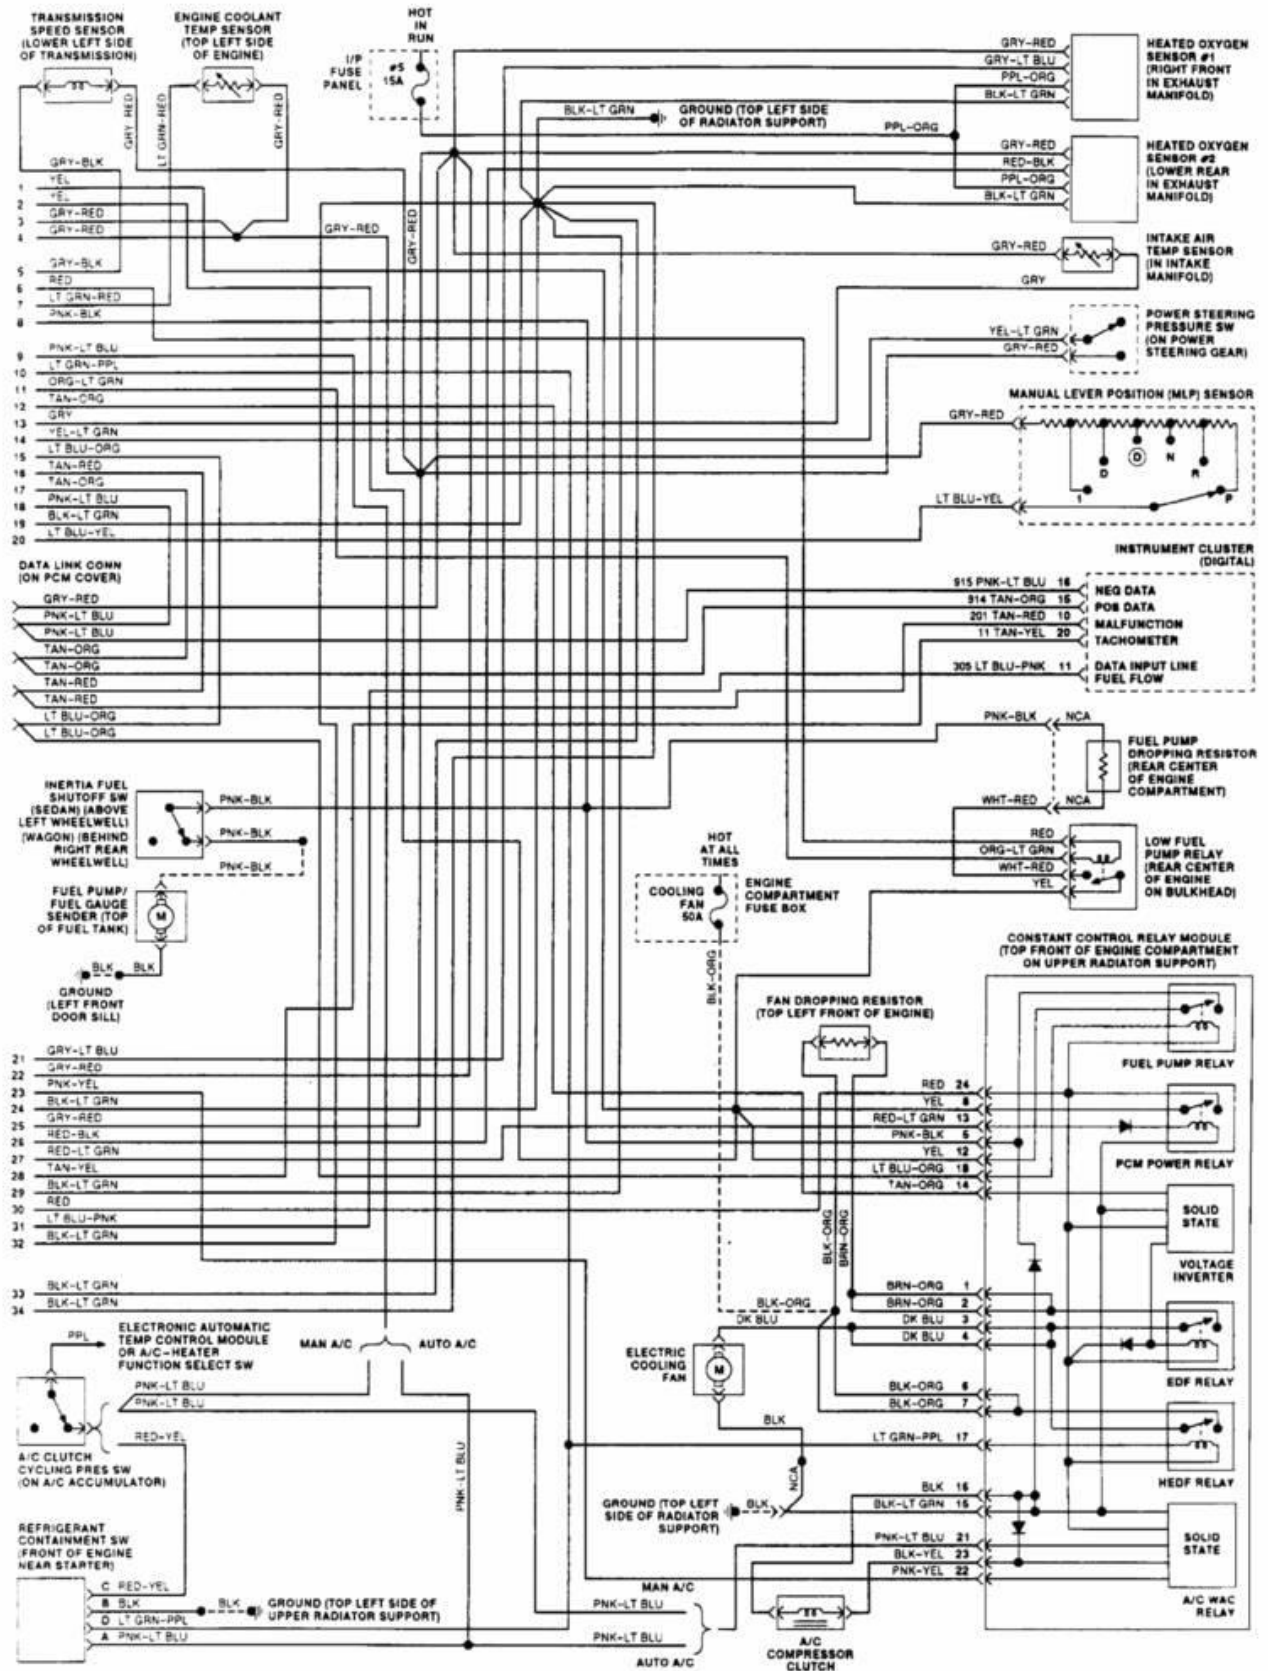


93G40663

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 24: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)  
1993 Ford Taurus LX

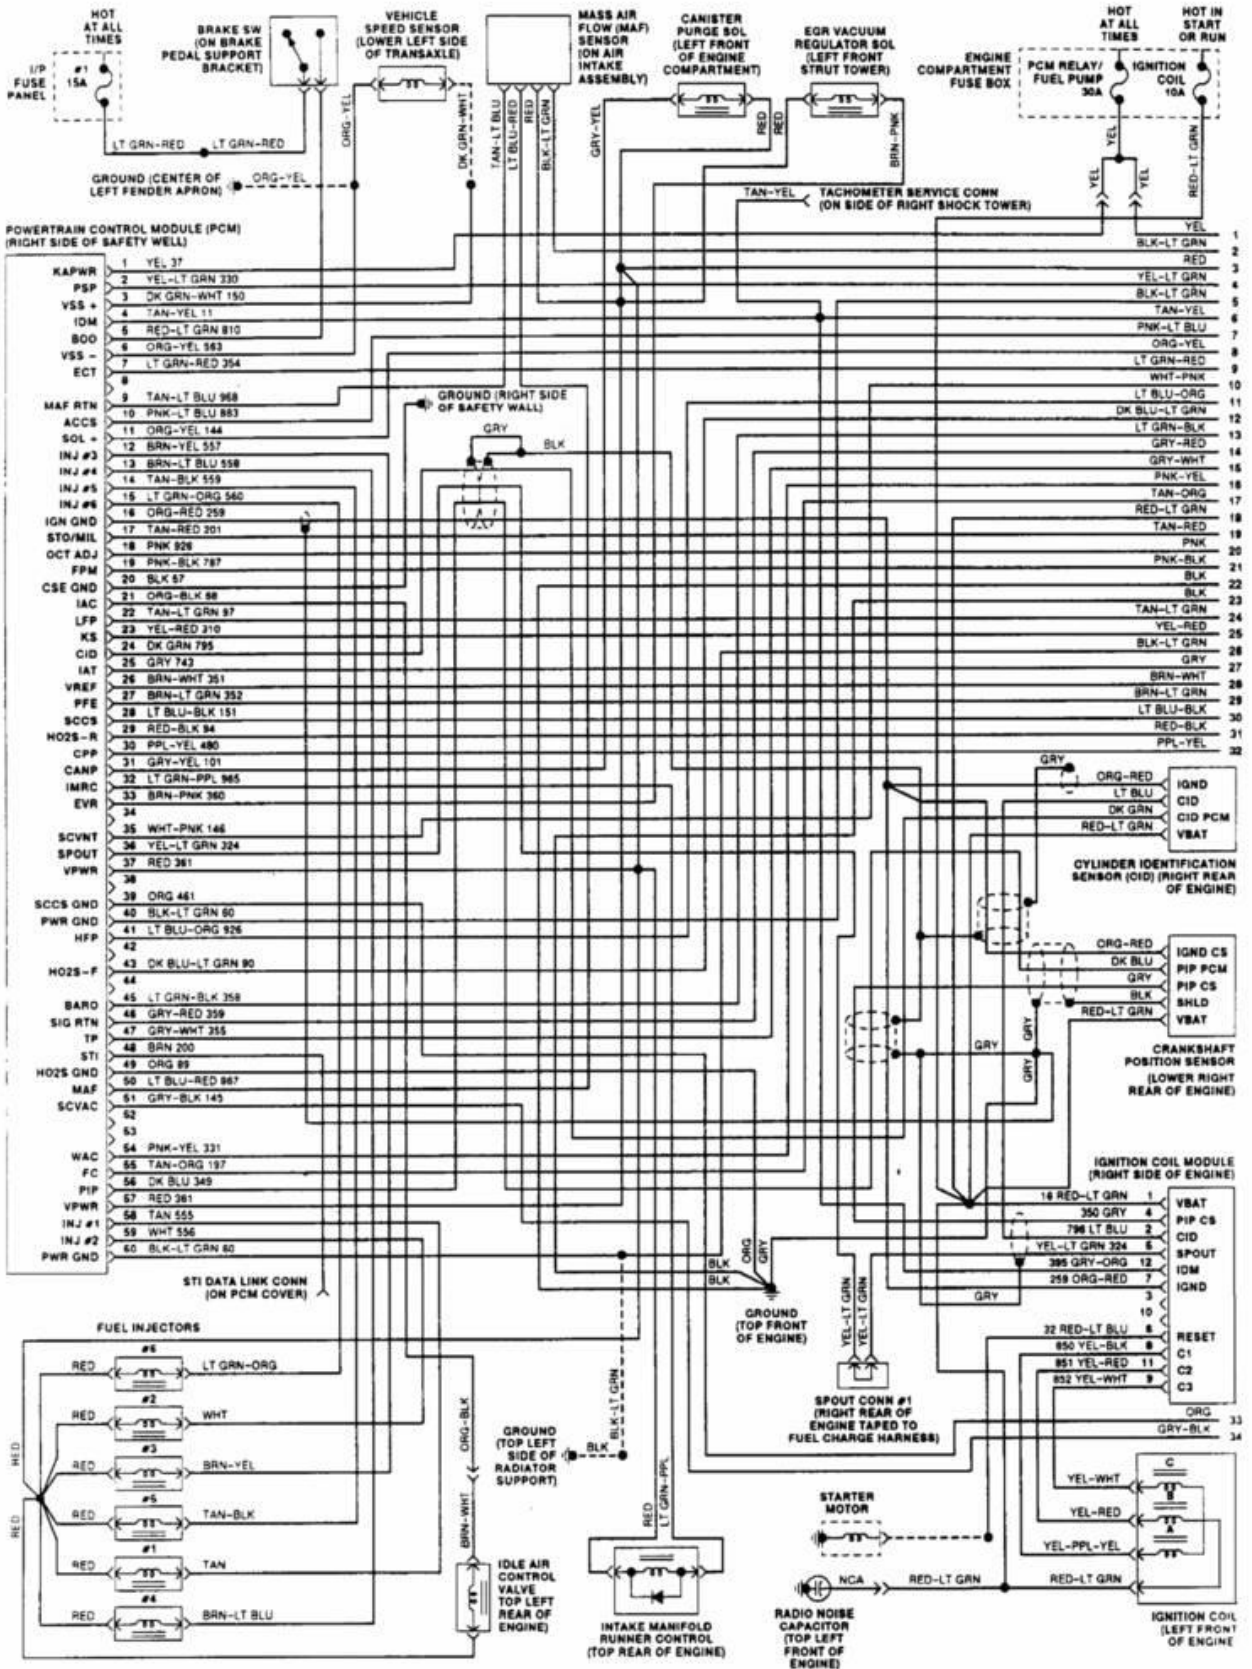


93H40664

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 25: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)  
1993 Ford Taurus LX

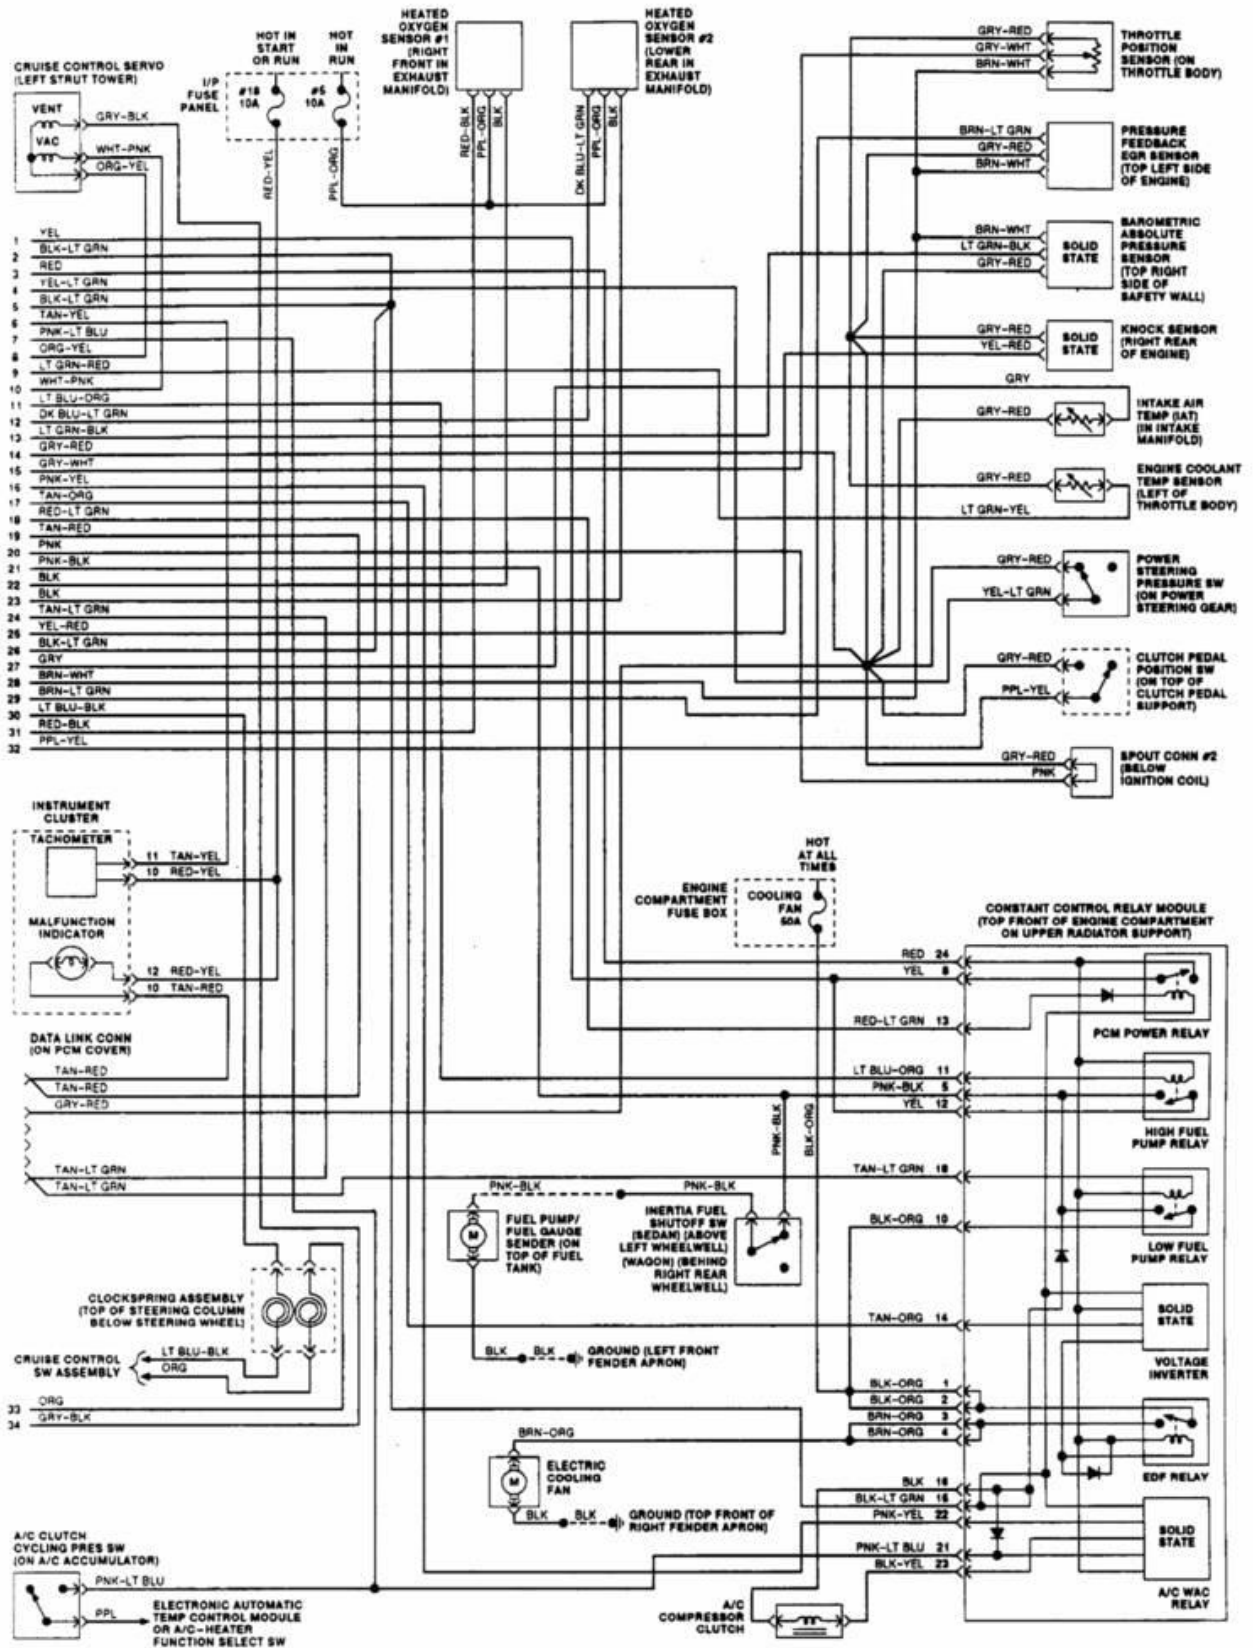


93I40665

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 26: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)  
1993 Ford Taurus LX

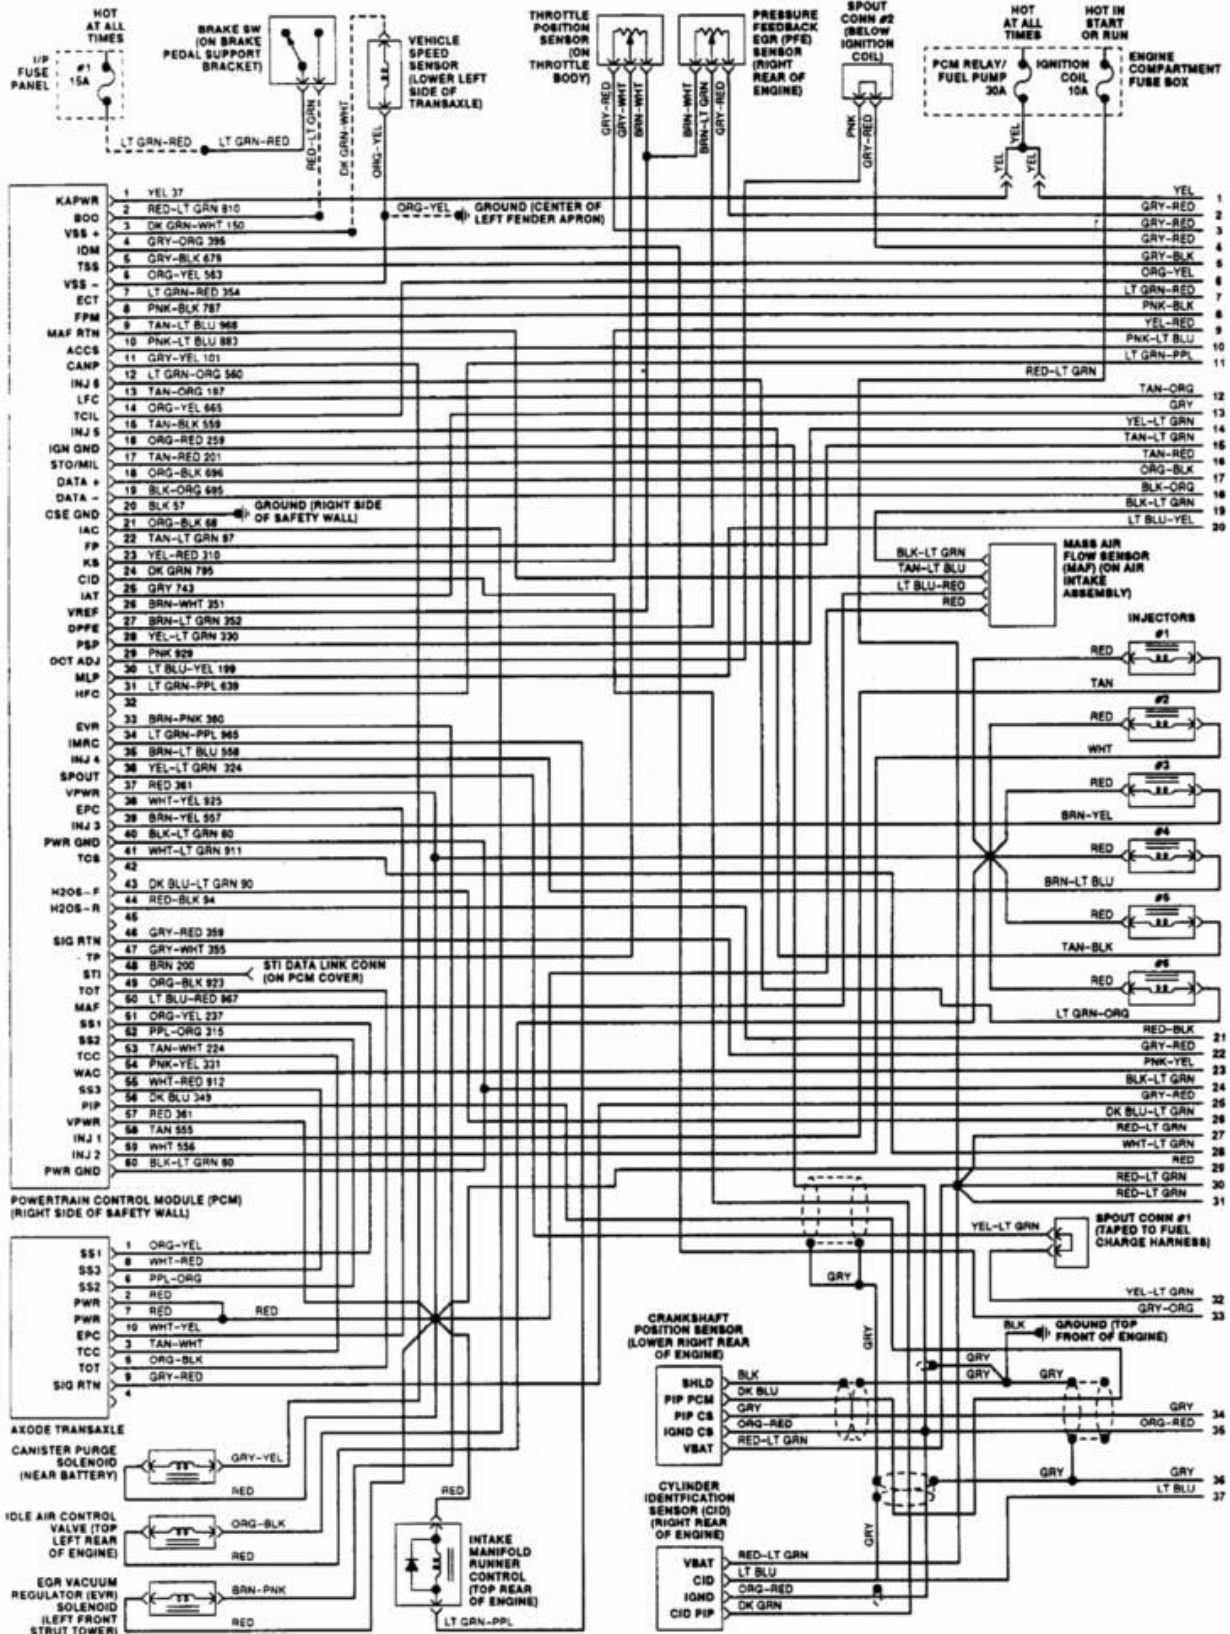


93J40666

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 27: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)  
1993 Ford Taurus LX

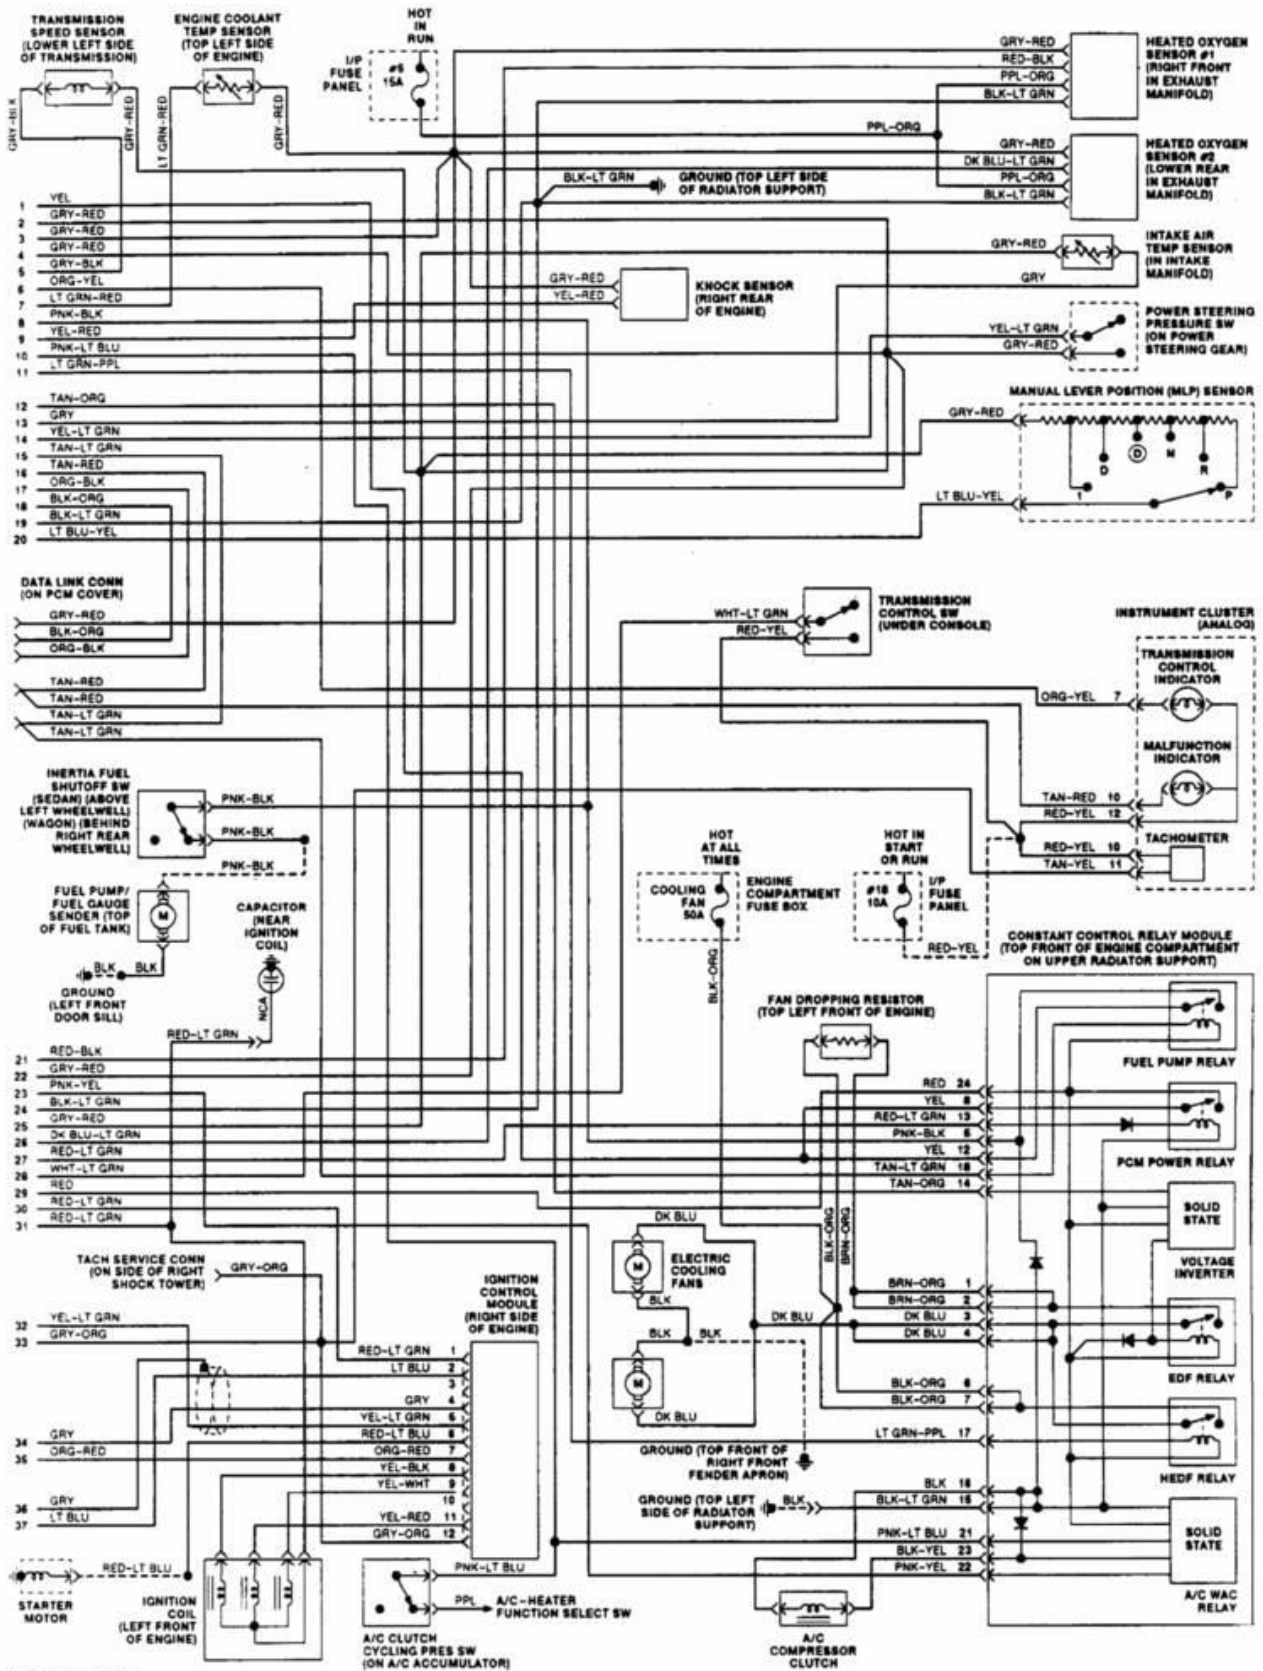


93A40667



**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

Fig. 28: SRS Wiring Diagram  
1993 Ford Taurus LX

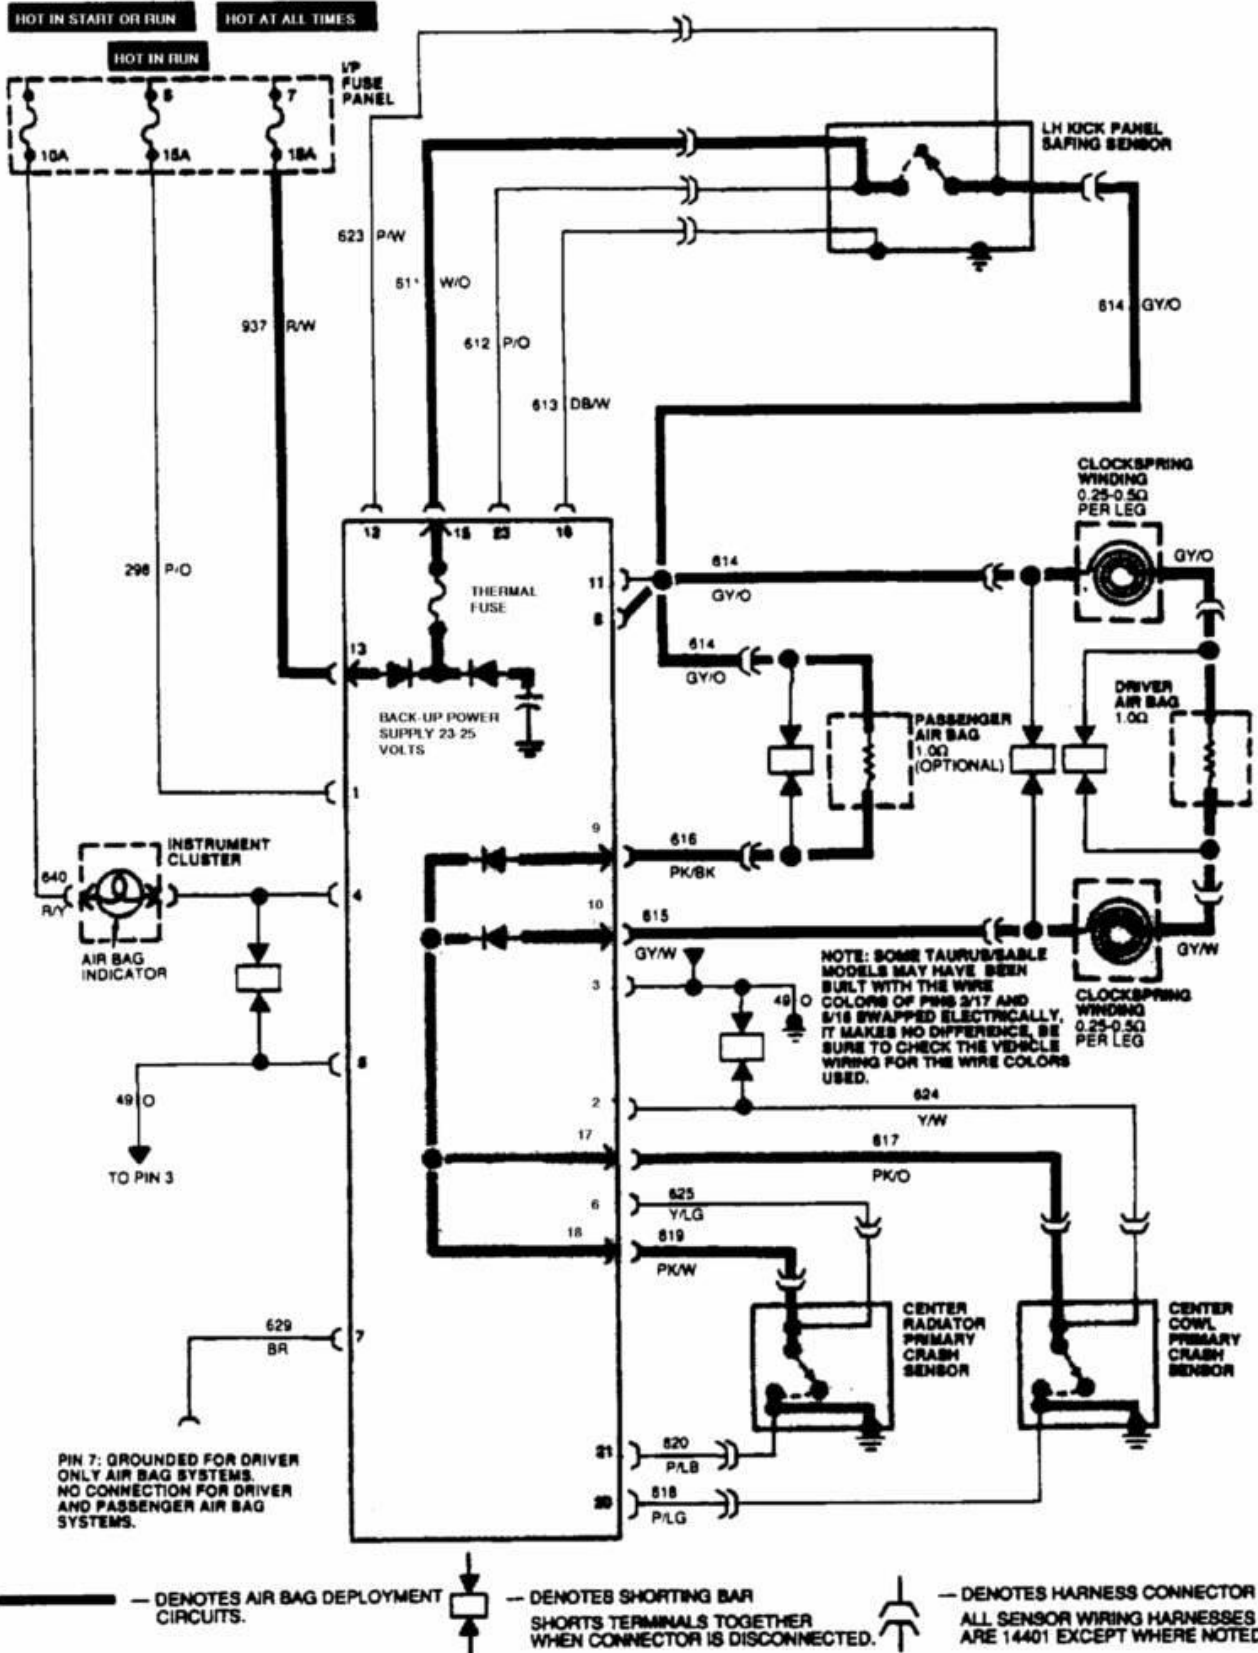


93A75432

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 29: Analog Instrument Cluster Wiring Diagram (Except SHO)**  
1993 Ford Taurus LX

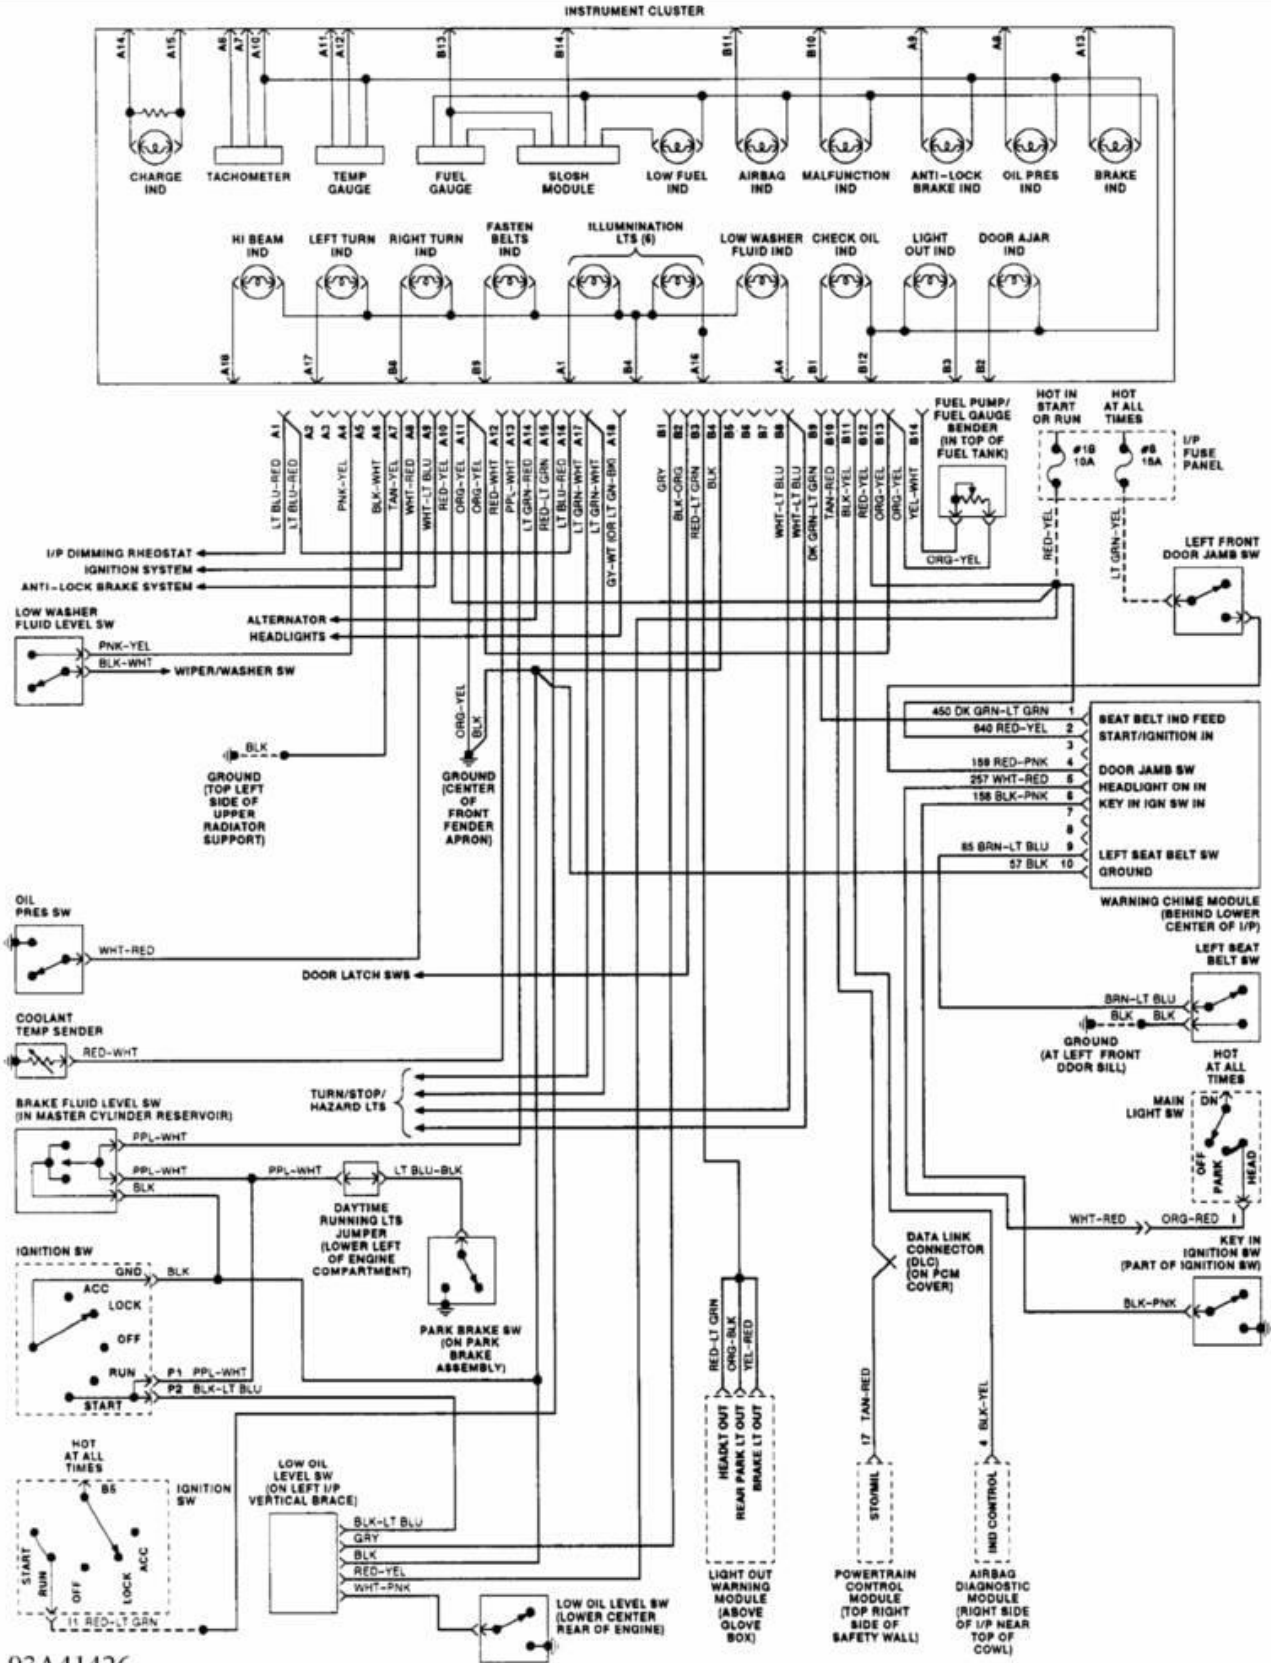


93A41426

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 30: Analog Instrument Cluster Wiring Diagram (SHO)  
1993 Ford Taurus LX

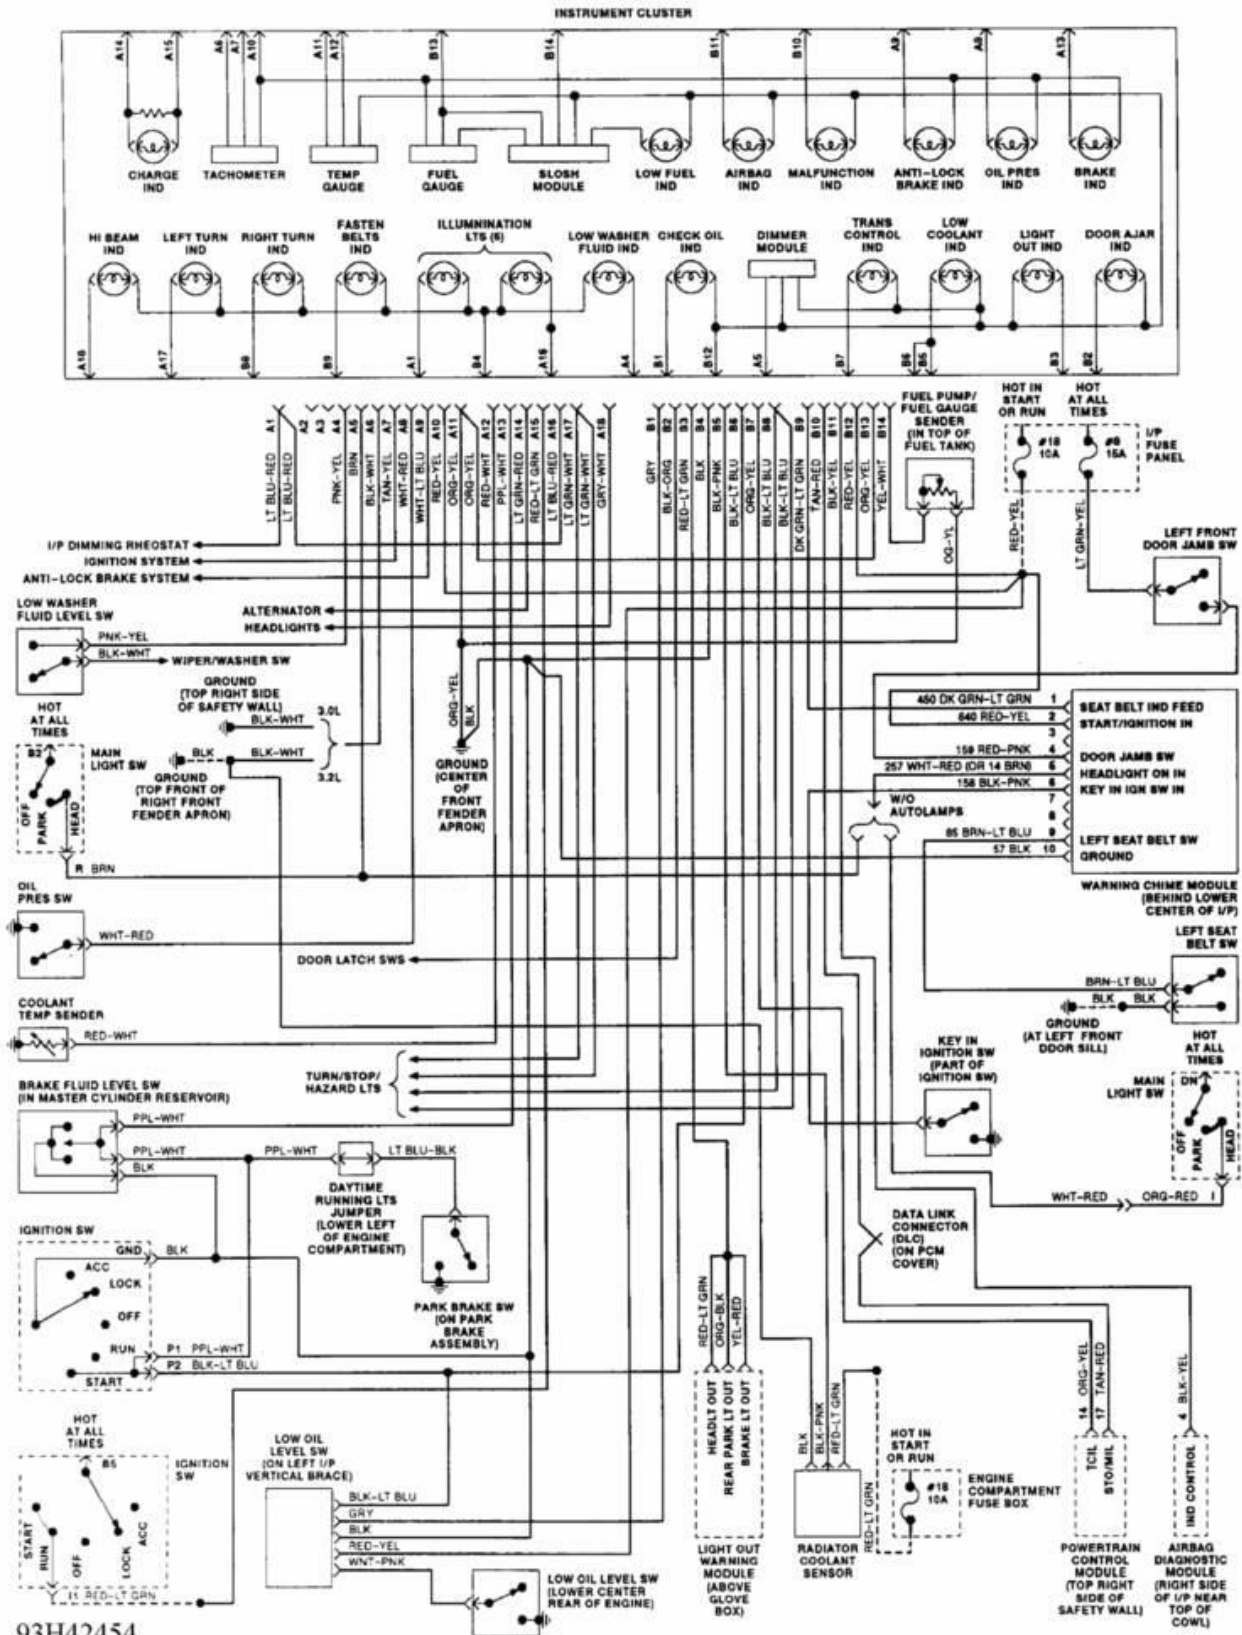

93H42454




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 31: Headlight System Wiring Diagram (Automatic)  
1993 Ford Taurus LX

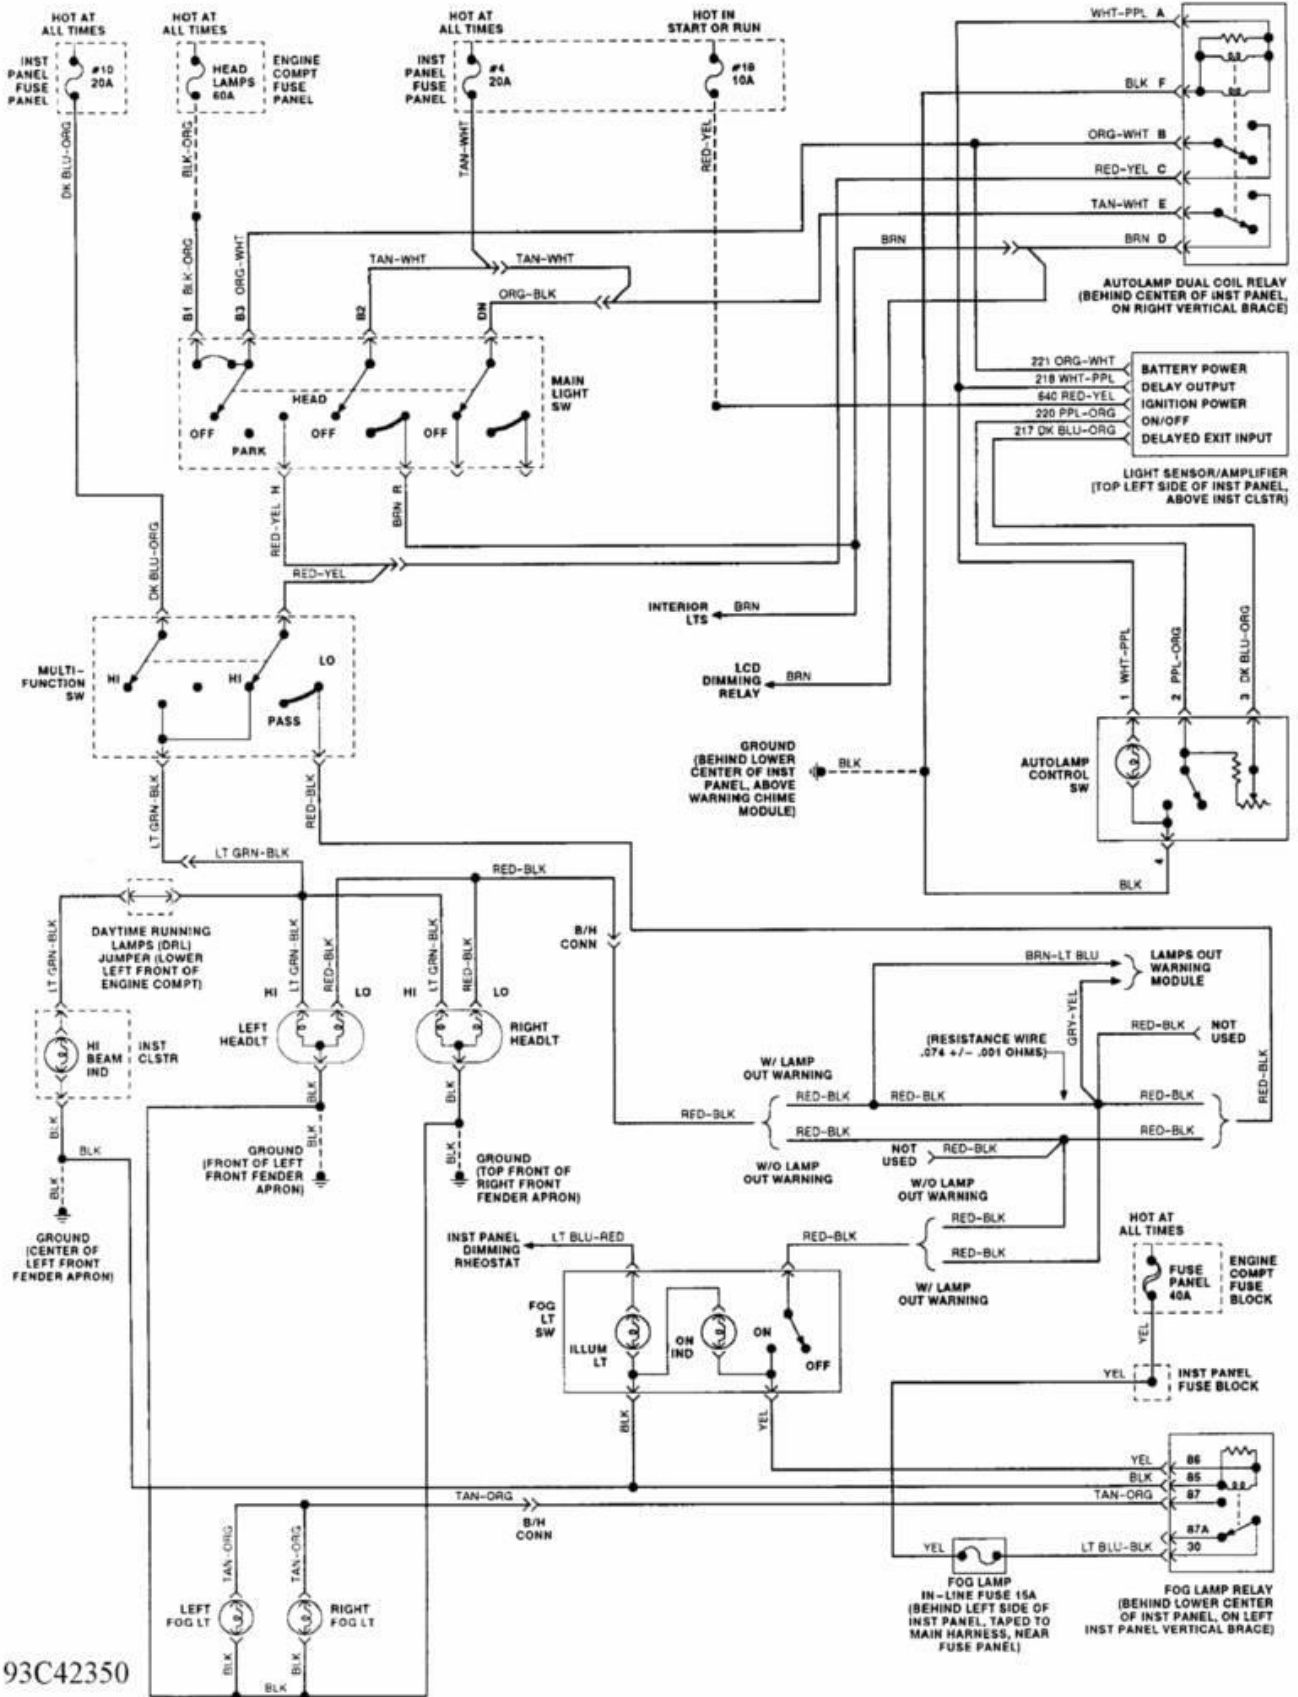


93C42350

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 32: Headlight System Wiring Diagram (Manual)**  
1993 Ford Taurus LX

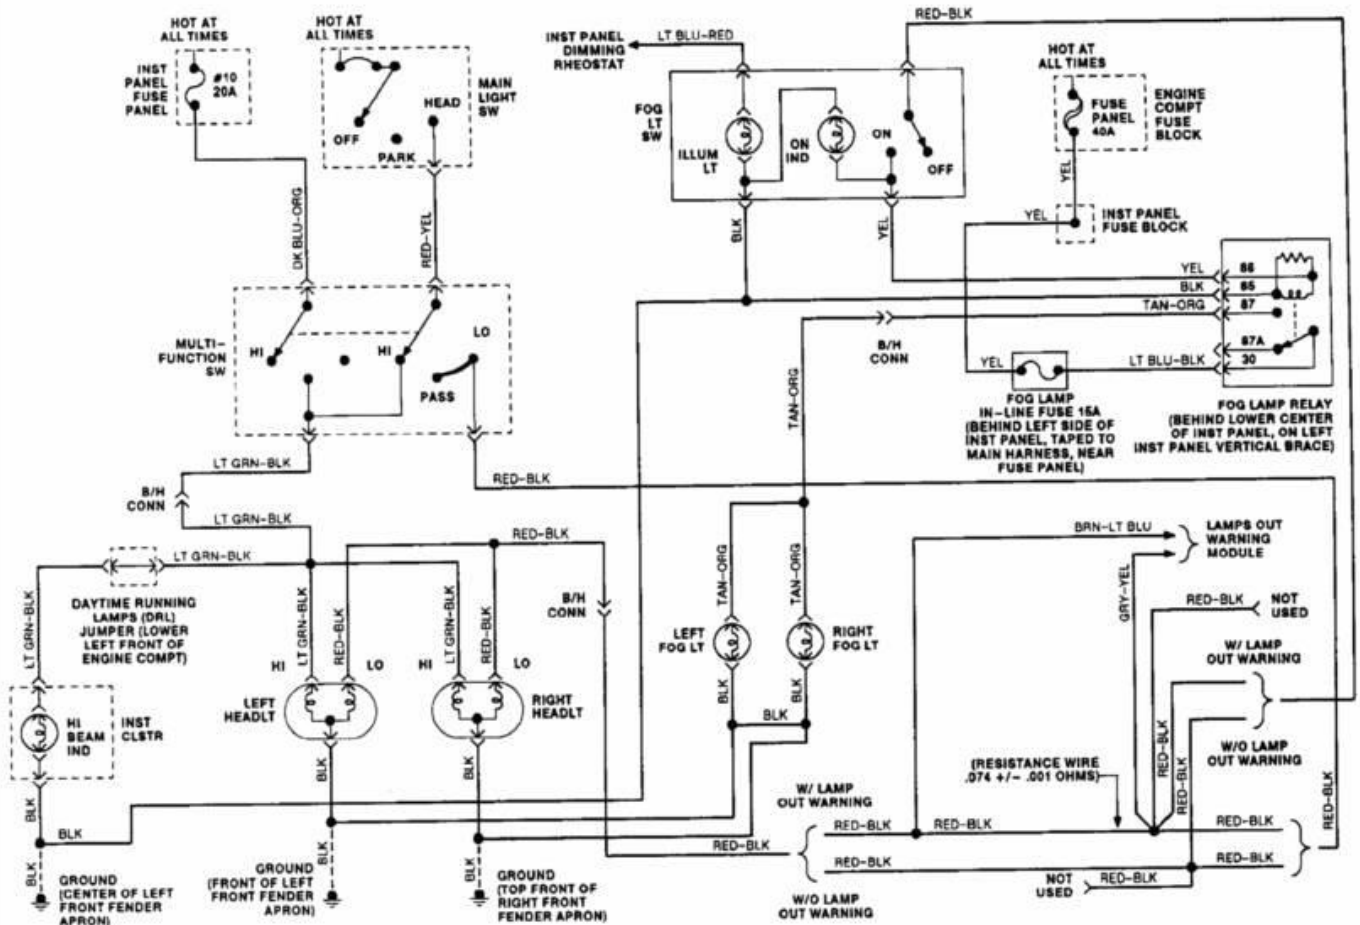


93D42351

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 33: Headlight System Wiring Diagram (Manual)**  
1993 Ford Taurus LX

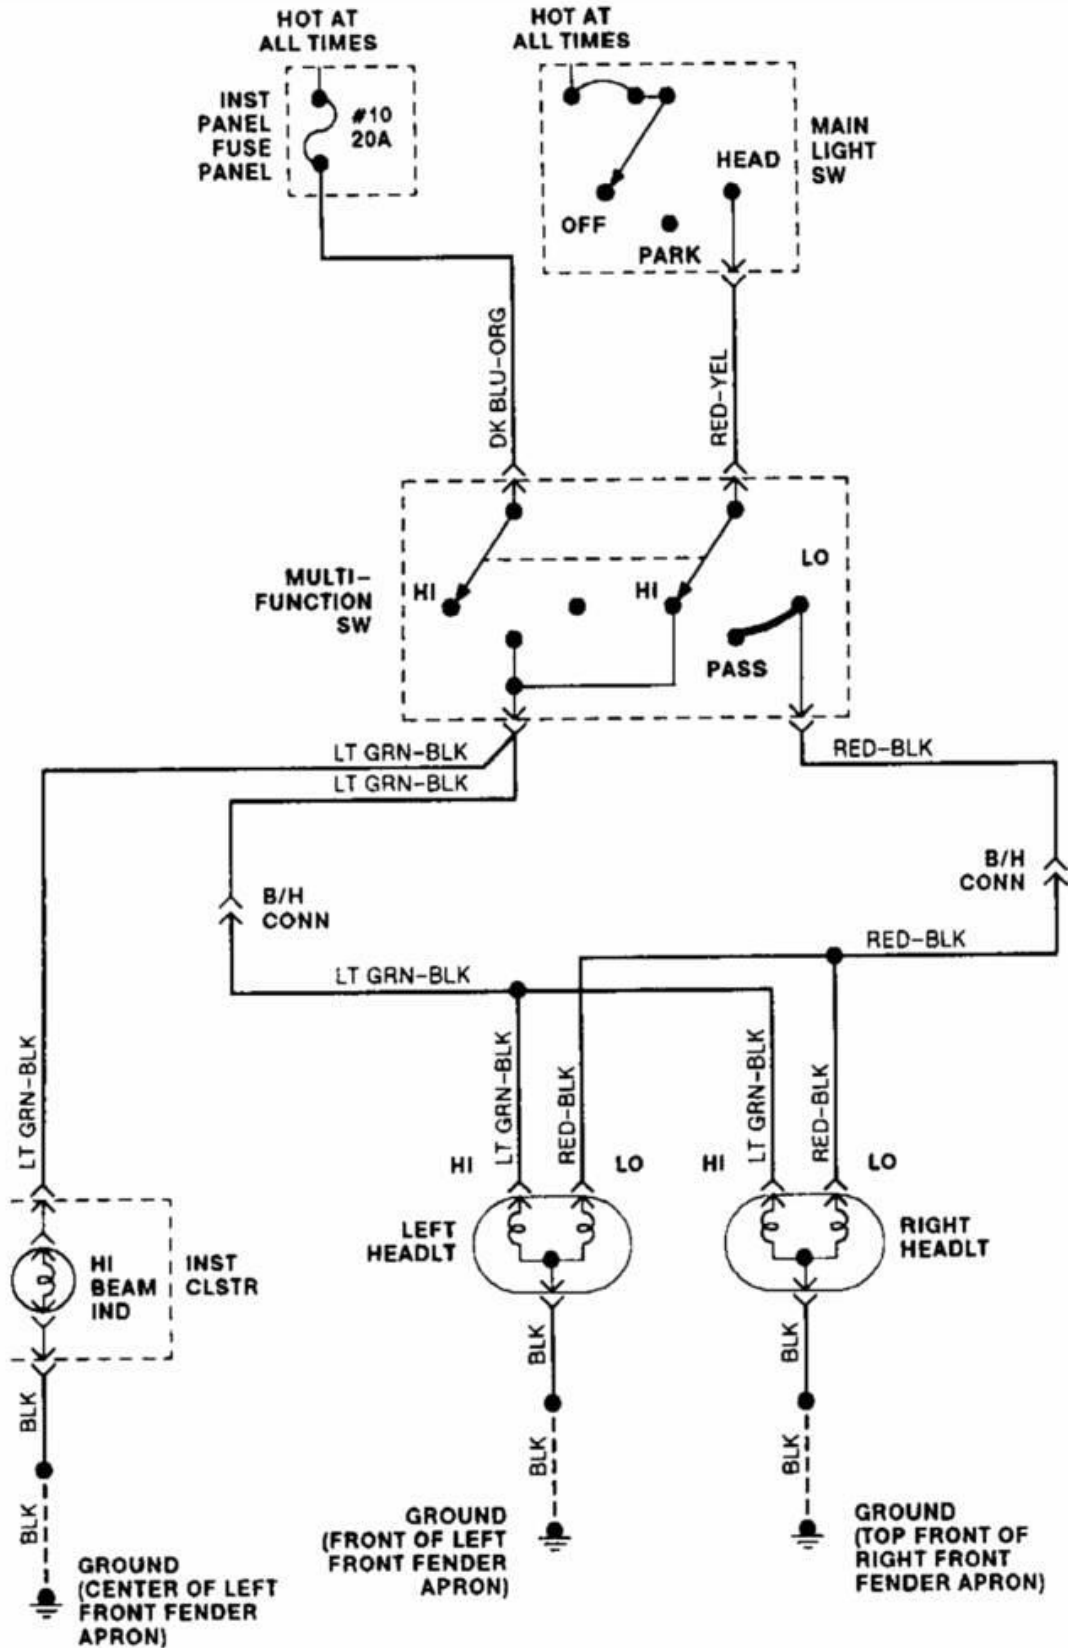


93E42352

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 34: Cruise Control Sys. Wiring Diagram (Ex. 3.0L SHO & 3.2L SHO)**  
1993 Ford Taurus LX

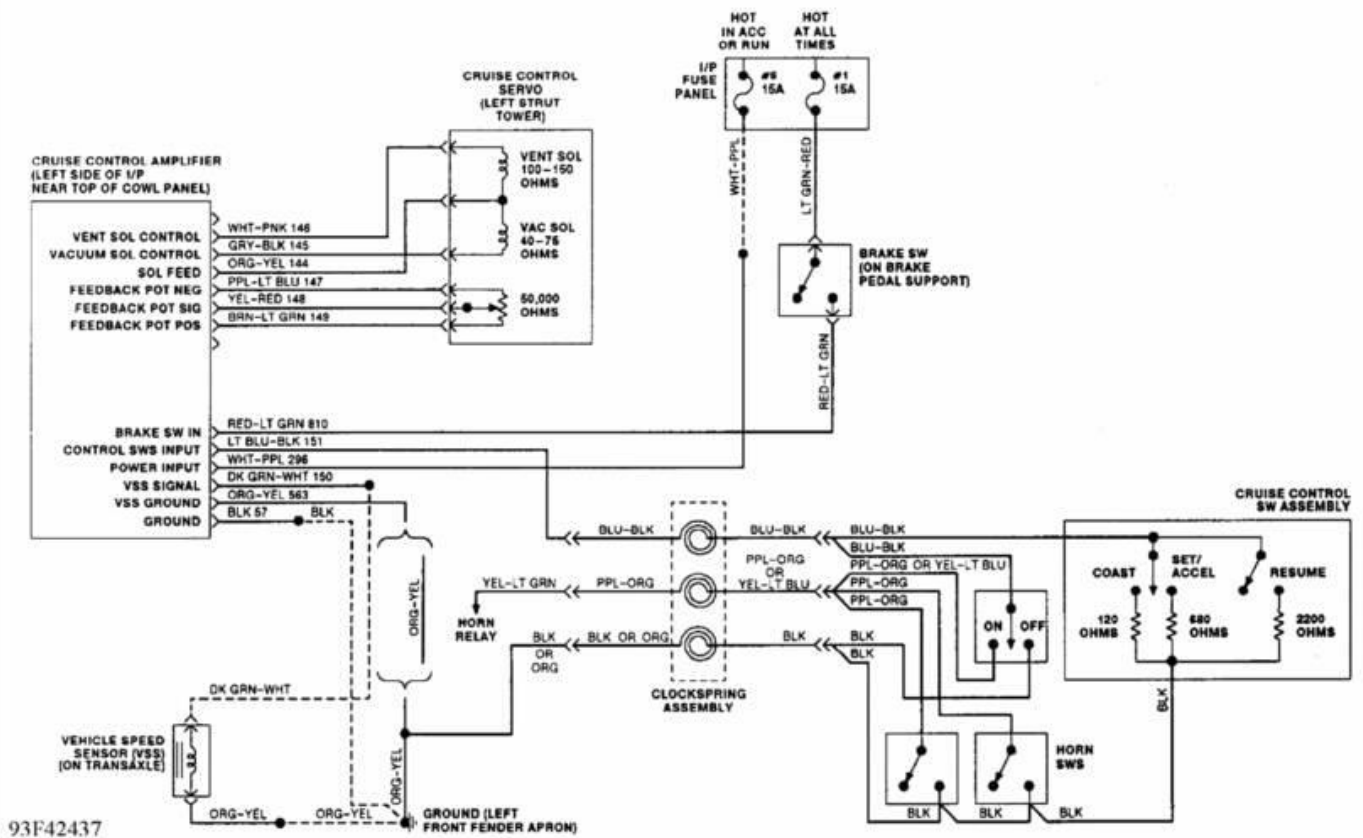


93F42437

## WIRING DIAGRAMS

### Power & Ground Distribution

PAVLIN

**Fig. 35: Cruise Control System Wiring Diagram (3.0L SHO)**  
1993 Ford Taurus LX

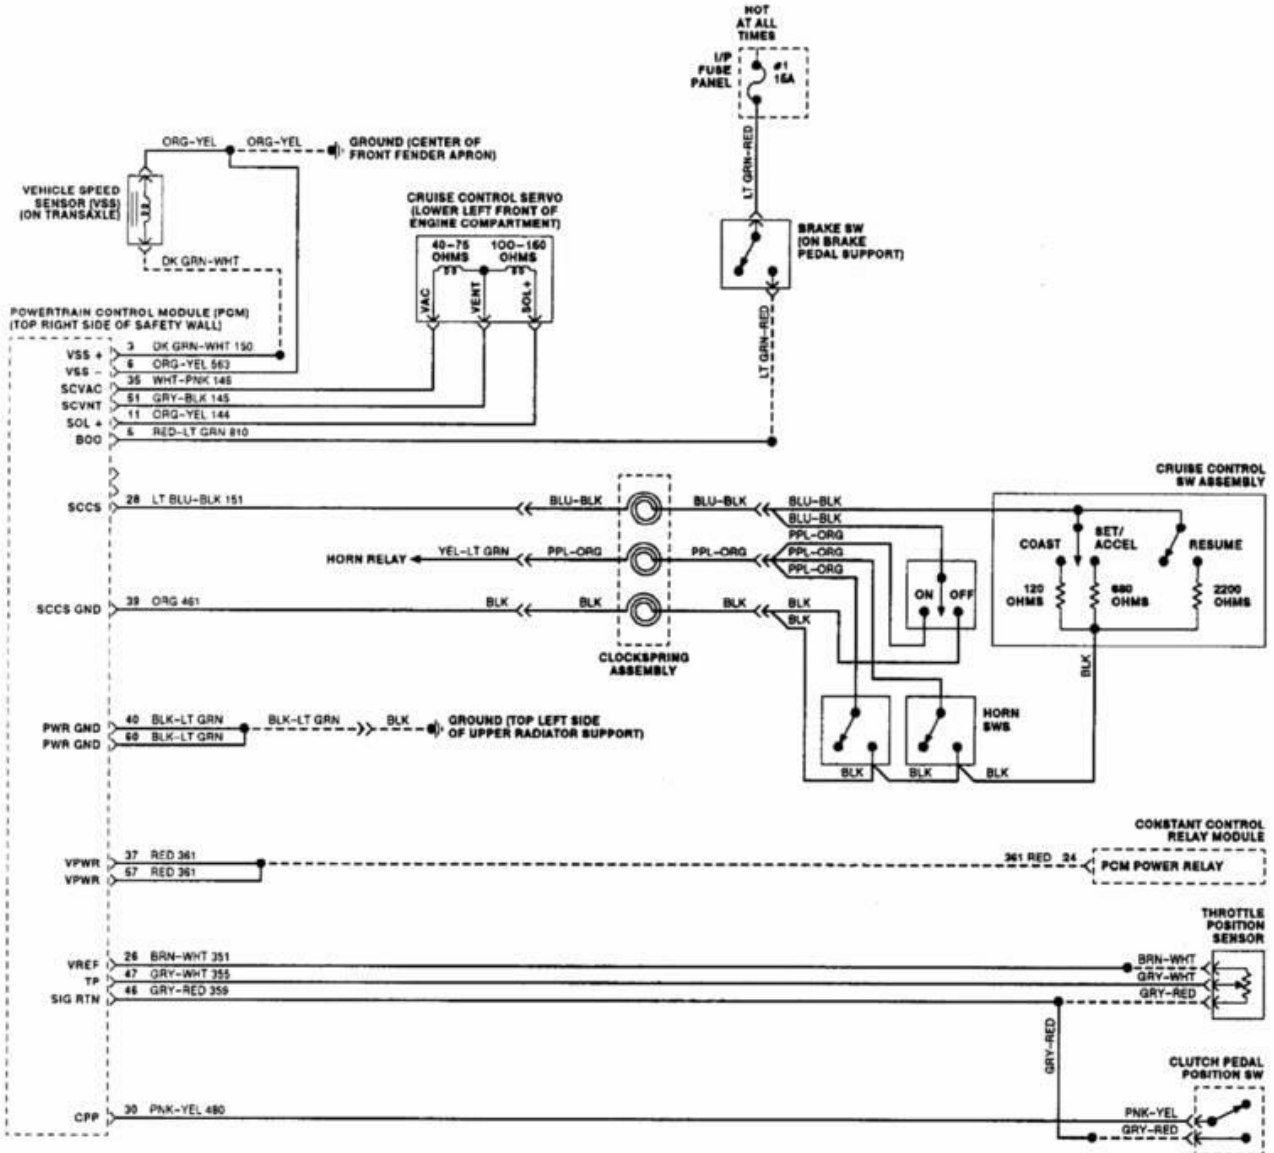


93G40424

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

Fig. 36: Cruise Control Sys. Wiring Diagram (3.2L SHO)  
1993 Ford Taurus LX

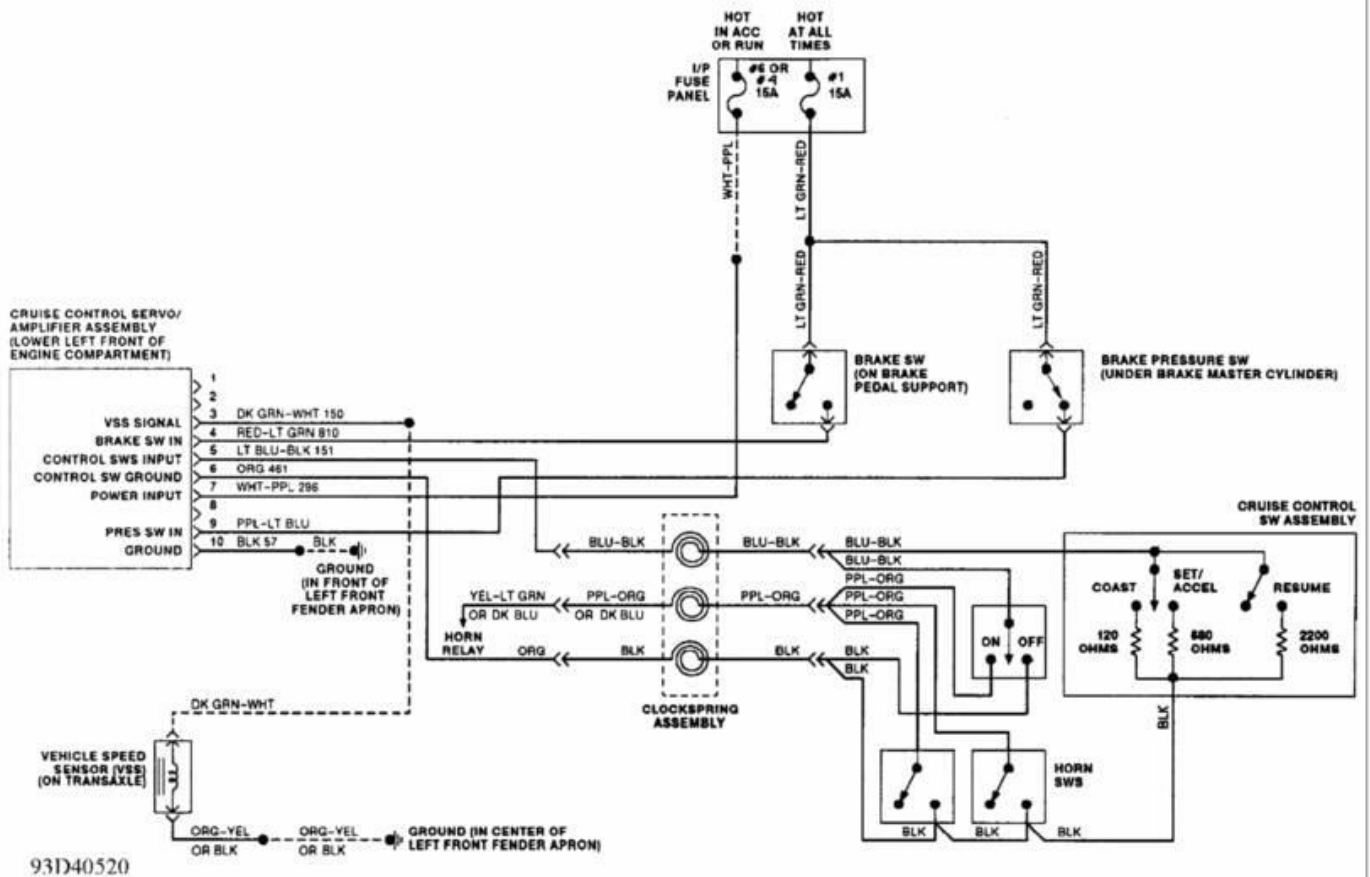


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 37: Electronic Instrument Cluster Wiring Diagram  
1993 Ford Taurus LX

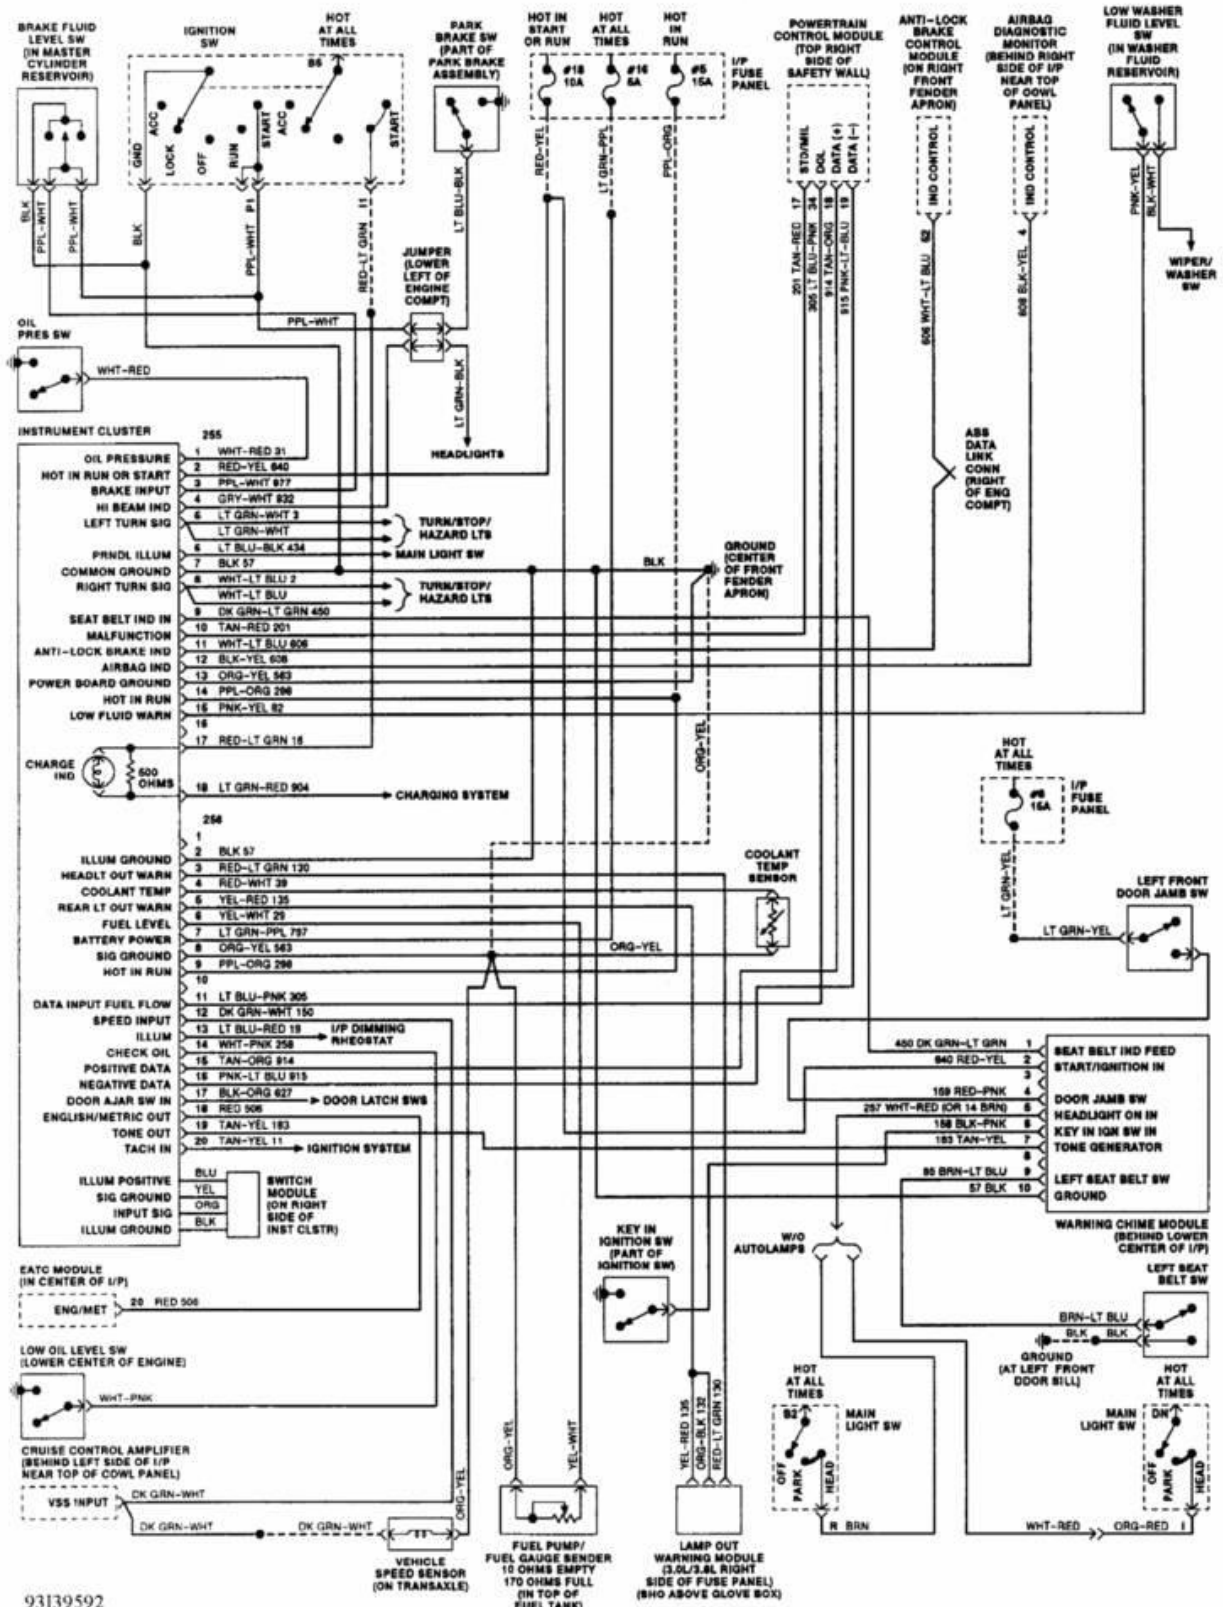


93139592

**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN

**Fig. 38: Exterior Lights (1 Of 17)**  
1993 Ford Taurus LX

**TAURUS/SABLE  
SEDAN WITHOUT  
LAMP OUT  
WARNING**

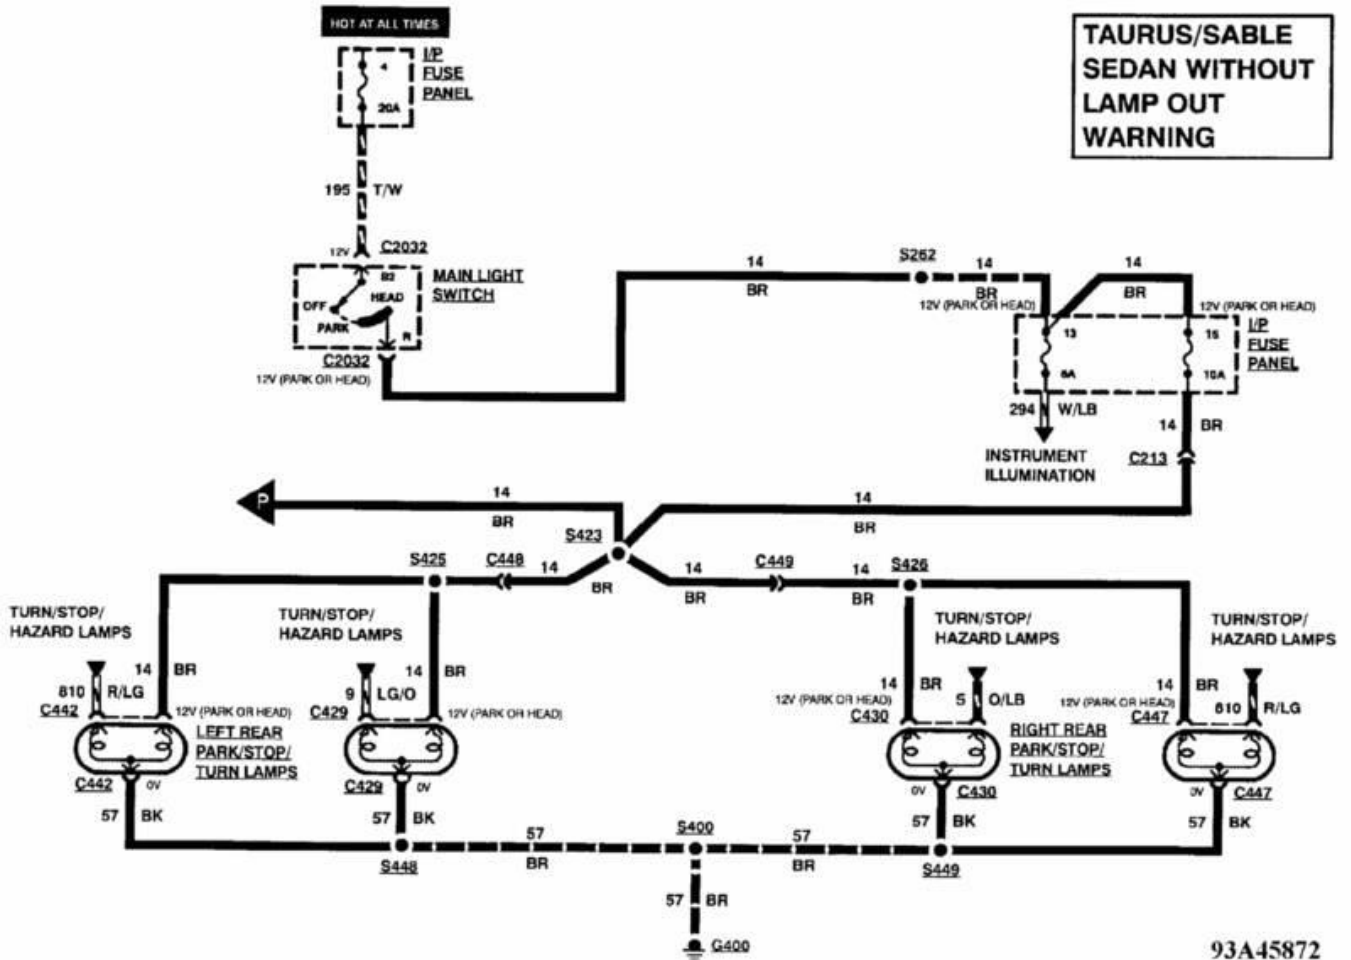


93A45872



**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 39: Exterior Lights (2 Of 17)**  
 1993 Ford Taurus LX

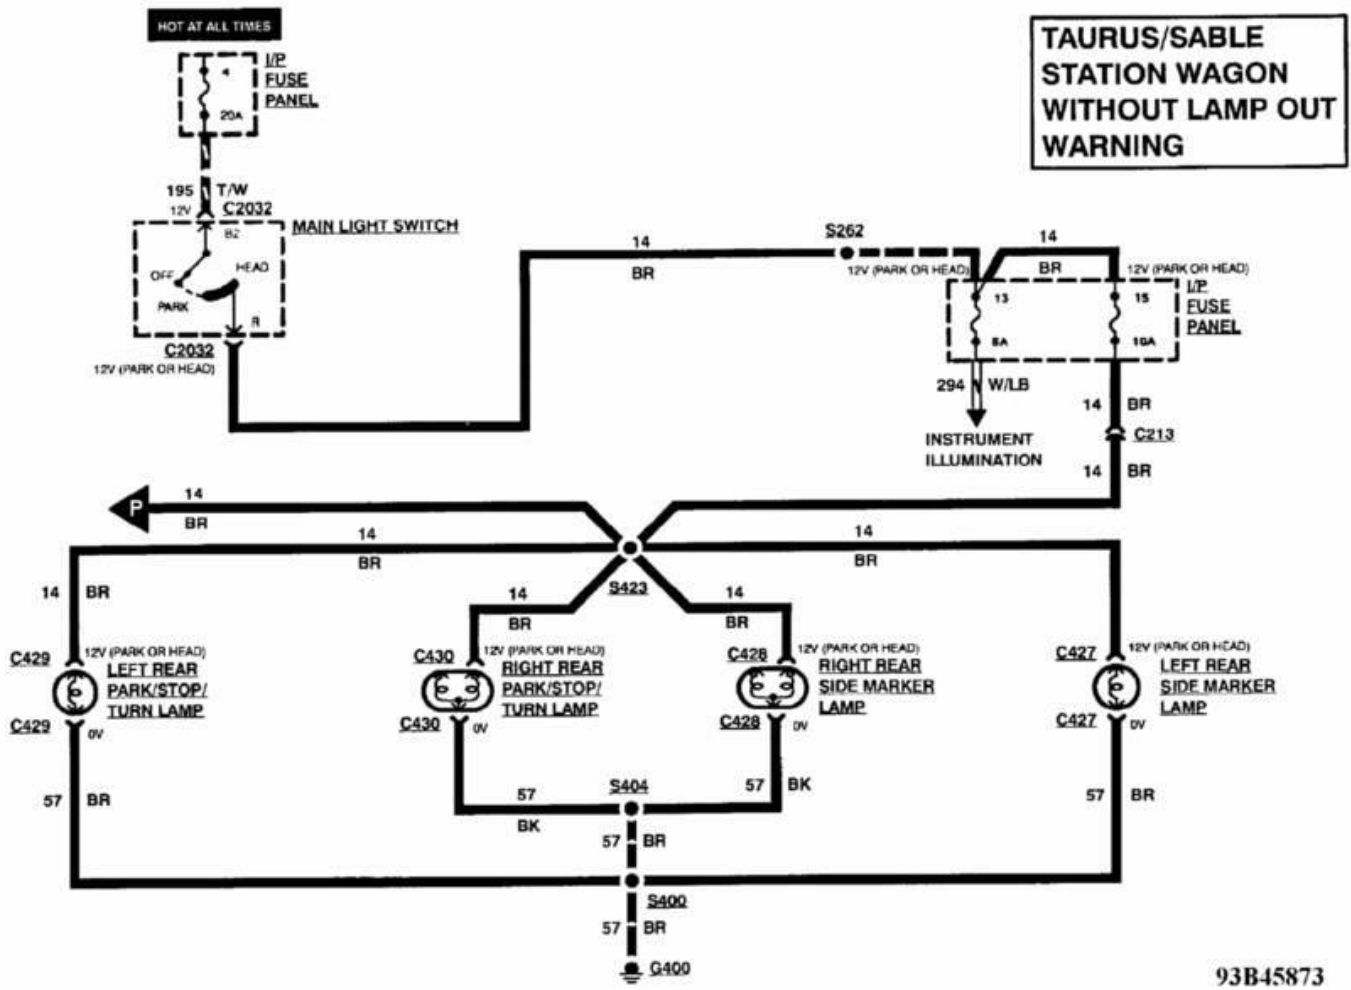

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 40: Exterior Lights (3 Of 17)**  
 1993 Ford Taurus LX

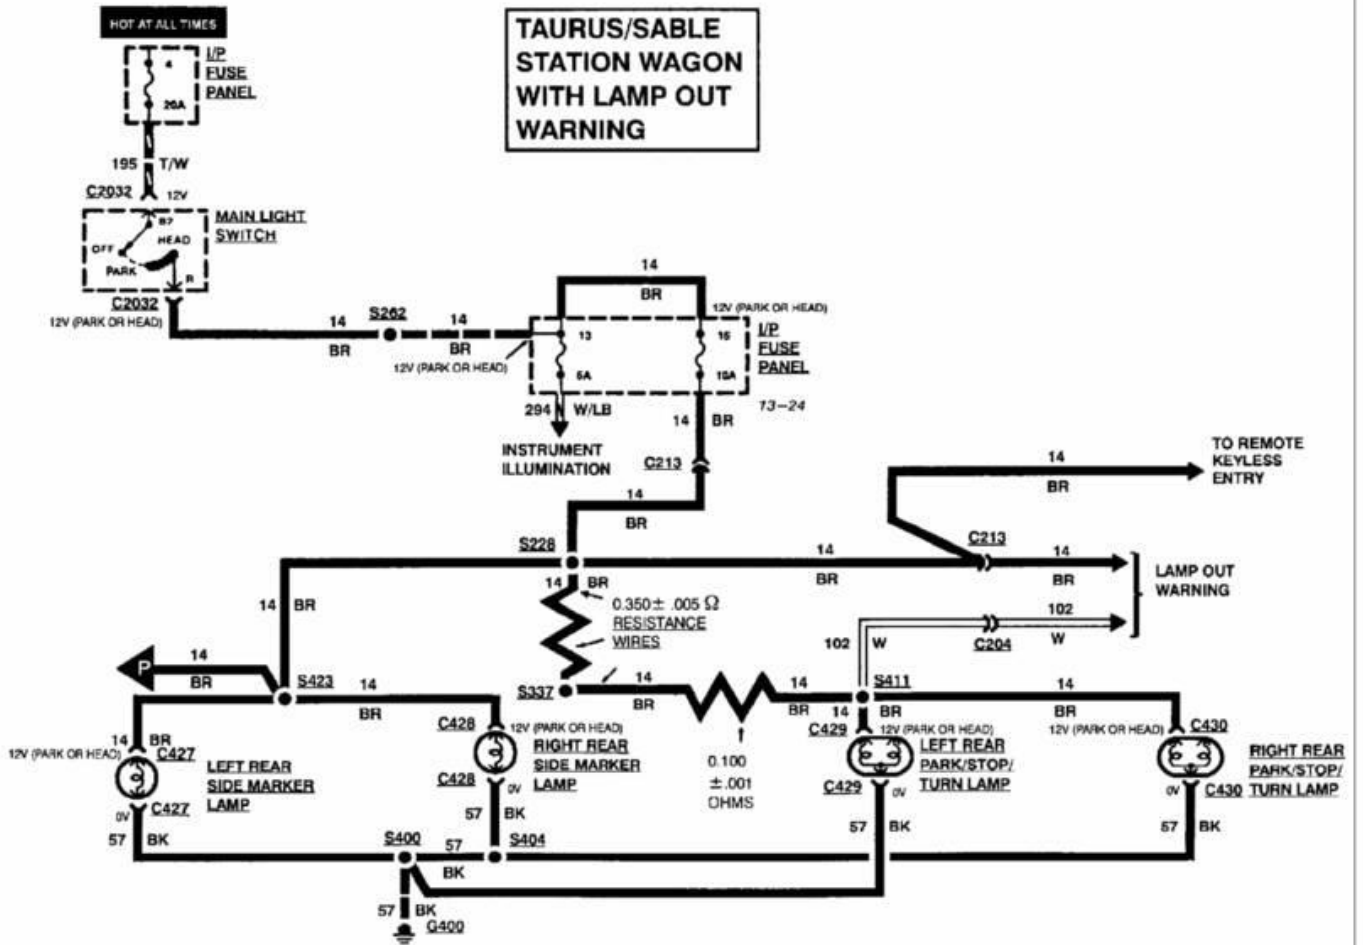


93C45874

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 41: Exterior Lights (4 Of 17)**  
 1993 Ford Taurus LX

**TAURUS/  
 SABLE SEDAN  
 WITH LAMP  
 OUT WARNING**

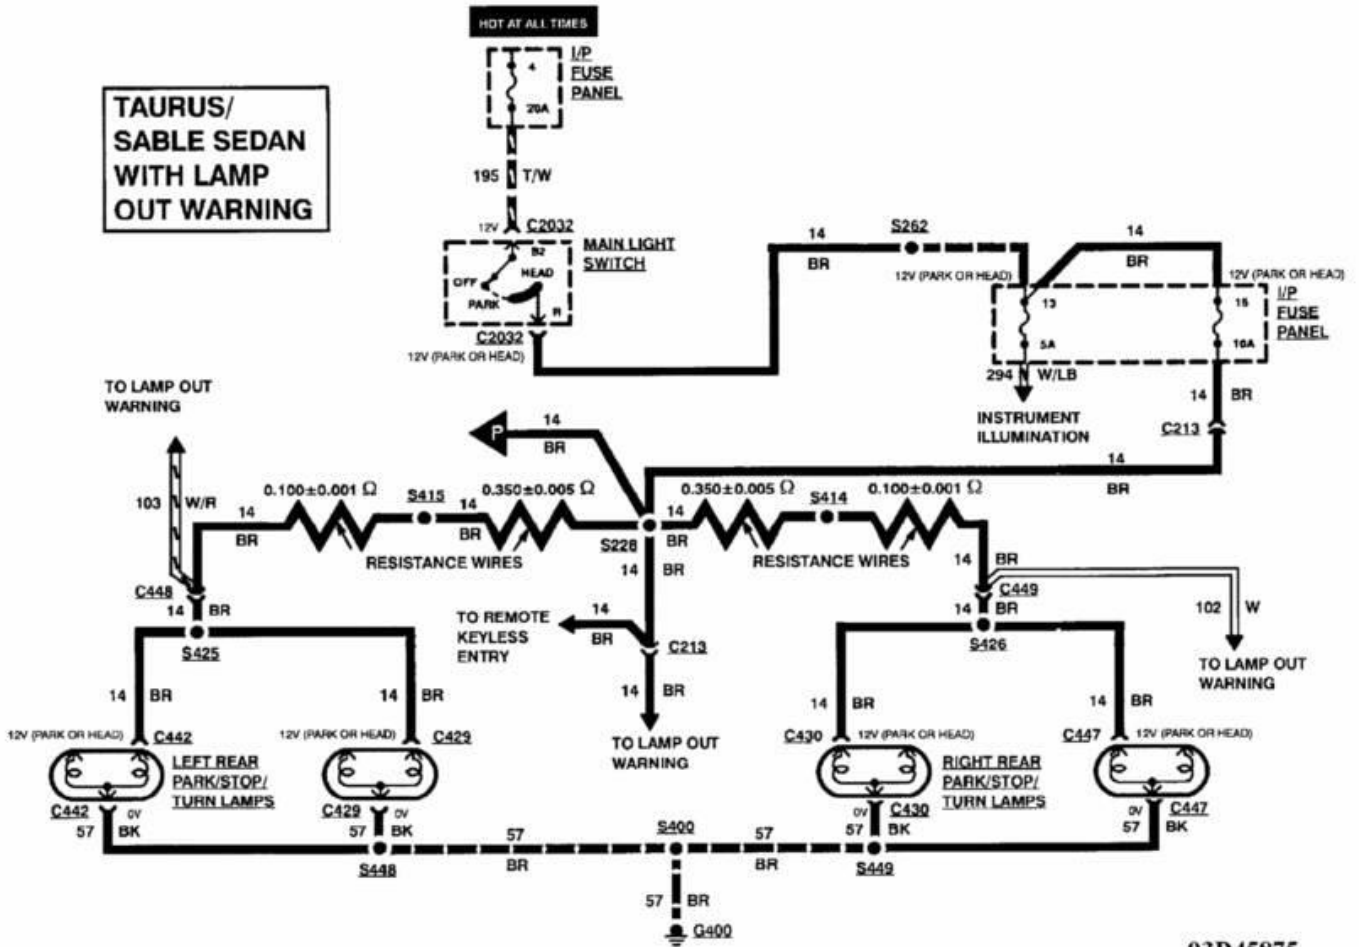


93D45875

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


**Fig. 42: Exterior Lights (5 Of 17)**  
1993 Ford Taurus LX

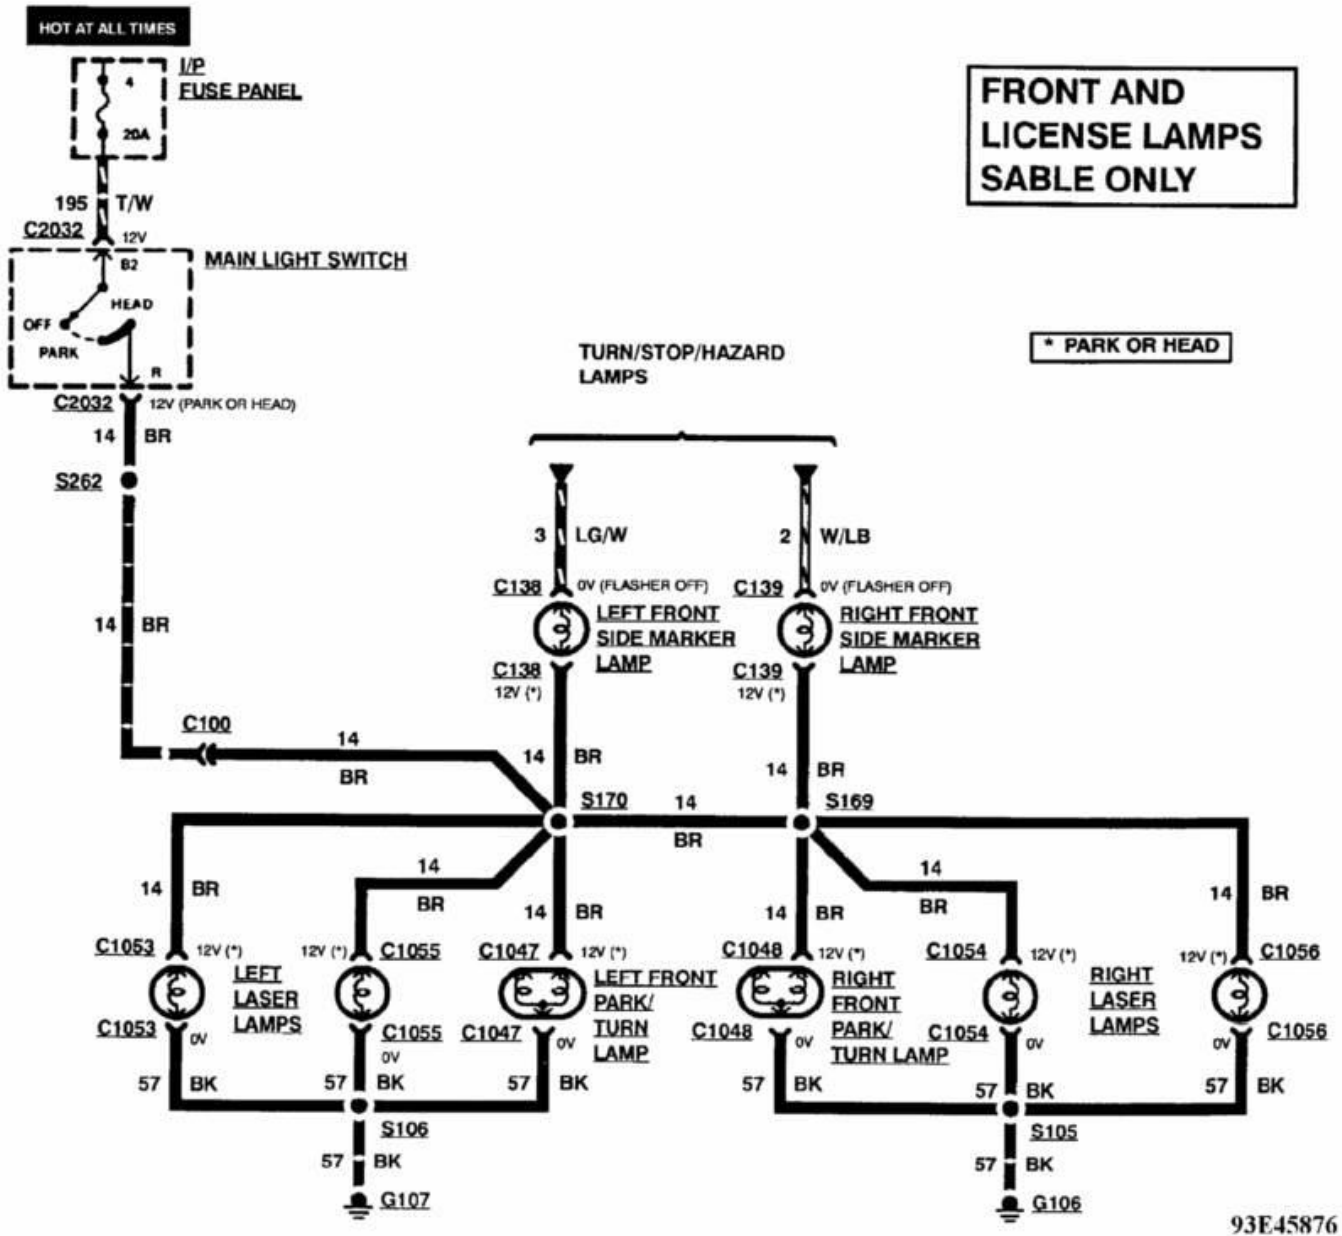

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 43: Exterior Lights (6 Of 17)**  
1993 Ford Taurus LX

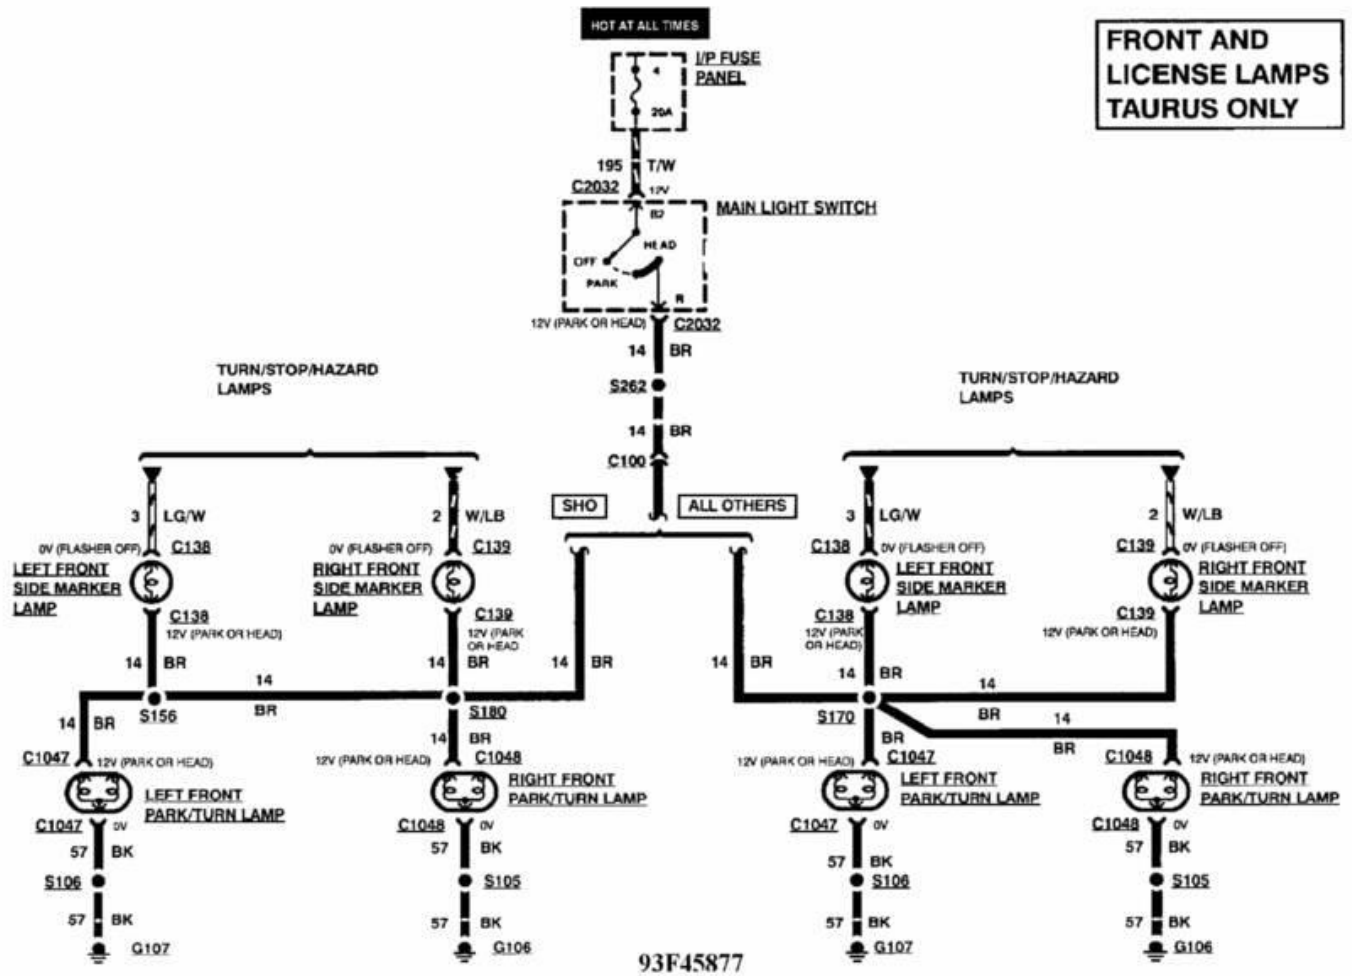

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 44: Exterior Lights (7 Of 17)**  
 1993 Ford Taurus LX

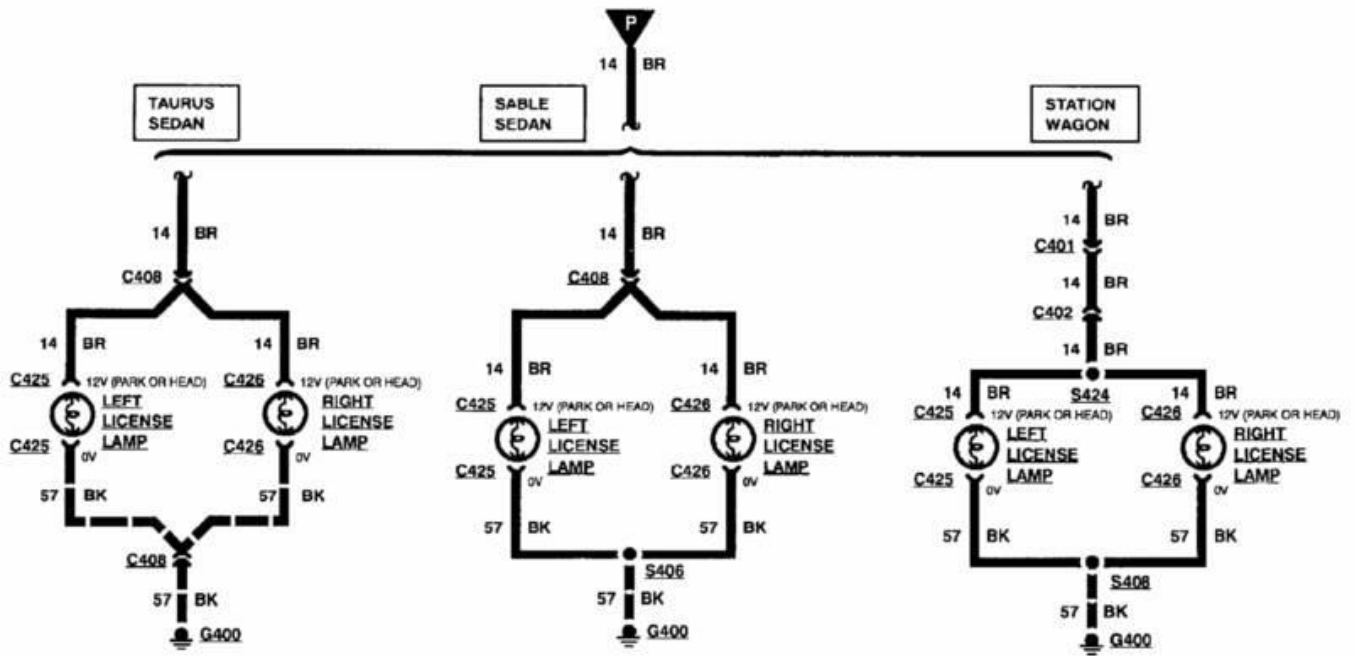


93G45878

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 45: Exterior Lights (8 Of 17)**  
1993 Ford Taurus LX

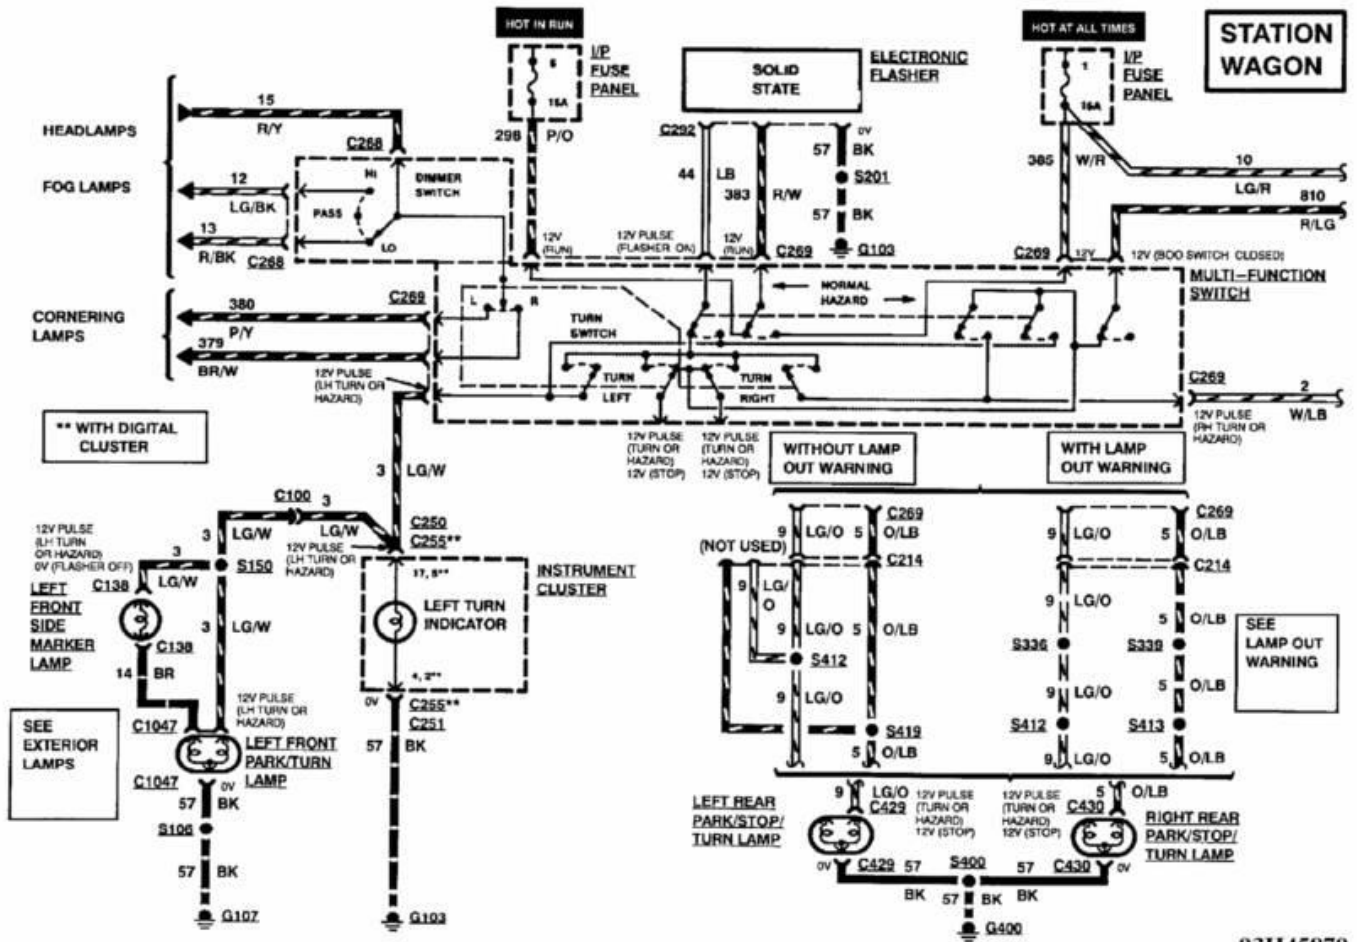


93H45879

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 46: Exterior Lights (9 Of 17)**  
1993 Ford Taurus LX

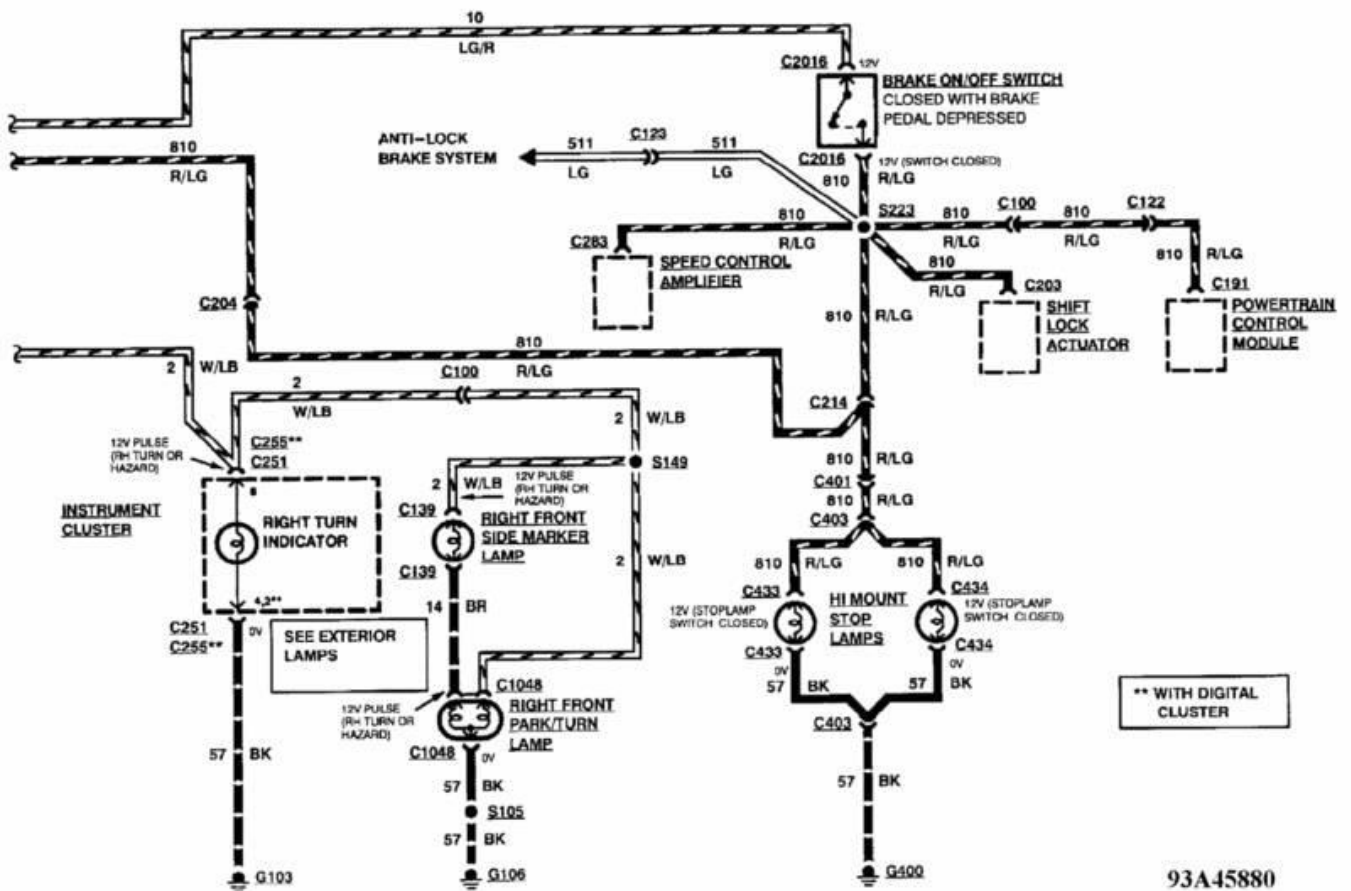






**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN


**Fig. 48: Exterior Lights (11 Of 17)**  
 1993 Ford Taurus LX

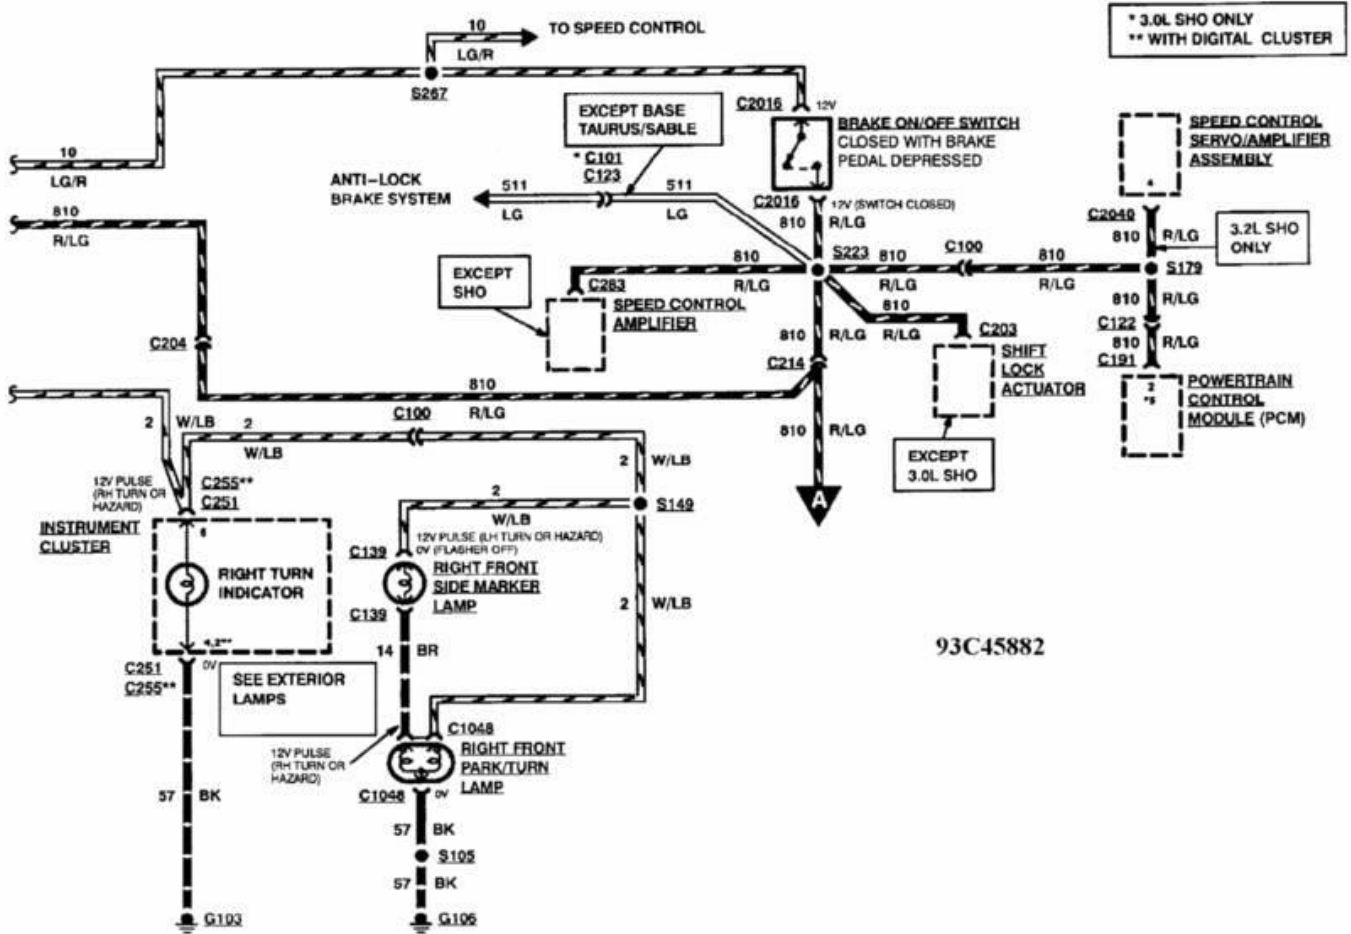

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 49: Exterior Lights (12 Of 17)**  
 1993 Ford Taurus LX

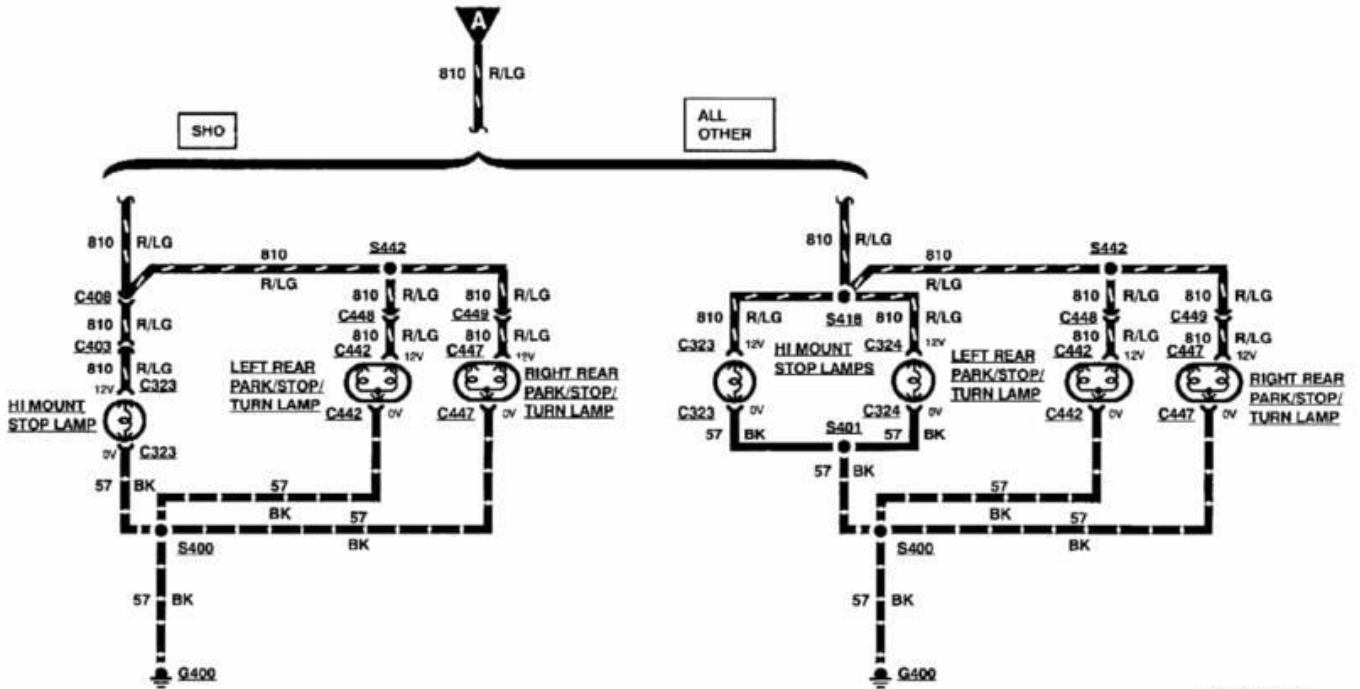


93D45883

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 50: Exterior Lights (13 Of 17)**  
 1993 Ford Taurus LX

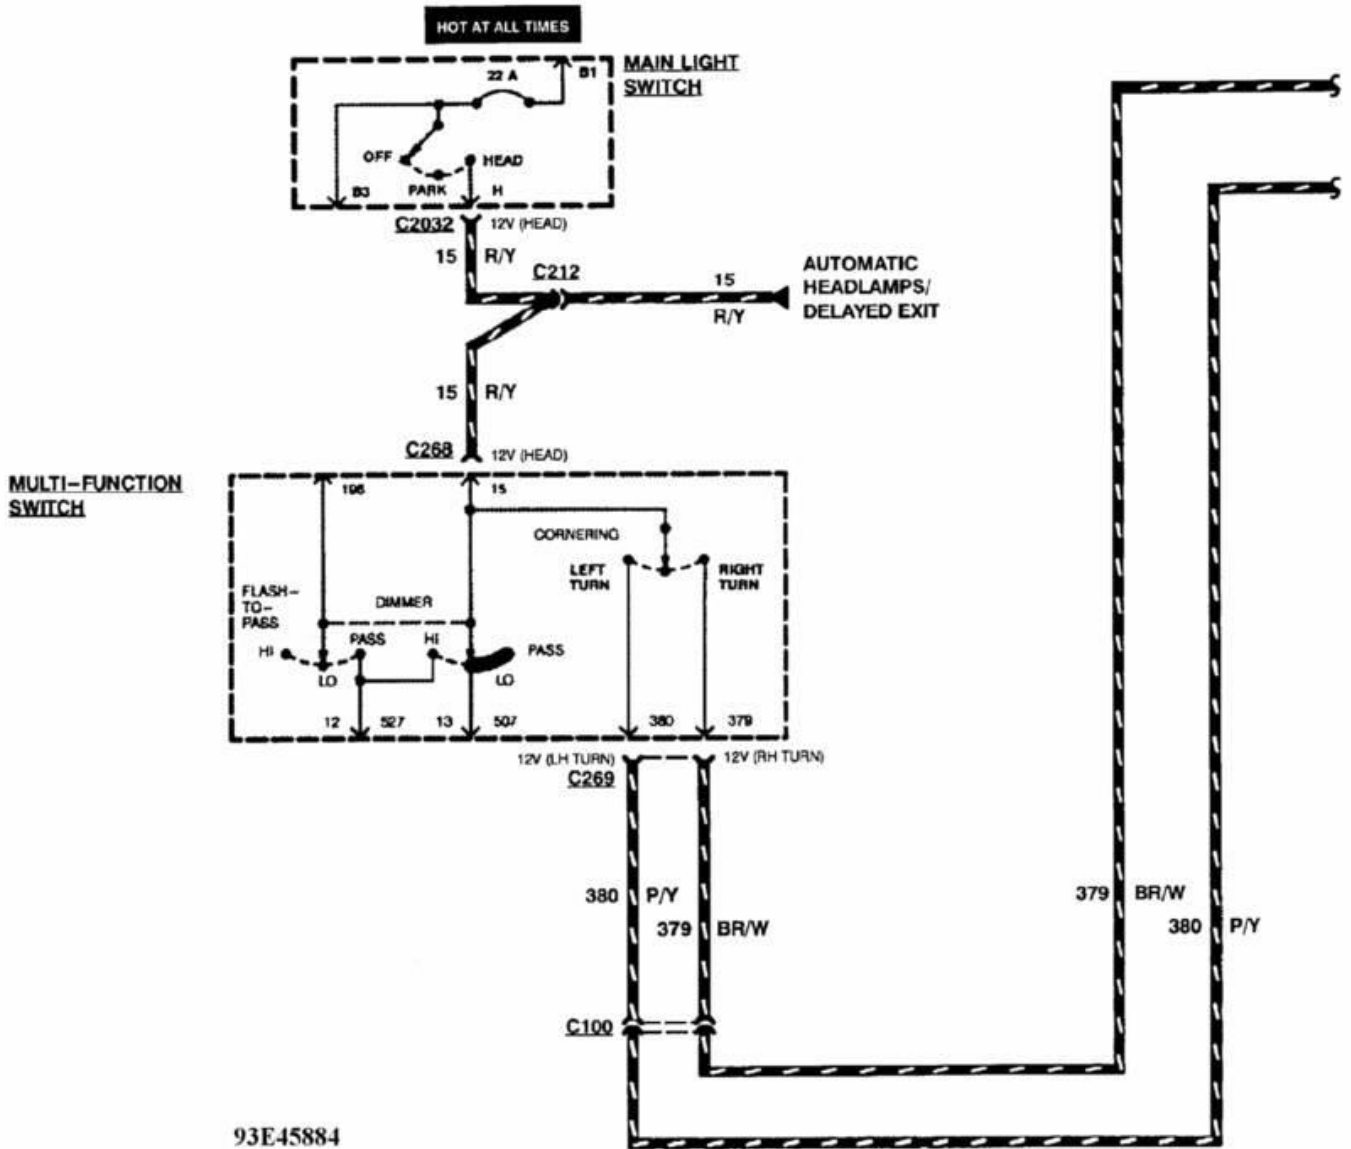

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 51: Exterior Lights (14 Of 17)**  
1993 Ford Taurus LX

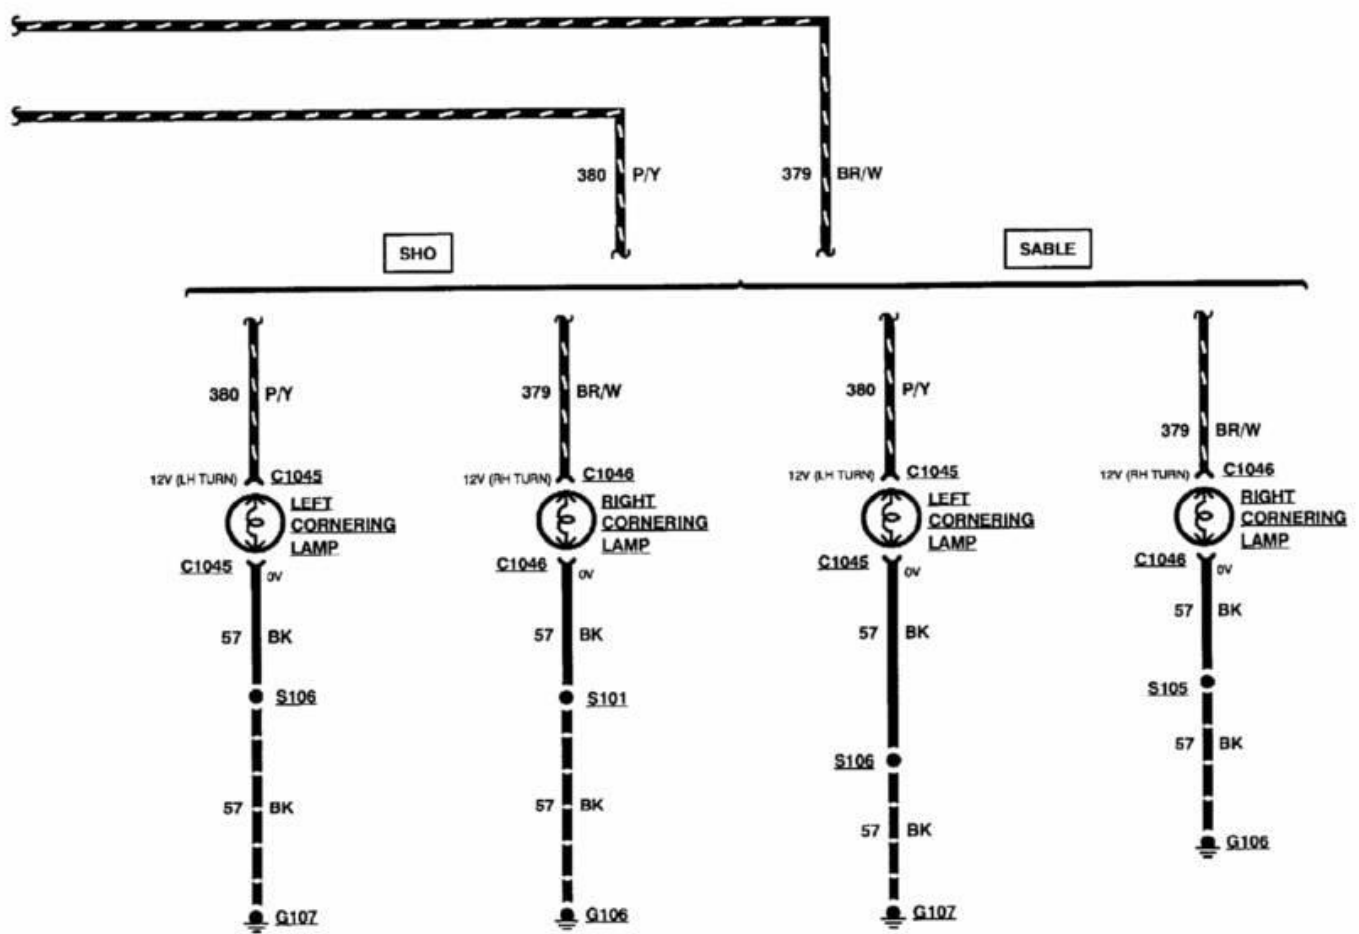


93F45885

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 52: Exterior Lights (15 Of 17)**  
 1993 Ford Taurus LX

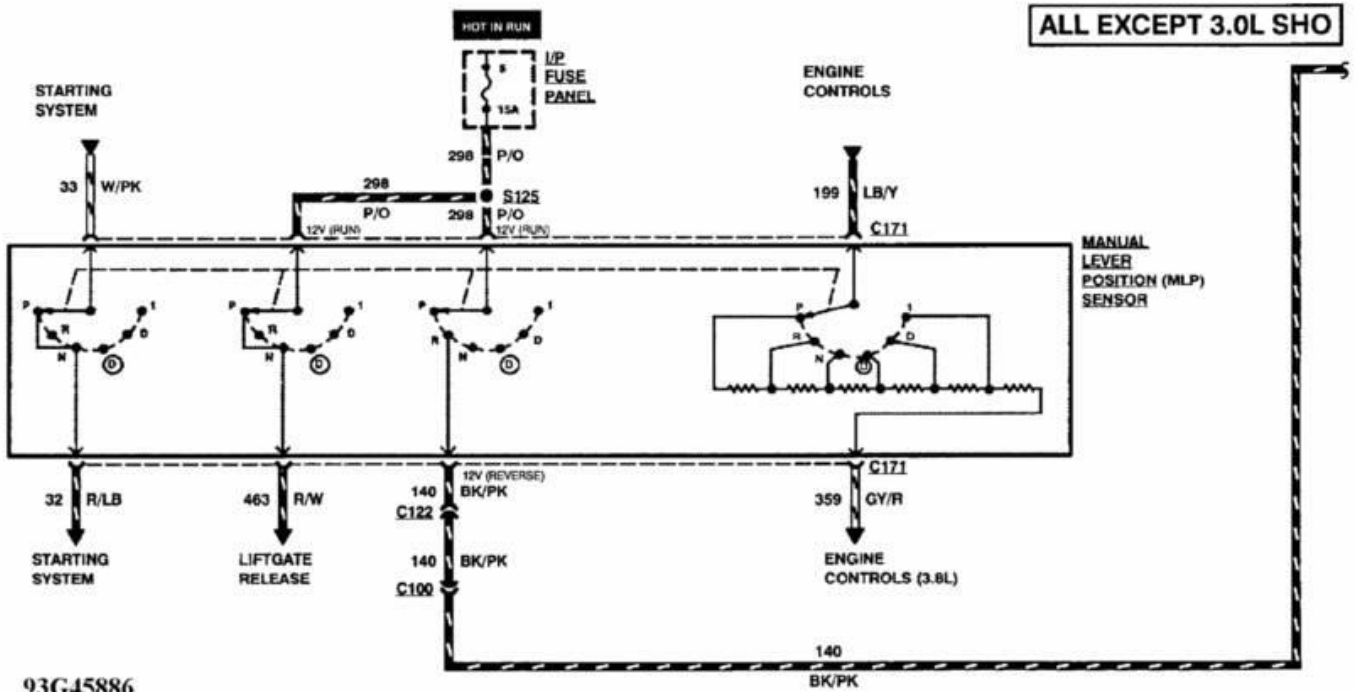


93G45886

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


**Fig. 53: Exterior Lights (16 Of 17)**  
1993 Ford Taurus LX

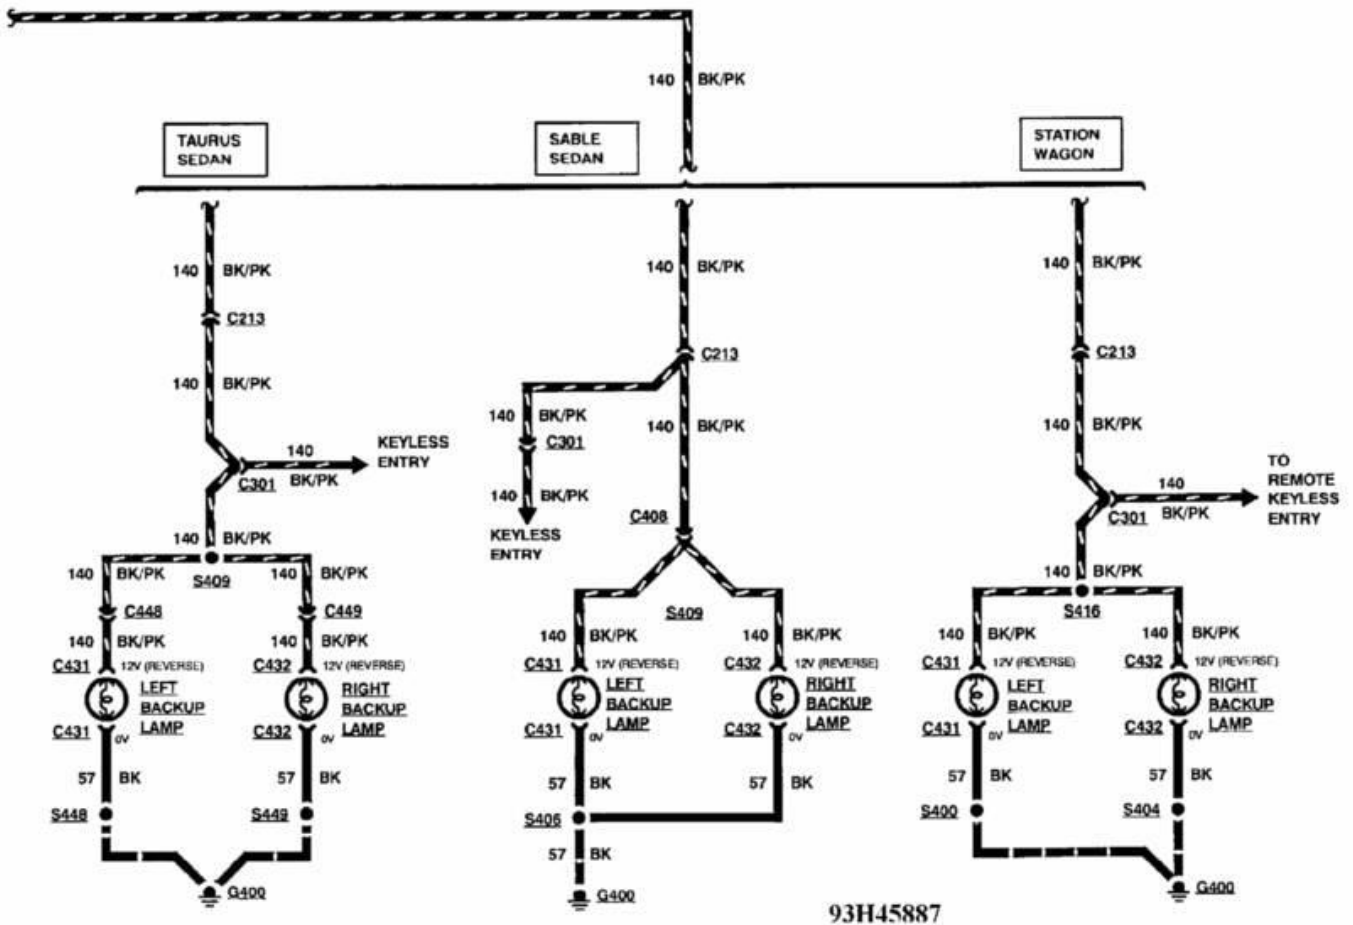

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 54: Exterior Lights (17 Of 17)  
1993 Ford Taurus LX

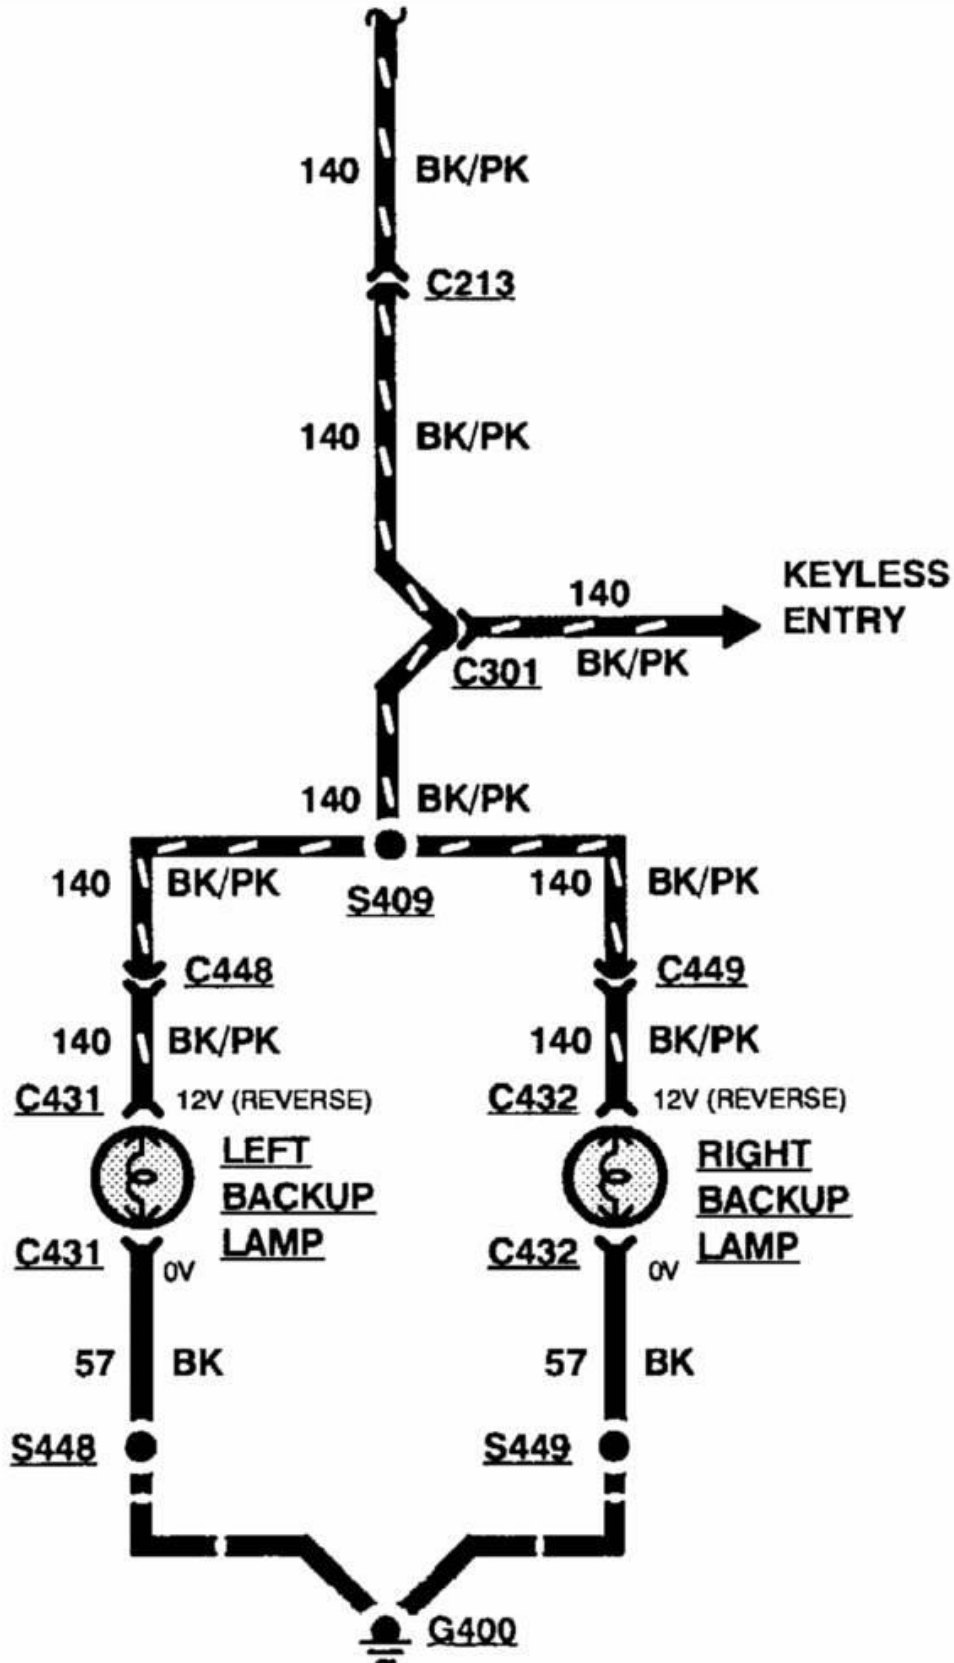


93D45891



**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN


**Fig. 55: Remote Keyless Entry With Power Door Locks (1 Of 5)**  
 1993 Ford Taurus LX

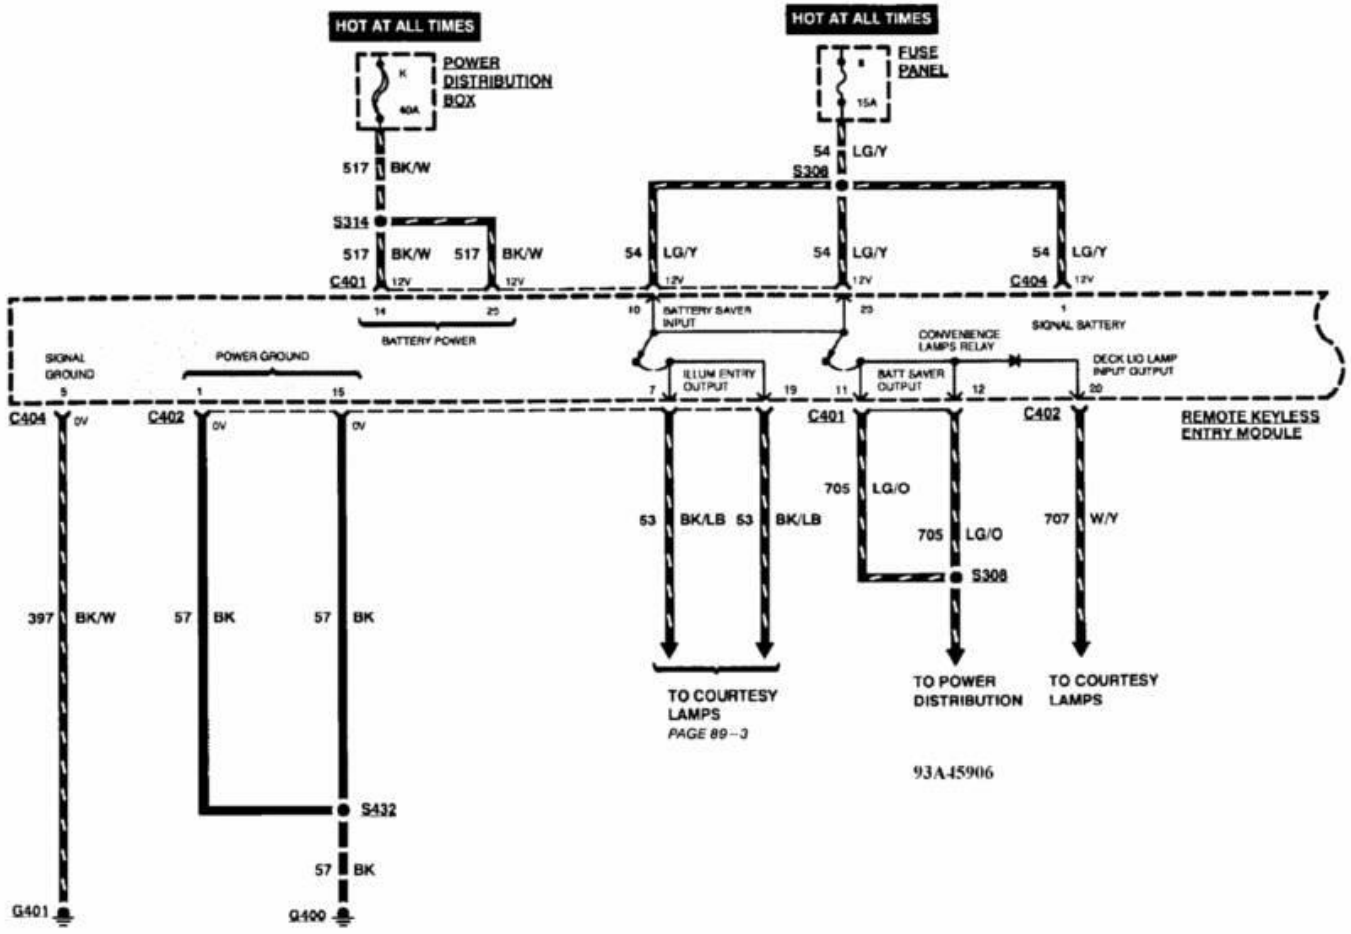

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 56: Remote Keyless Entry With Power Door Locks (2 Of 5)**  
 1993 Ford Taurus LX

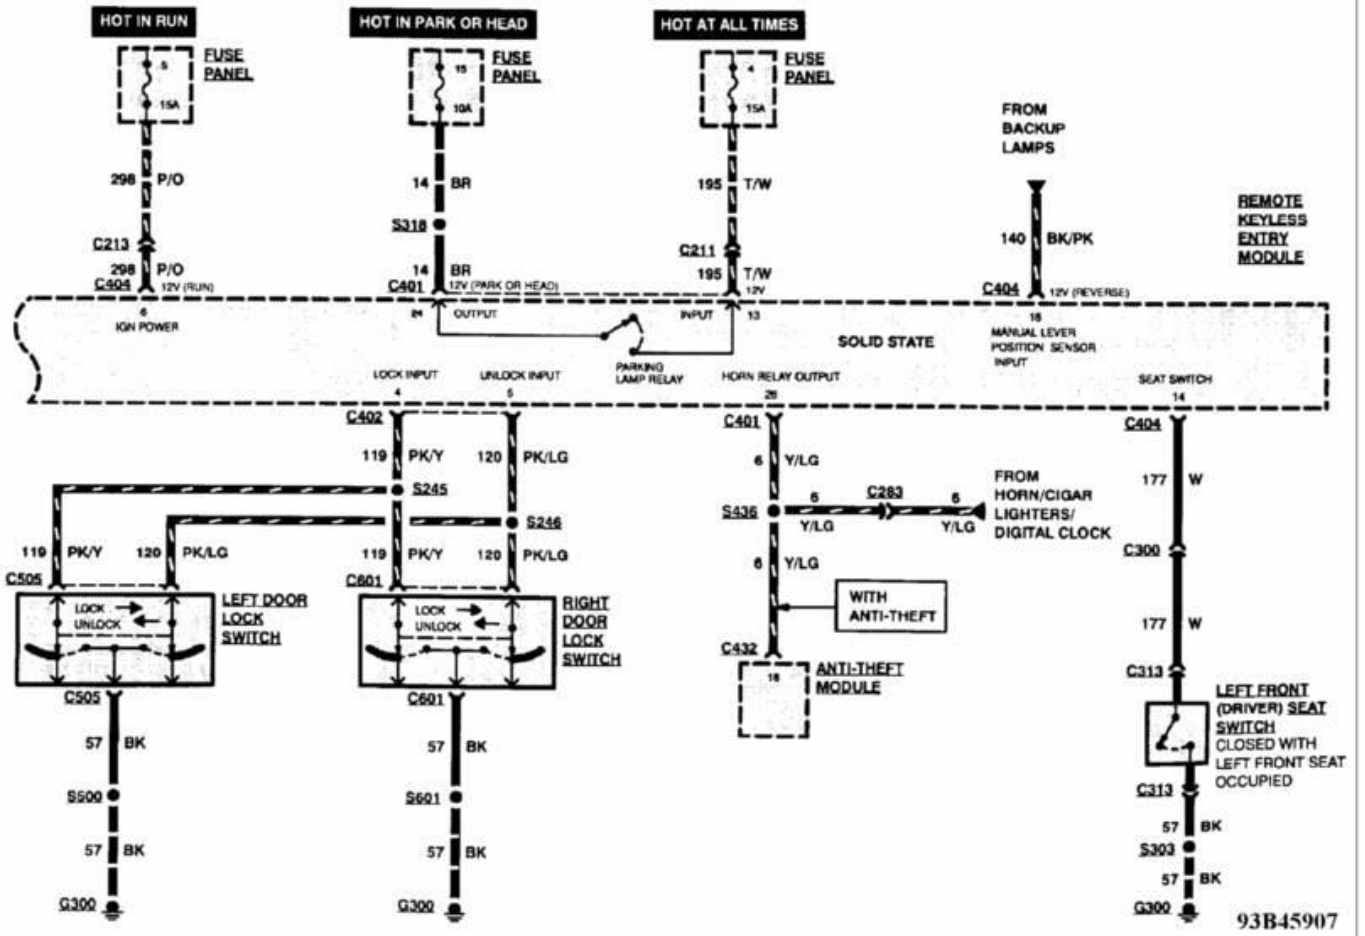

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 57: Remote Keyless Entry With Power Door Locks (3 Of 5)**  
 1993 Ford Taurus LX

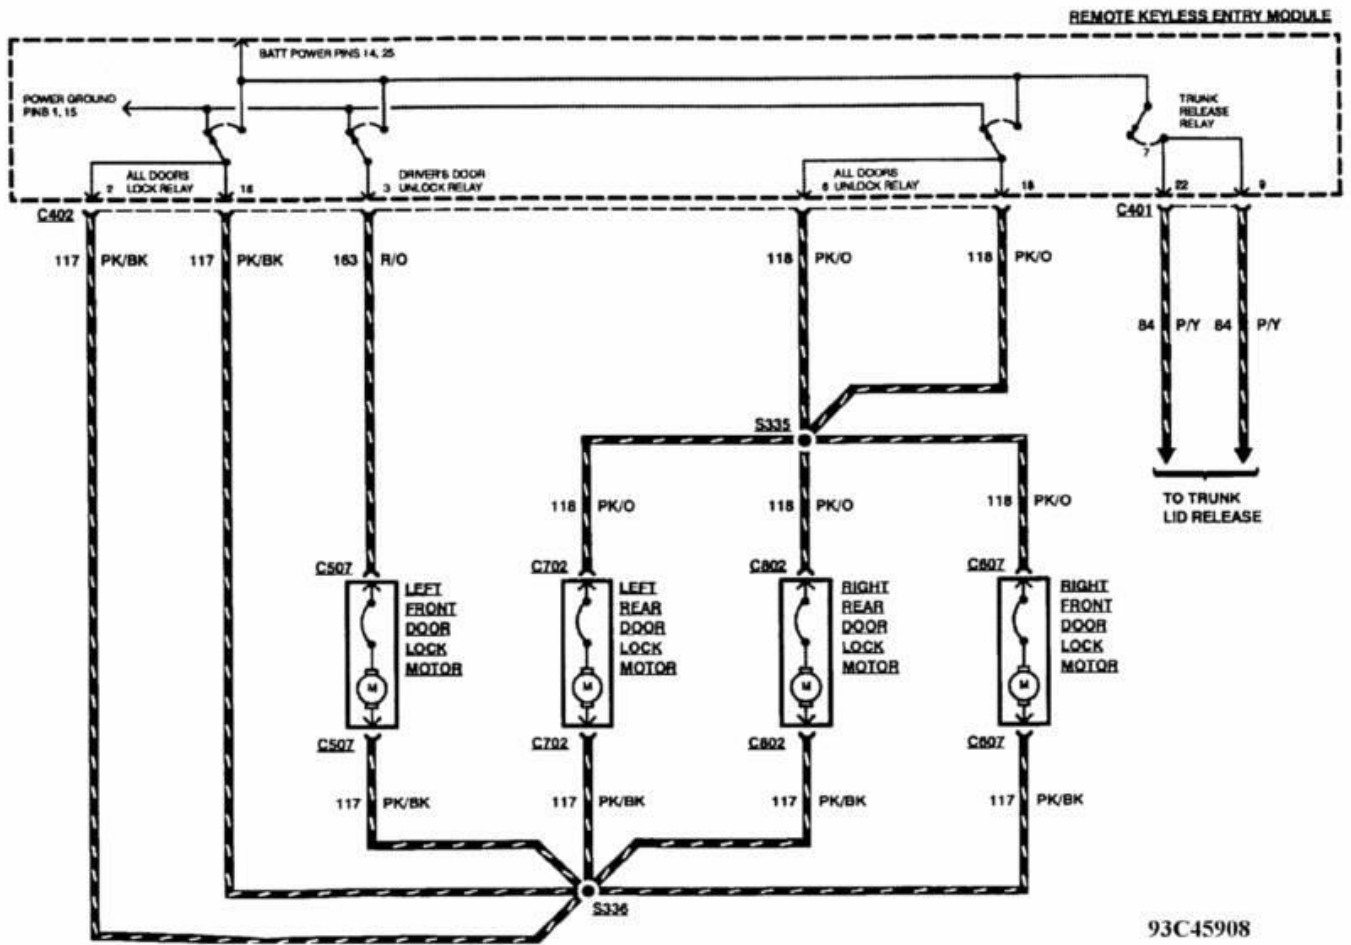


93C45908

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 58: Remote Keyless Entry With Power Door Locks (4 Of 5)**  
 1993 Ford Taurus LX


**REMOTE KEYLESS ENTRY MODULE**

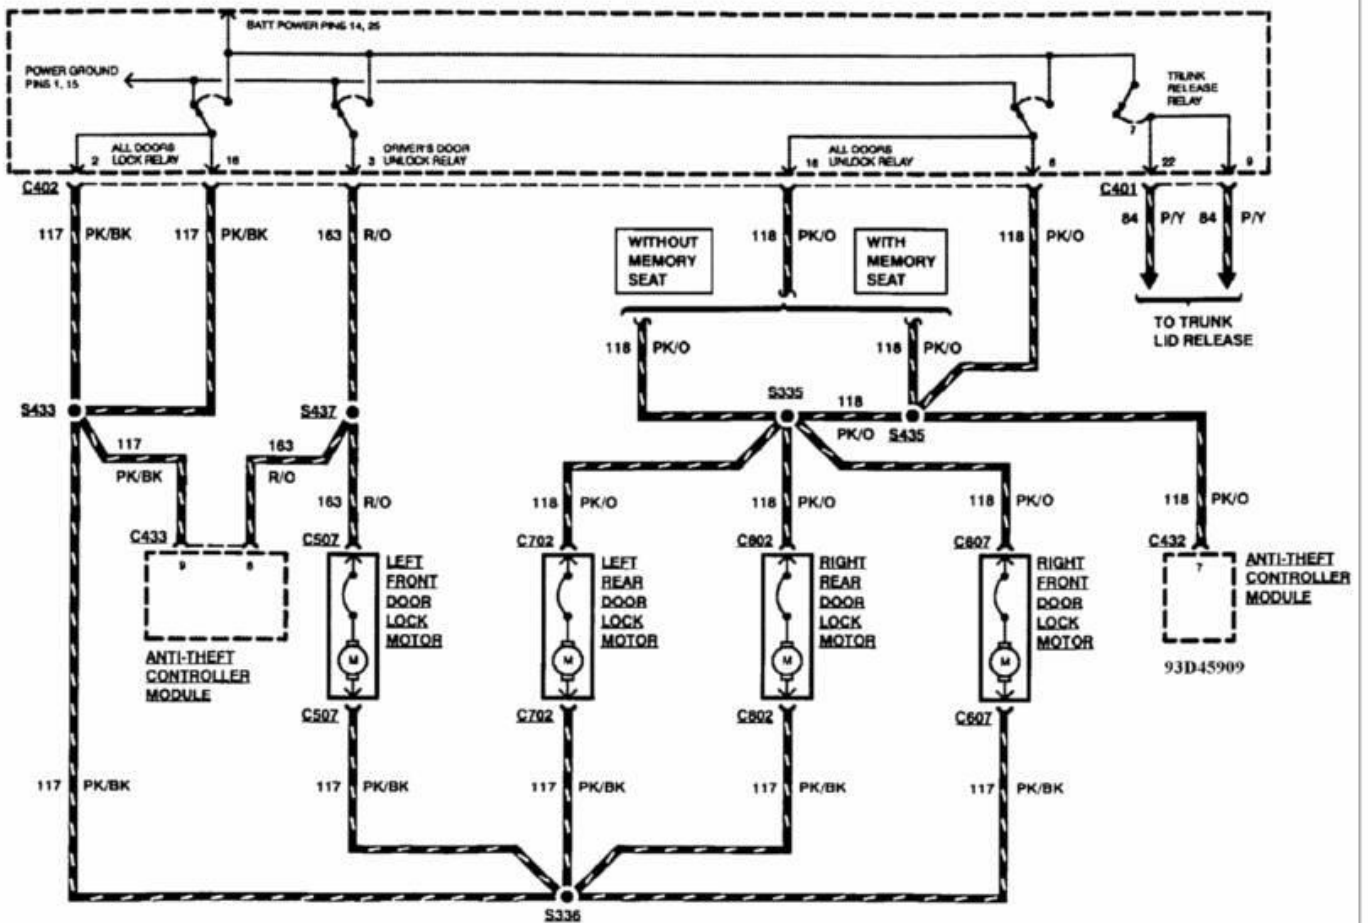

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 59: Remote Keyless Entry With Power Door Locks (5 Of 5)**  
1993 Ford Taurus LX

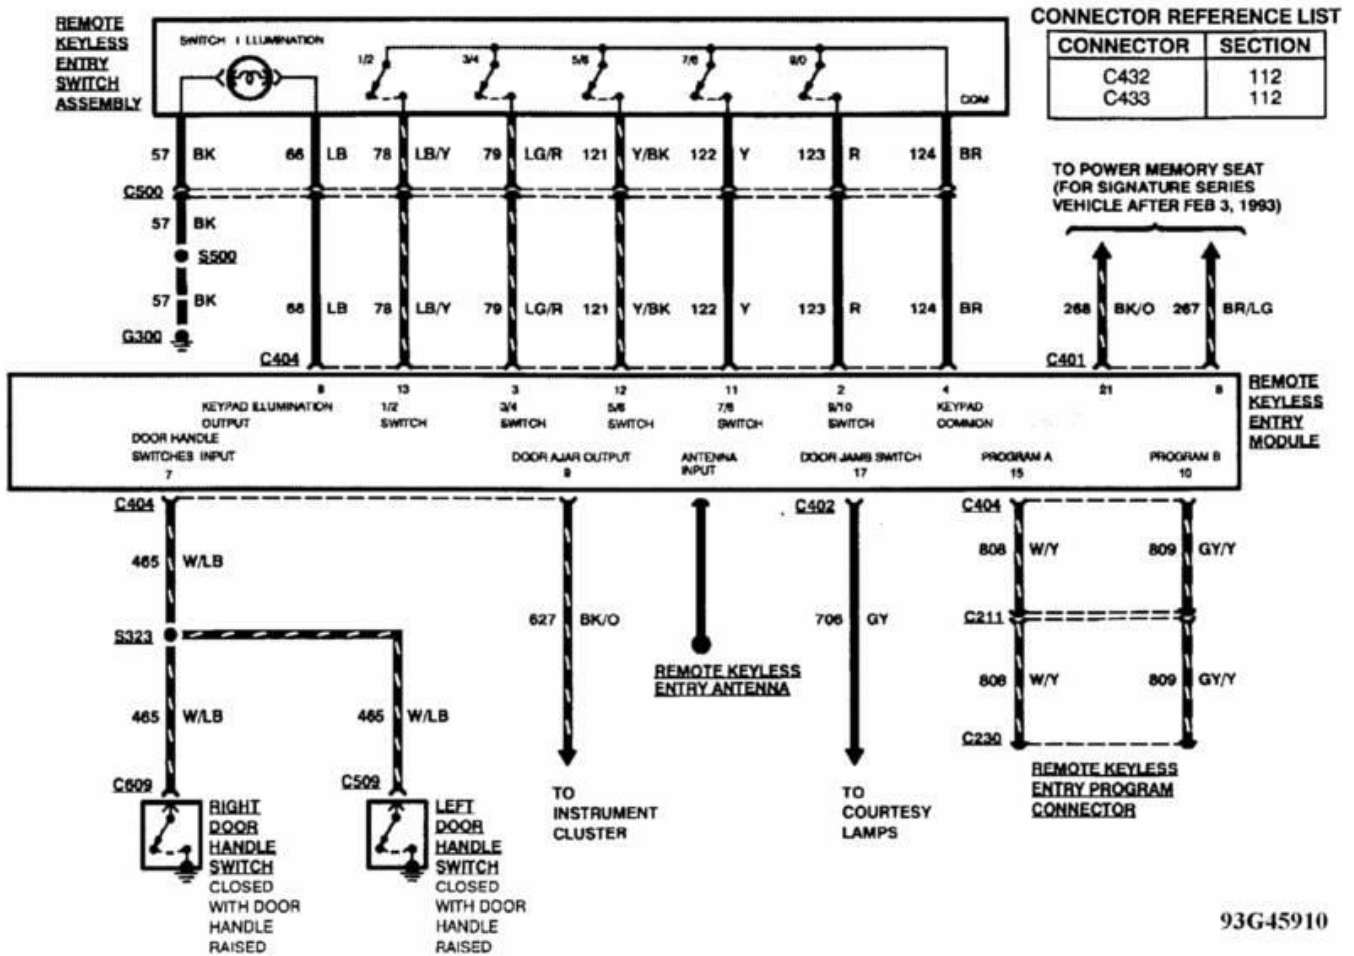


93G45910

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 60: Remote Keyless Entry Wiring Diagram (1 Of 4)**  
1993 Ford Taurus LX

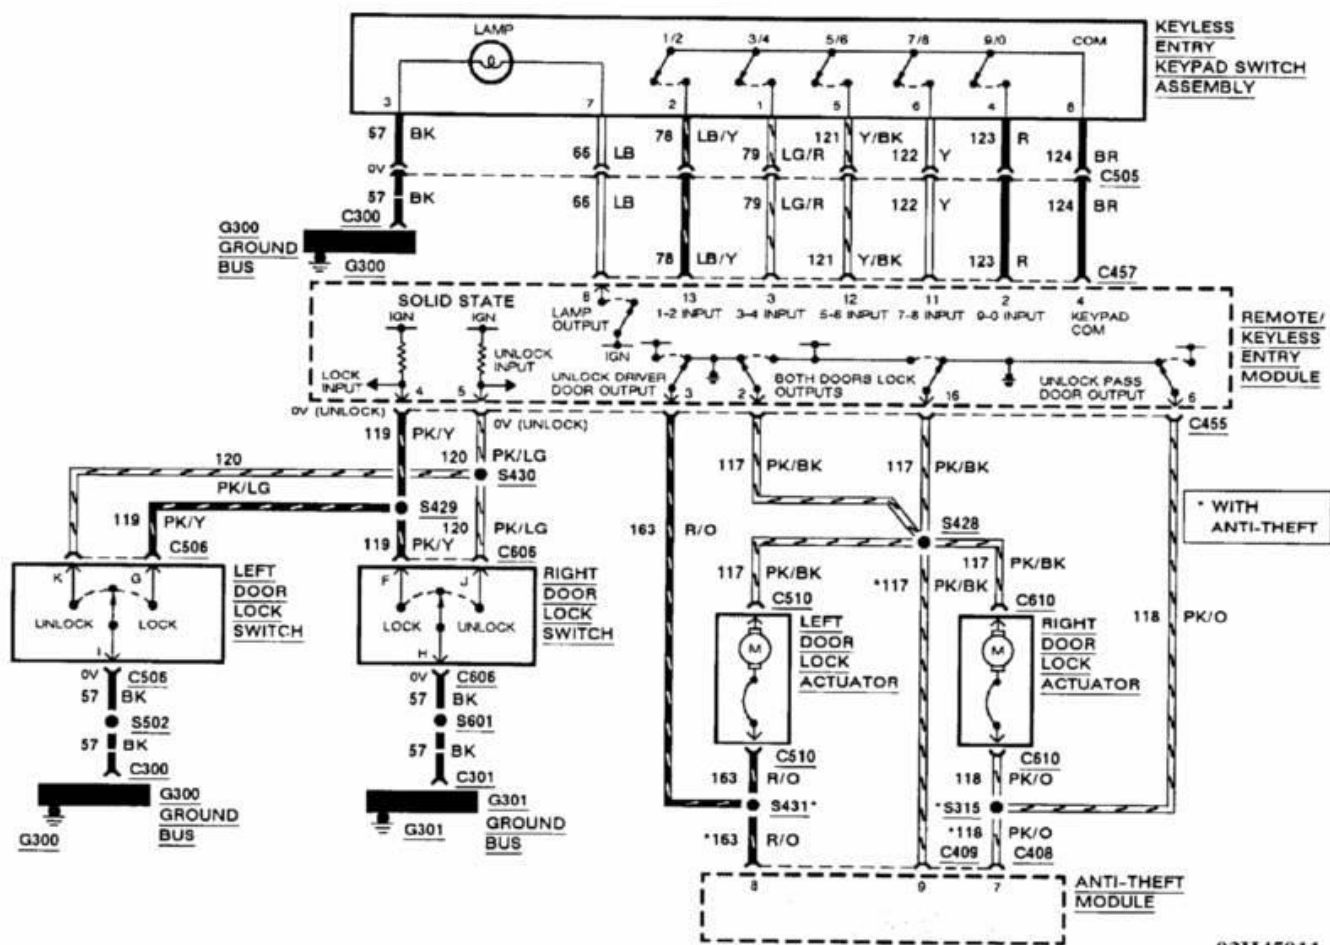


93H45911

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 61: Remote Keyless Entry Wiring Diagram (2 Of 4)**  
1993 Ford Taurus LX

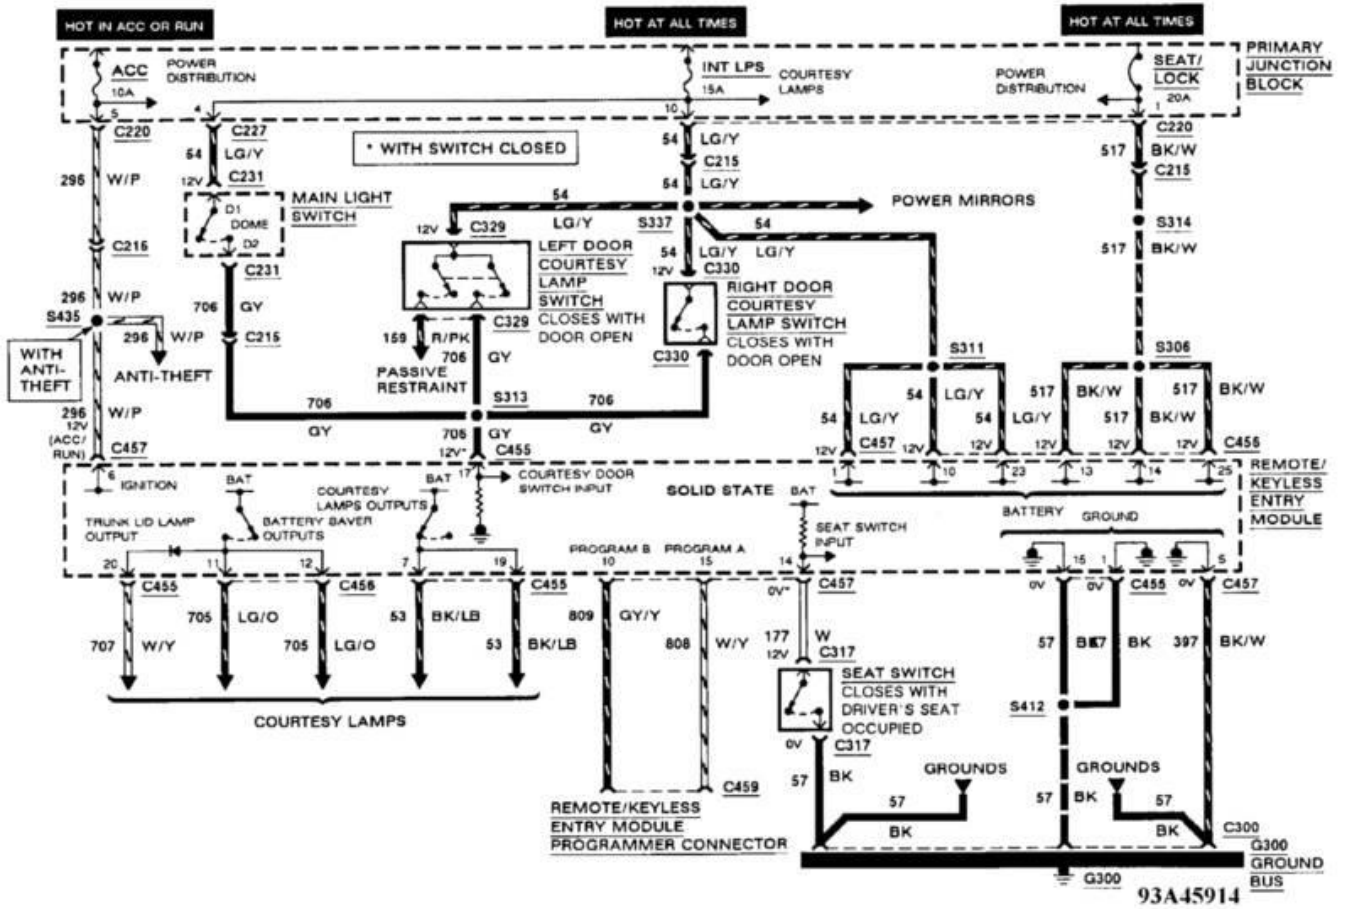

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 62: Remote Keyless Entry Wiring Diagram (3 Of 4)**  
1993 Ford Taurus LX

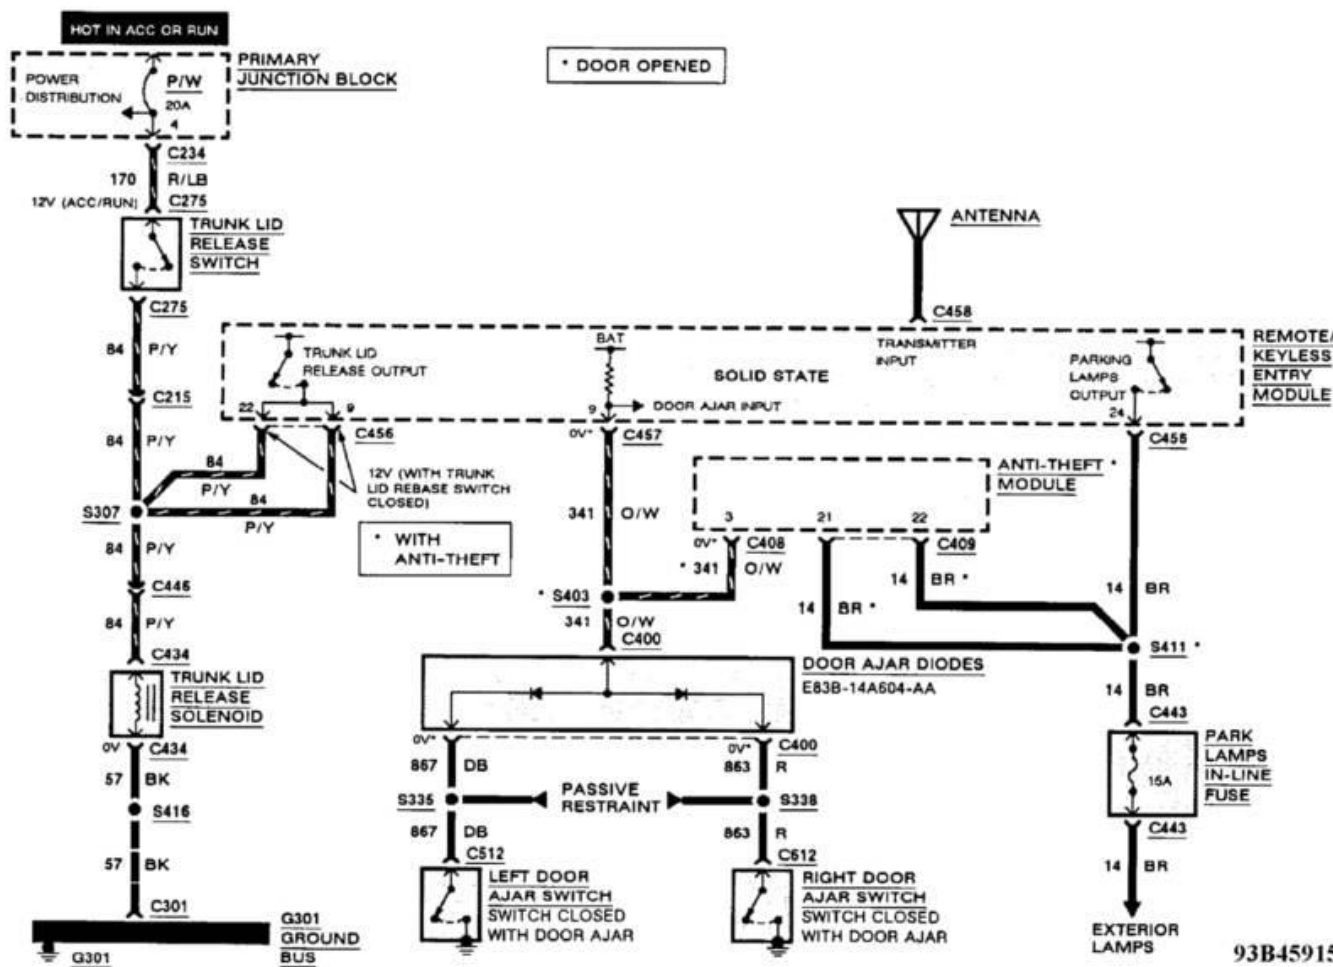




**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 63: Remote Keyless Entry Wiring Diagram (4 Of 4)**  
 1993 Ford Taurus LX

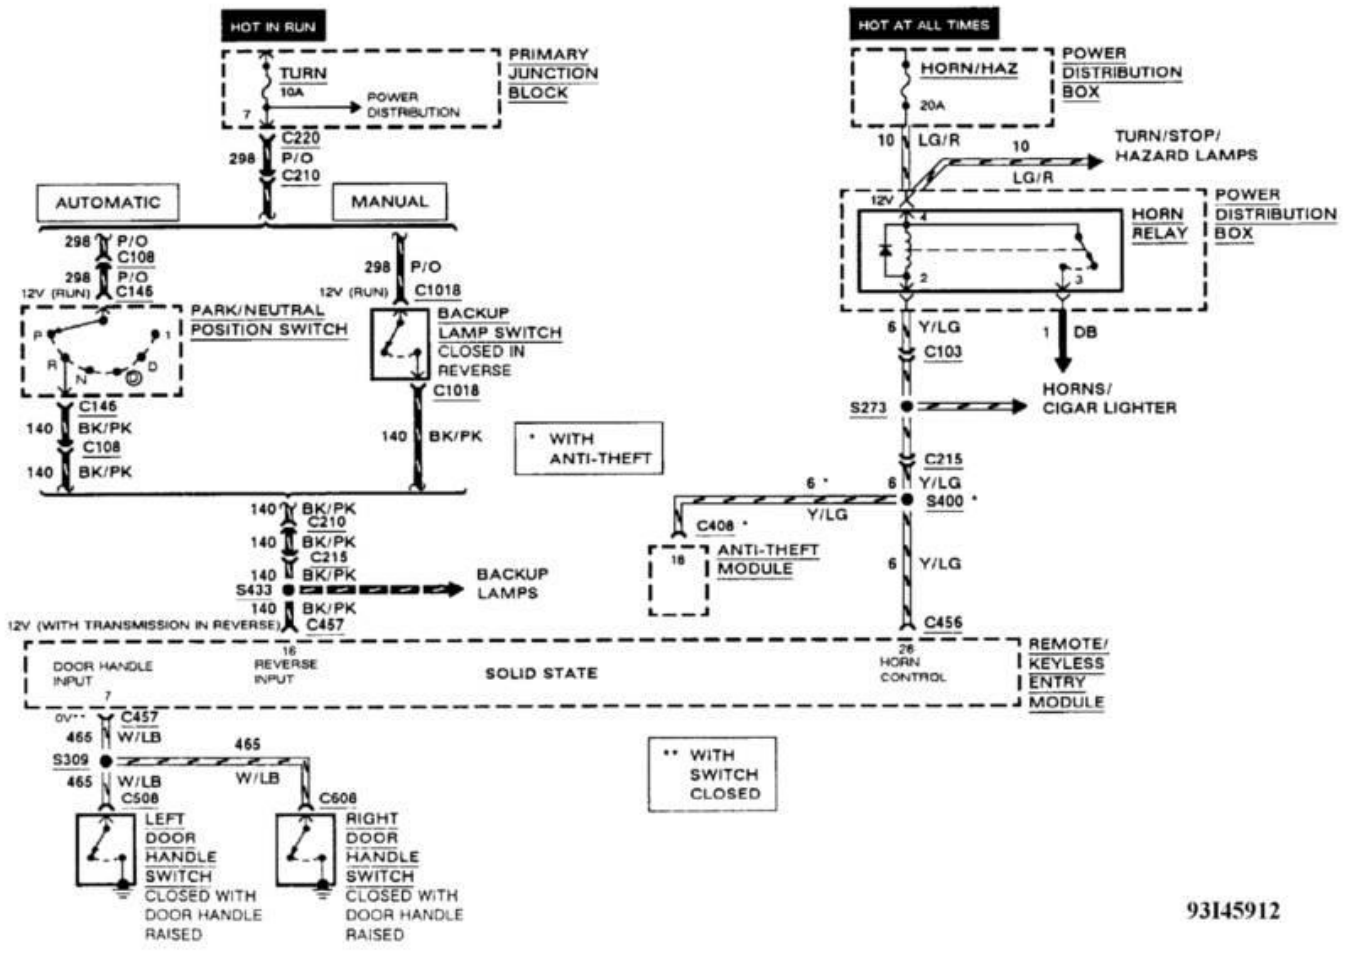


93145912

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 64: Remote Keyless Entry With Illuminated Entry (1 Of 4)**  
 1993 Ford Taurus LX

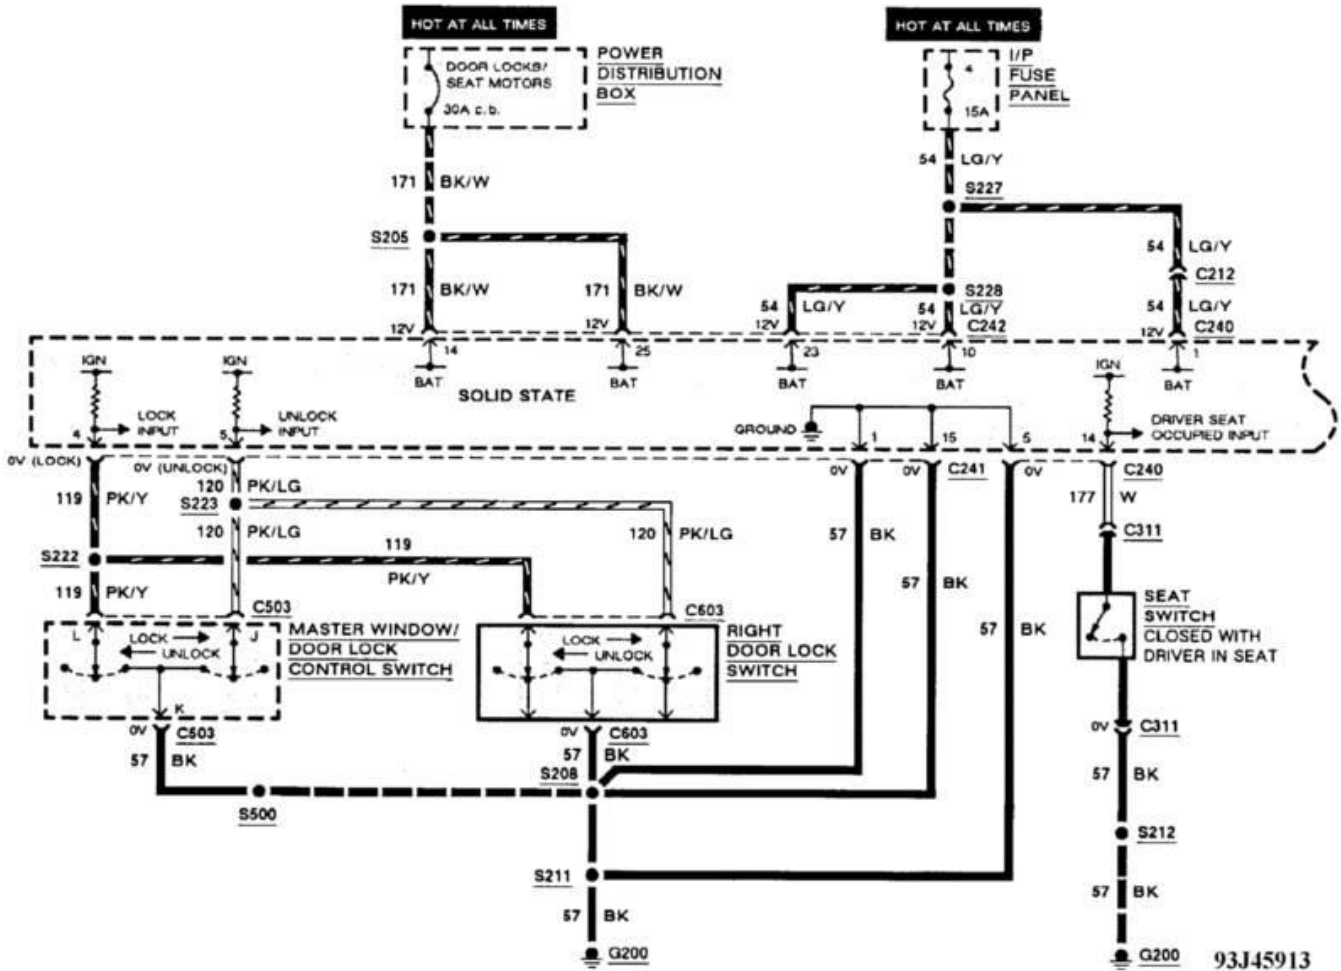


93J45913

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 65: Remote Keyless Entry With Illuminated Entry (2 Of 4)**  
 1993 Ford Taurus LX

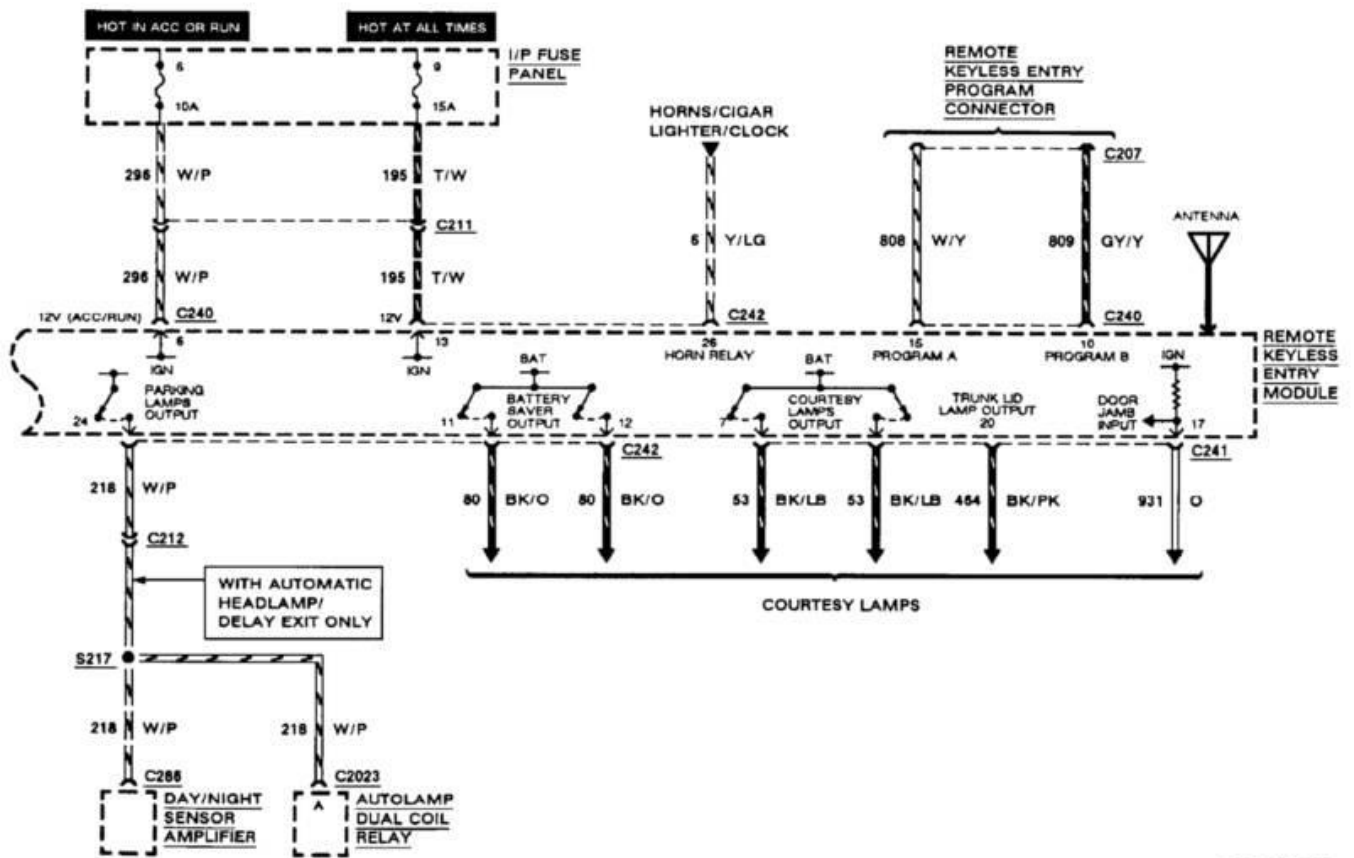


93C45916

**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN

**Fig. 66: Remote Keyless Entry With Illuminated Entry (3 Of 4)**  
 1993 Ford Taurus LX

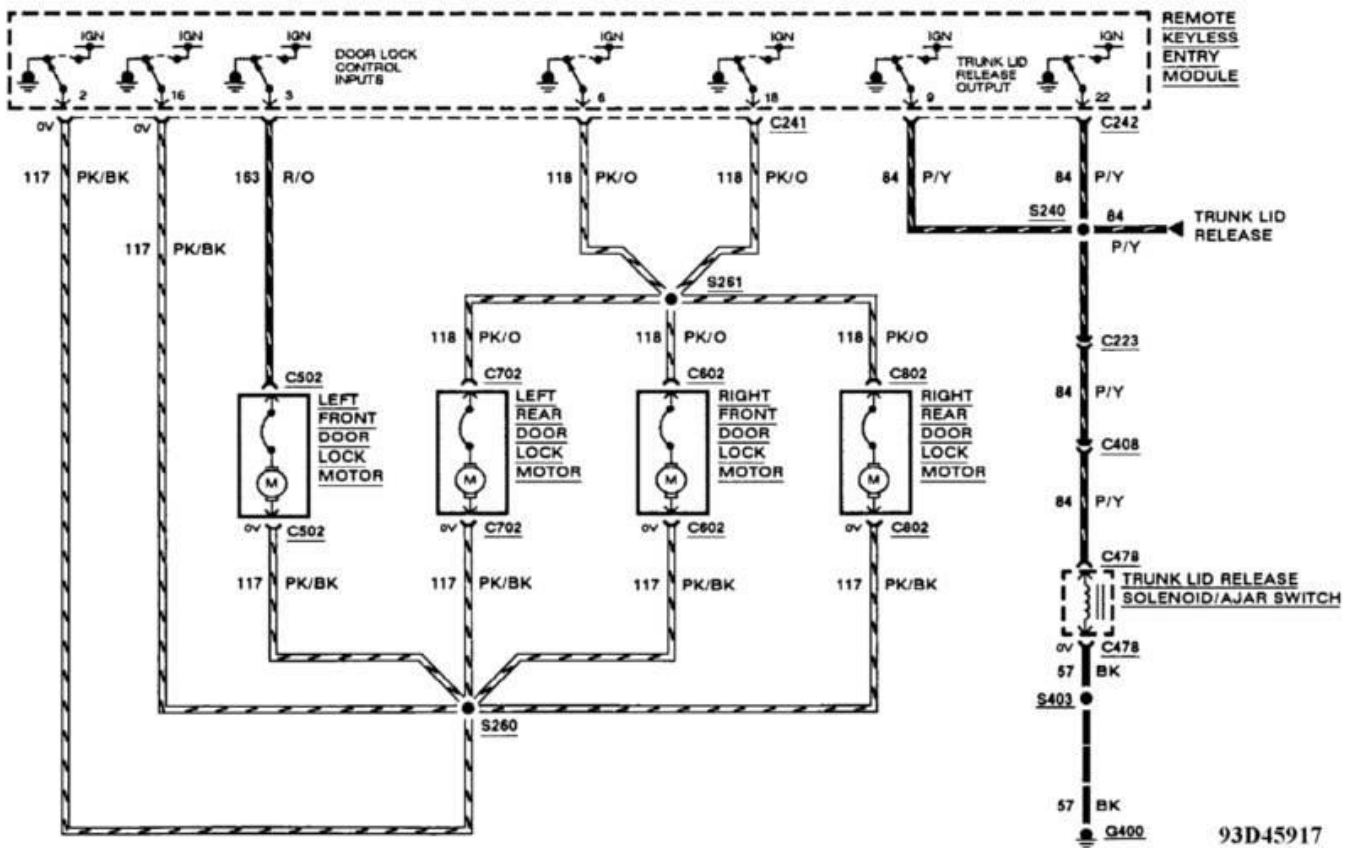


93D45917

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 67: Remote Keyless Entry With Illuminated Entry (4 Of 4)**  
1993 Ford Taurus LX

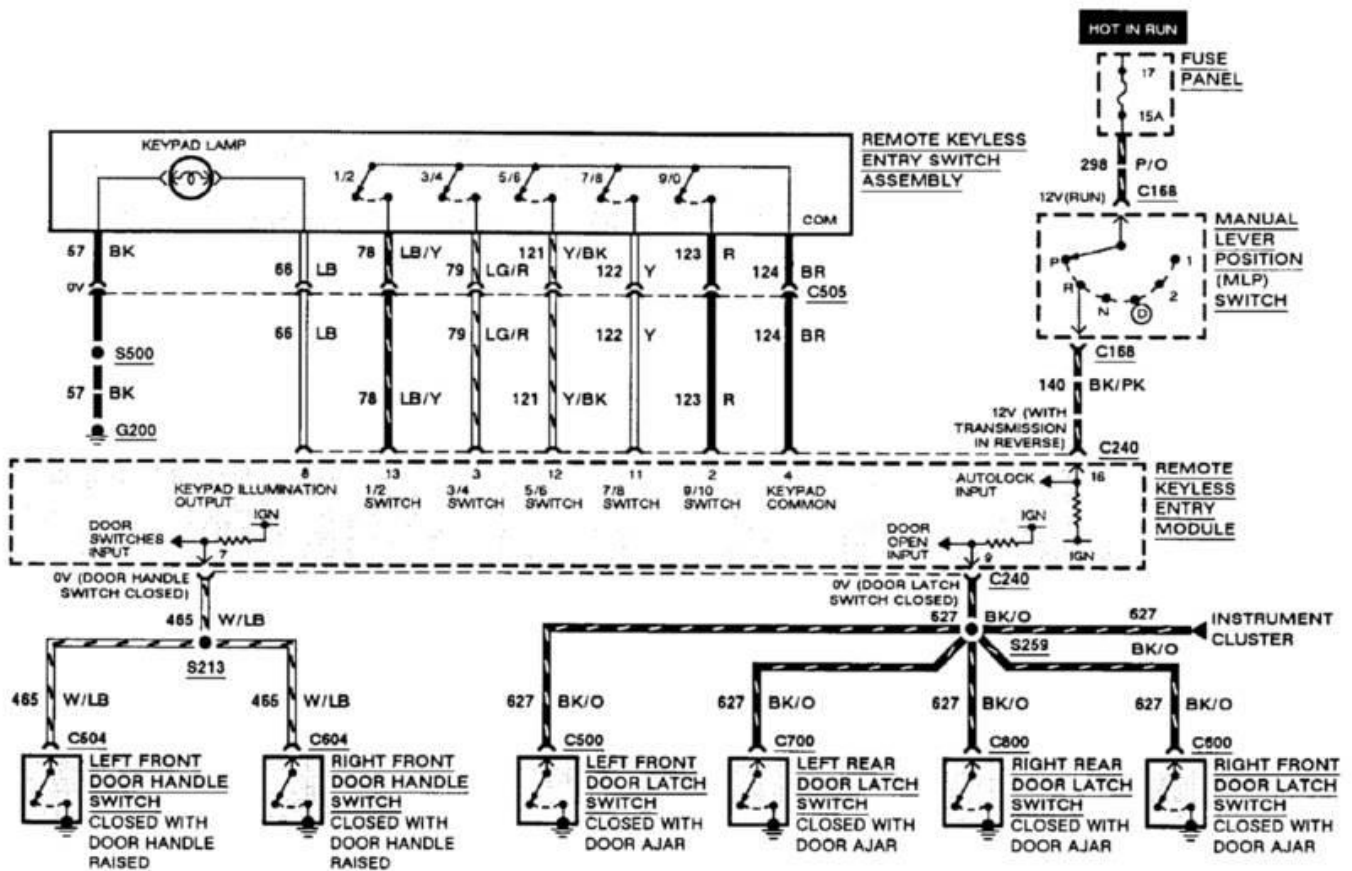


93E45918

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 68: Remote Keyless Entry Wiring Diagram (1 Of 5)**  
 1993 Ford Taurus LX

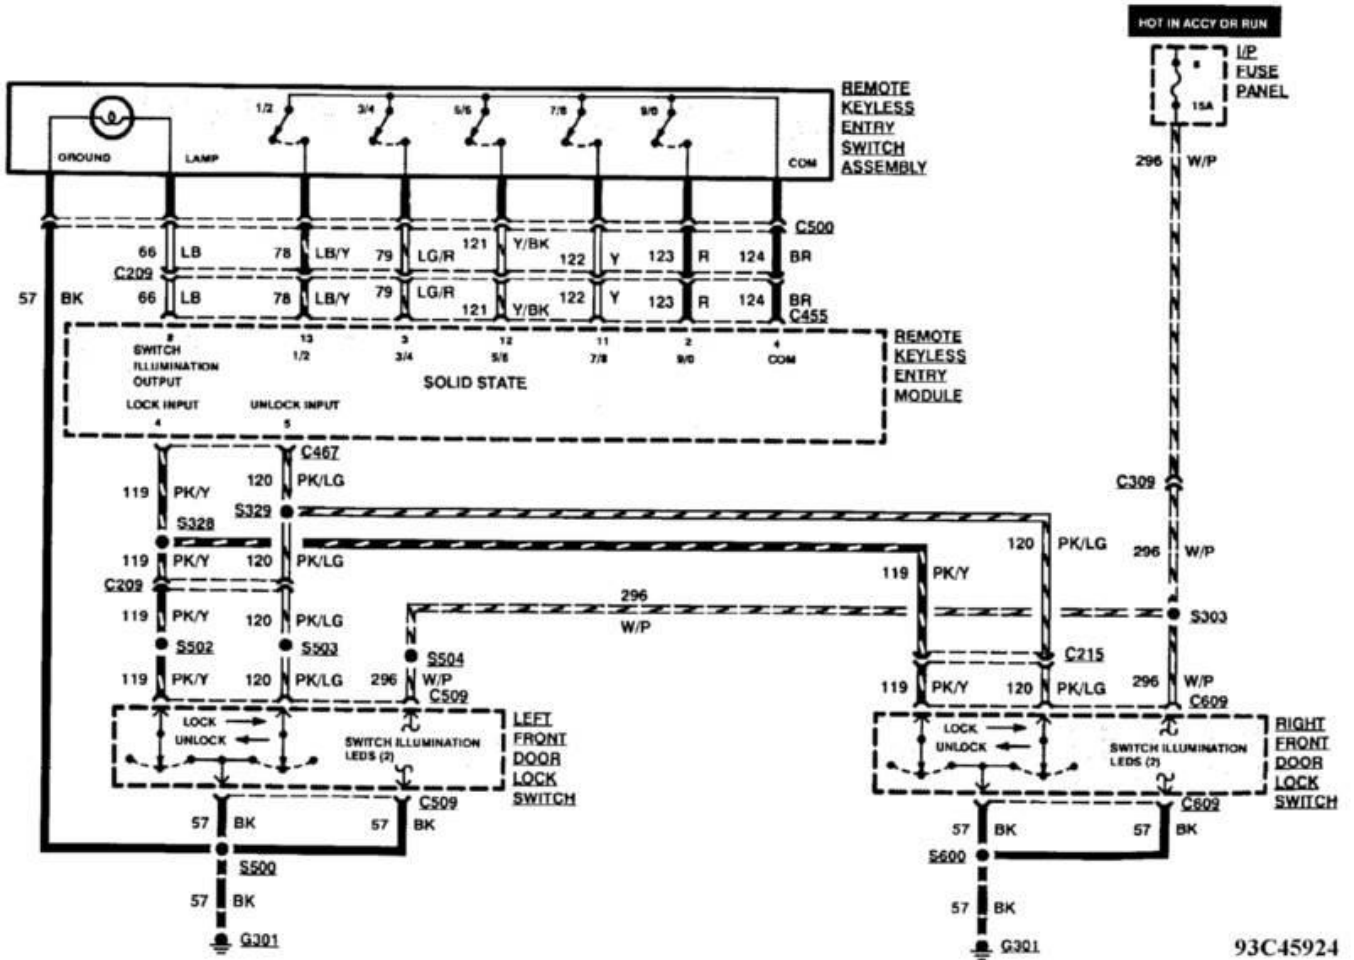


93C45924

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 69: Remote Keyless Entry Wiring Diagram (2 Of 5)**  
1993 Ford Taurus LX

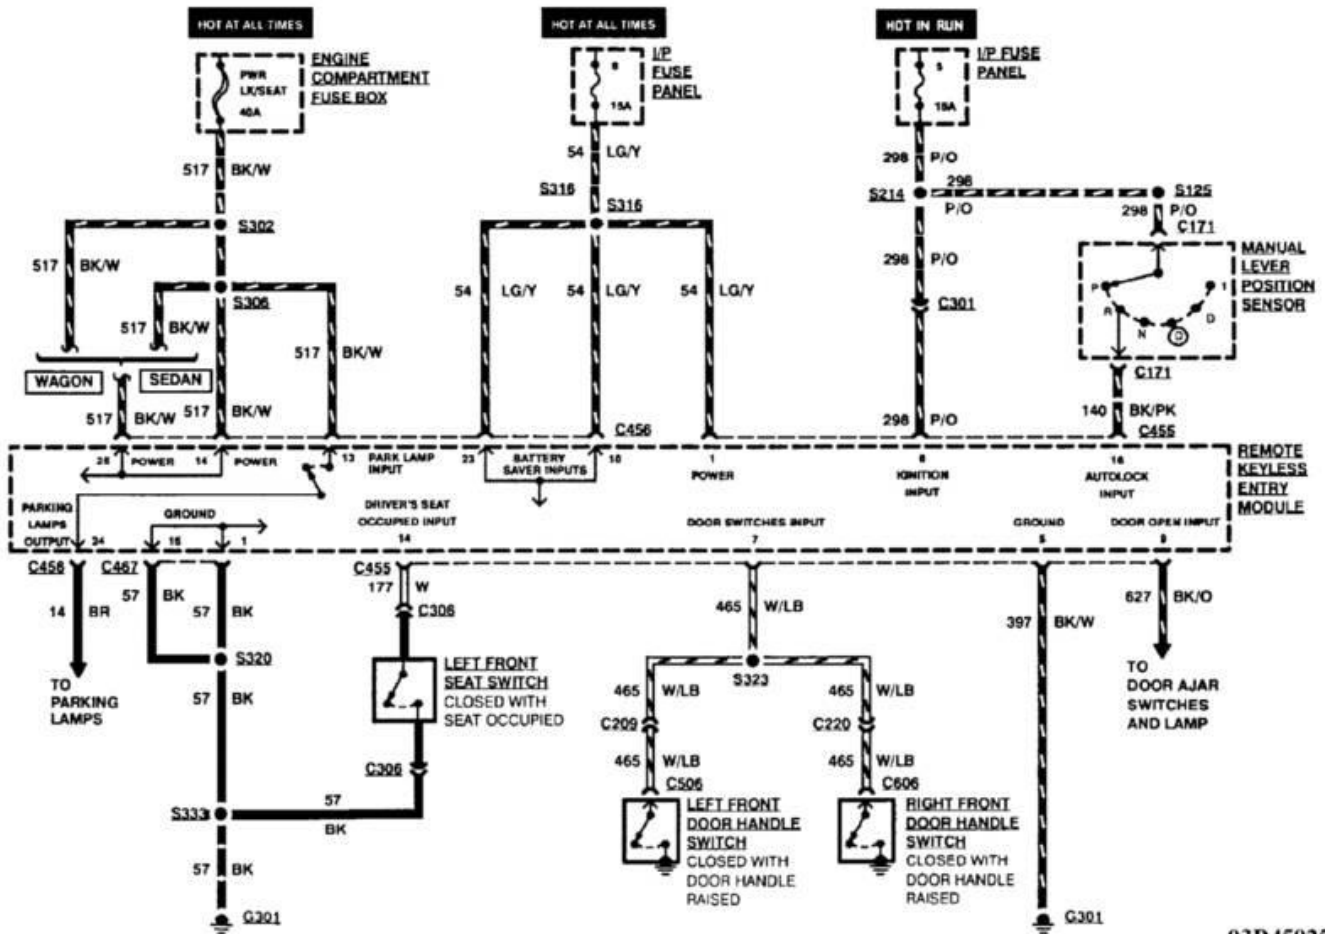


93D45925

**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN

**Fig. 70: Remote Keyless Entry Wiring Diagram (3 Of 5)**  
 1993 Ford Taurus LX

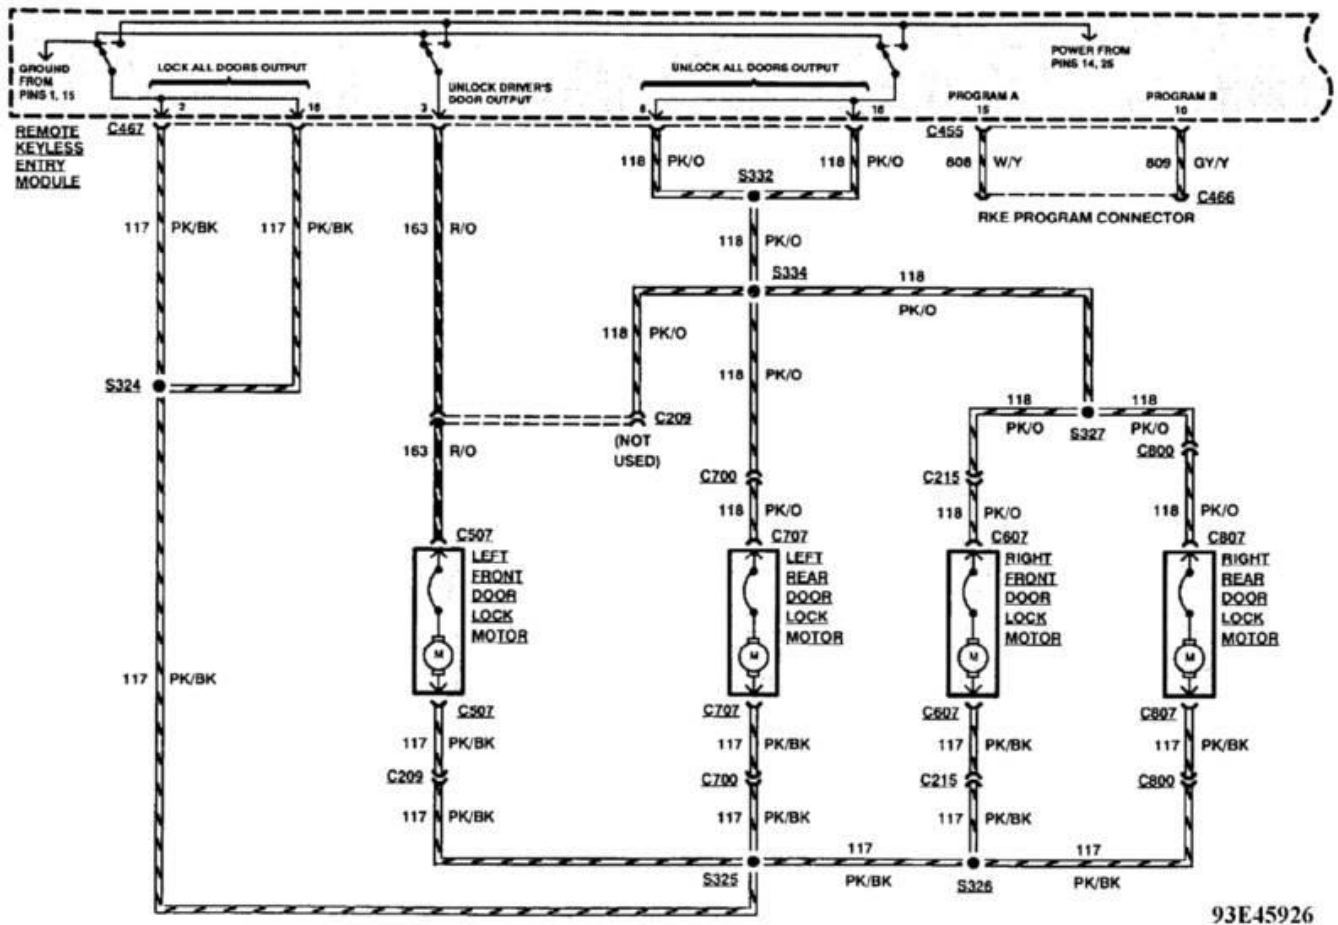


93E45926



**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 71: Remote Keyless Entry Wiring Diagram (4 Of 5)**  
 1993 Ford Taurus LX

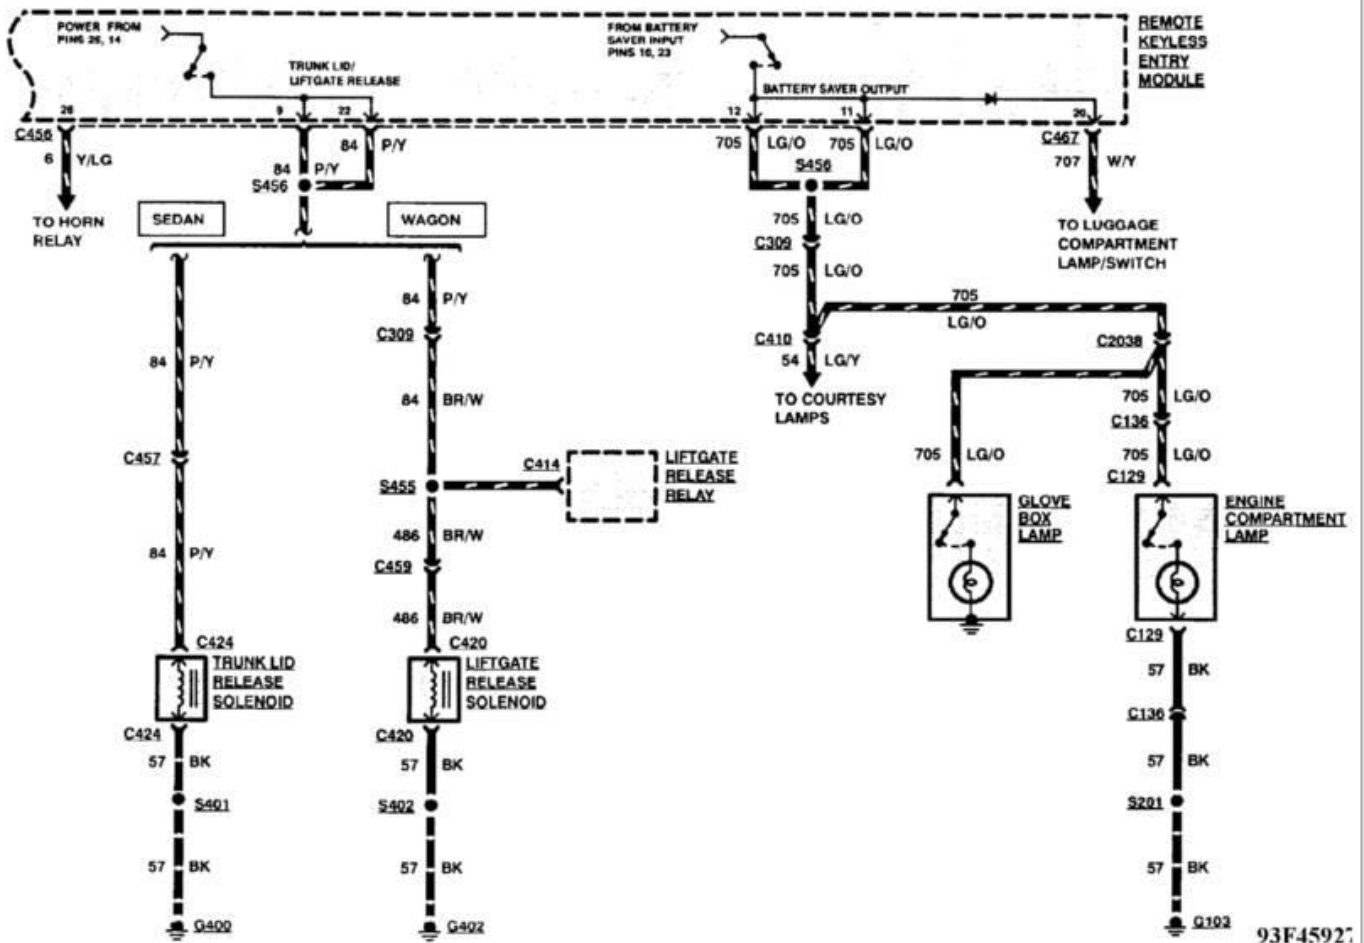


93F45927

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 72: Remote Keyless Entry Wiring Diagram (5 Of 5)**  
1993 Ford Taurus LX

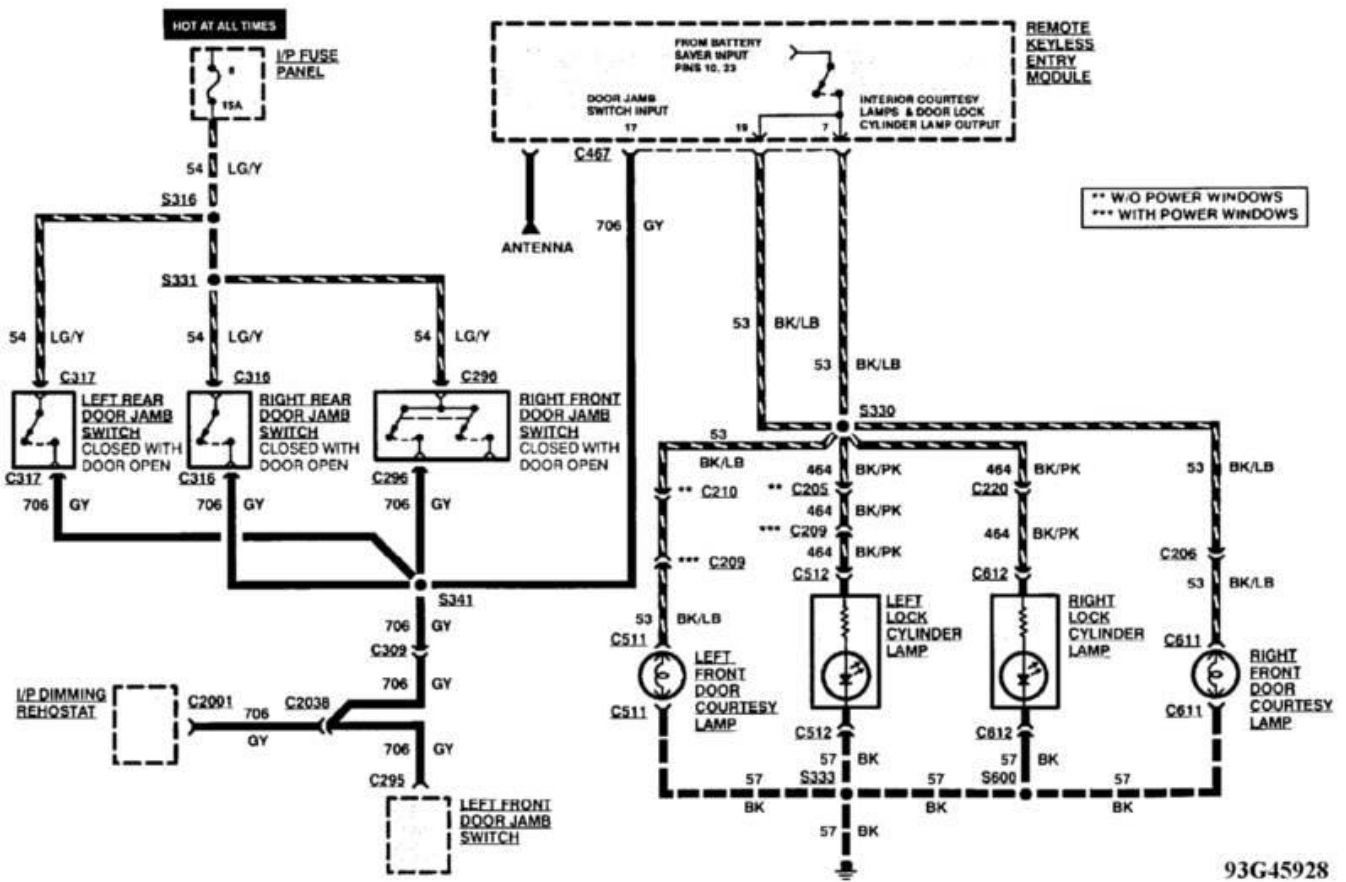


93G45928

**WIRING DIAGRAMS**  
**P ower & Ground Distribution**

PAVLIN


**Fig. 73: Power Antenna Wiring Diagram**  
 1993 Ford Taurus LX

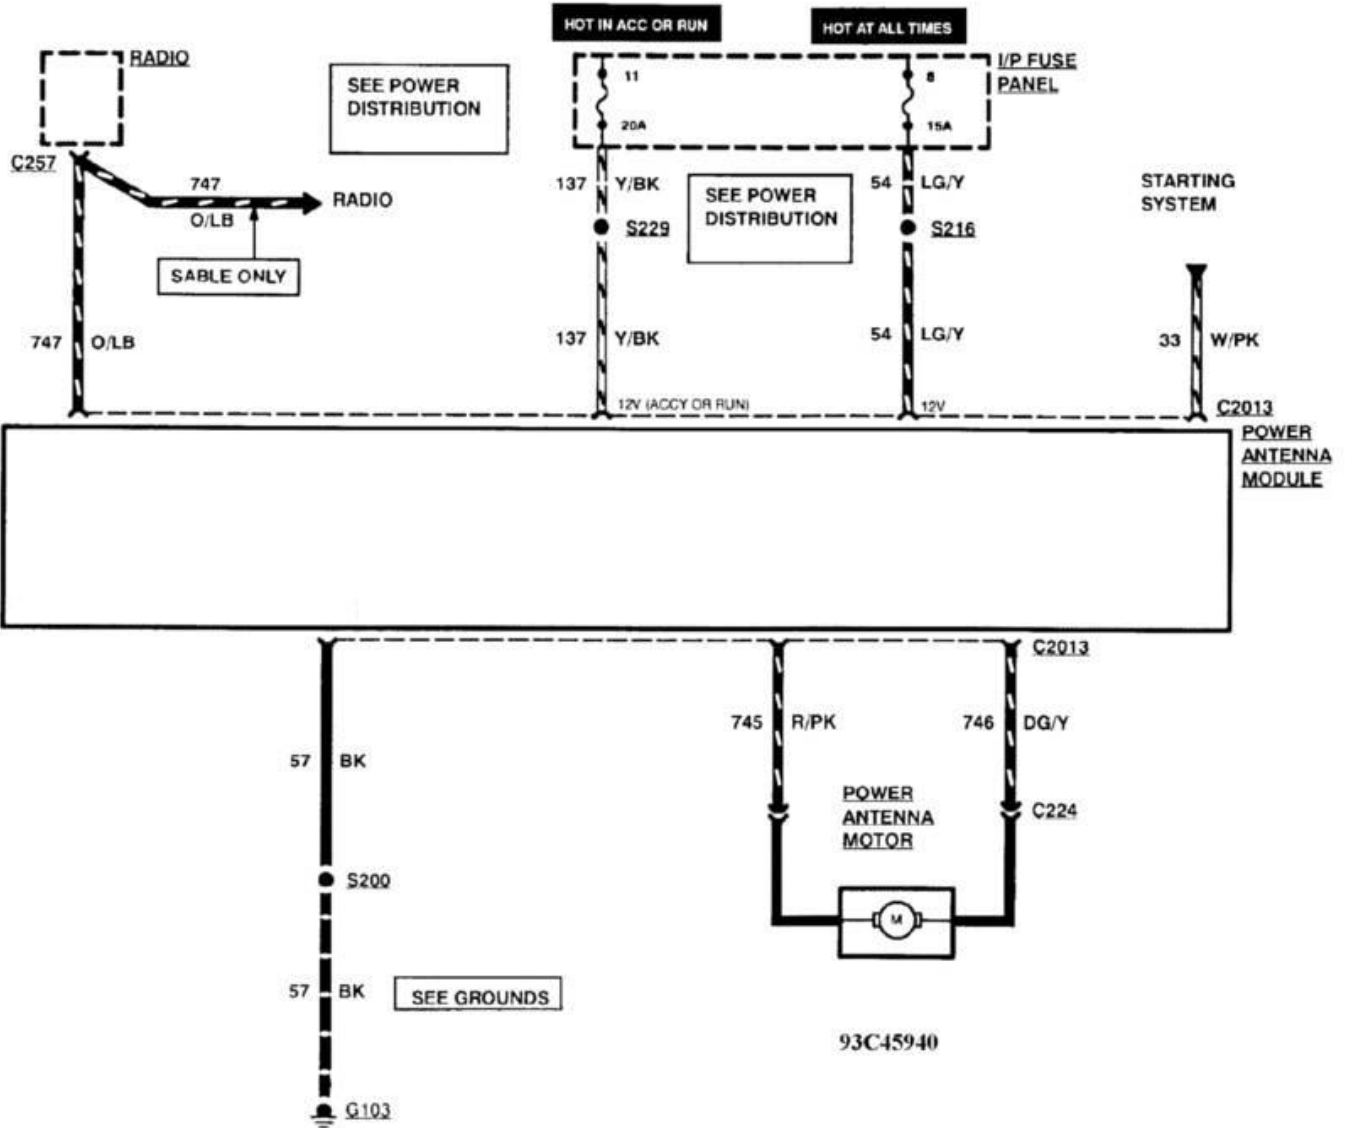

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 74: Power Door Locks Wiring Diagram (1 Of 2)**  
1993 Ford Taurus LX

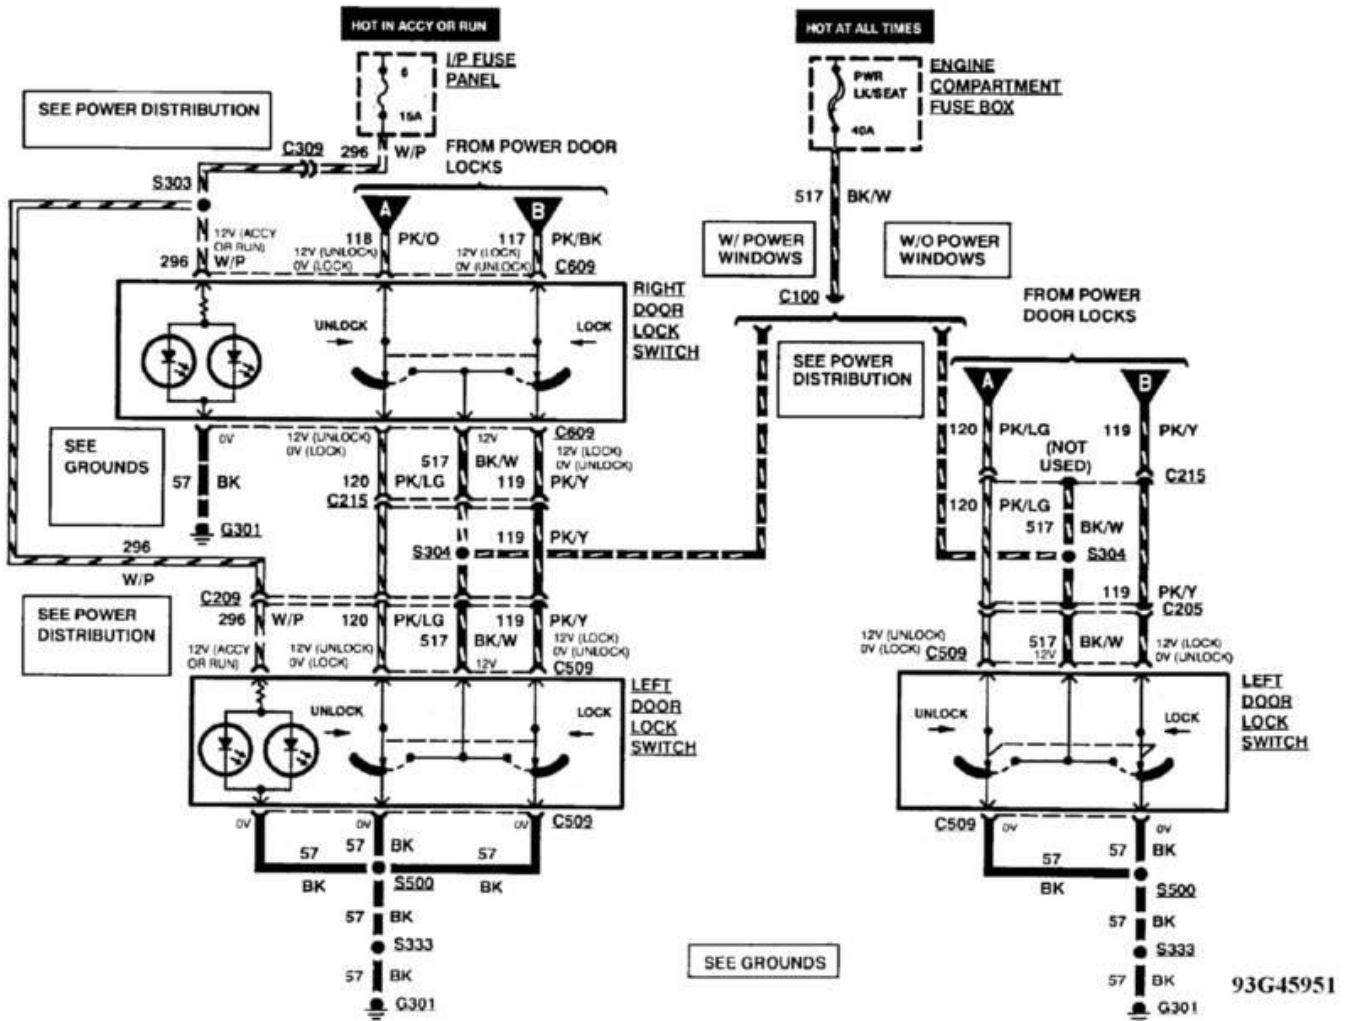

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 75: Power Door Locks Wiring Diagram (2 Of 2)**  
 1993 Ford Taurus LX

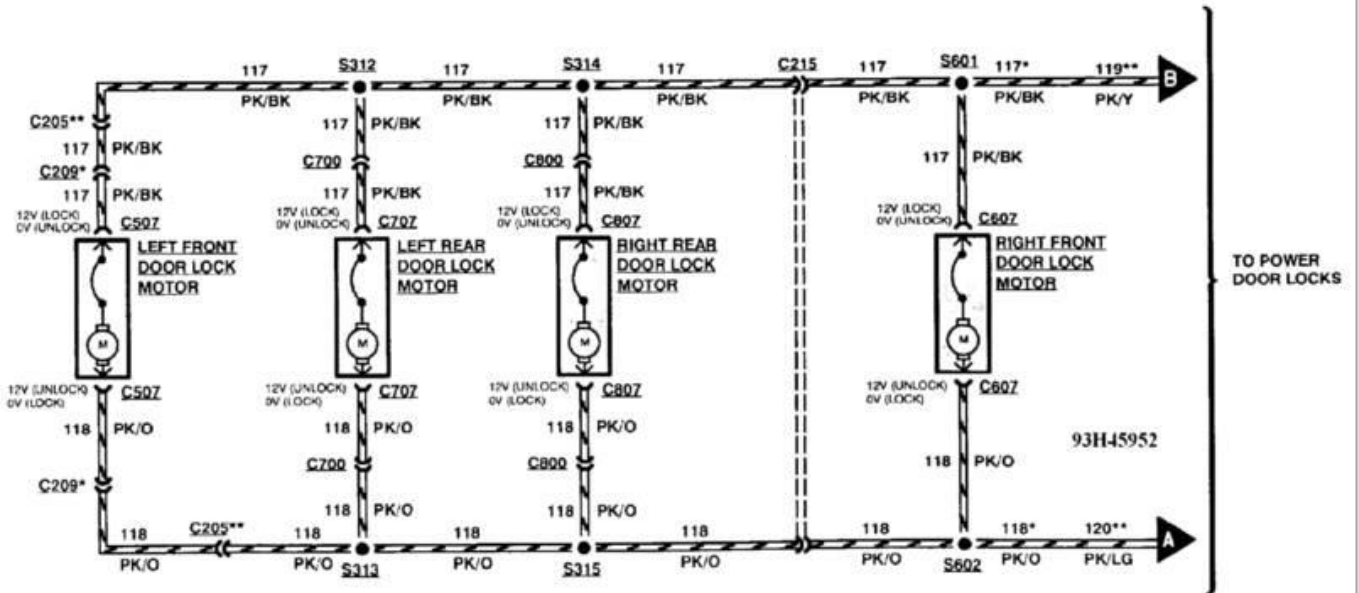

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 76: Power Mirror System Wiring Diagram**  
 1993 Ford Taurus LX

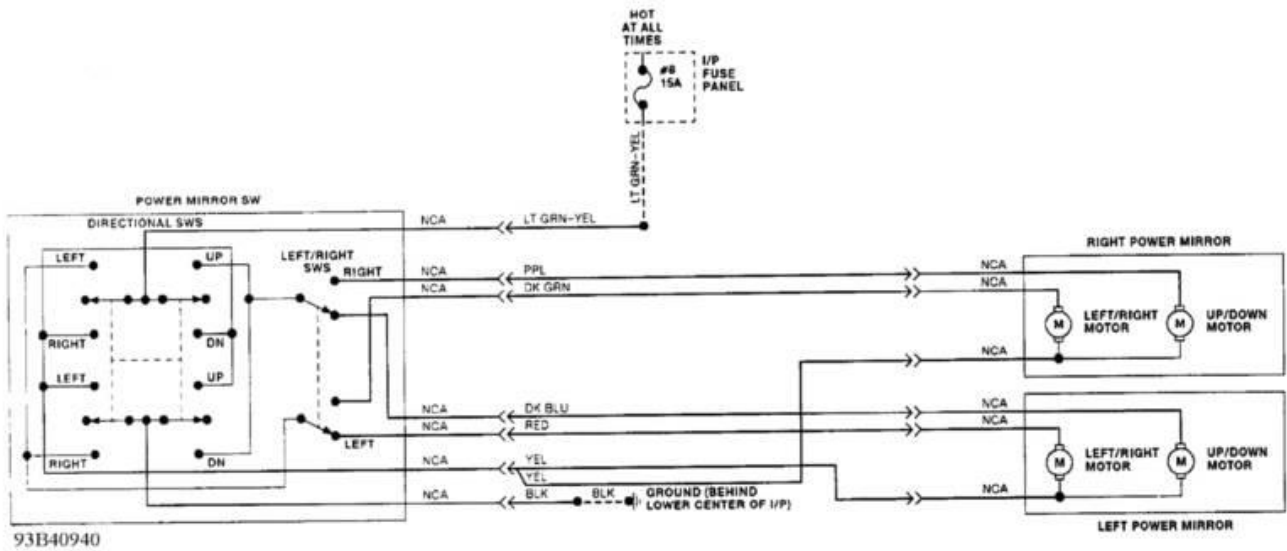




**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 78: Lumbar Seat Wiring Diagram**  
1993 Ford Taurus LX

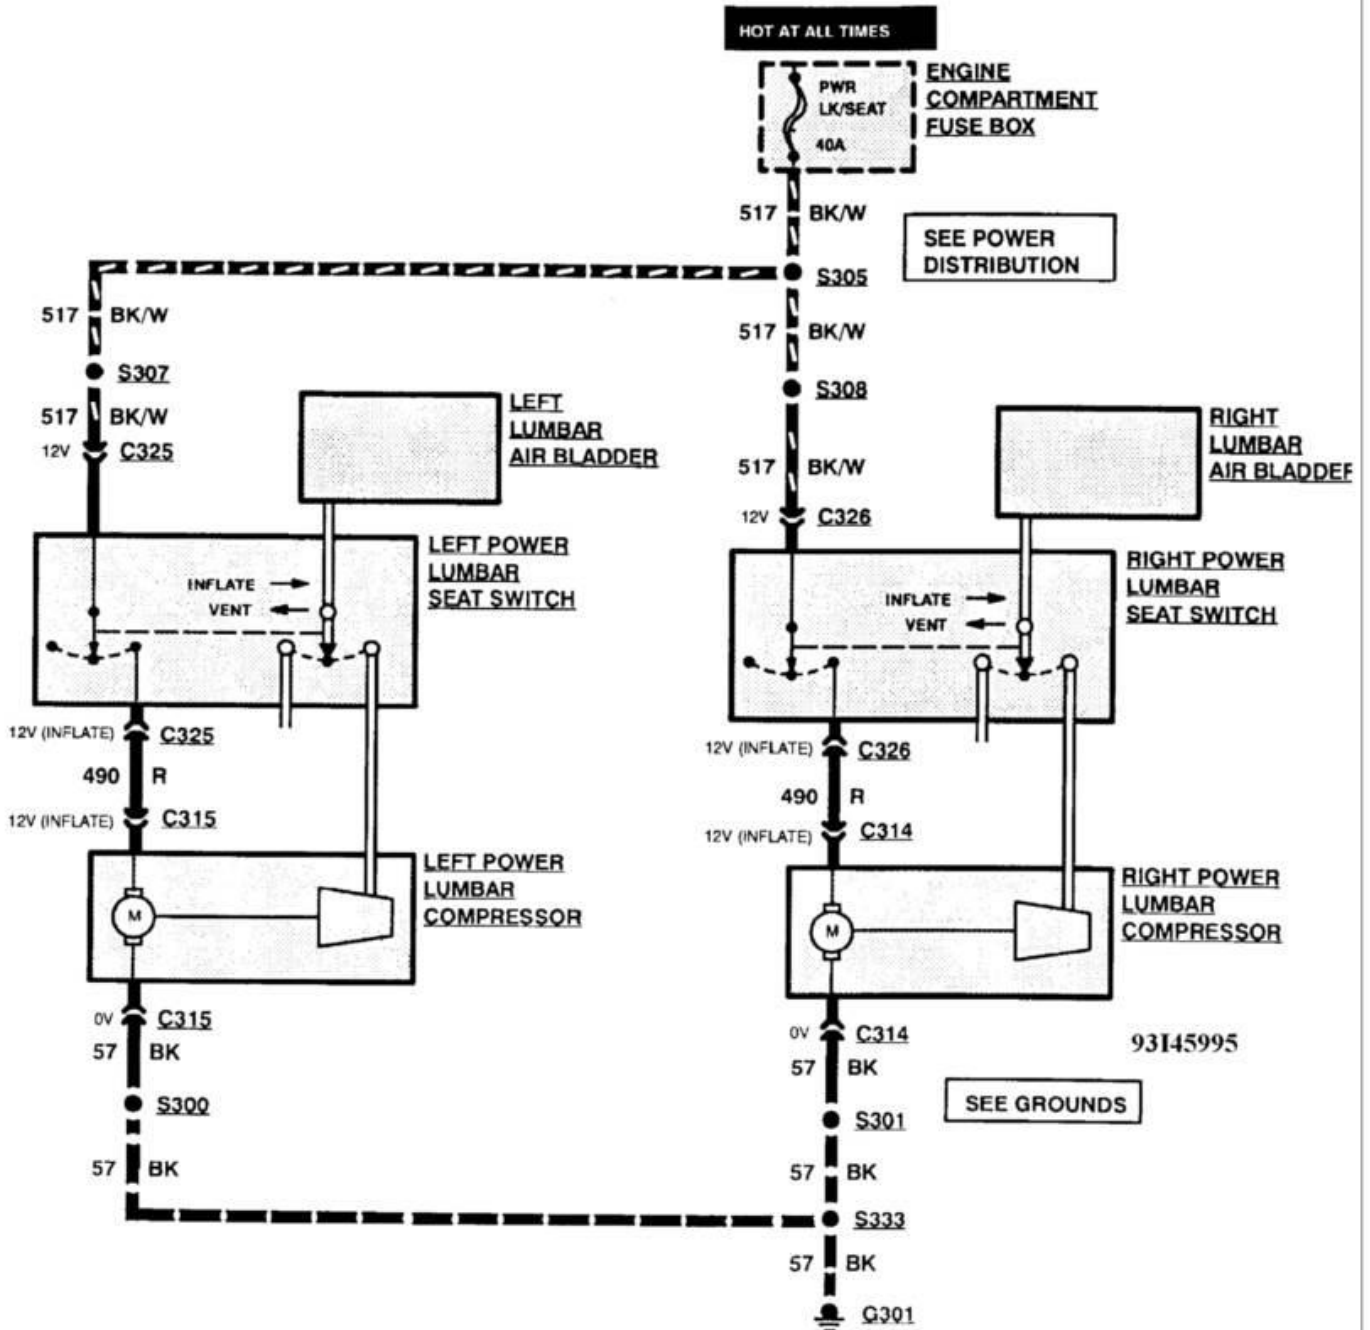




**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 79: Power Seats (1 Of 2)**  
1993 Ford Taurus LX

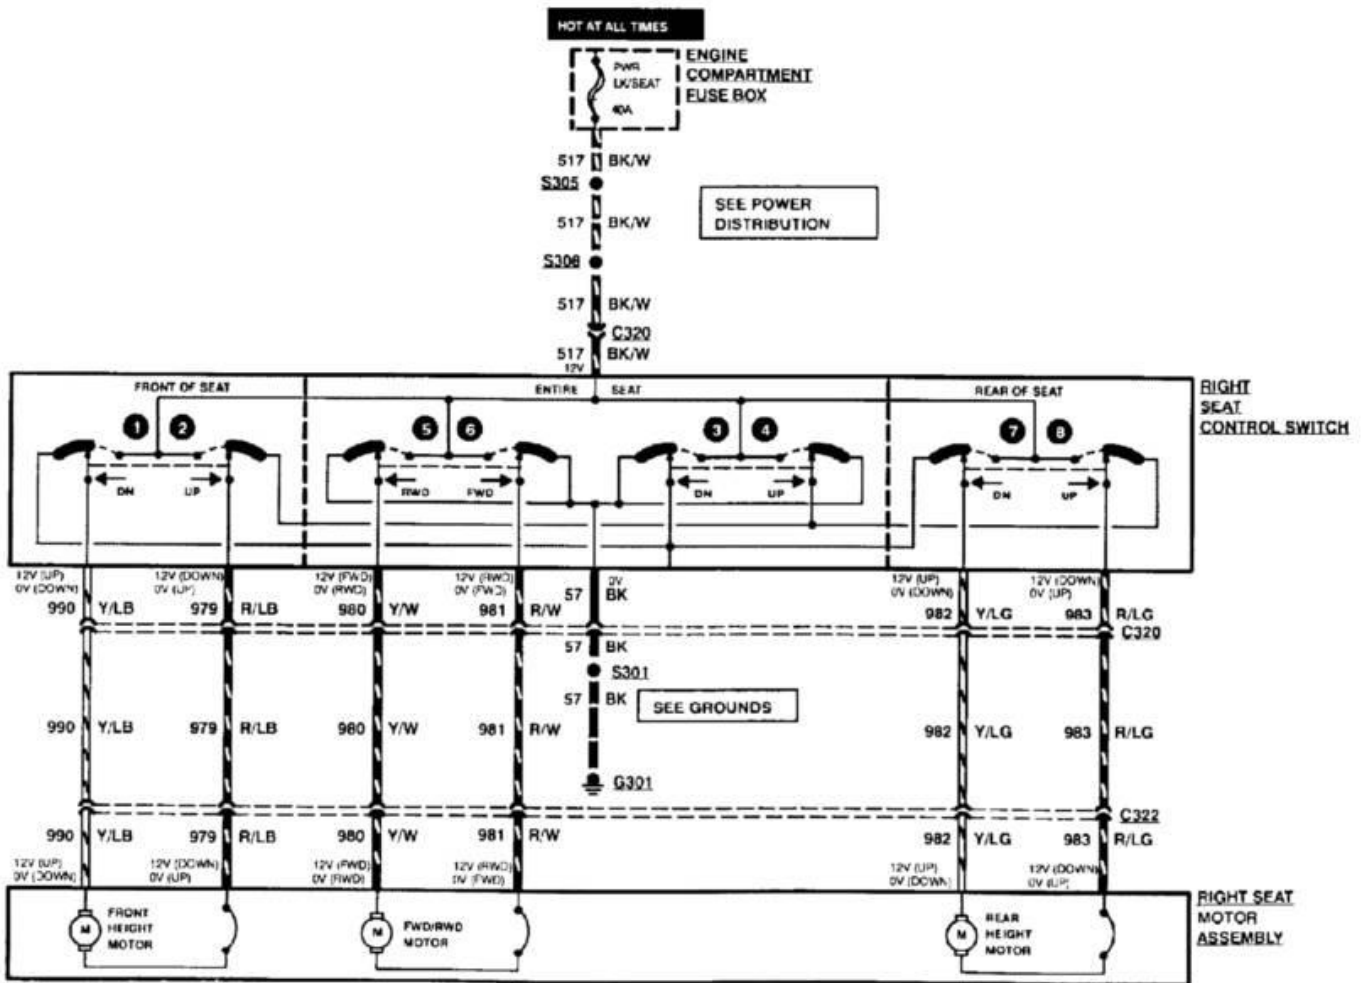


G93J45996

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

**Fig. 80: Power Seats (2 Of 2)**  
1993 Ford Taurus LX

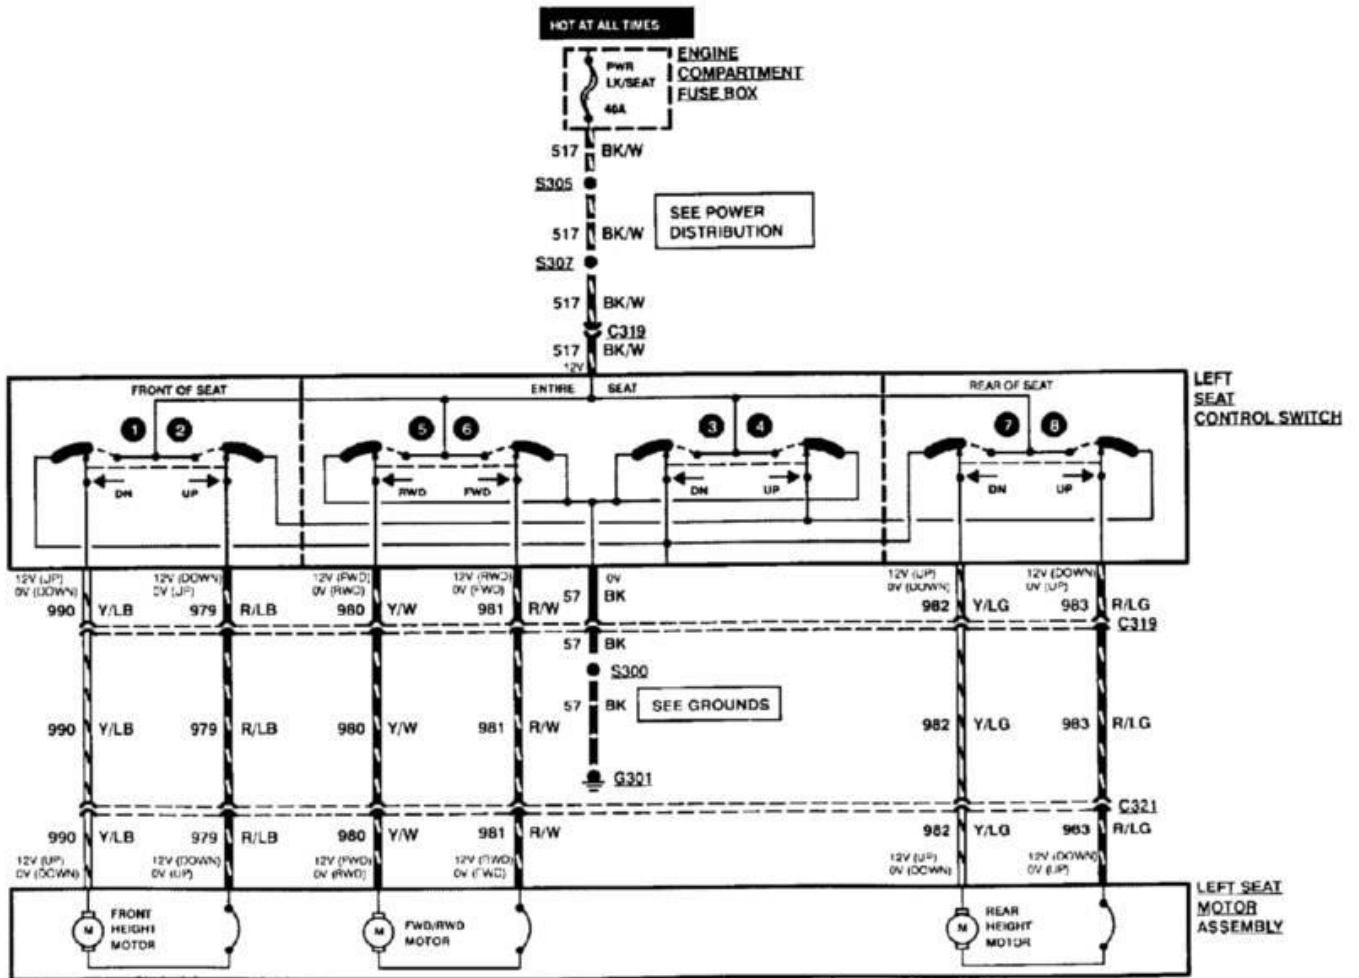


G93A45997

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


Fig. 81: Power Fuel Filler Door Release Wiring Diagram  
(1 Of 2)  
1993 Ford Taurus LX

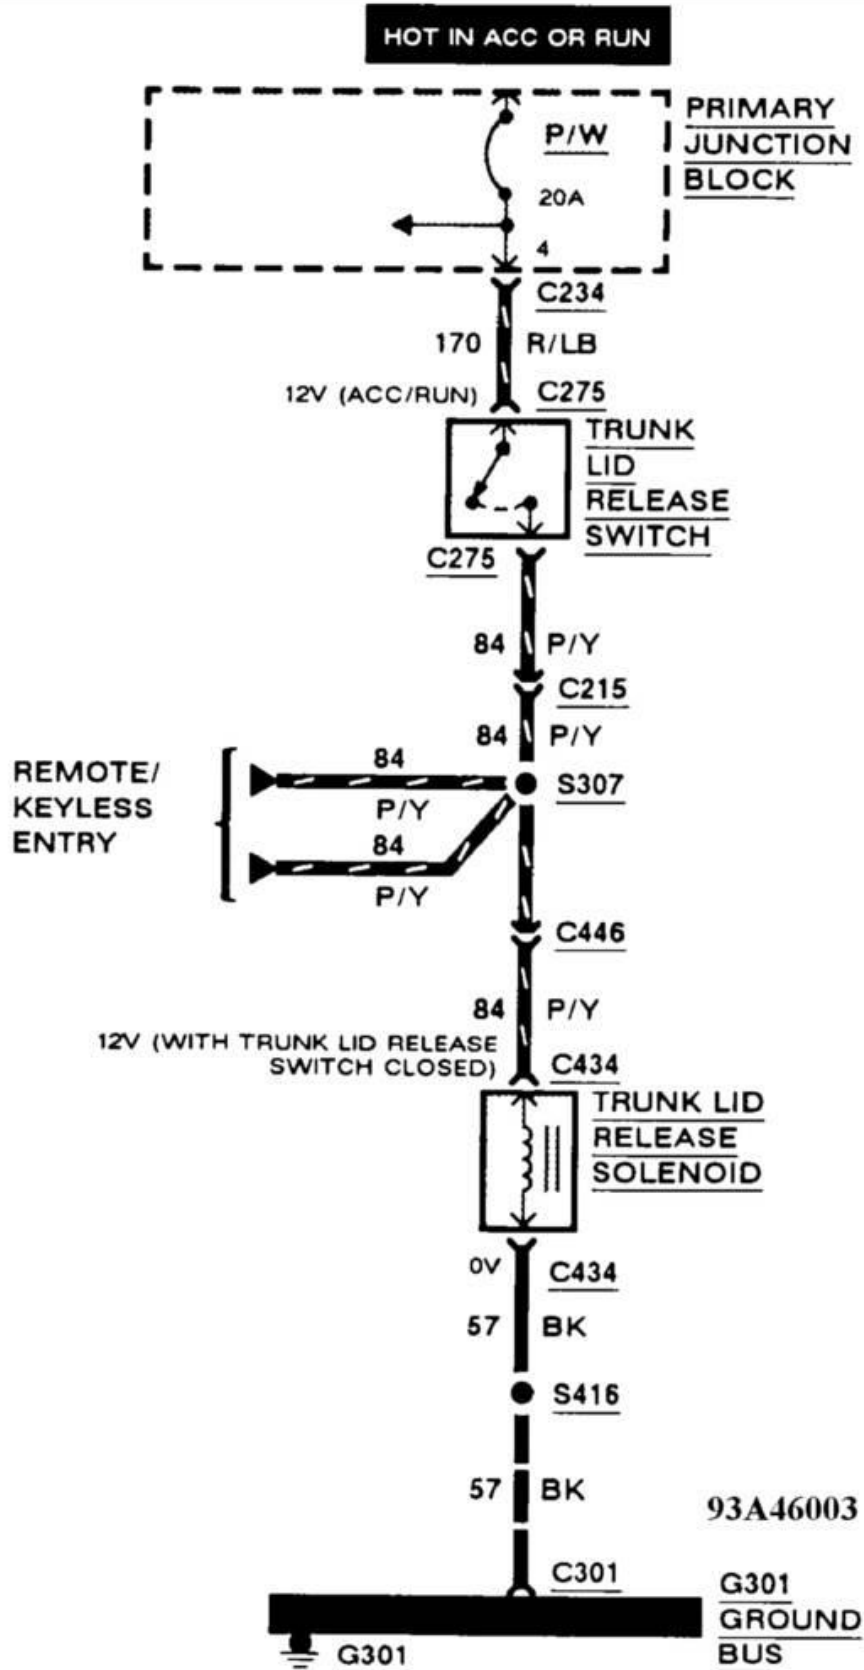

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN


Fig. 82: Power Fuel Filler Door Release Wiring Diagram  
(2 Of 2)  
1993 Ford Taurus LX

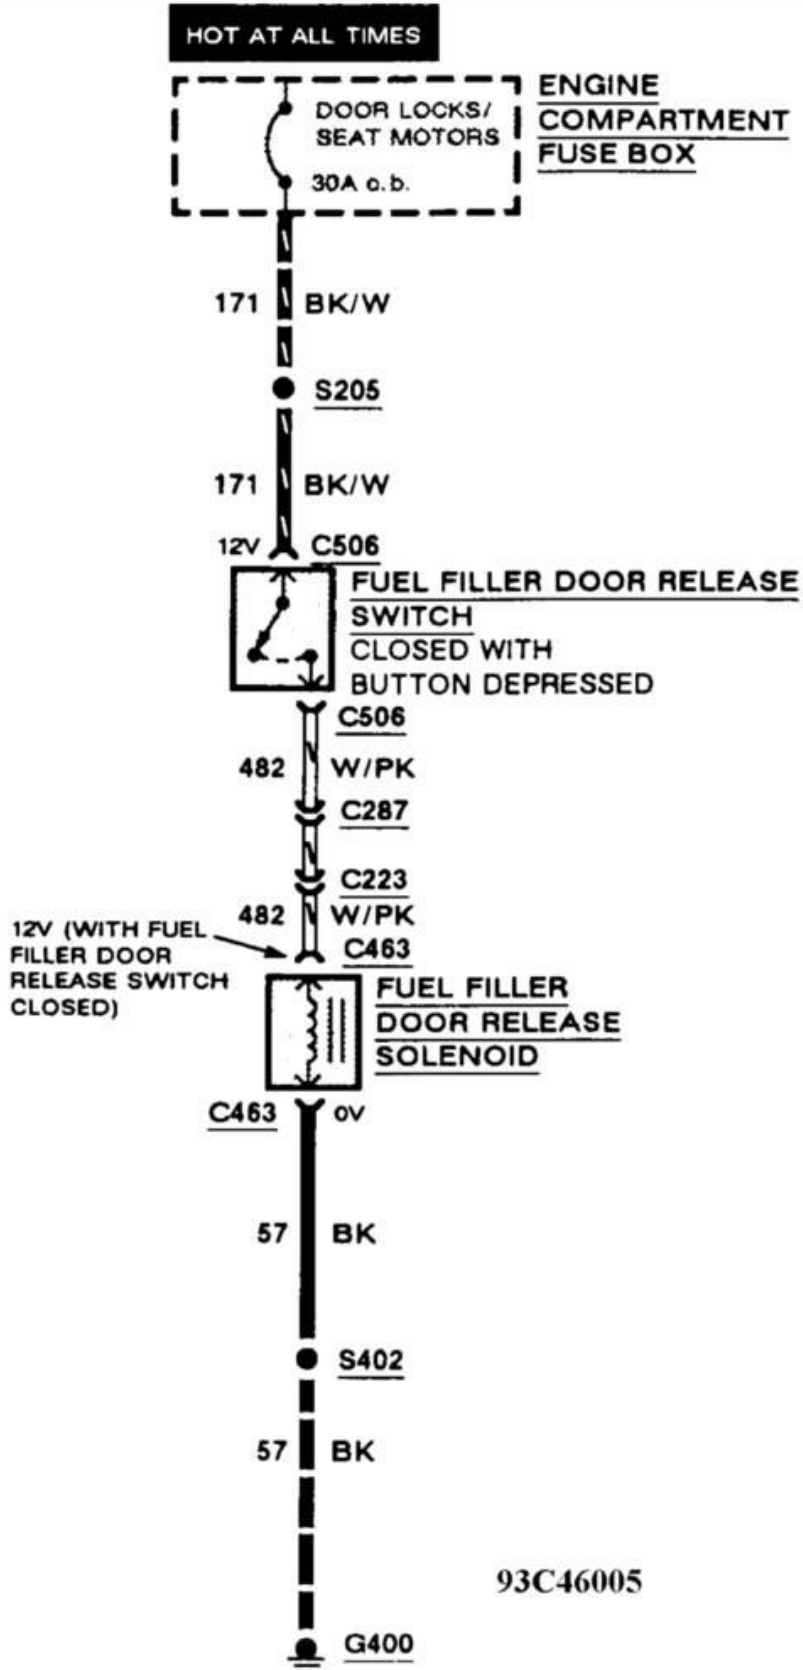

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


Fig. 83: Power Trunk Release W/ Police Package Wiring Diagram  
1993 Ford Taurus LX

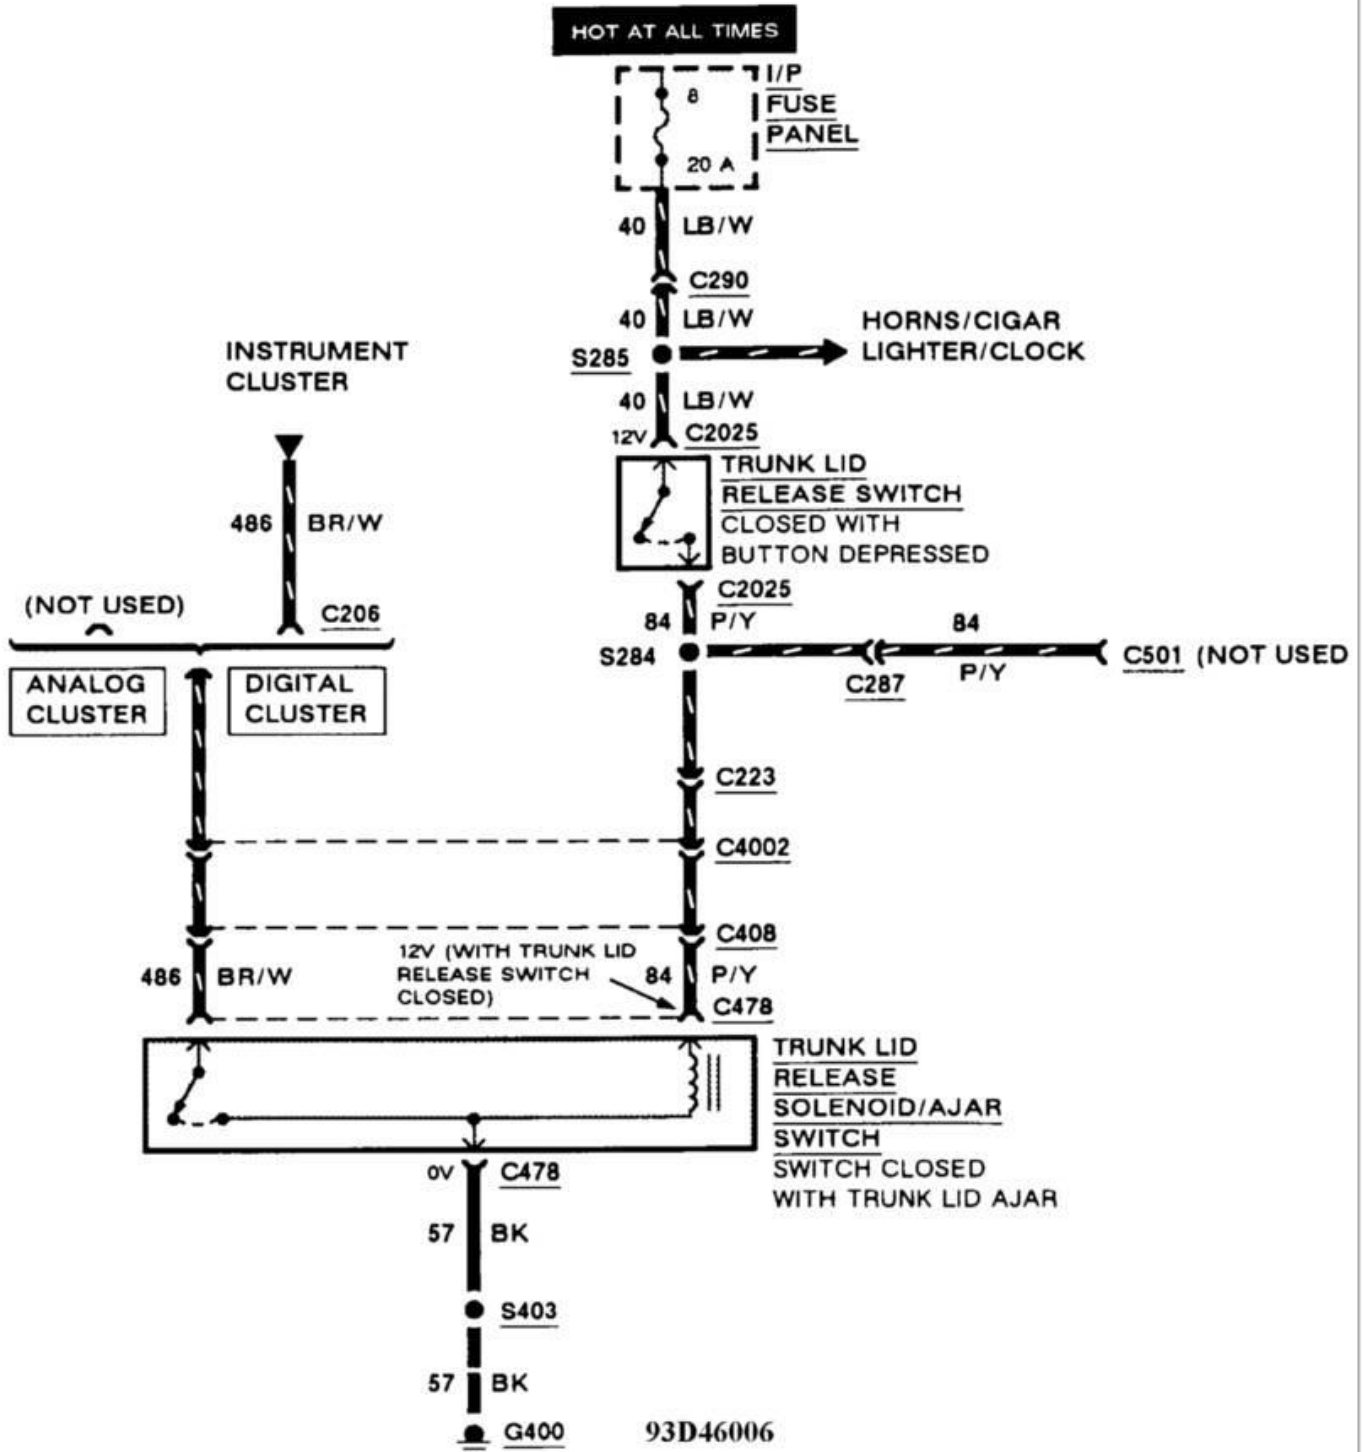

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN


Fig. 84: Power Trunk Release W/O Police Package Wiring Diagram  
1993 Ford Taurus LX

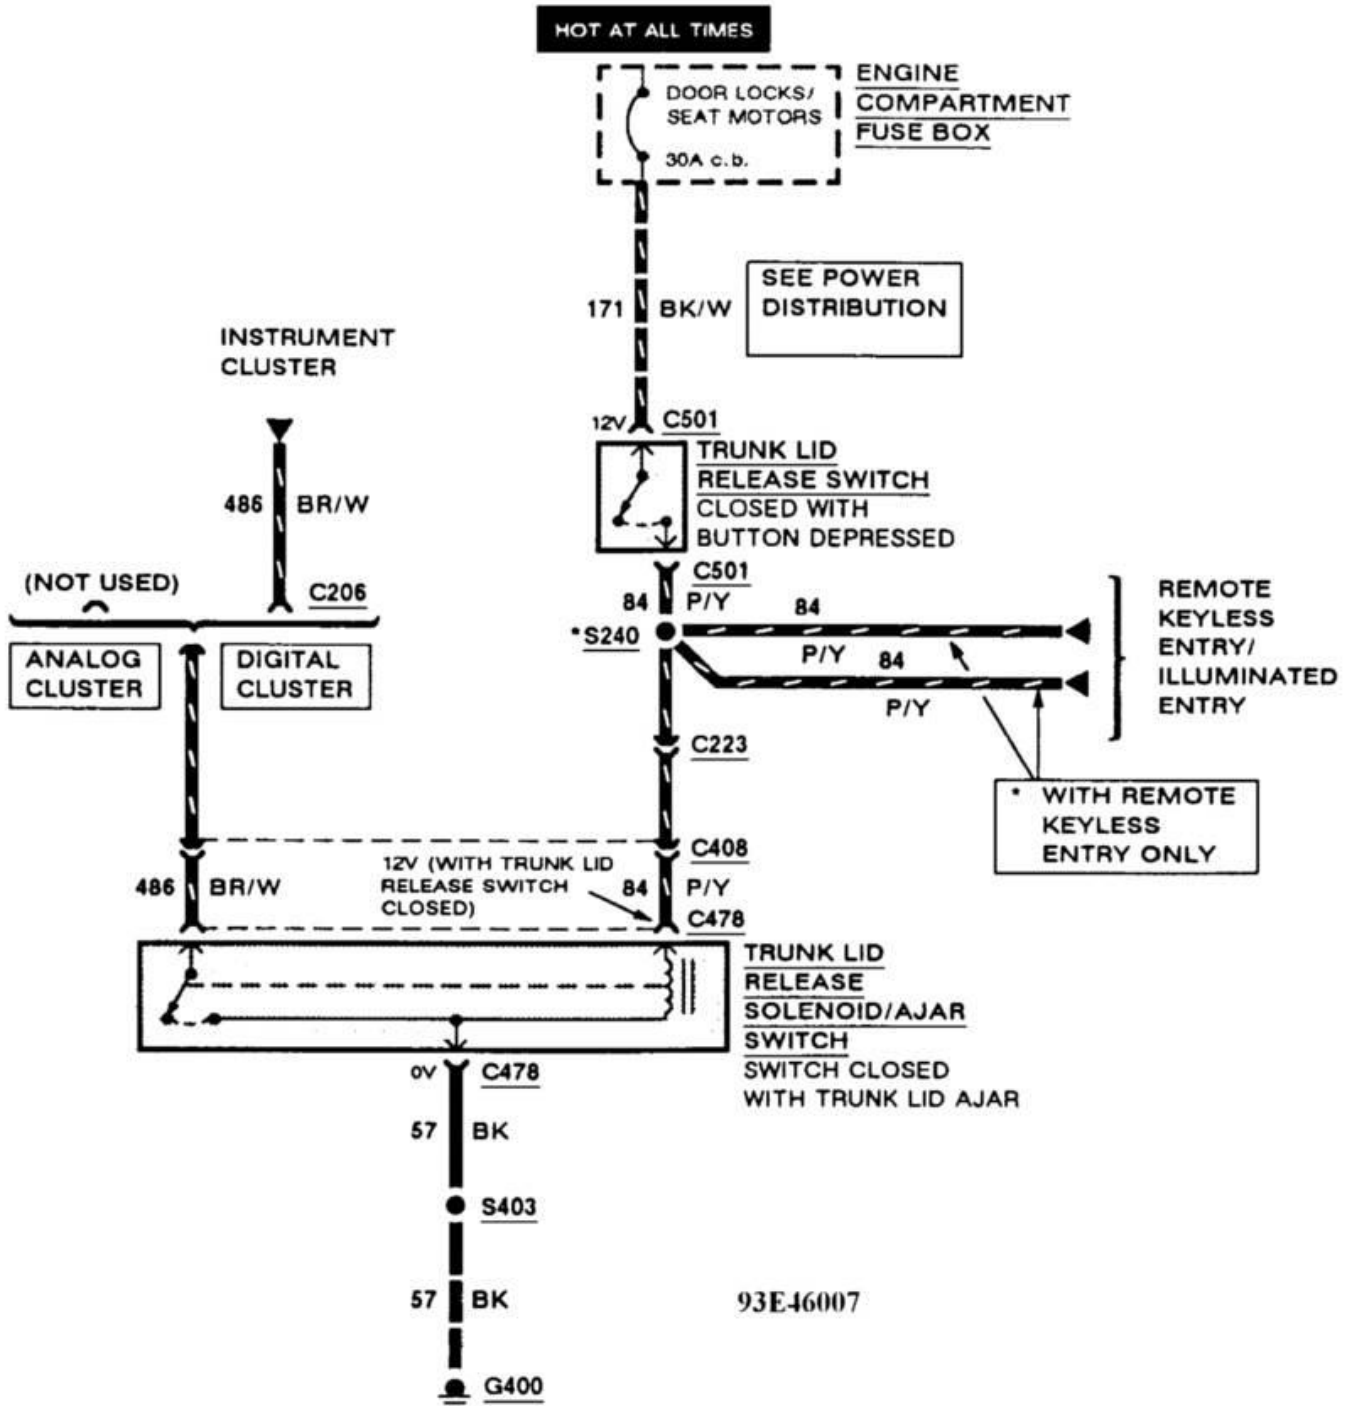

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 85: Power Liftgate Release Wiring Diagram**  
1993 Ford Taurus LX

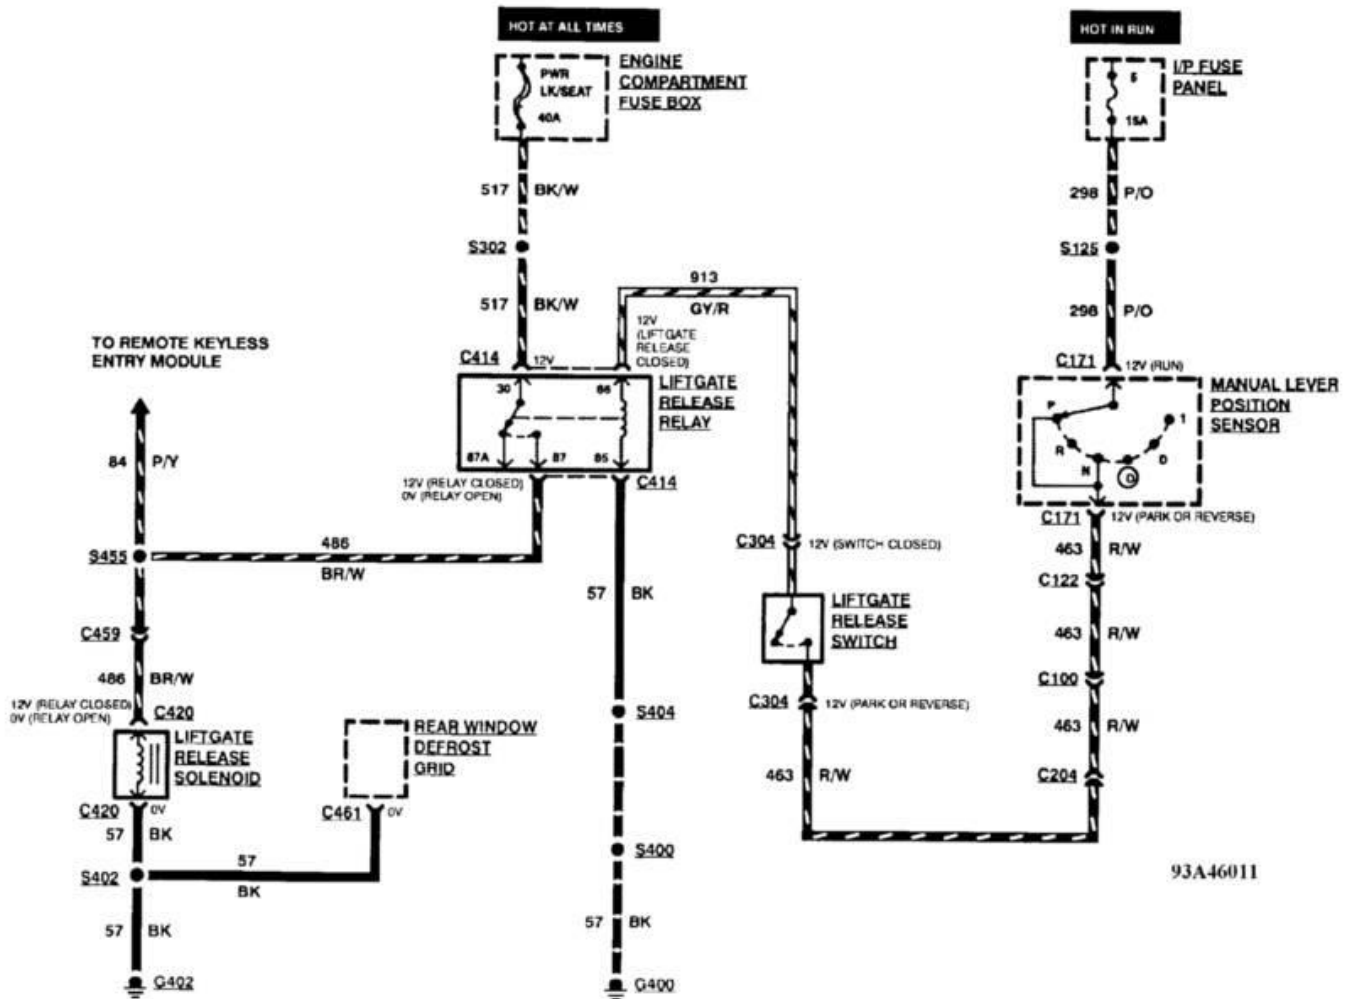

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 86: Power Fuel Filler Door Release Wiring Diagram  
1993 Ford Taurus LX

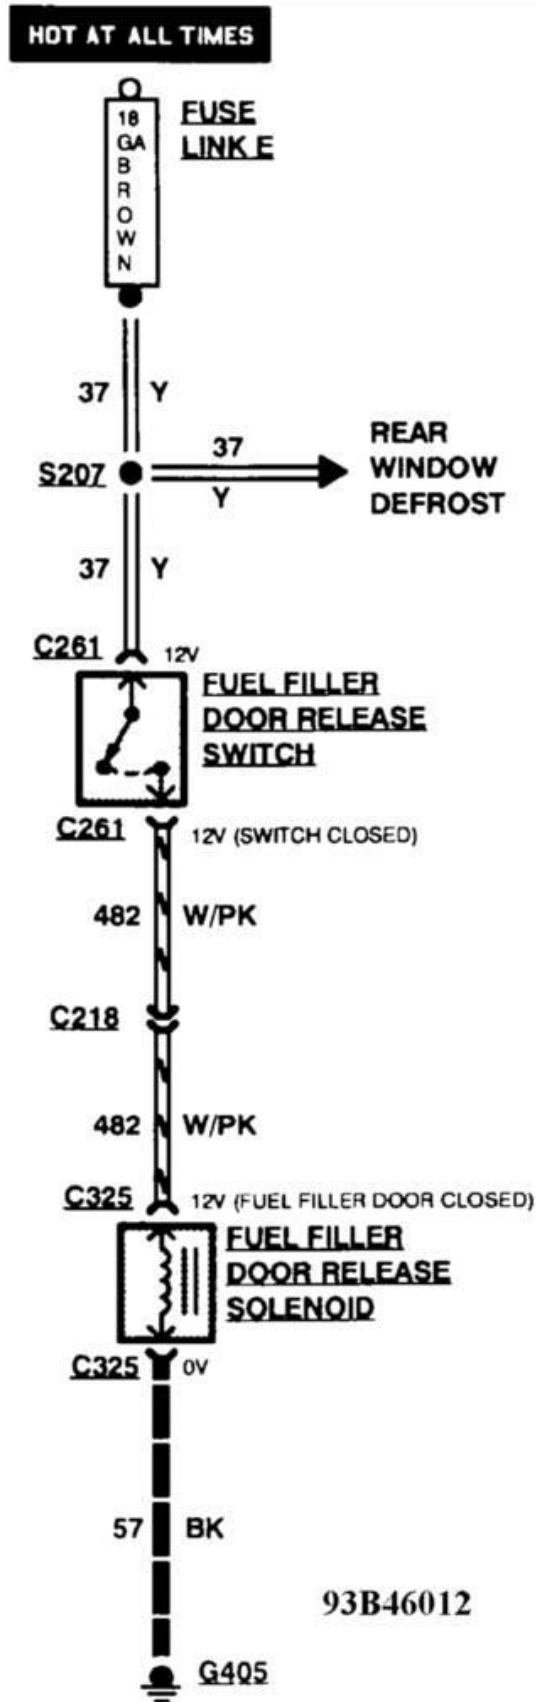




**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 87: Power Windows (1 Of 2)**  
 1993 Ford Taurus LX

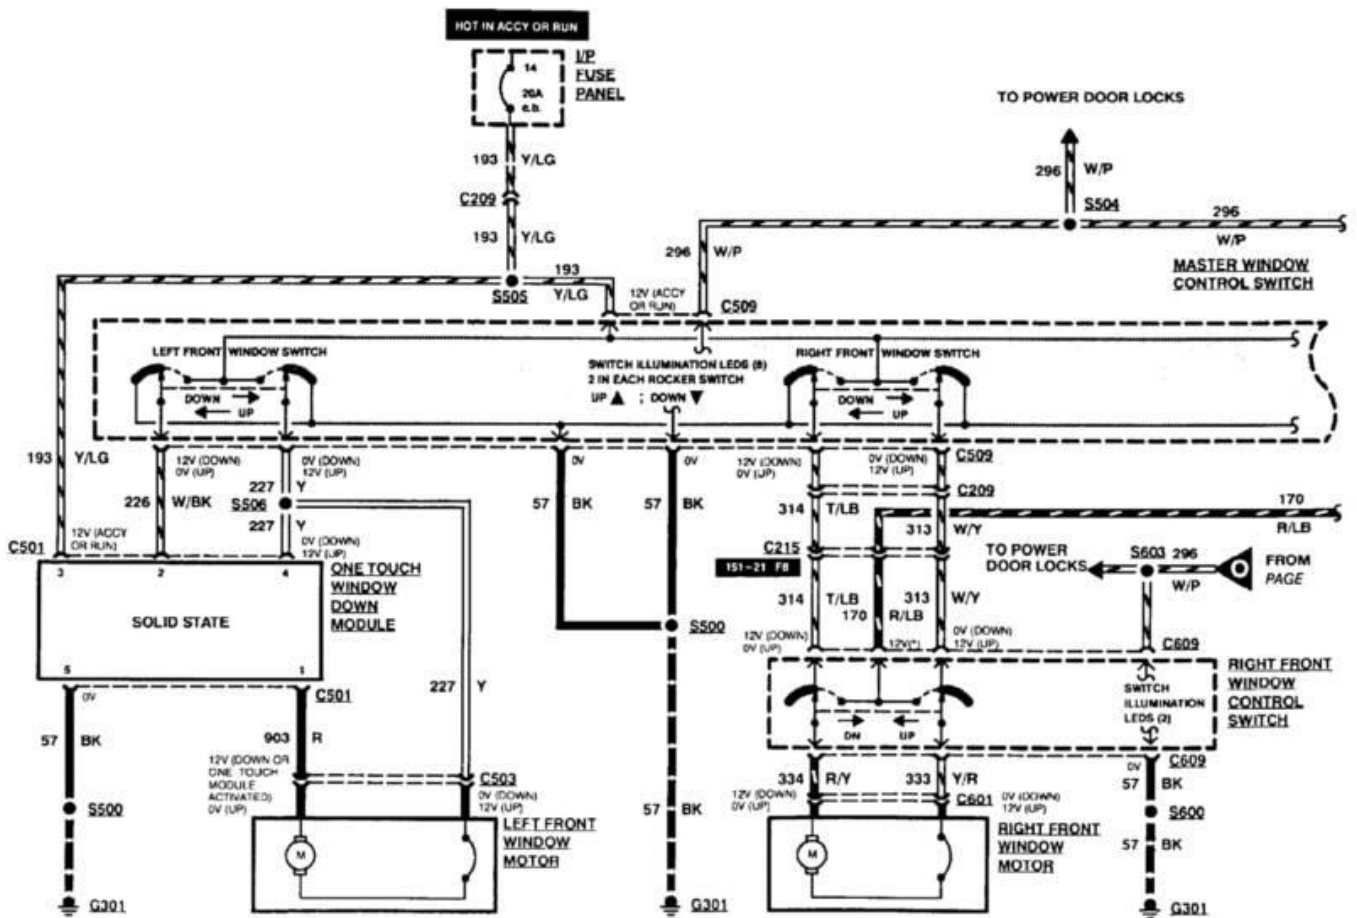


93J46028



**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 89: Rear Window Defogger Wiring Diagram**  
1993 Ford Taurus LX

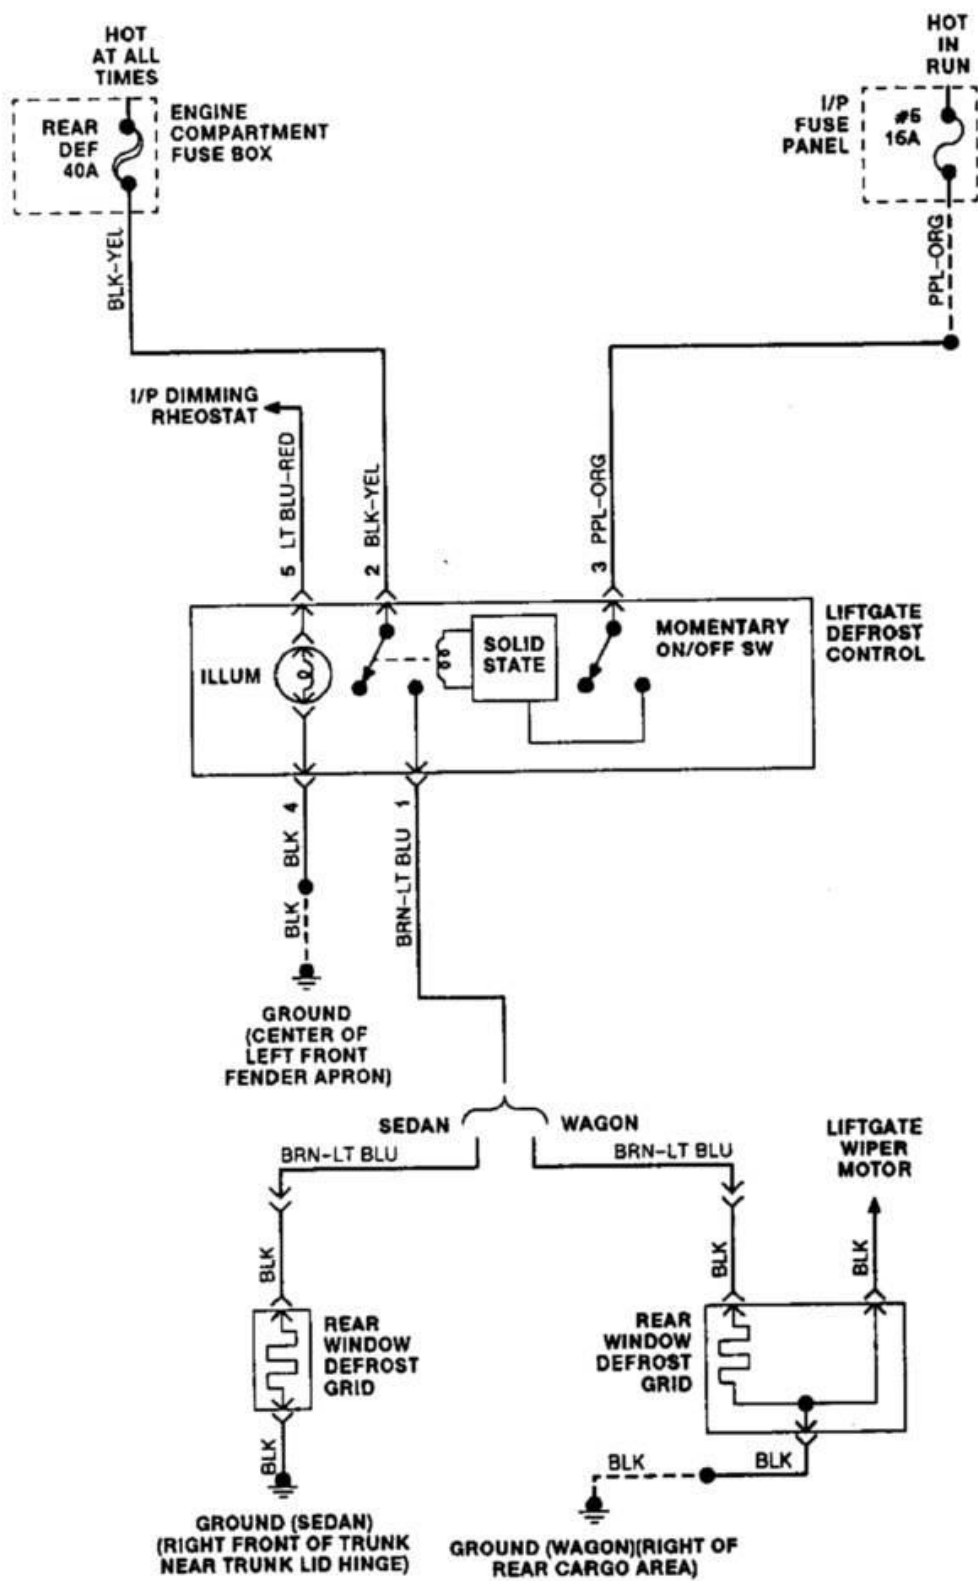


93D42435

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 90: Rear Wiper/Washer System Wiring Diagram**  
1993 Ford Taurus LX

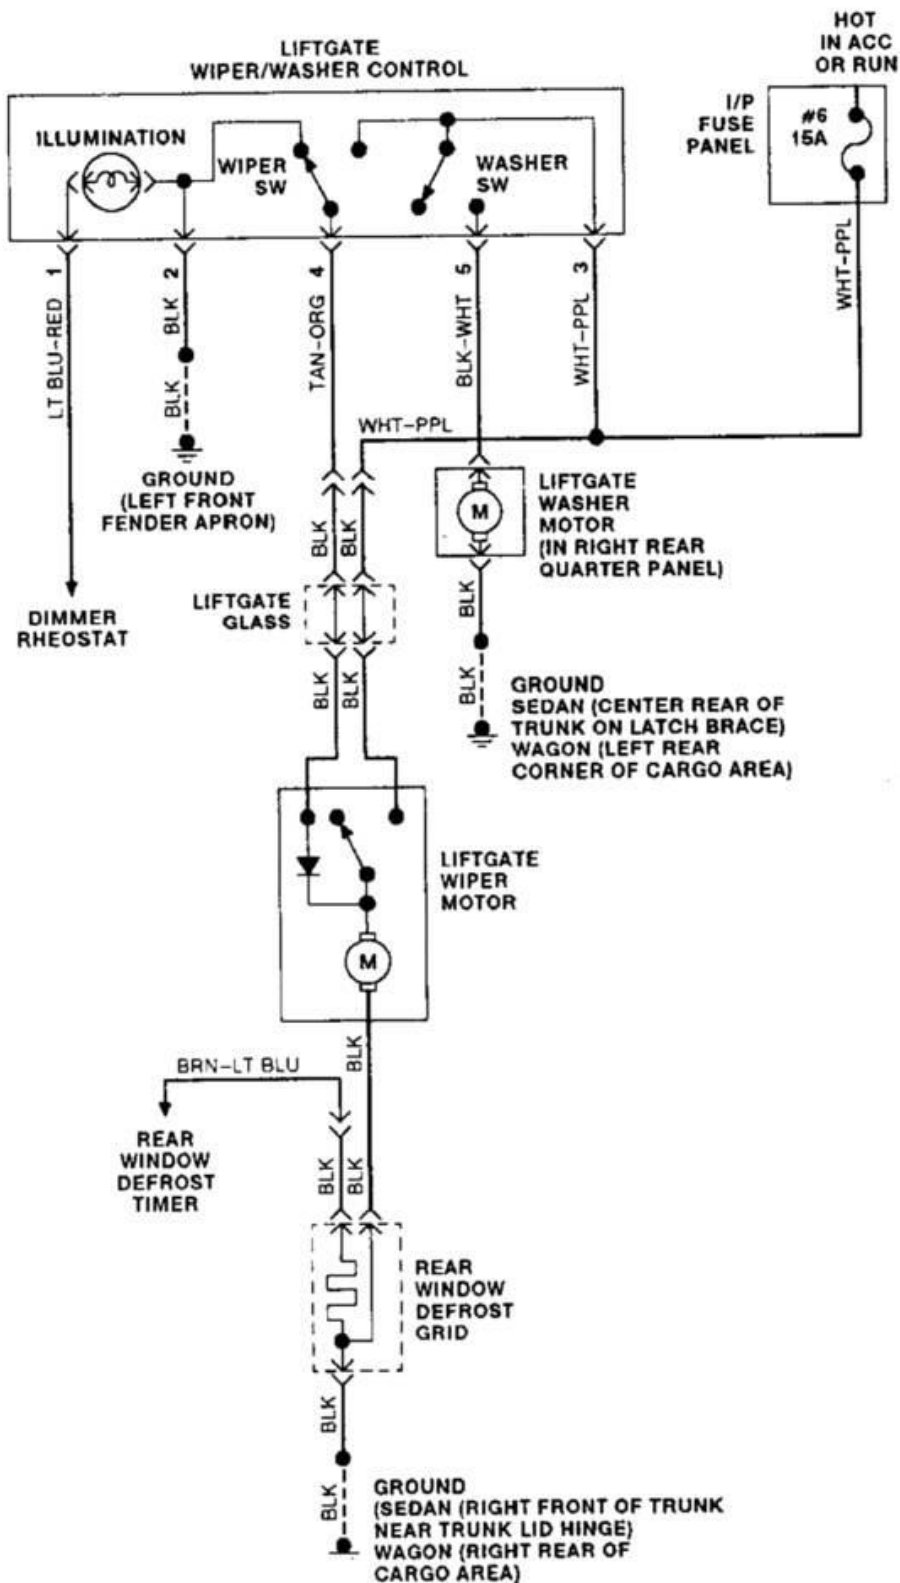


93F40001

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

Fig. 91: Steering Column Switches & Horn Circuit Wiring Diagram  
1993 Ford Taurus LX

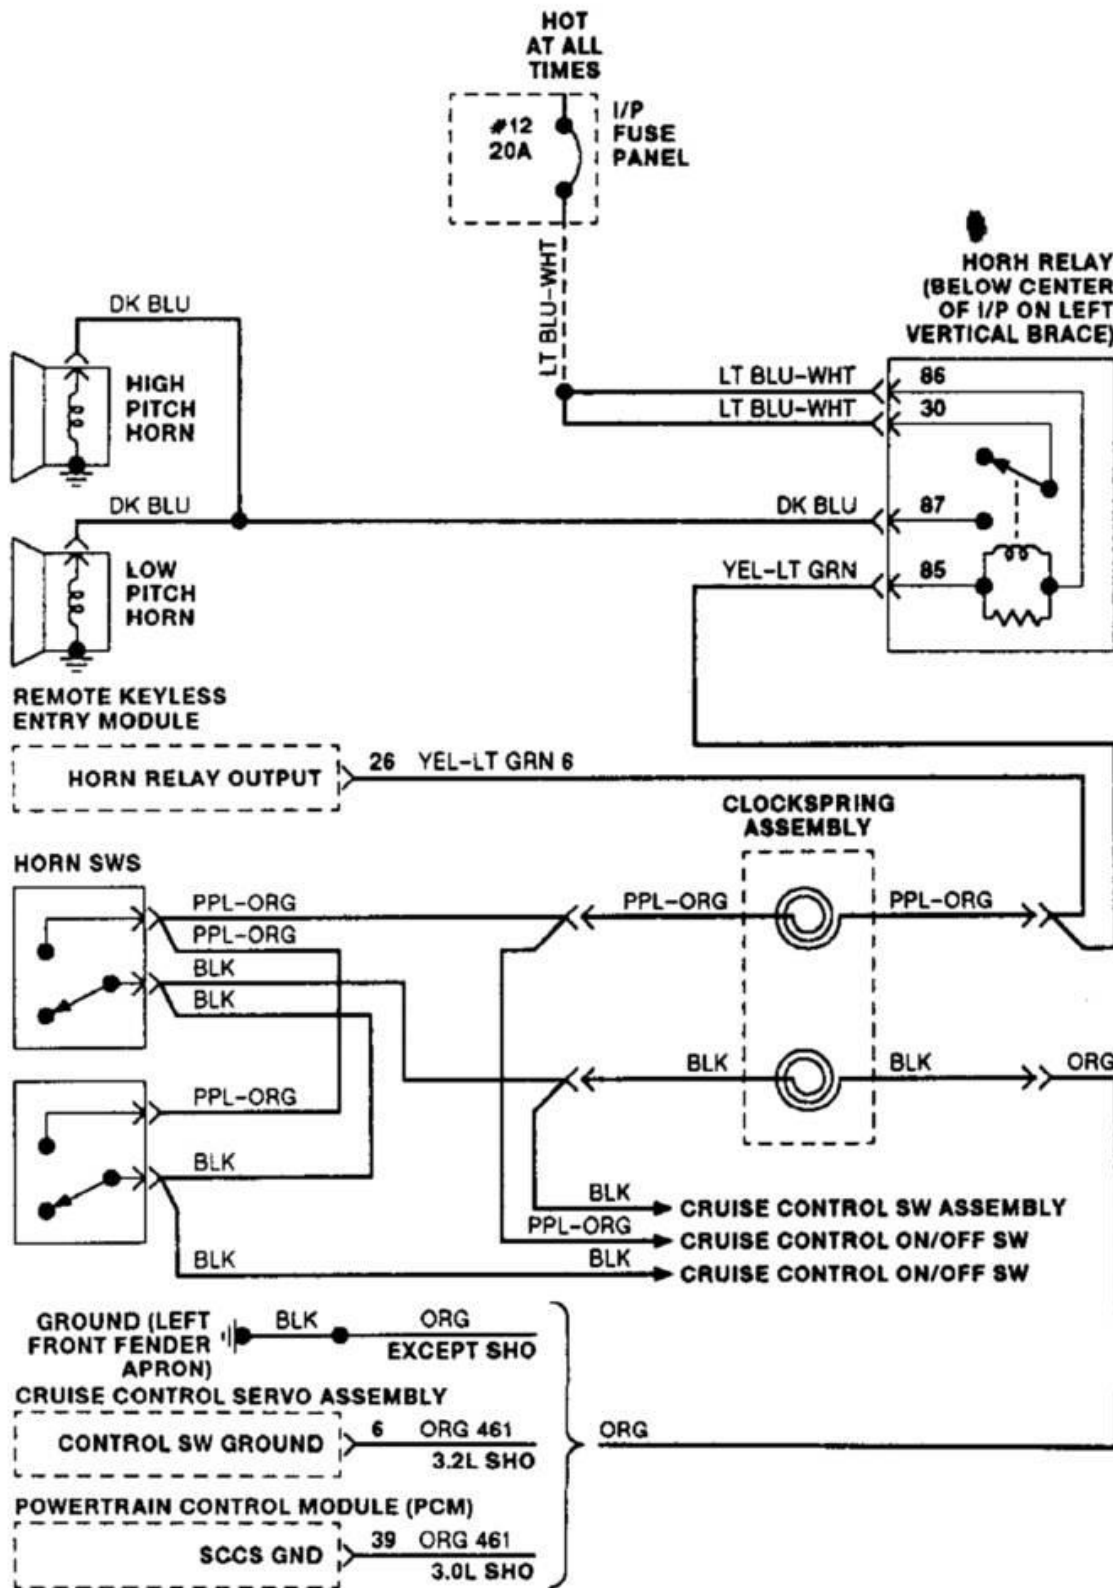


93C40198

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

**Fig. 92: Wiper System Wiring Diagram**  
1993 Ford Taurus LX

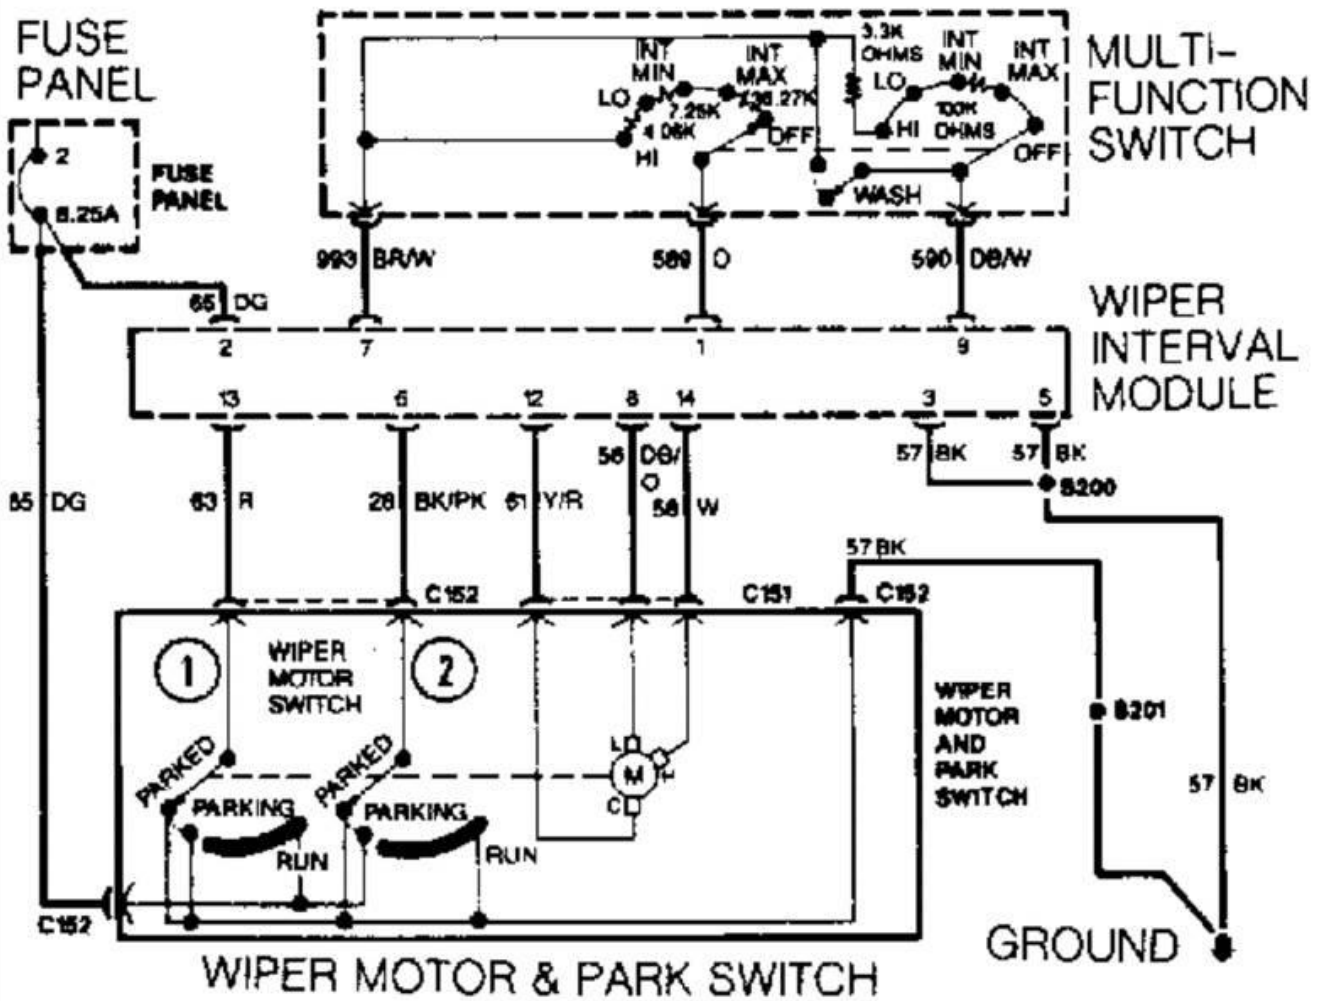


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 93: Front Wiper/Washer System Wiring Diagram**  
1993 Ford Taurus LX

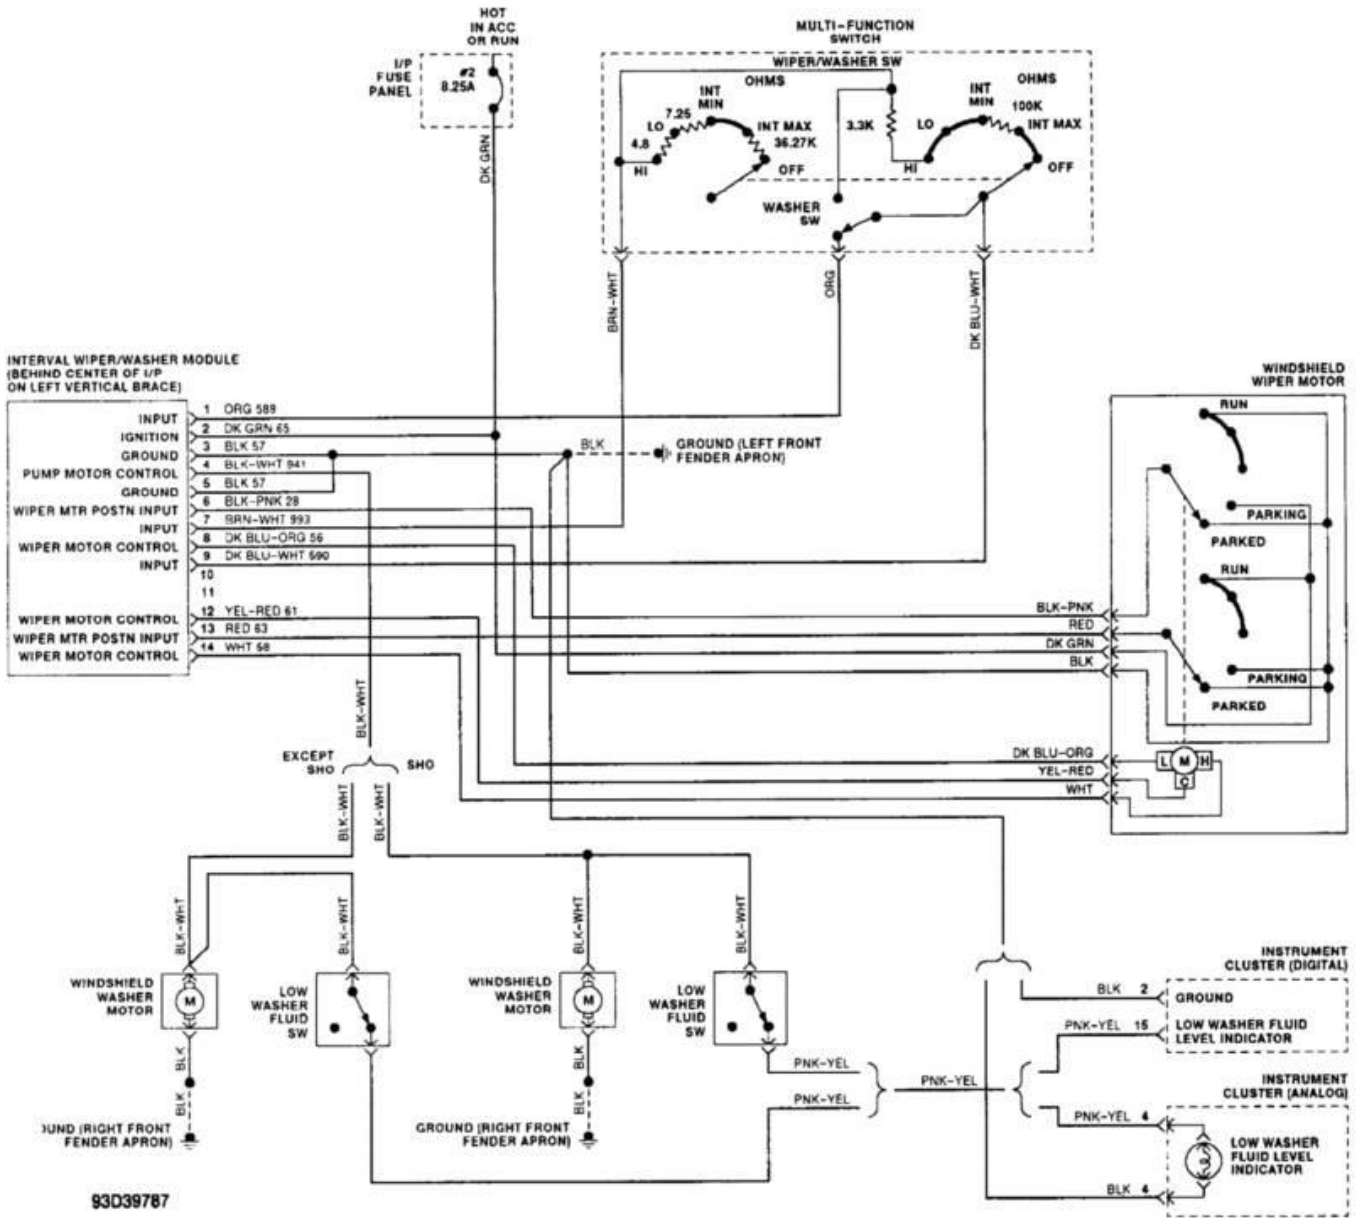


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 94: Auto A/C-Heater Sys Wiring Diagram (1 Of 4)**  
1993 Ford Taurus LX

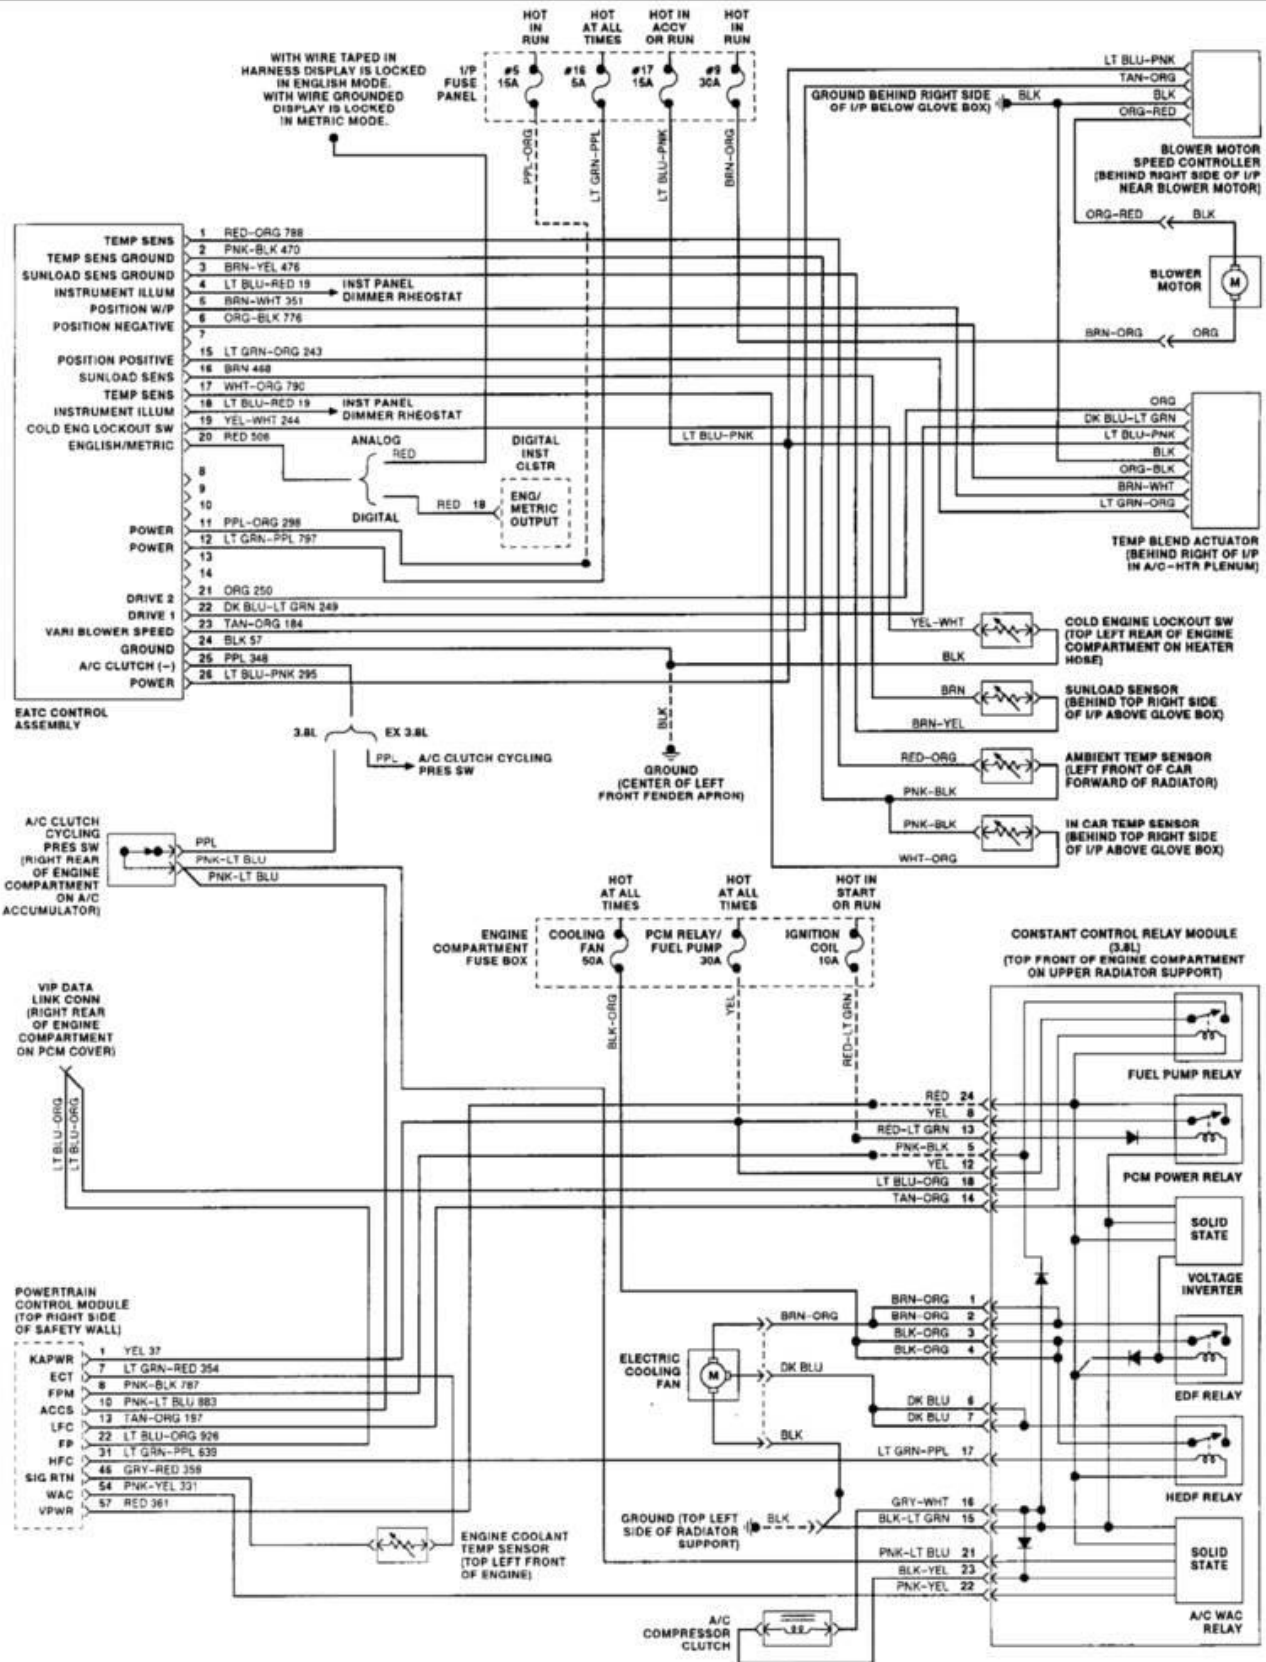

G93G29054




## WIRING DIAGRAMS

### Power & Ground Distribution

PAVLIN


Fig. 95: Auto A/C-Heater Sys Wiring Diagram (2 Of 4)  
1993 Ford Taurus LX

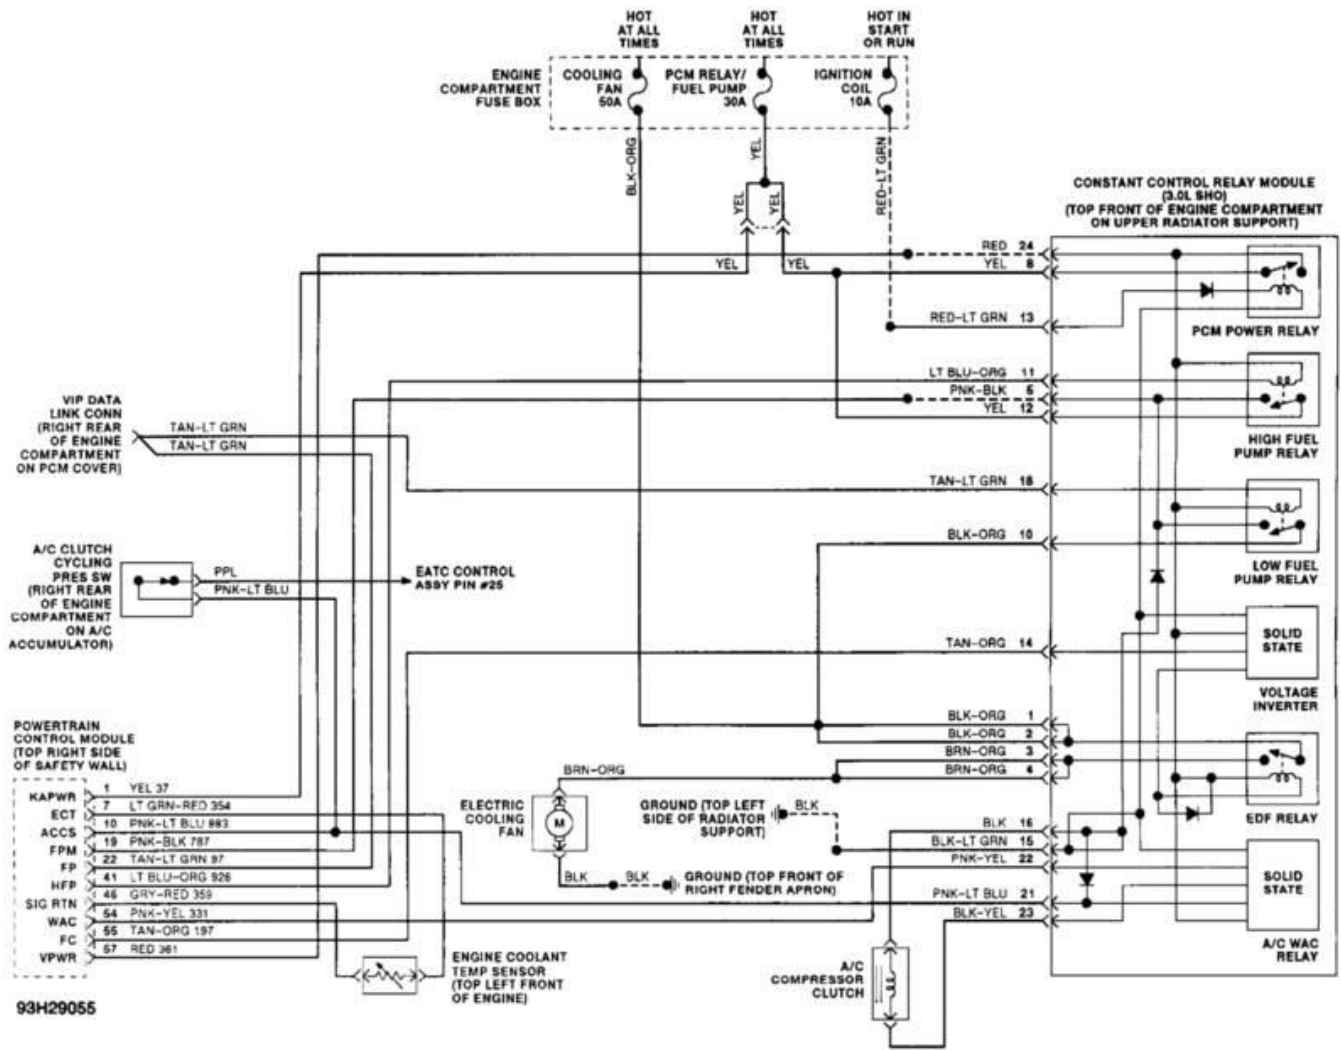

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

Fig. 96: Auto A/C-Heater Sys Wiring Diagram (3 Of 4)  
1993 Ford Taurus LX

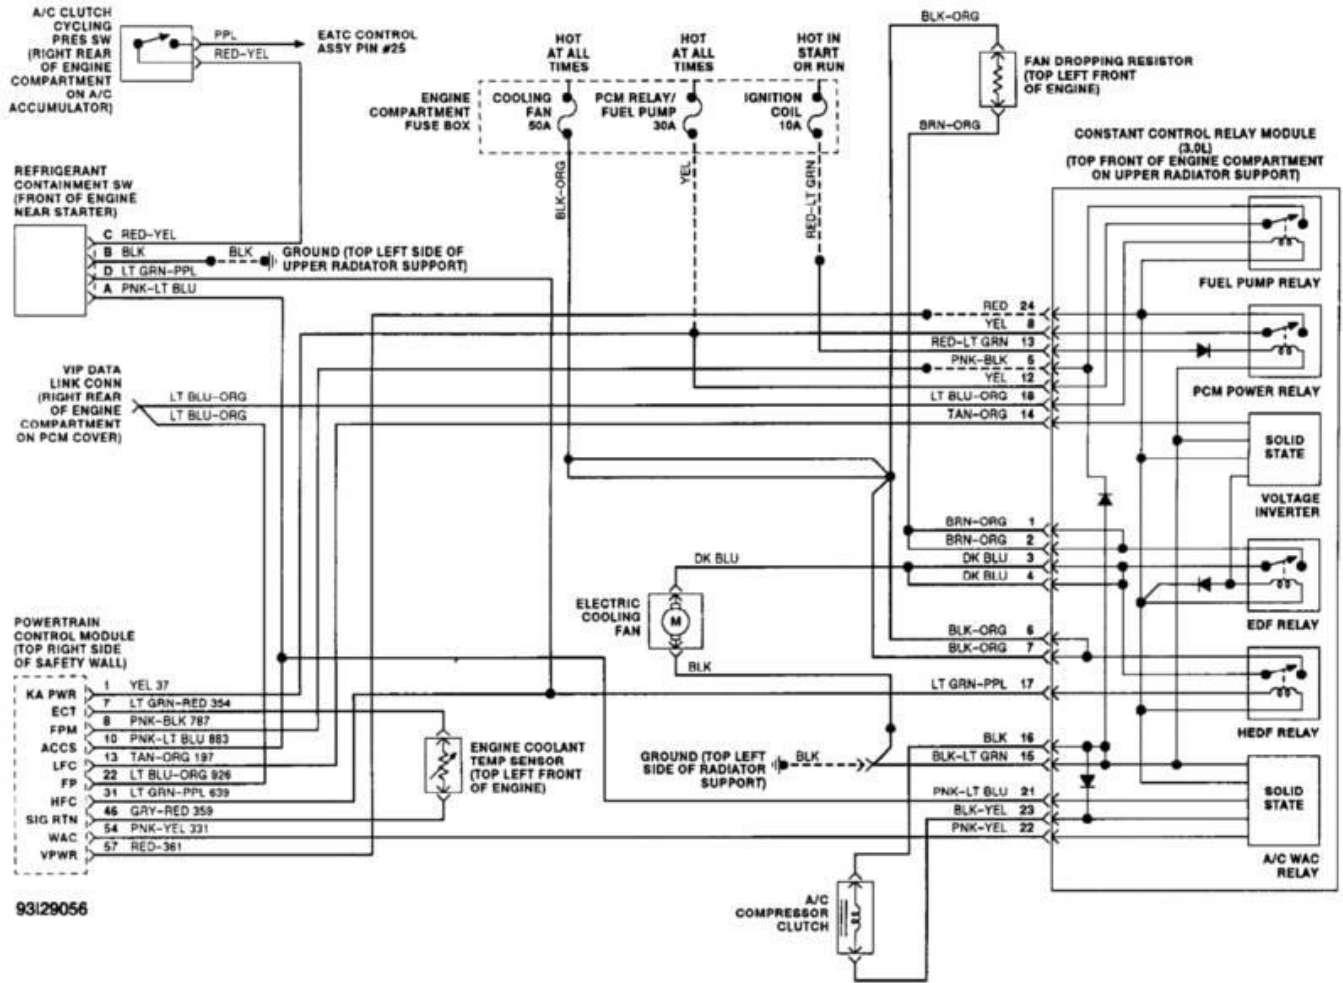


# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN


Fig. 97: Auto A/C-Heater Sys Wiring Diagram (4 Of 4)  
1993 Ford Taurus LX

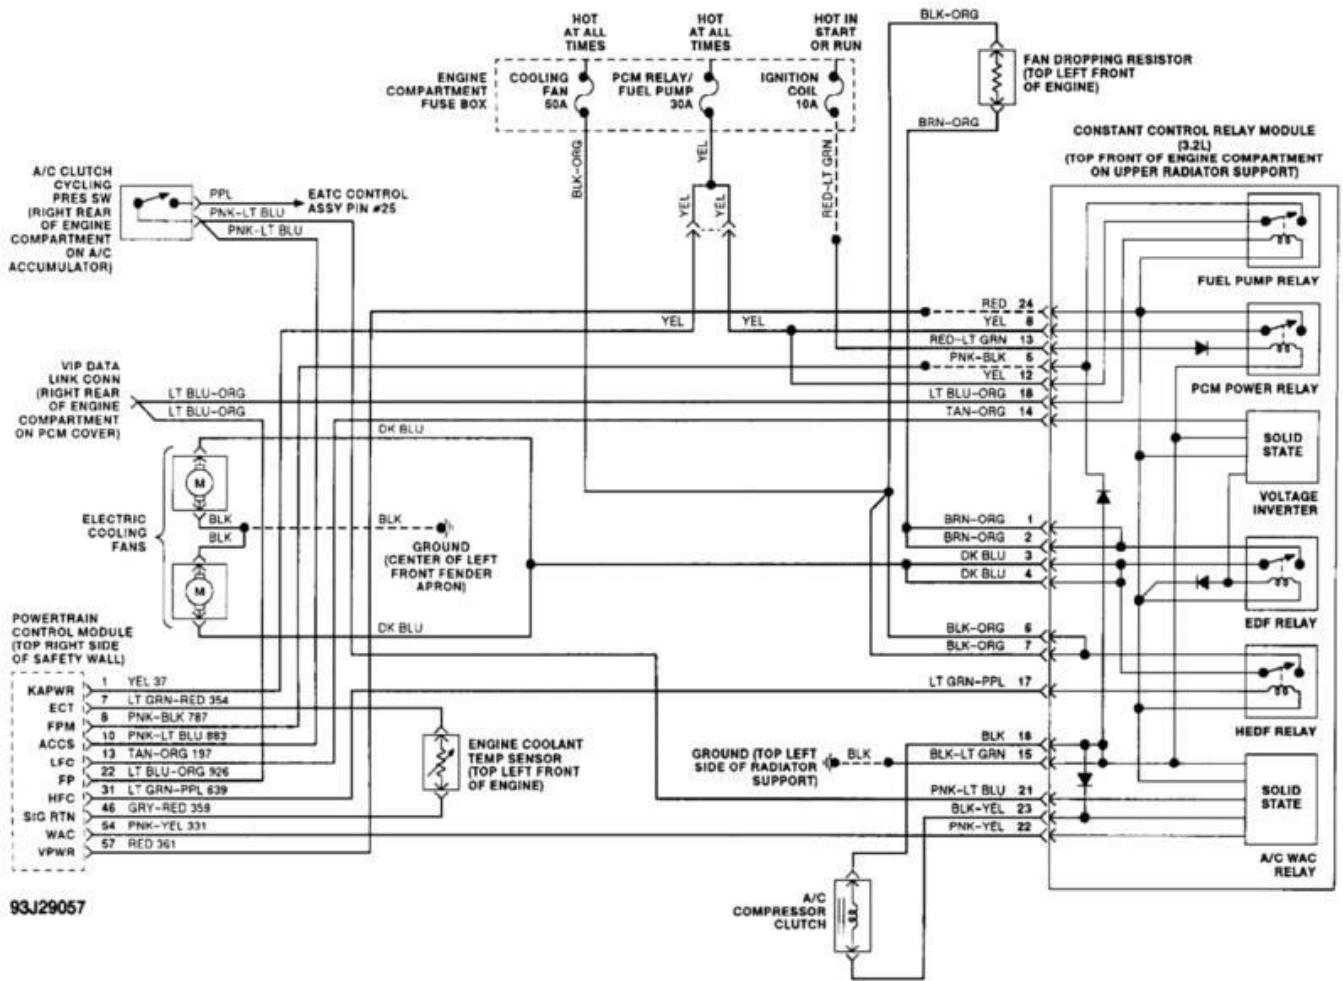

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 98: Heater System Wiring Diagram**  
1993 Ford Taurus LX

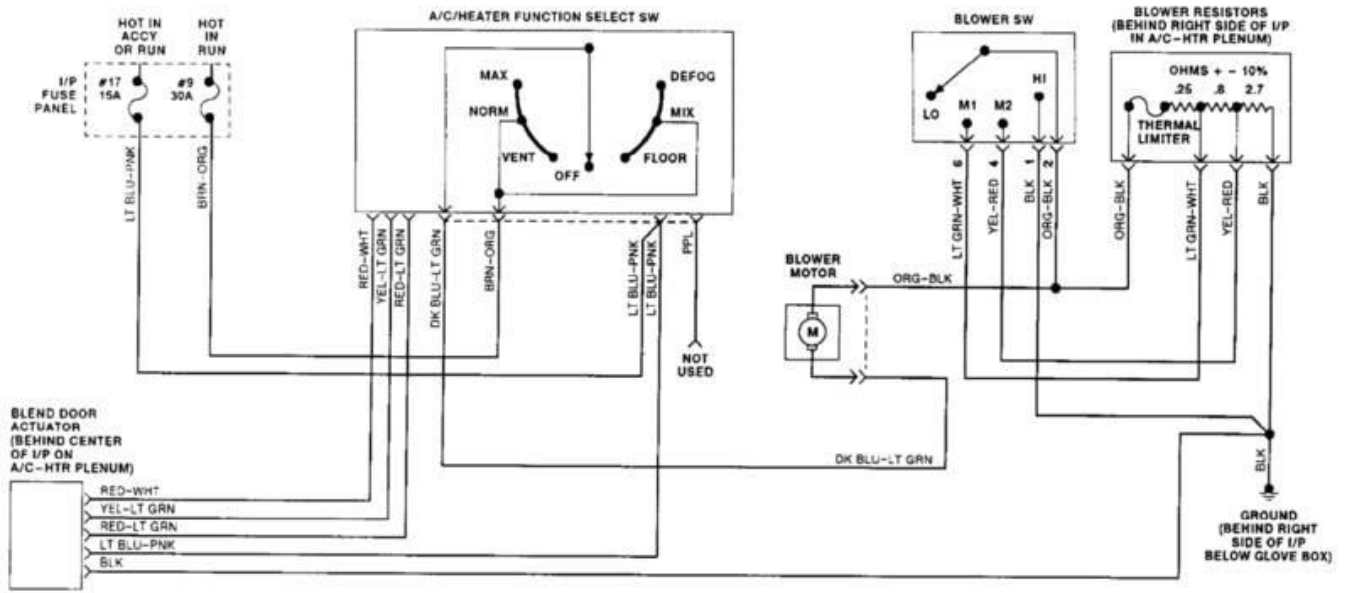


93F29038

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 99: Man. A/C-Heater Sys. Wiring Diagram (1 Of 4)  
1993 Ford Taurus LX

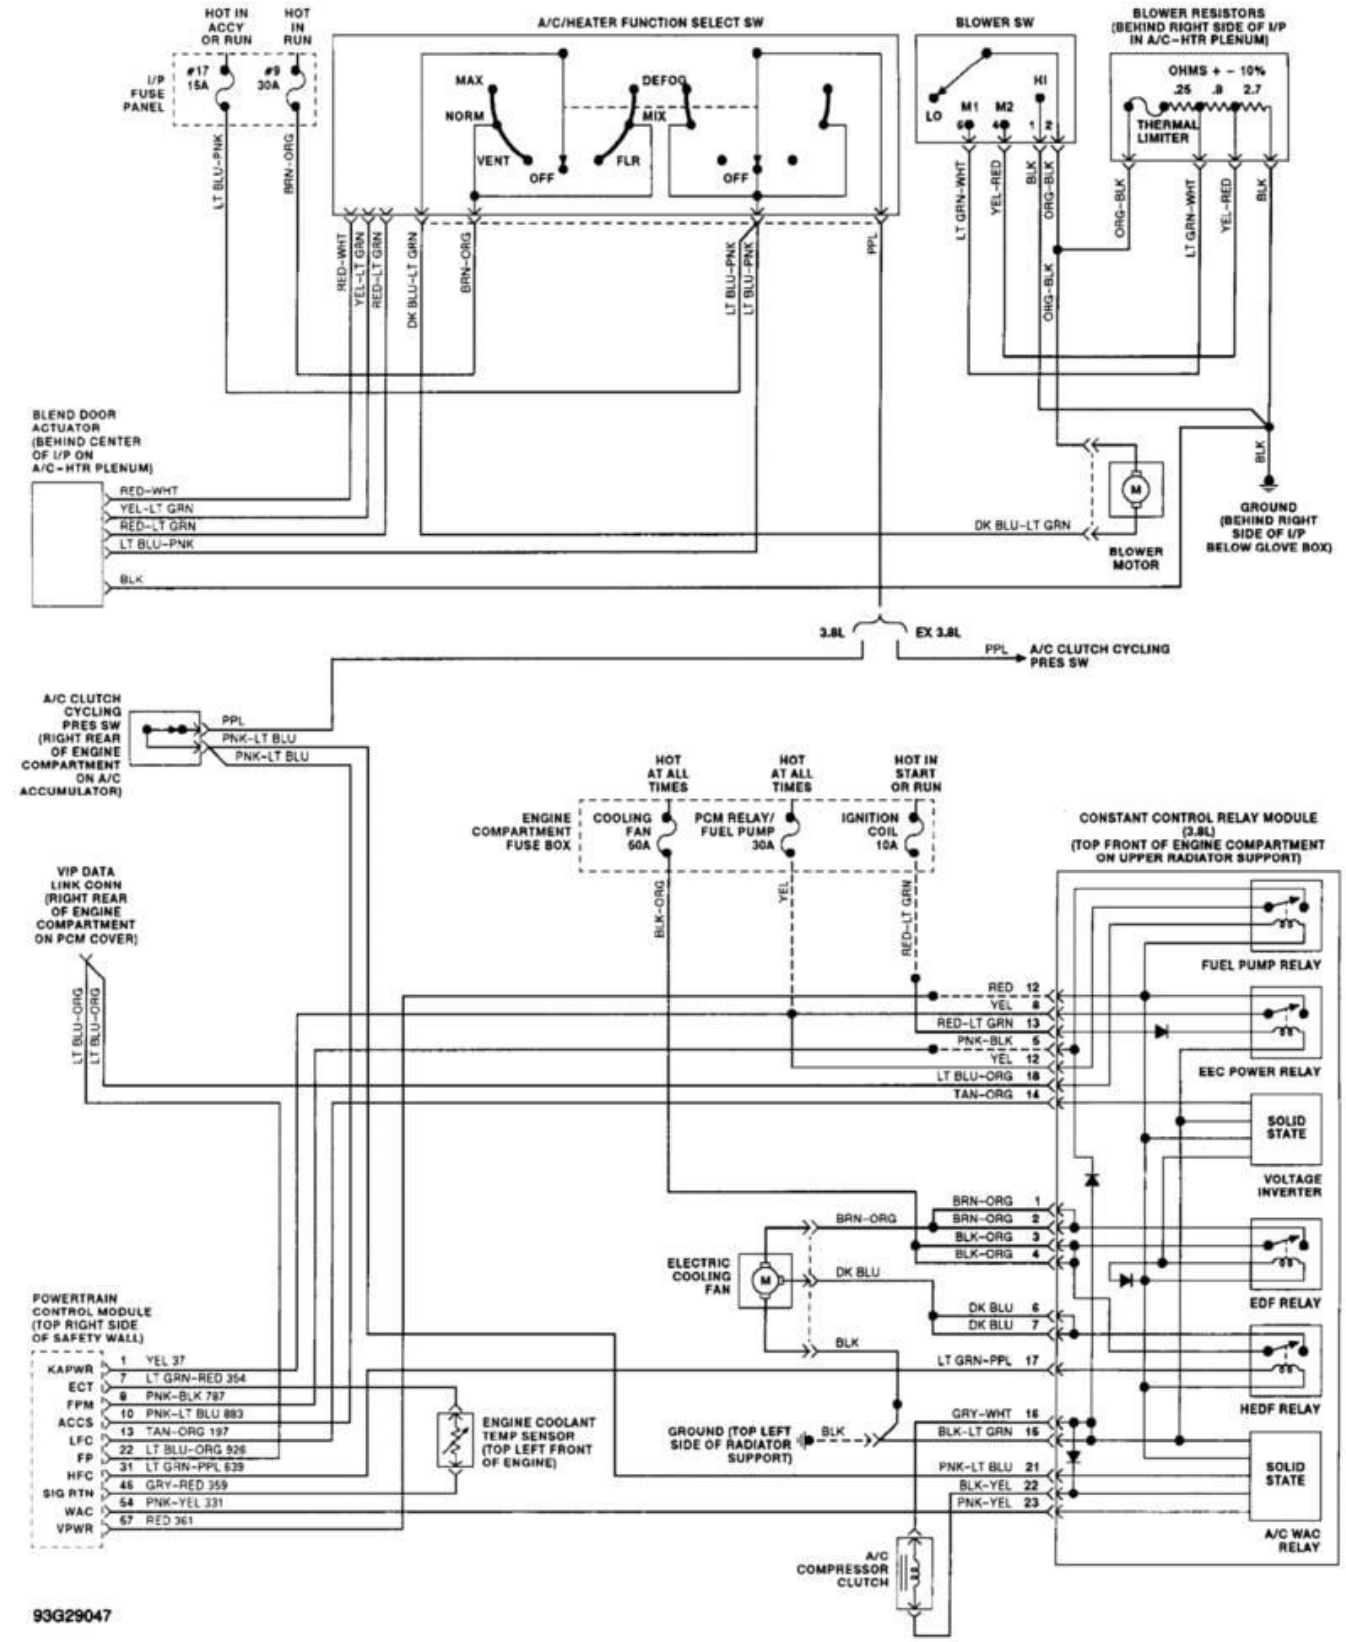


93G29047

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN


Fig. 100: Man. A/C-Heater Sys. Wiring Diagram (2 Of 4)  
1993 Ford Taurus LX

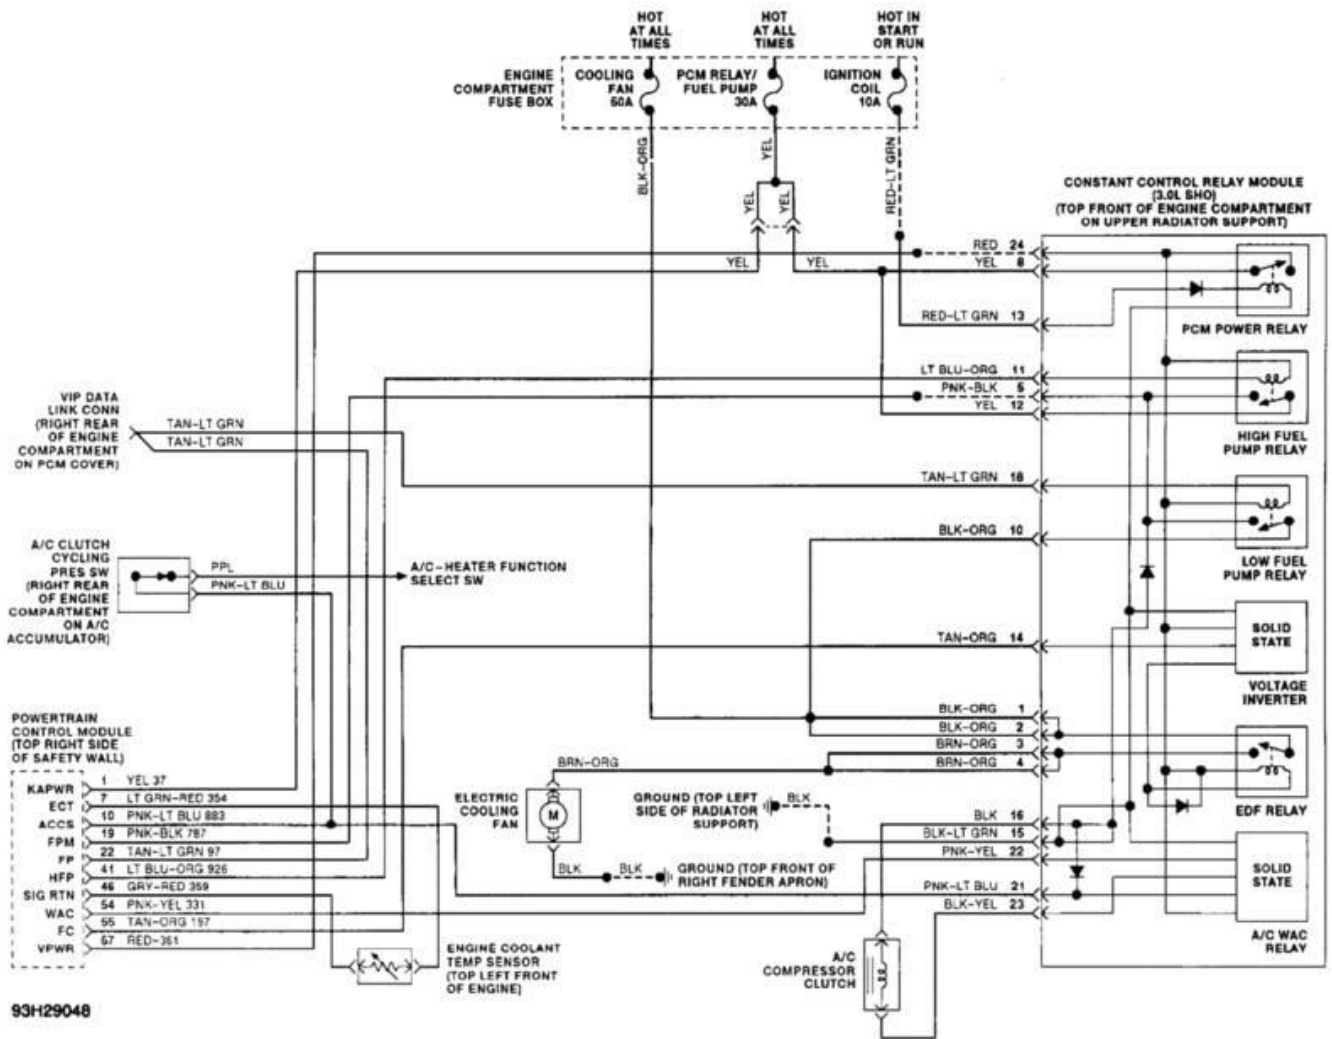

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN


Fig. 101: Man. A/C-Heater Sys. Wiring Diagram (3 Of 4)  
1993 Ford Taurus LX

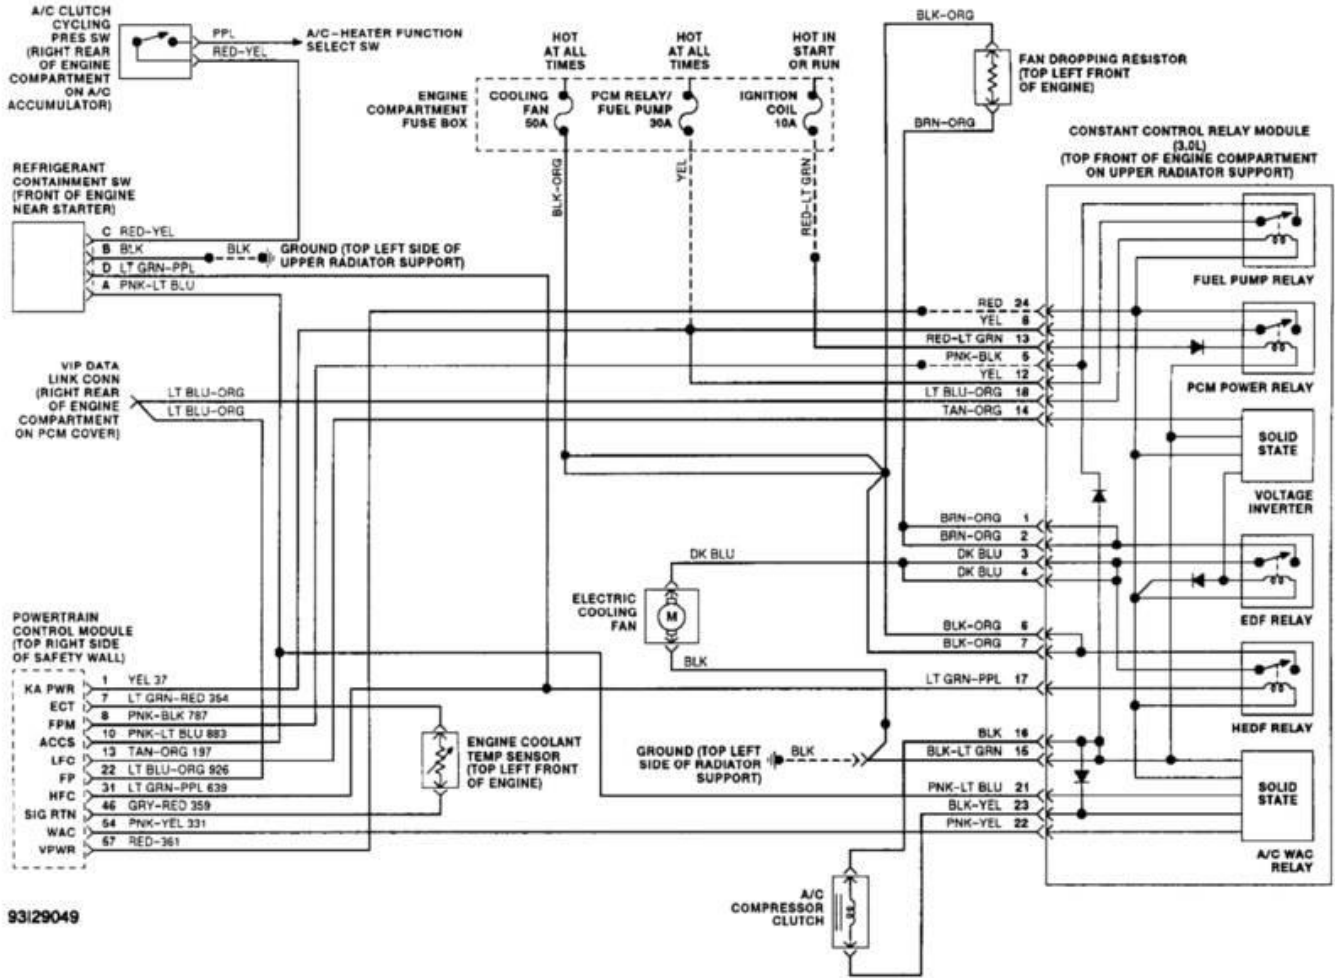

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

Fig. 102: Man. A/C-Heater Sys. Wiring Diagram (4 Of 4)  
1993 Ford Taurus LX

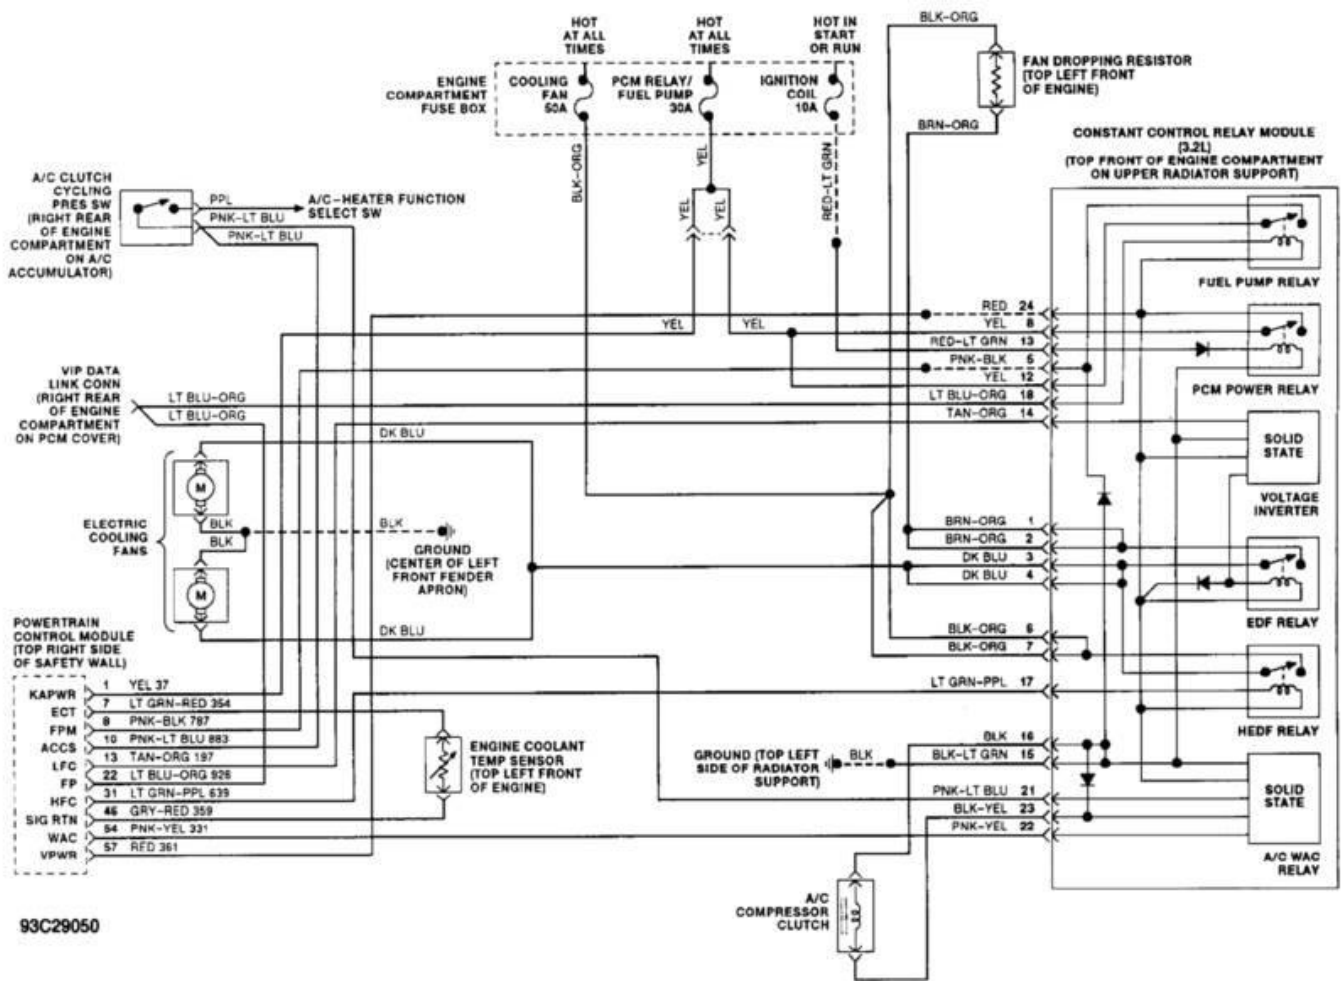




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 103: Anti-Lock Brake Wiring Diagram (1 Of 2)  
1993 Ford Taurus LX

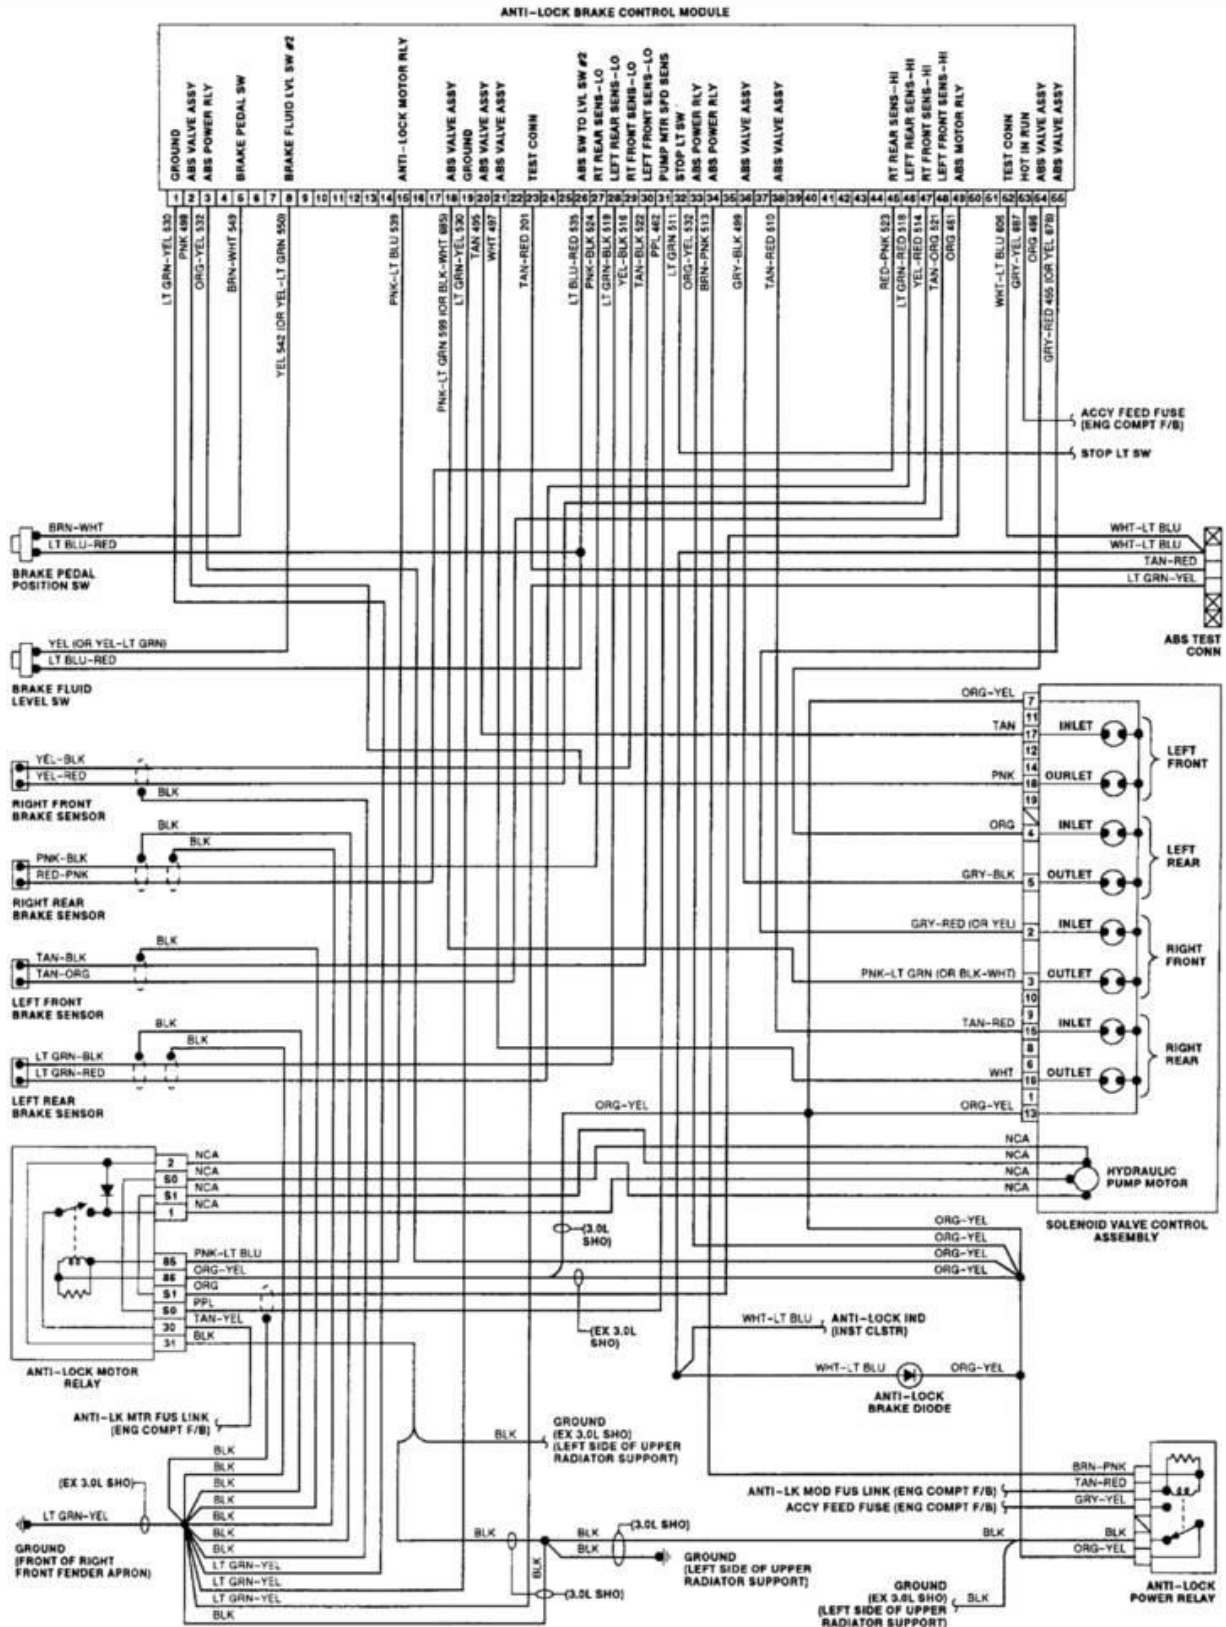


92b04975

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

**Fig. 104: Anti-Lock Brake Wiring Diagram (2 Of 2)**  
1993 Ford Taurus LX

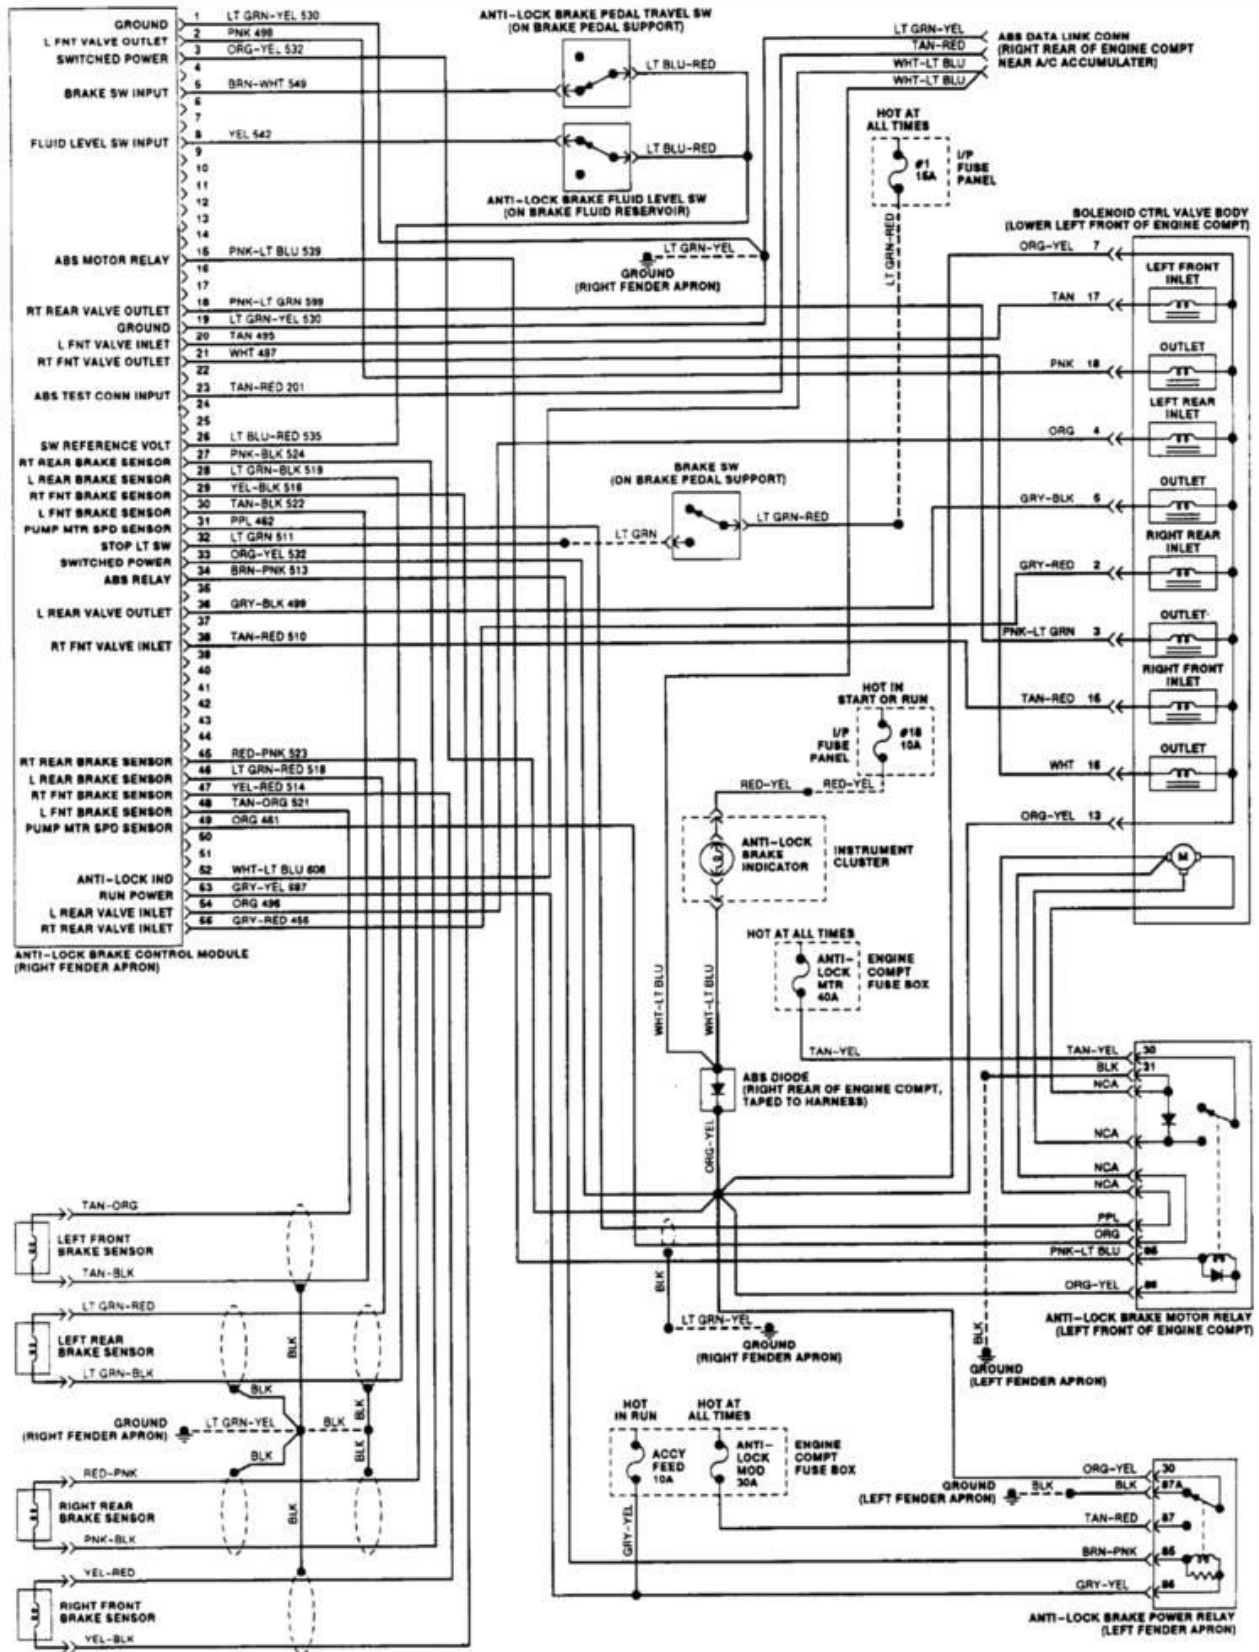


93F39482

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 105: Anti-Lock Brake Wiring Diagram (Taurus SHO)  
1993 Ford Taurus LX

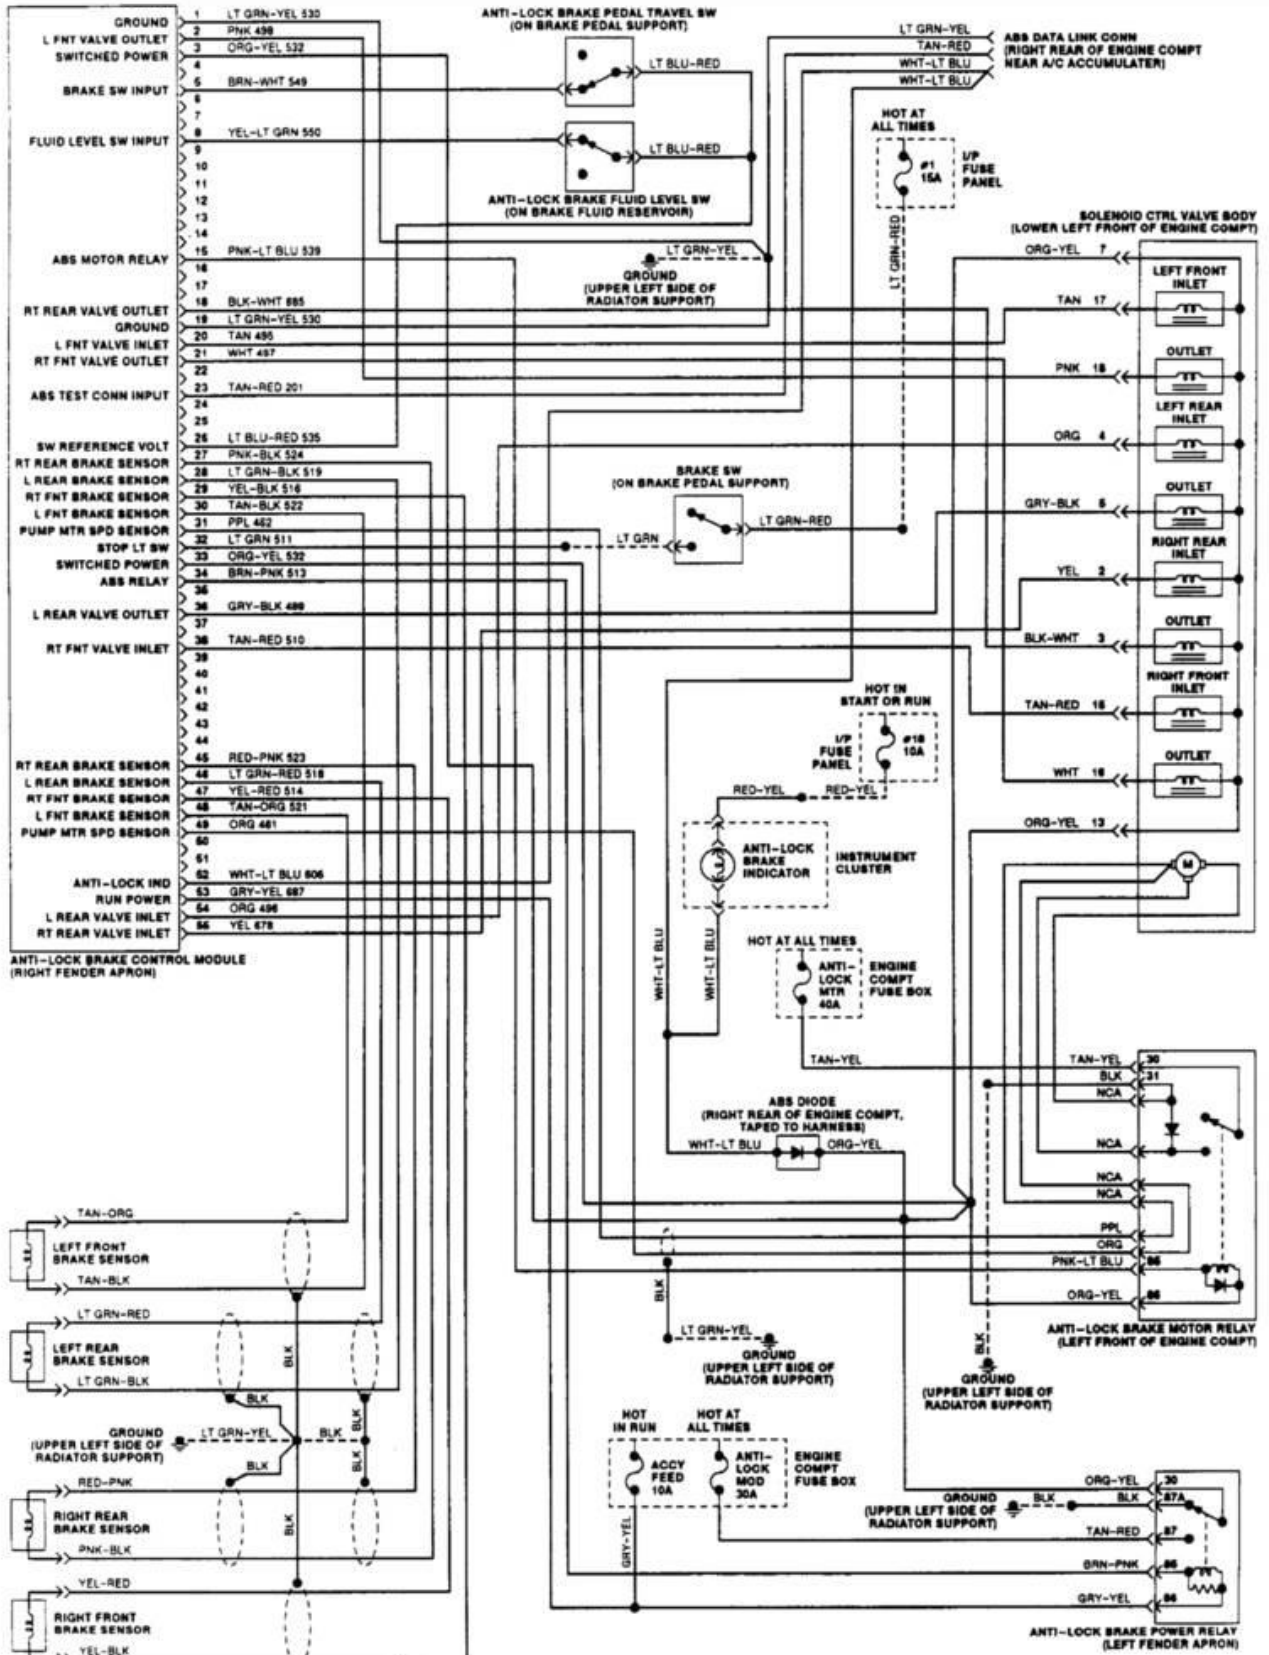


93H42207

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 106: Locating Regulator Wiring Plug Terminals  
(Internal Fan)  
1993 Ford Taurus LX

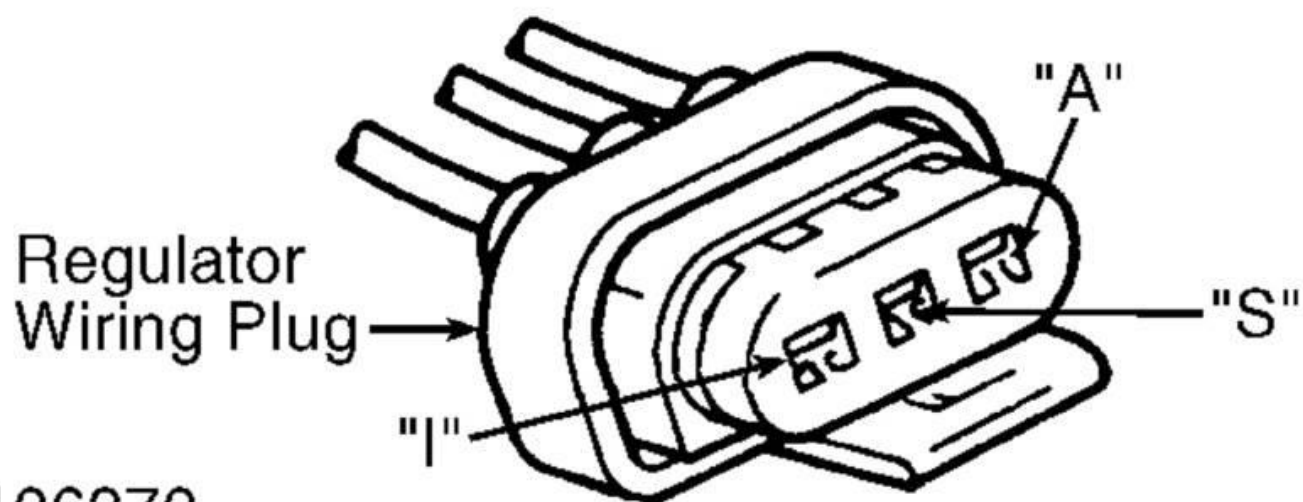


106370

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN


Fig. 107: Locating Alternator Wiring Plug "B+" (External Fan)  
1993 Ford Taurus LX

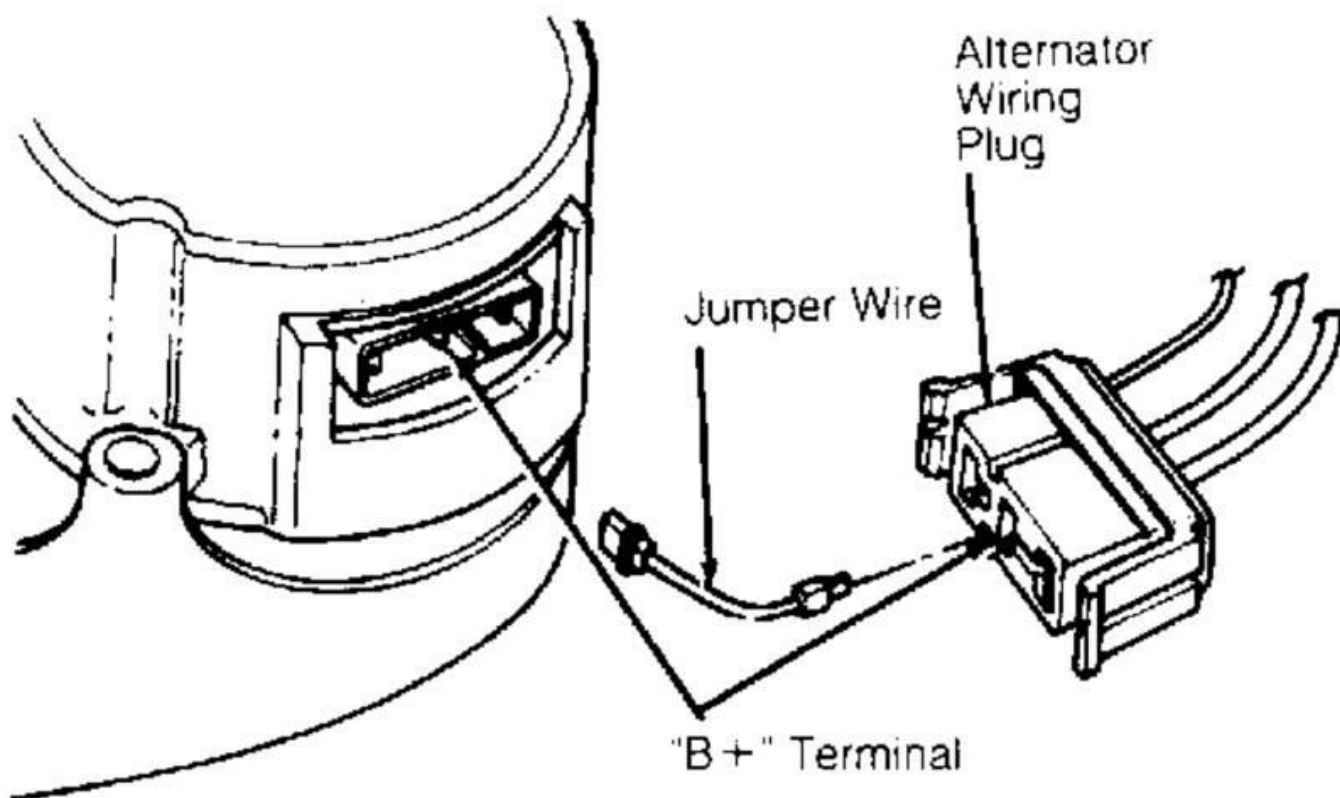

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 108: Starter System Wiring Diagram (Taurus SHO)**  
 1993 Ford Taurus LX

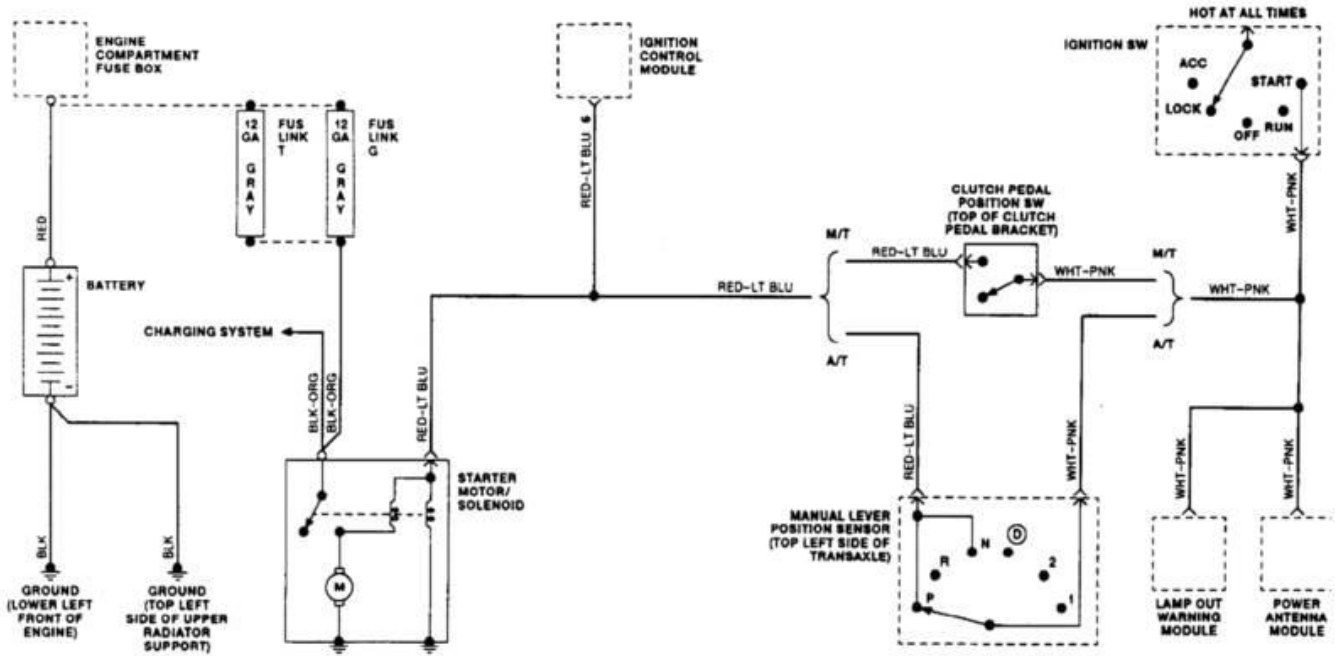


93D41320

**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

Fig. 109: Starter System Wiring Diagram (Exc SHO)  
1993 Ford Taurus LX

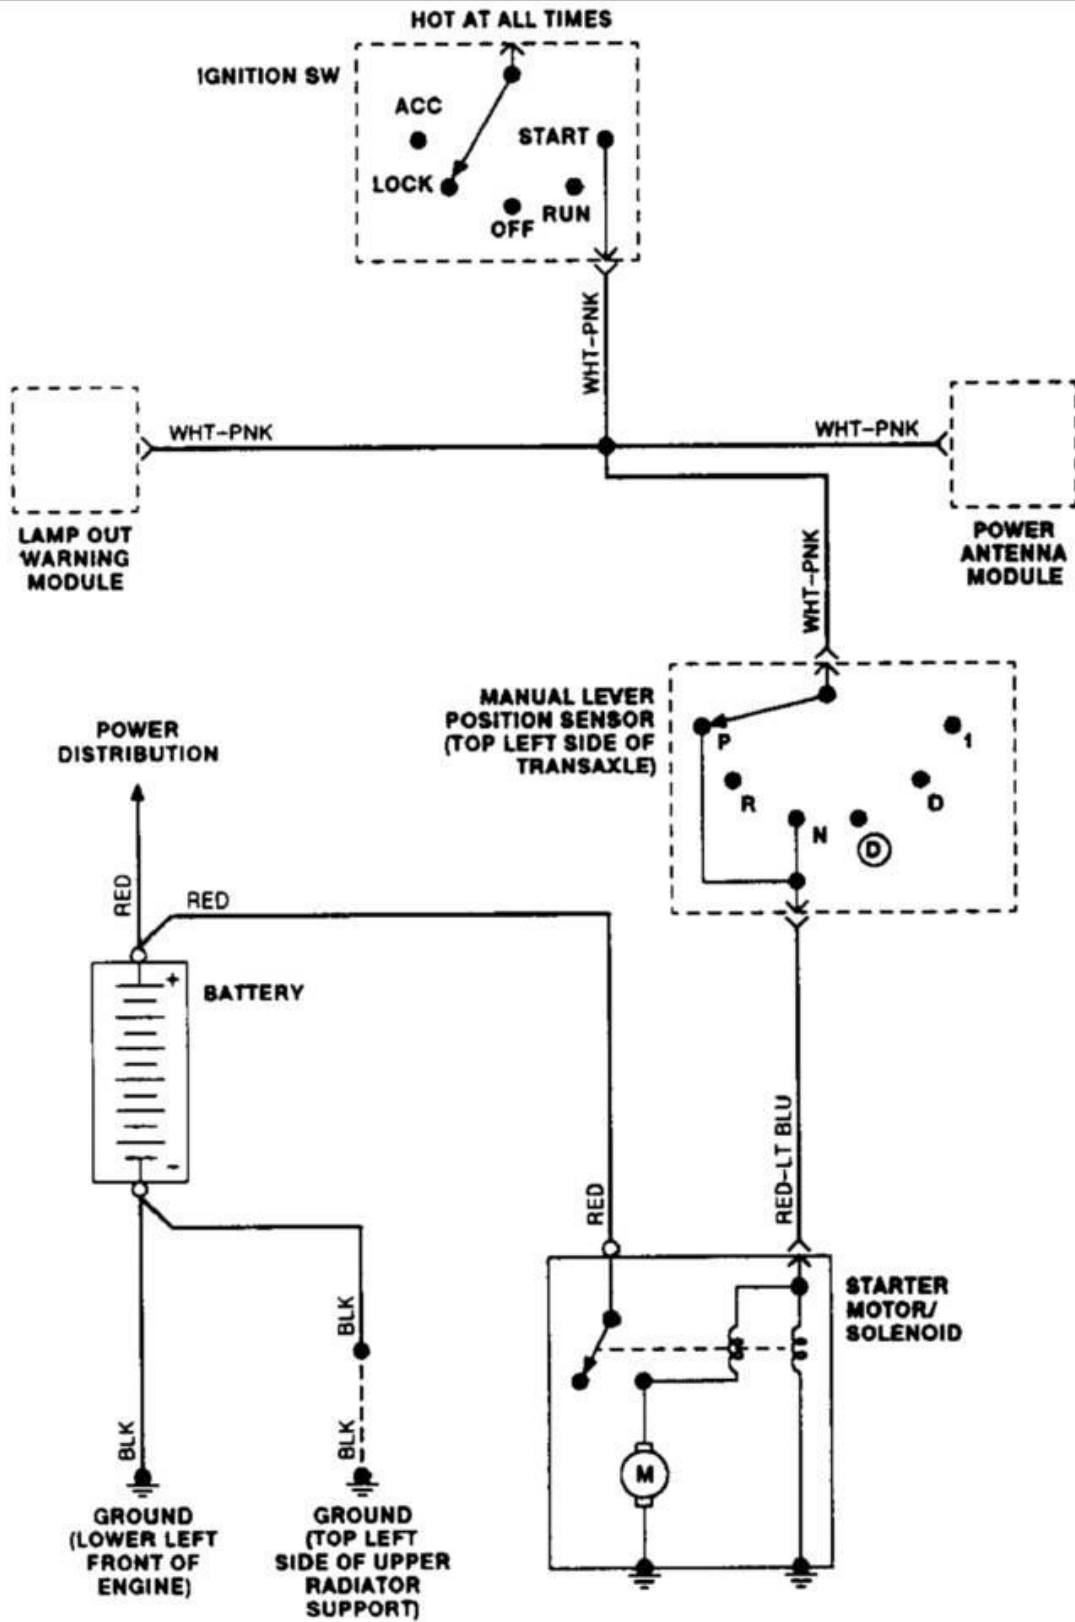


93G40010

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 110: Electric Cooling Fan Wiring Diagram (3.0L SHO)  
1993 Ford Taurus LX

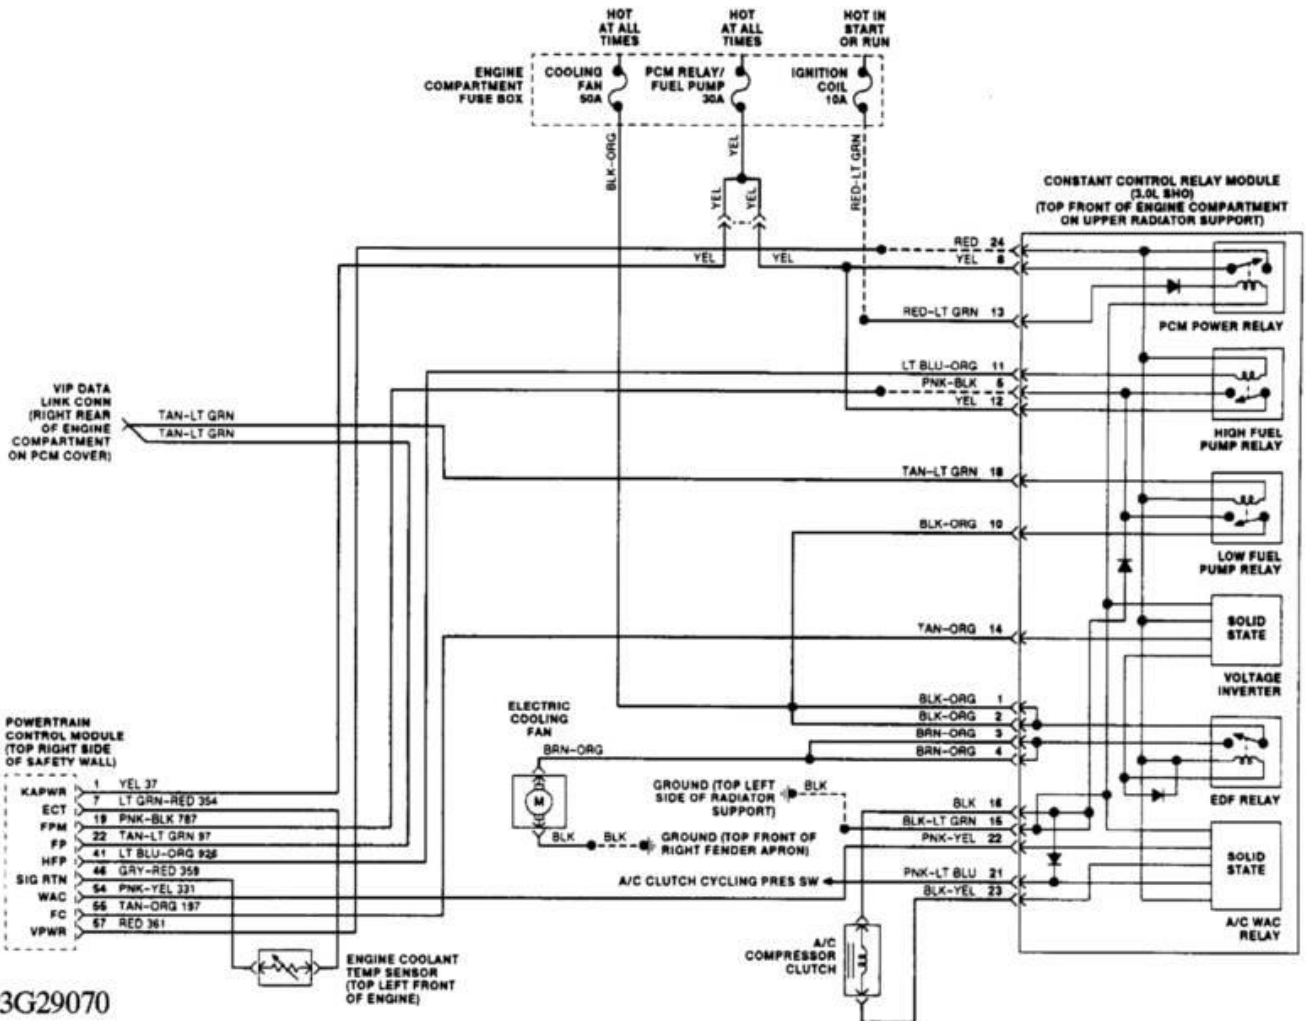




## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN


Fig. 111: Electric Cooling Fan Wiring Diagram (3.2L SHO)  
1993 Ford Taurus LX

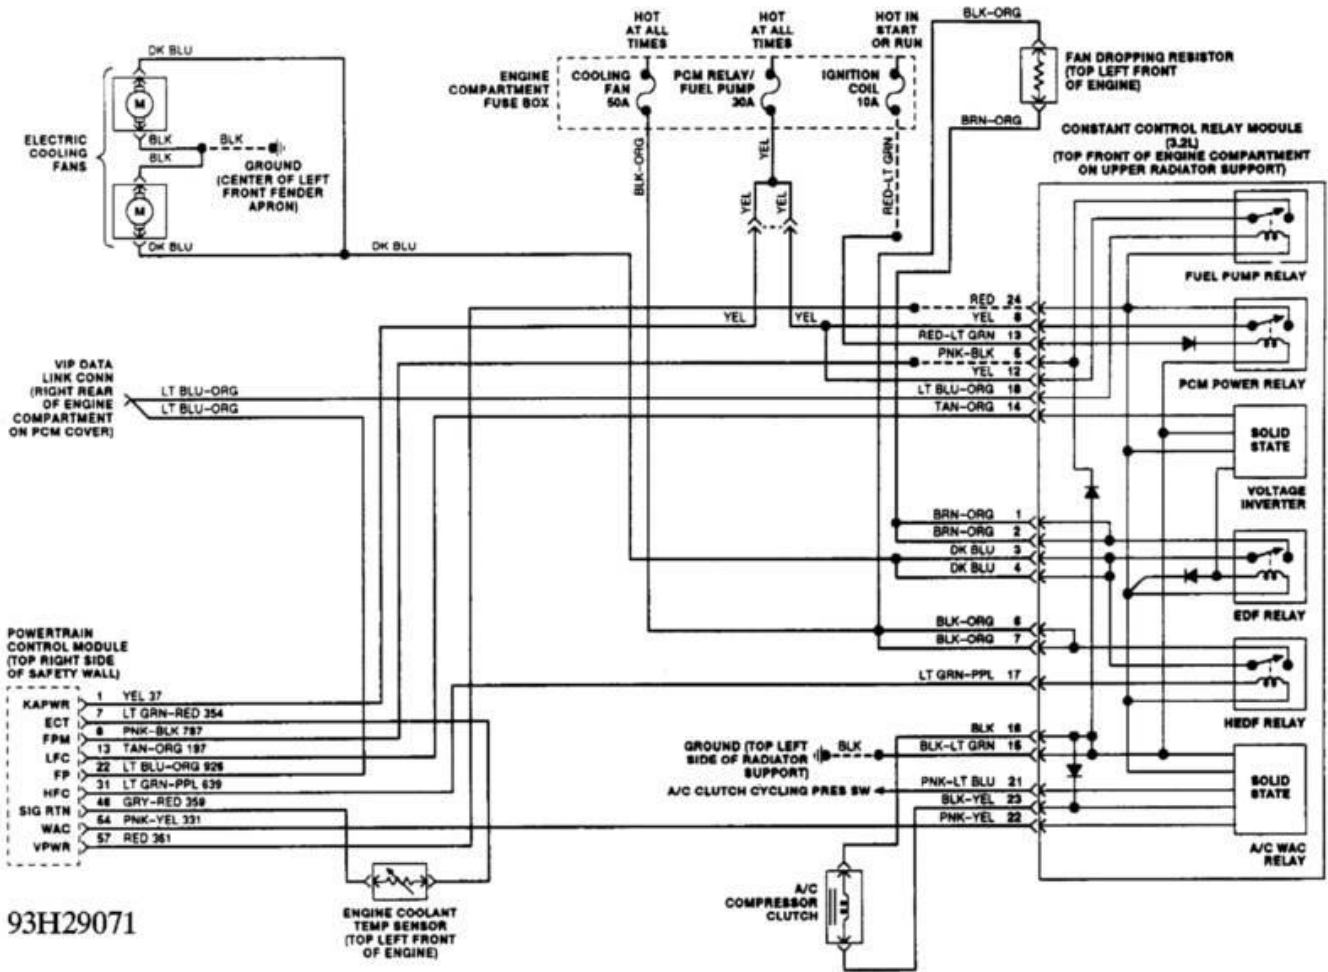

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 112: CID Wiring Harness Circuits (3.0L SHO)**  
1993 Ford Taurus LX

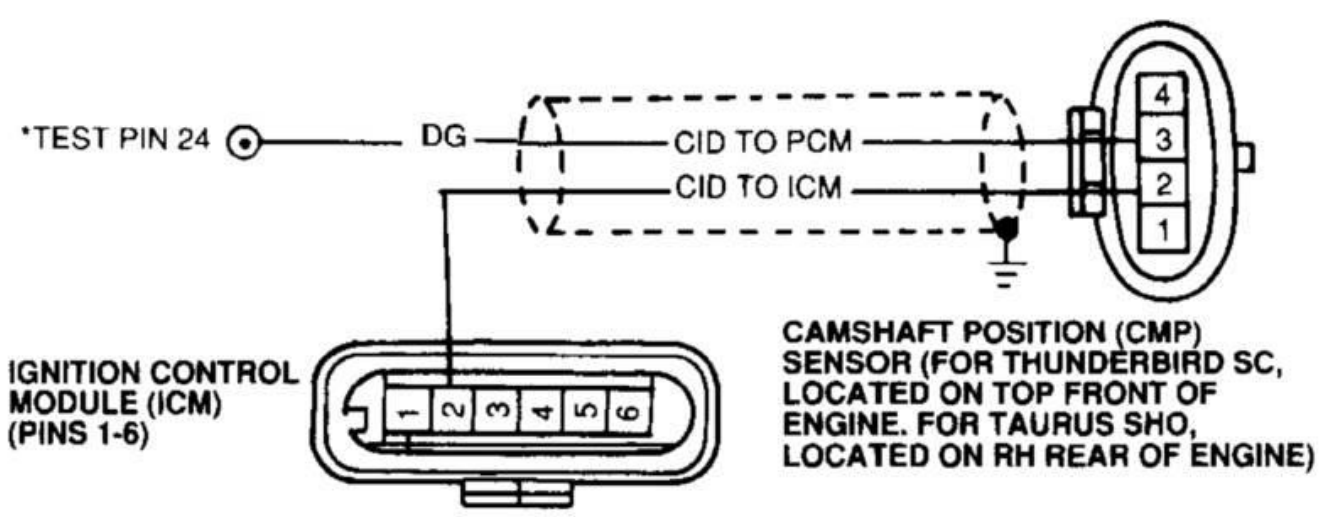


**\*TEST PINS LOCATED ON BREAKOUT BOX**  
**ALL HARNESS CONNECTORS VIEWED IN MATING SURFACE**

93D40538

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN


**Fig. 113: DIS Module Wiring Harness Connector  
Terminals (3.0L SHO)**  
1993 Ford Taurus LX

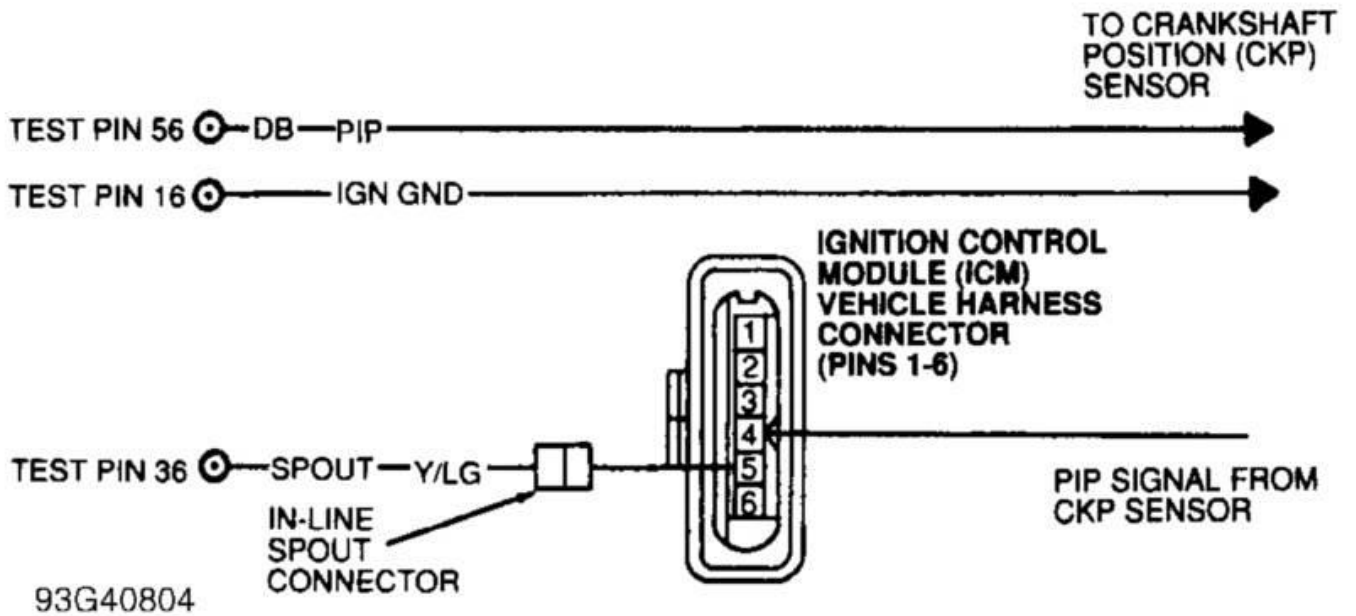

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 114: HO2S Sensor Wiring Harness Connector**  
1993 Ford Taurus LX

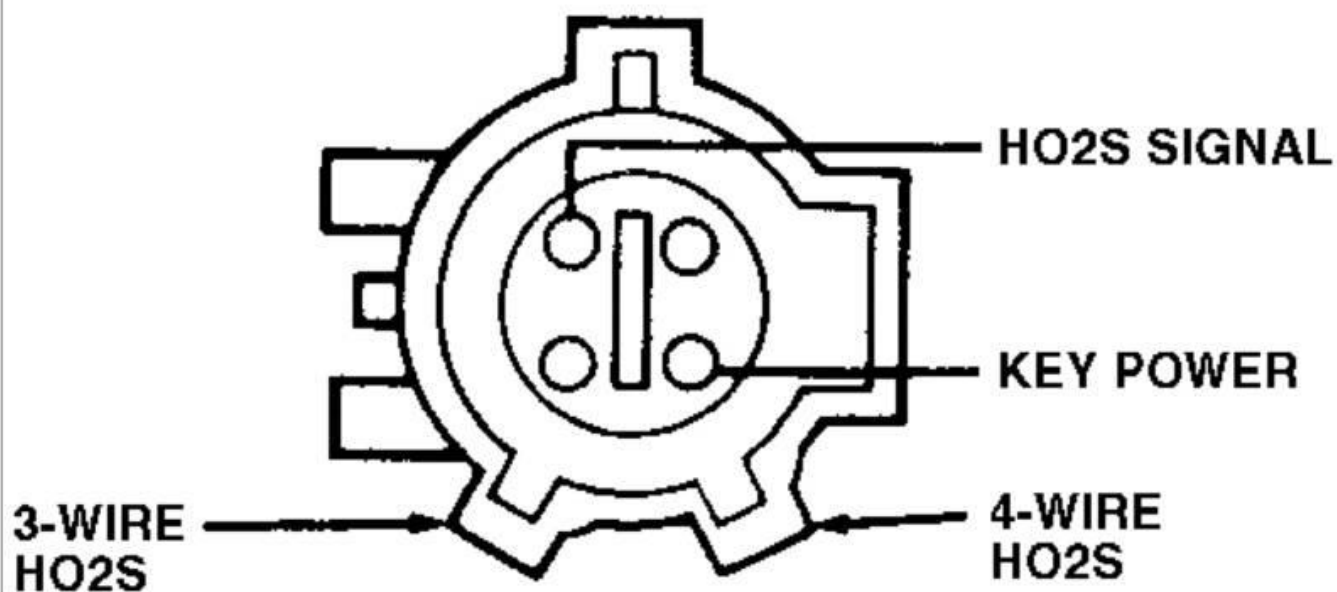


93B40619

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 115: Identifying A/C Relay Wiring Harness Connector  
Terminals  
1993 Ford Taurus LX

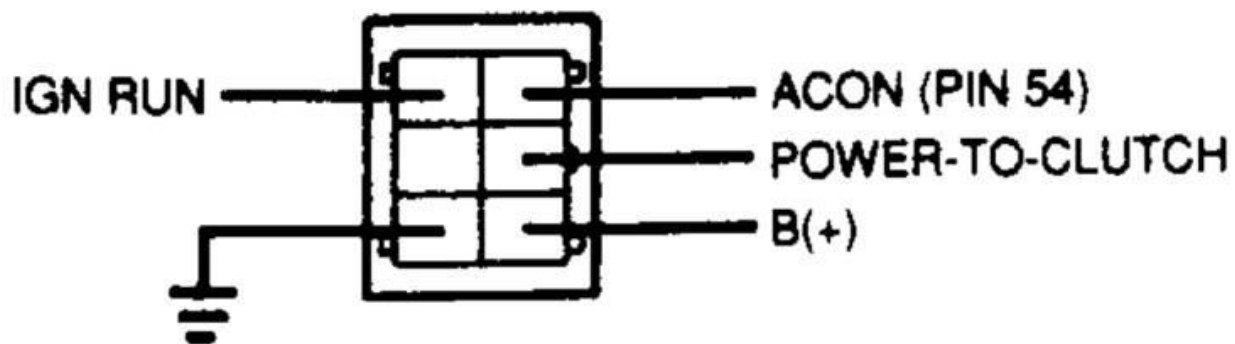


93G40754

**WIRING DIAGRAMS**  
**Power & Ground Distribution**

PAVLIN

**Fig. 116: Identifying HO2S Sensor Wiring Harness  
Connector Terminals**  
1993 Ford Taurus LX

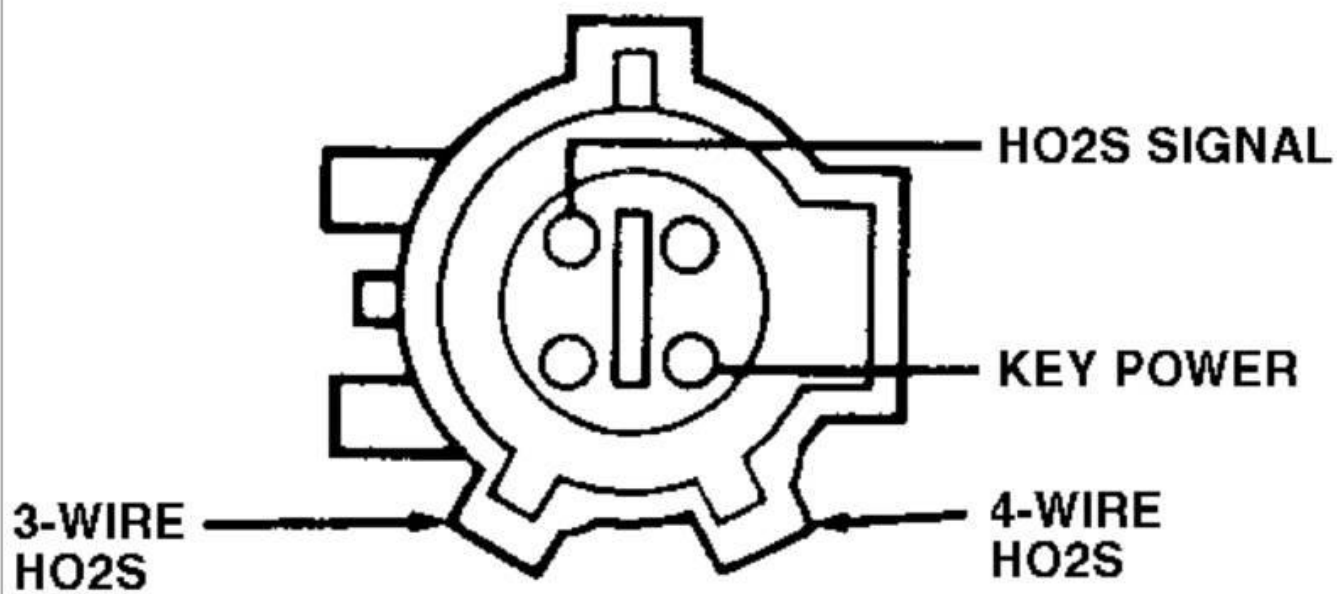


93B40619

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

Fig. 117: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)  
1993 Ford Taurus LX

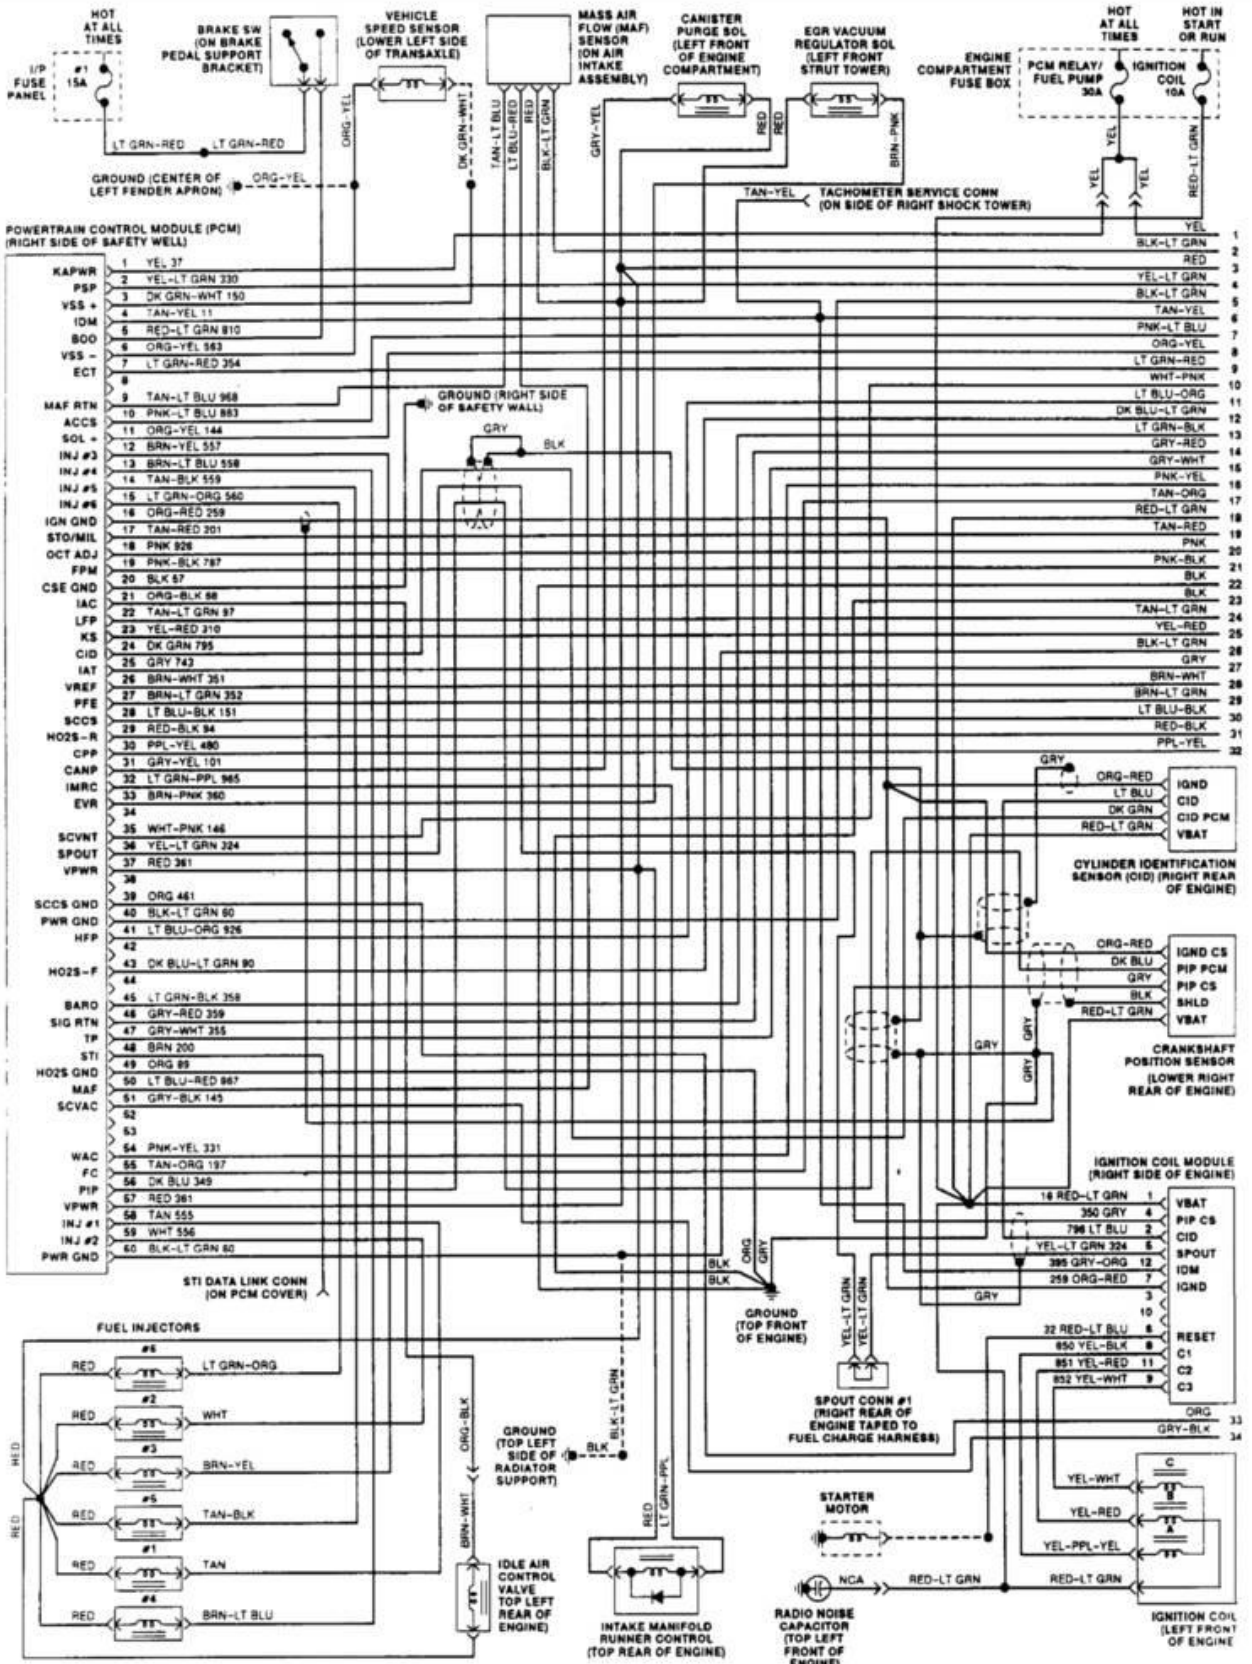


93H40664

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 118: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)  
1993 Ford Taurus LX

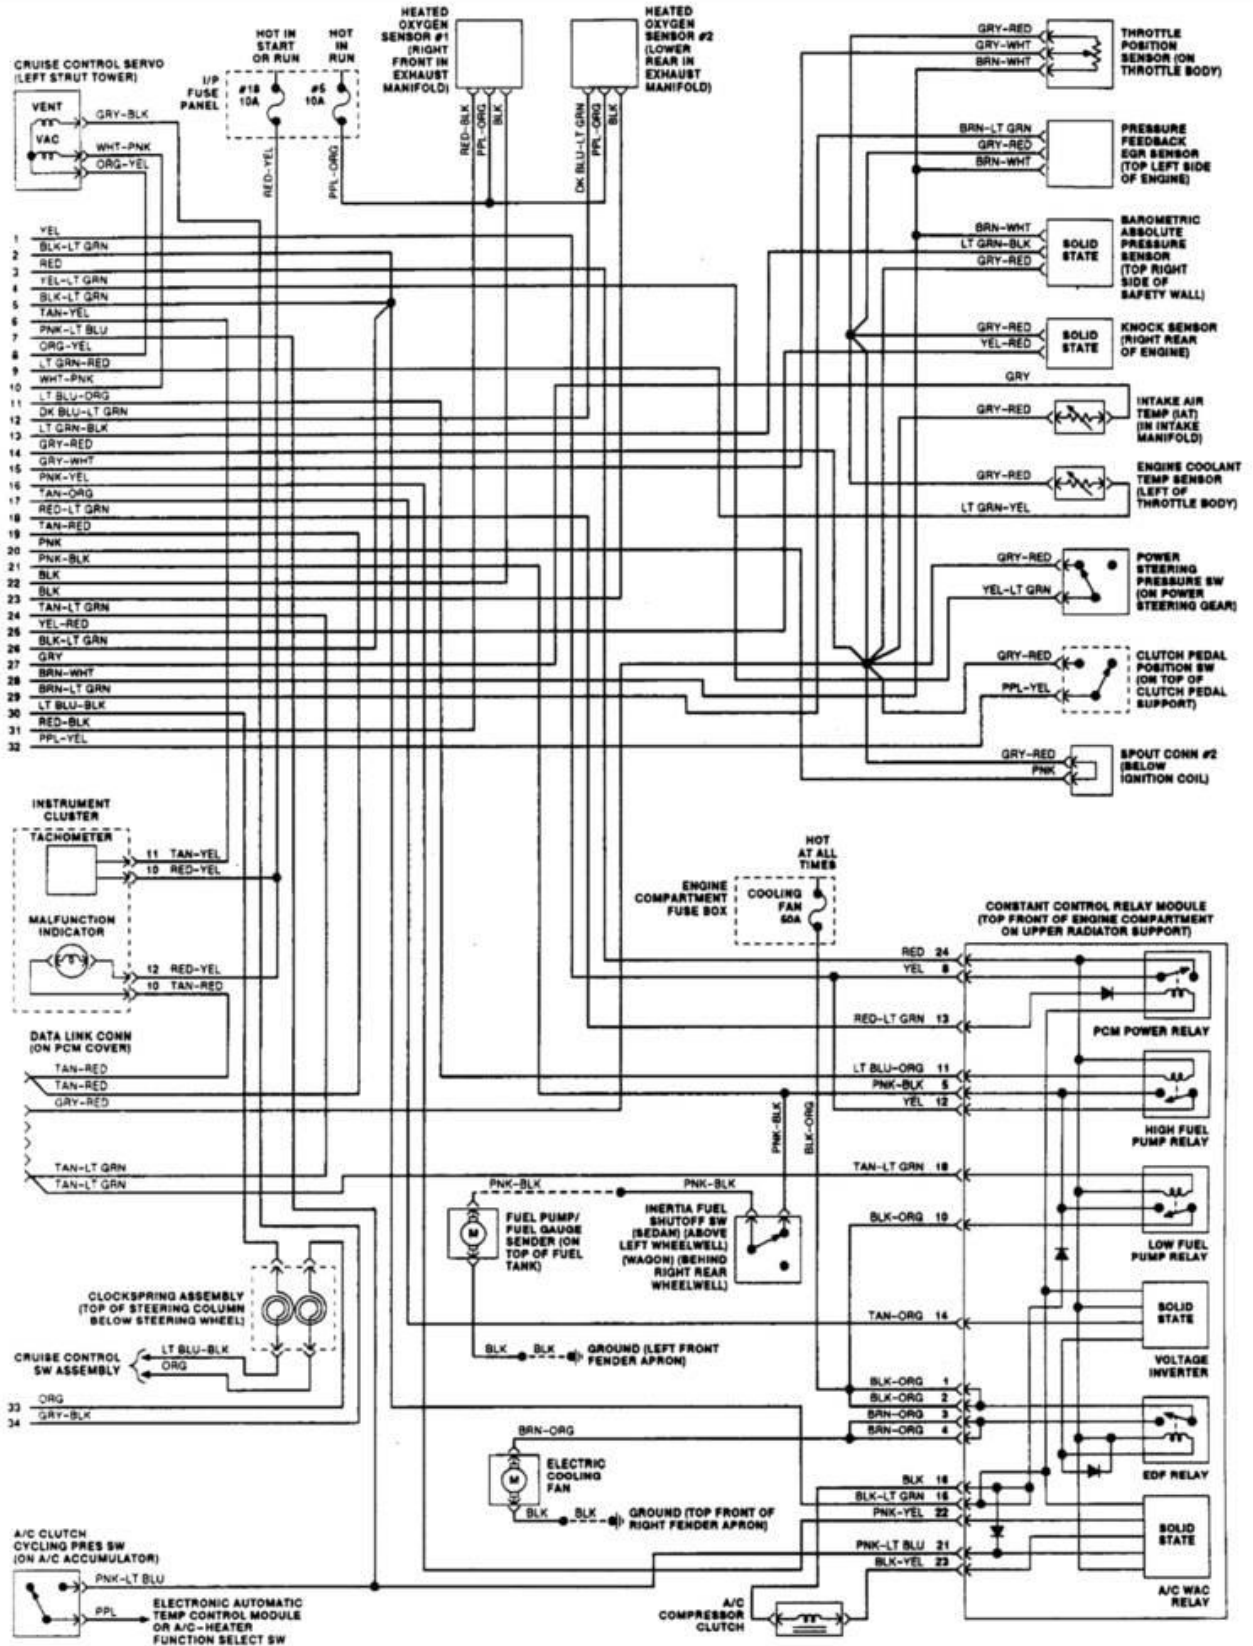


93I40665



WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 119: Identifying HO2S Sensor Wiring Harness  
Connector Terminals  
1993 Ford Taurus LX

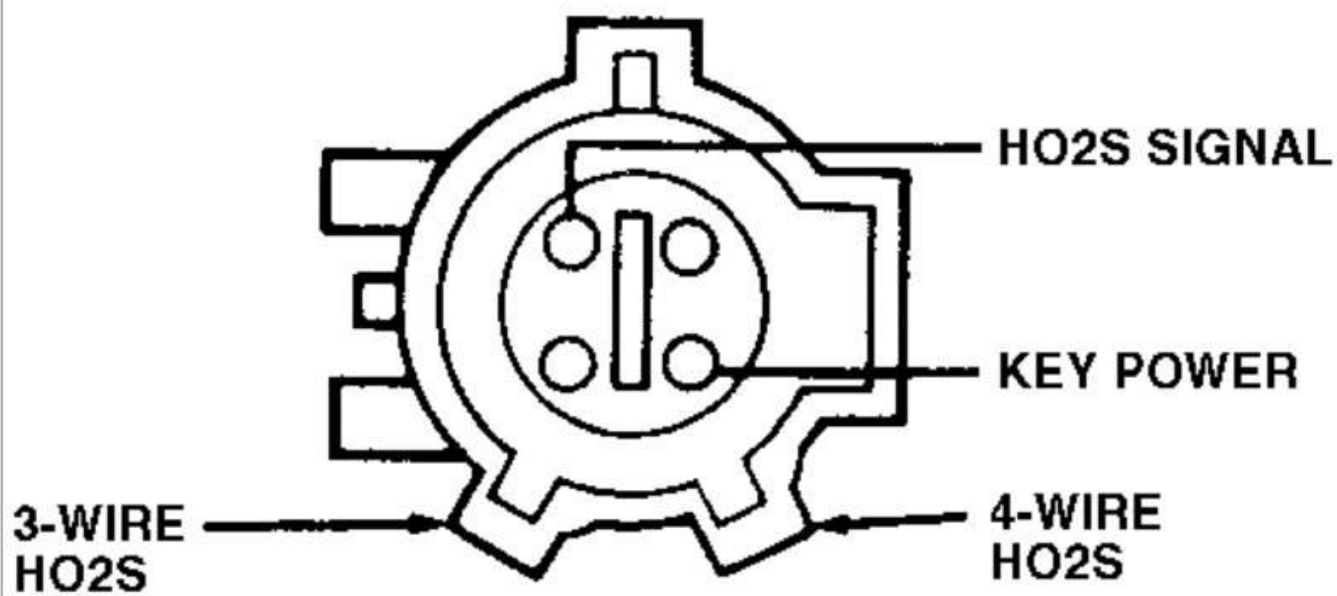


93B40619

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 120: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)  
1993 Ford Taurus LX

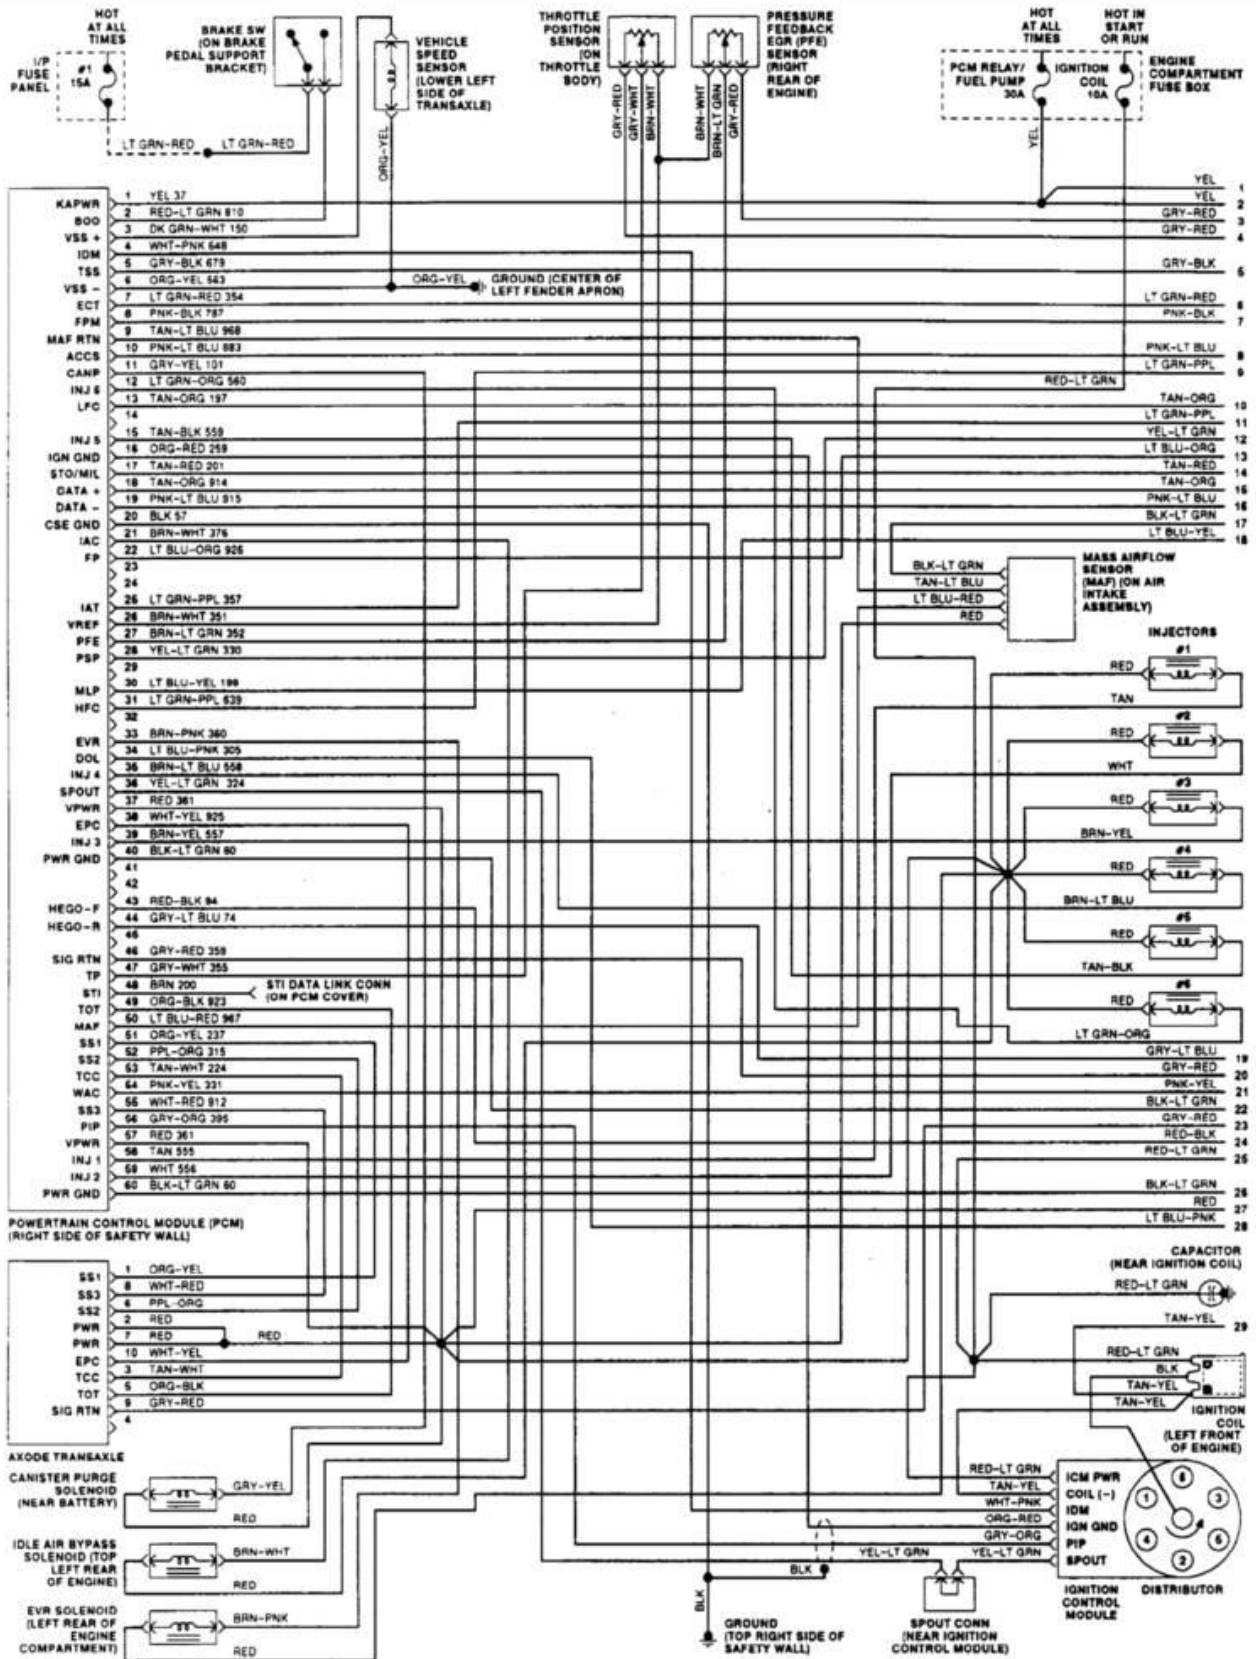


93J40658

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 121: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)  
1993 Ford Taurus LX

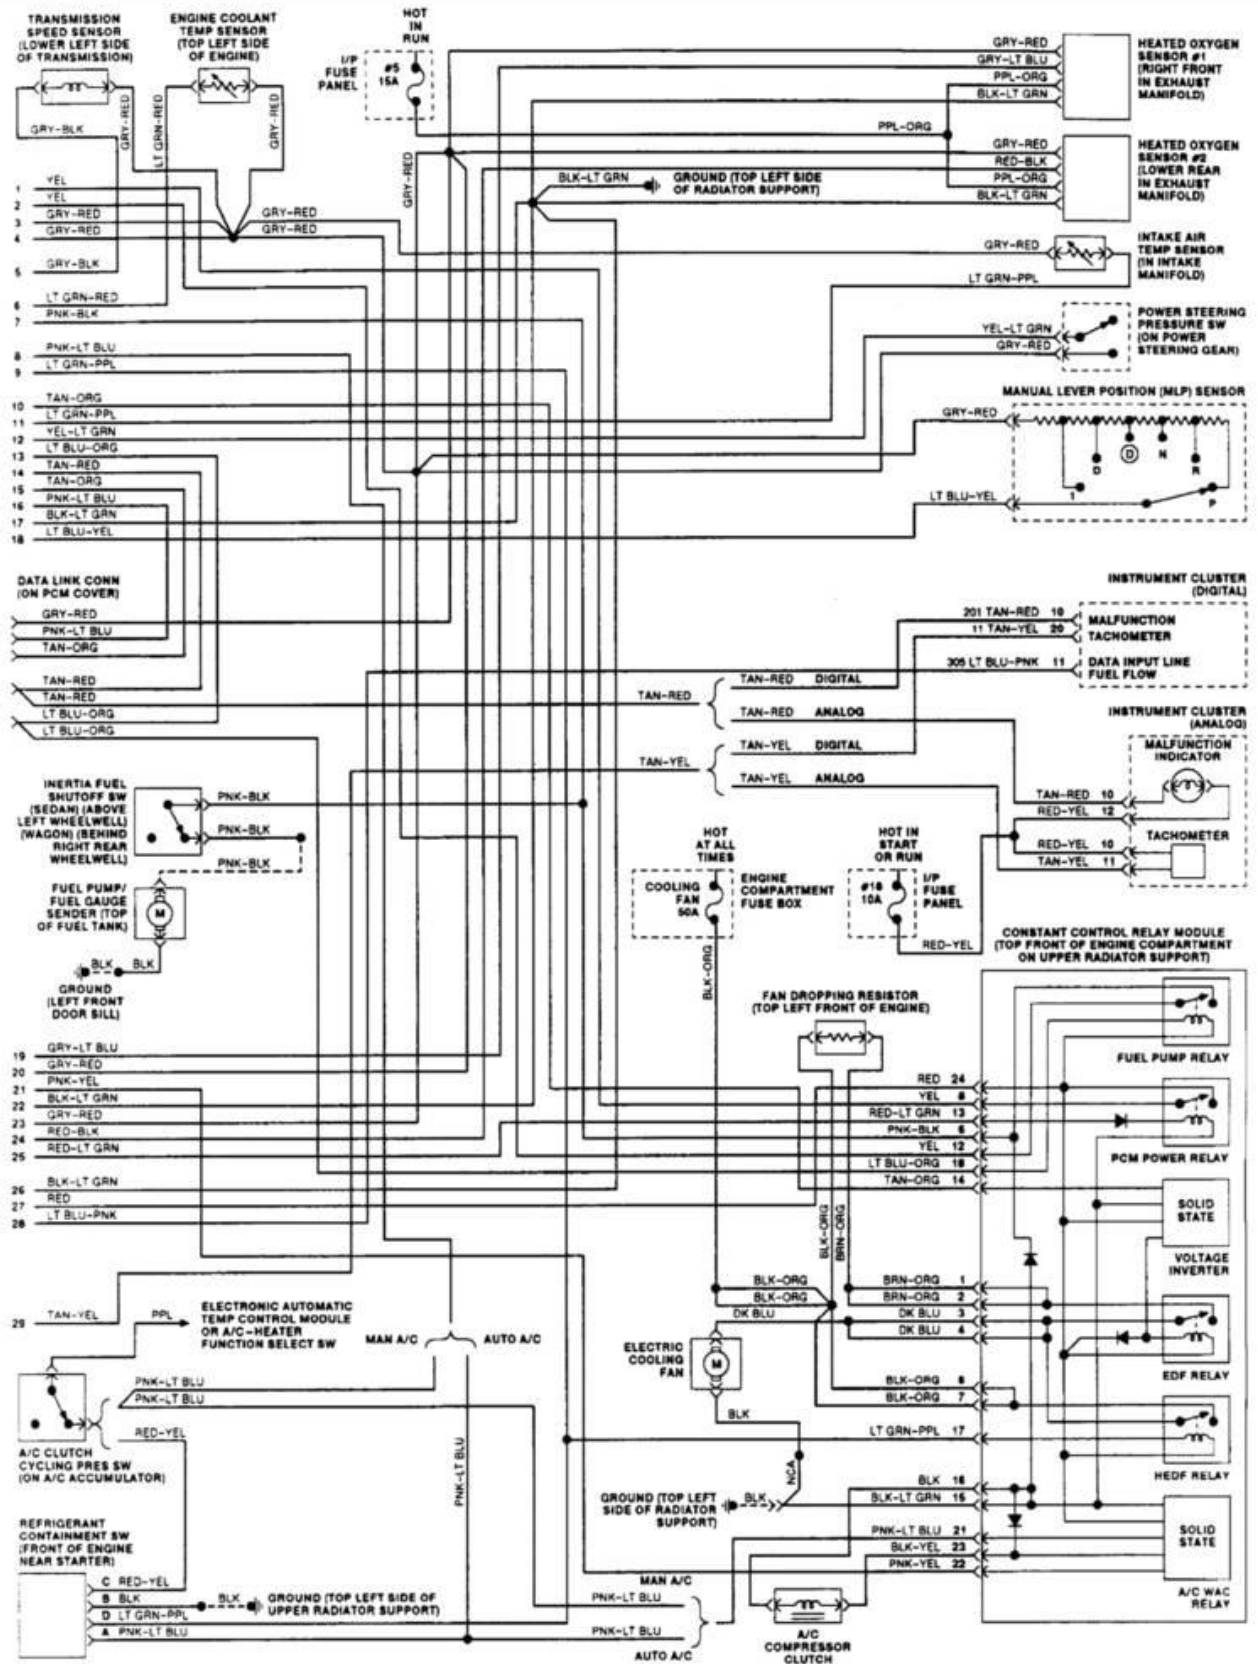


93A40659

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 122: EEC-IV Wiring Diagram (3.8L - 1 of 2)  
1993 Ford Taurus LX

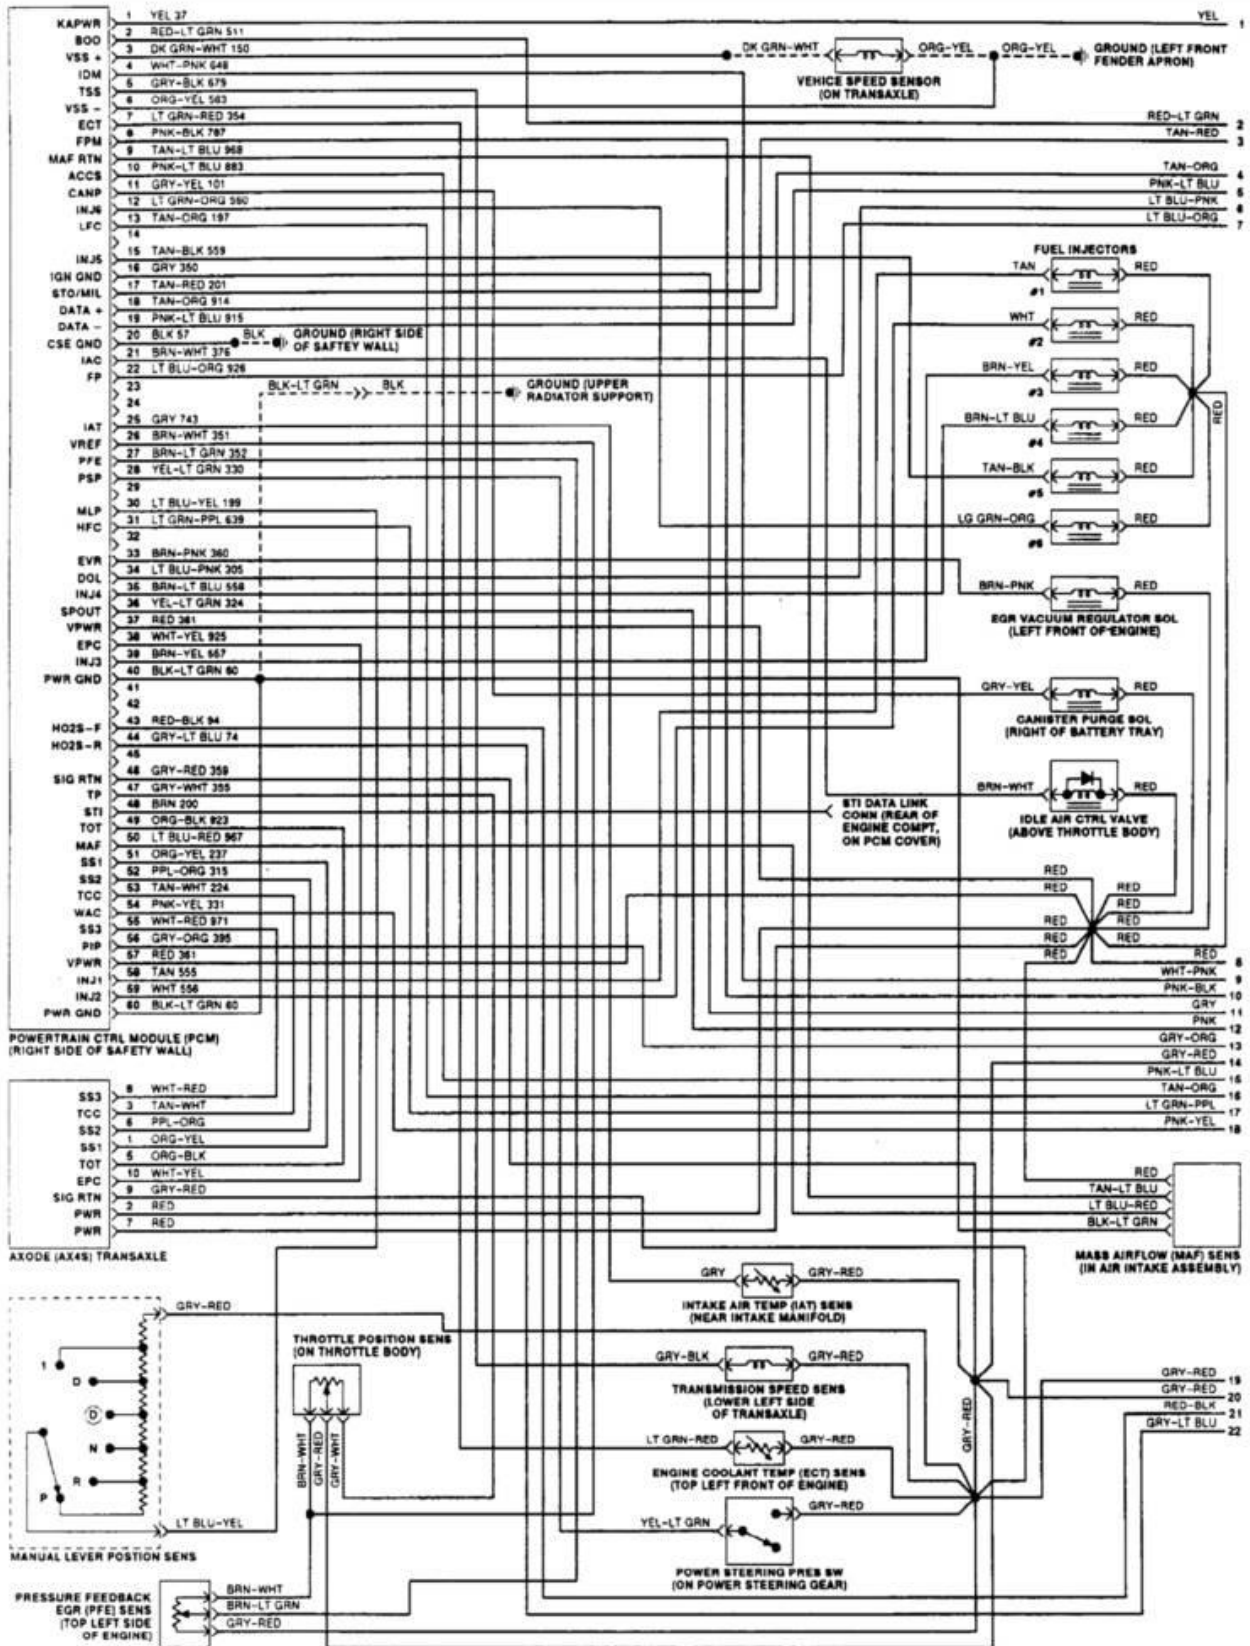


93D40660

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 123: EEC-IV Wiring Diagram (3.8L - 2 of 2)  
1993 Ford Taurus LX

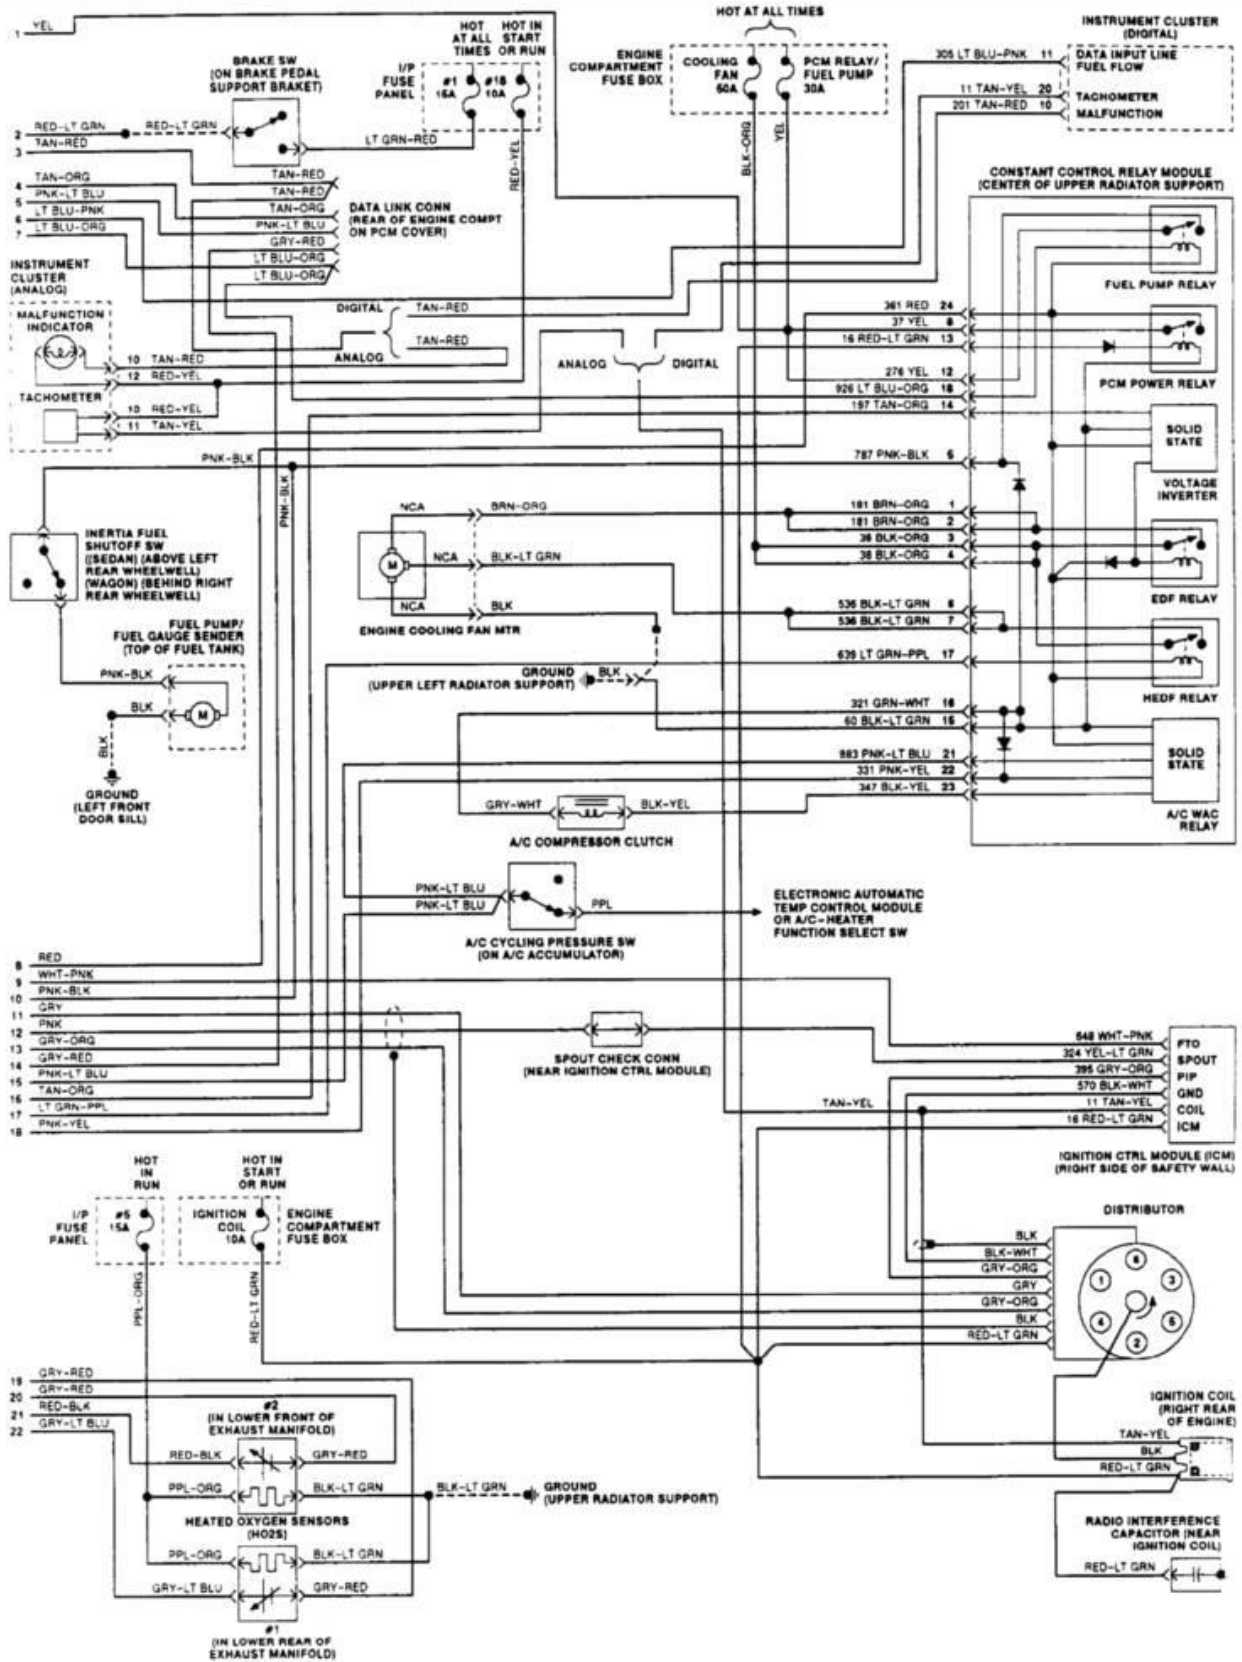


93E40661

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 124: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)  
1993 Ford Taurus LX

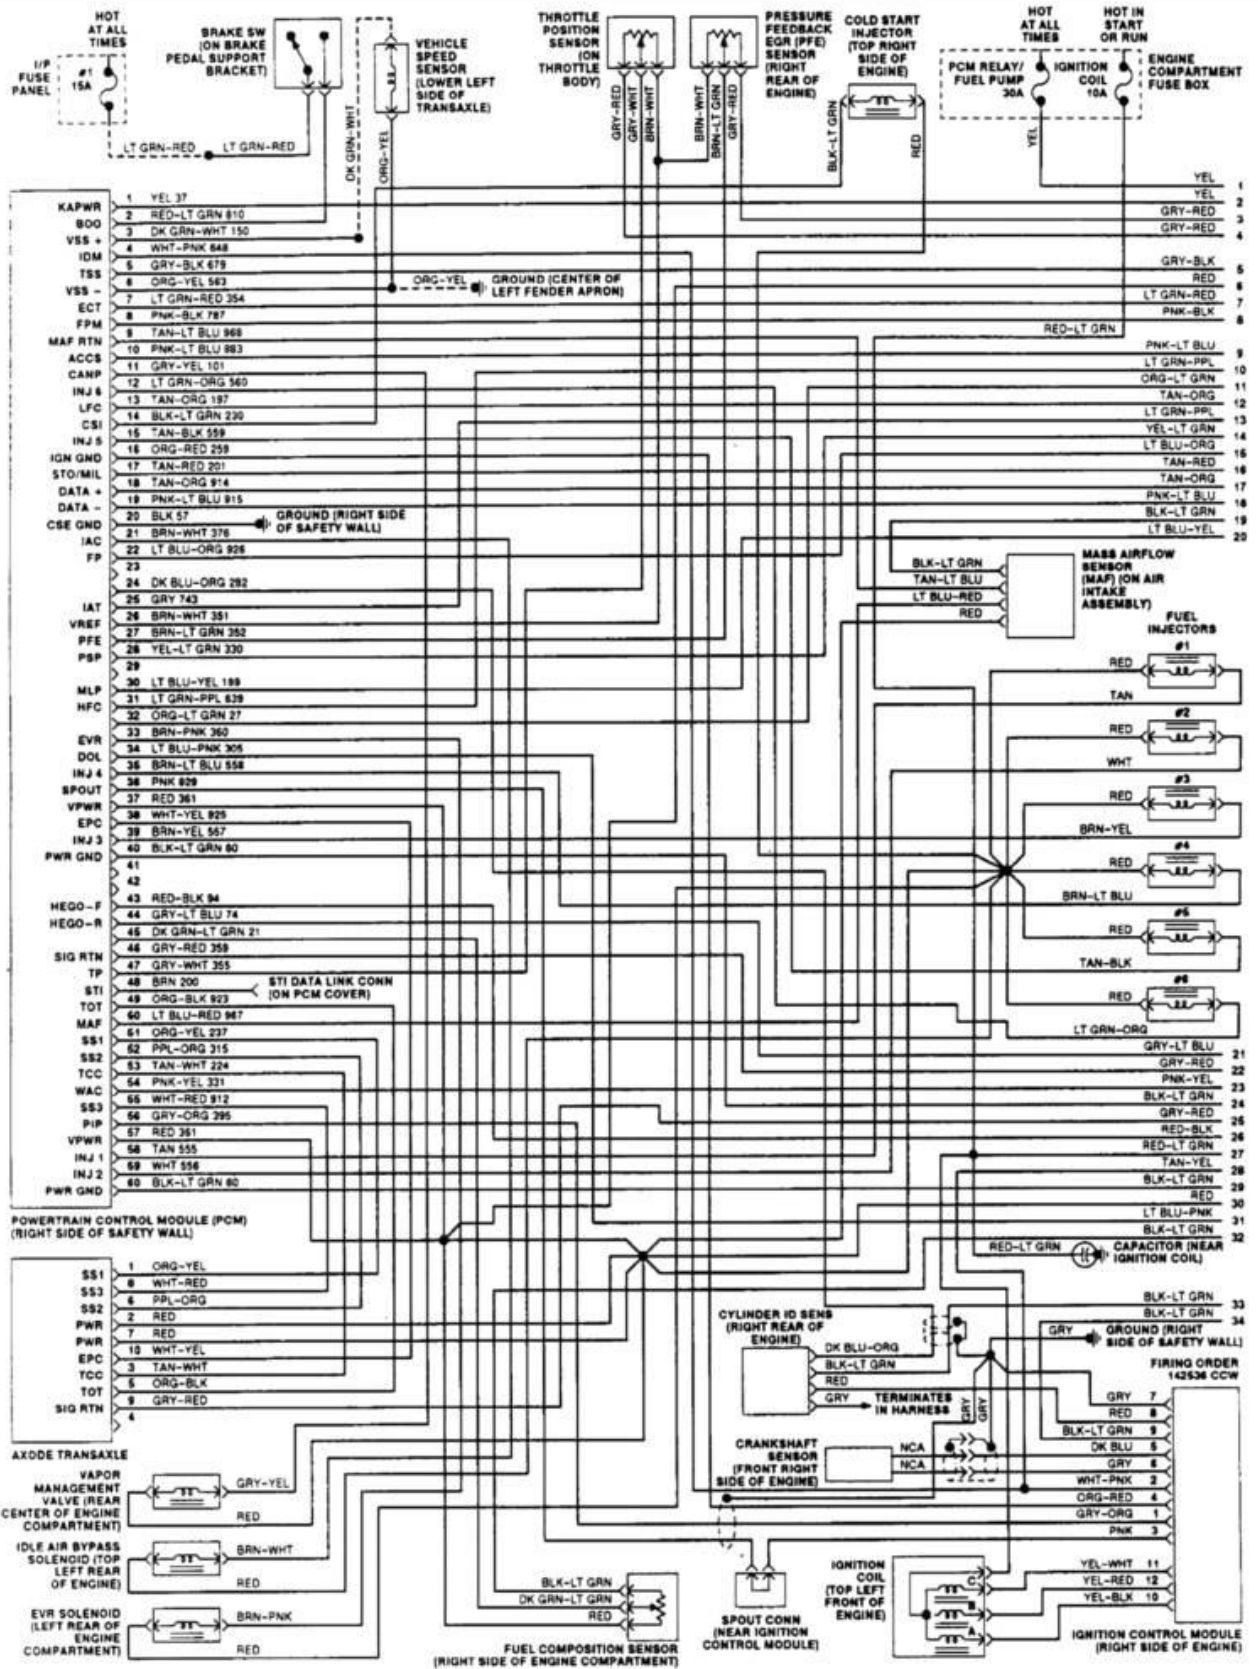

93F40682




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 125: EEC-IV Wiring Diagram (3.0L Flex Fuel - 2 of 2)  
1993 Ford Taurus LX

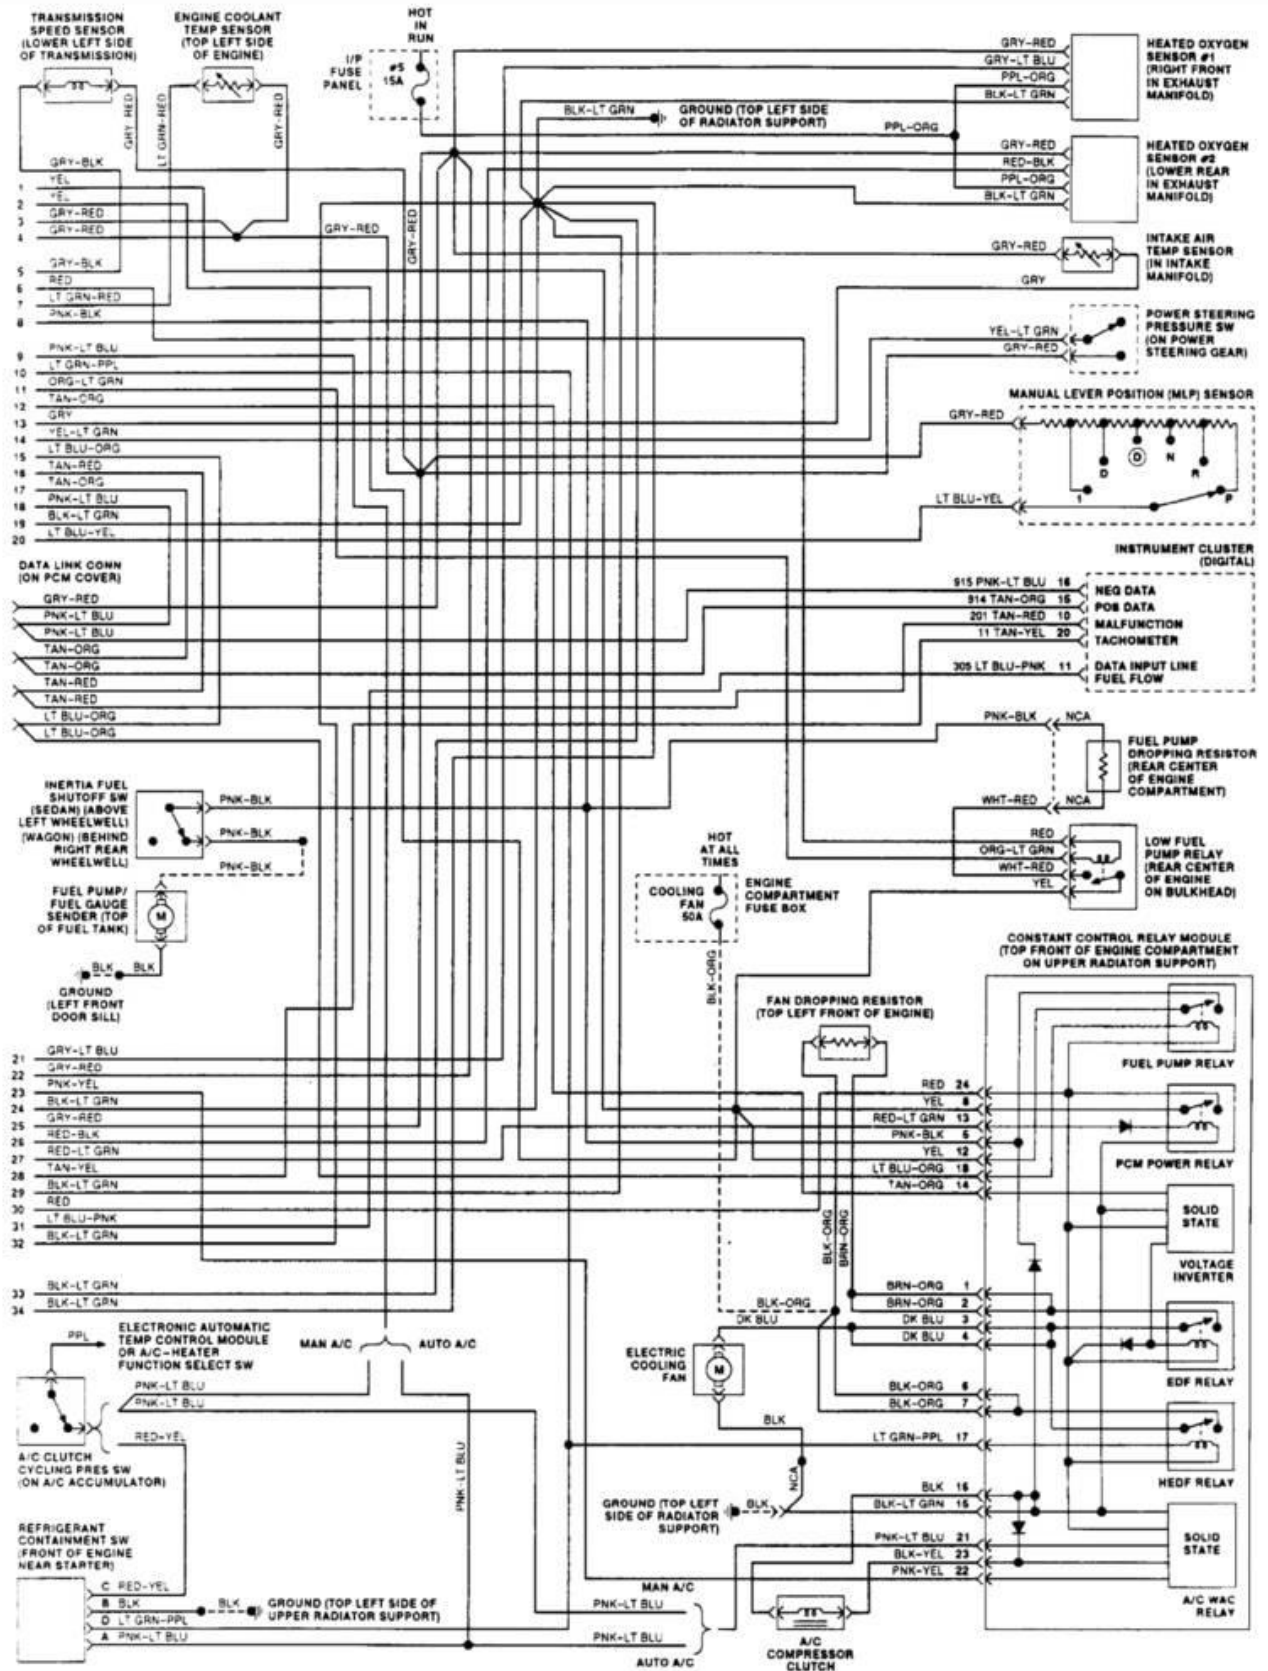


93G40663

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 126: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)  
1993 Ford Taurus LX

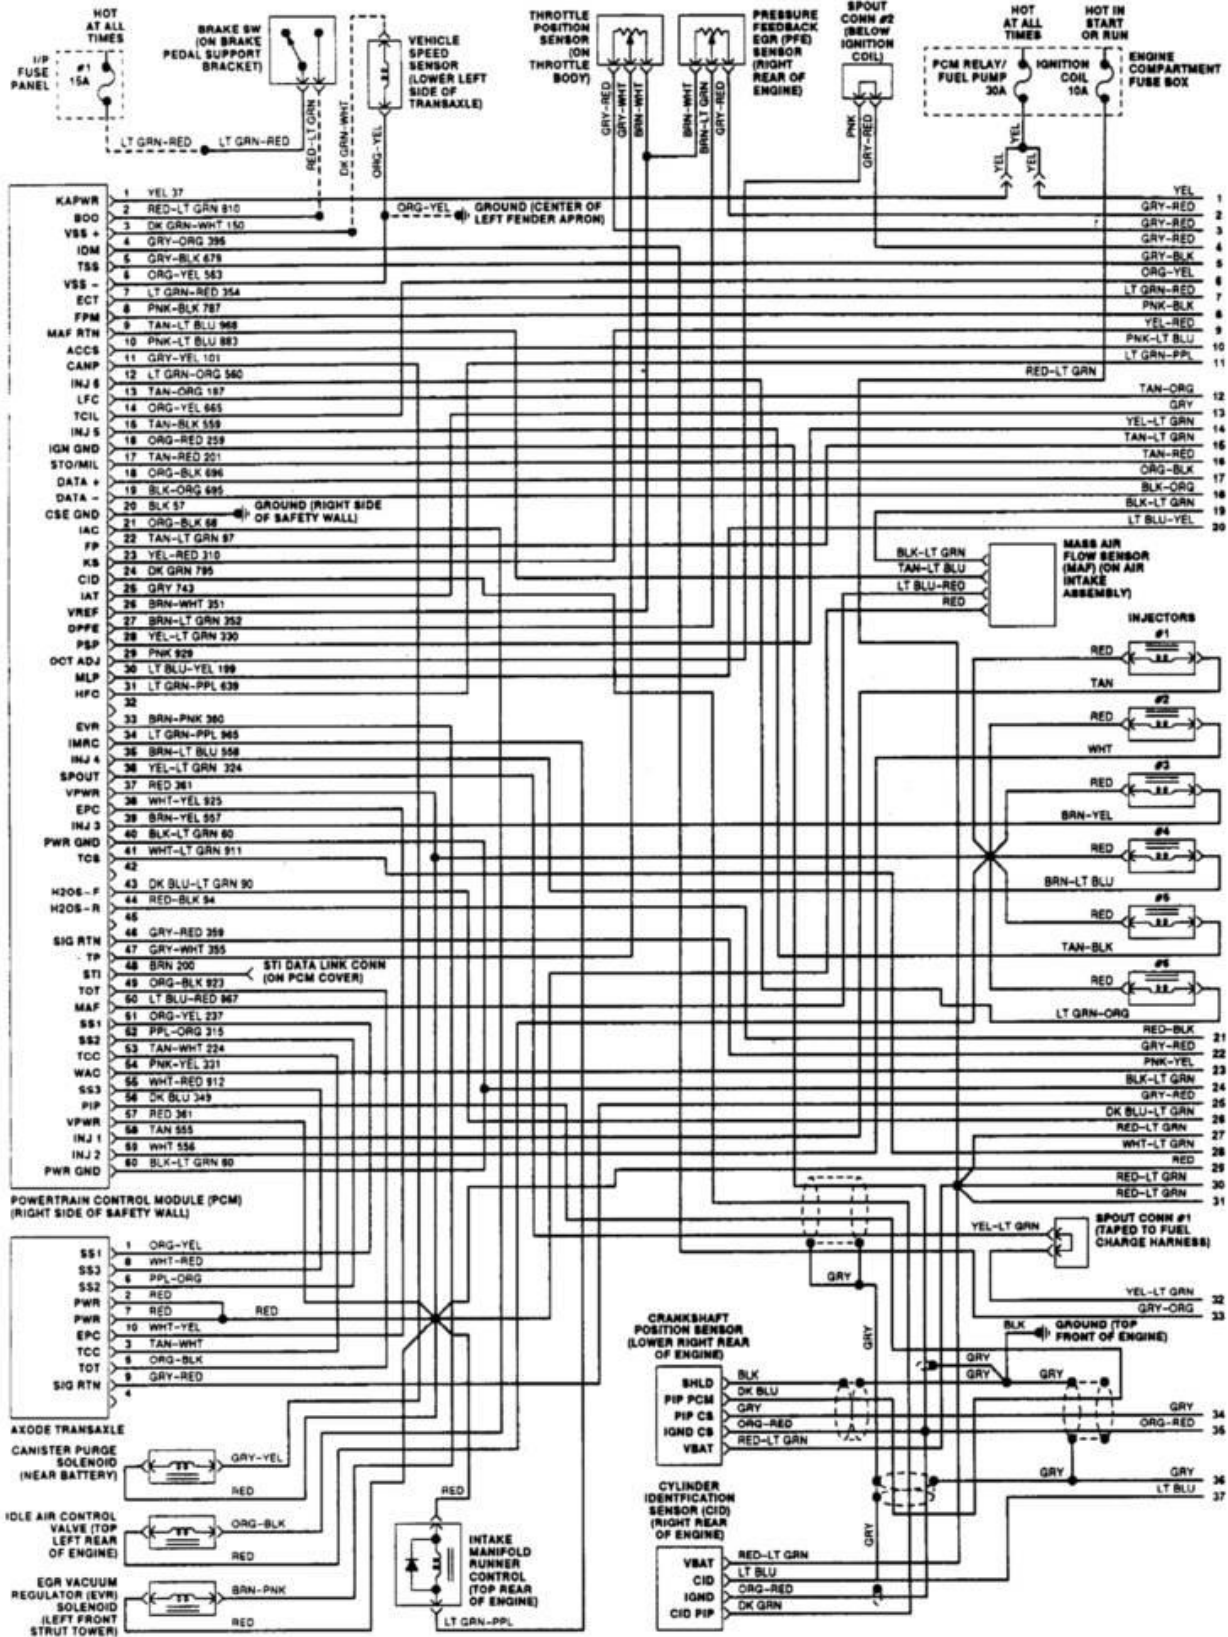

93J40666




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 127: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)  
1993 Ford Taurus LX

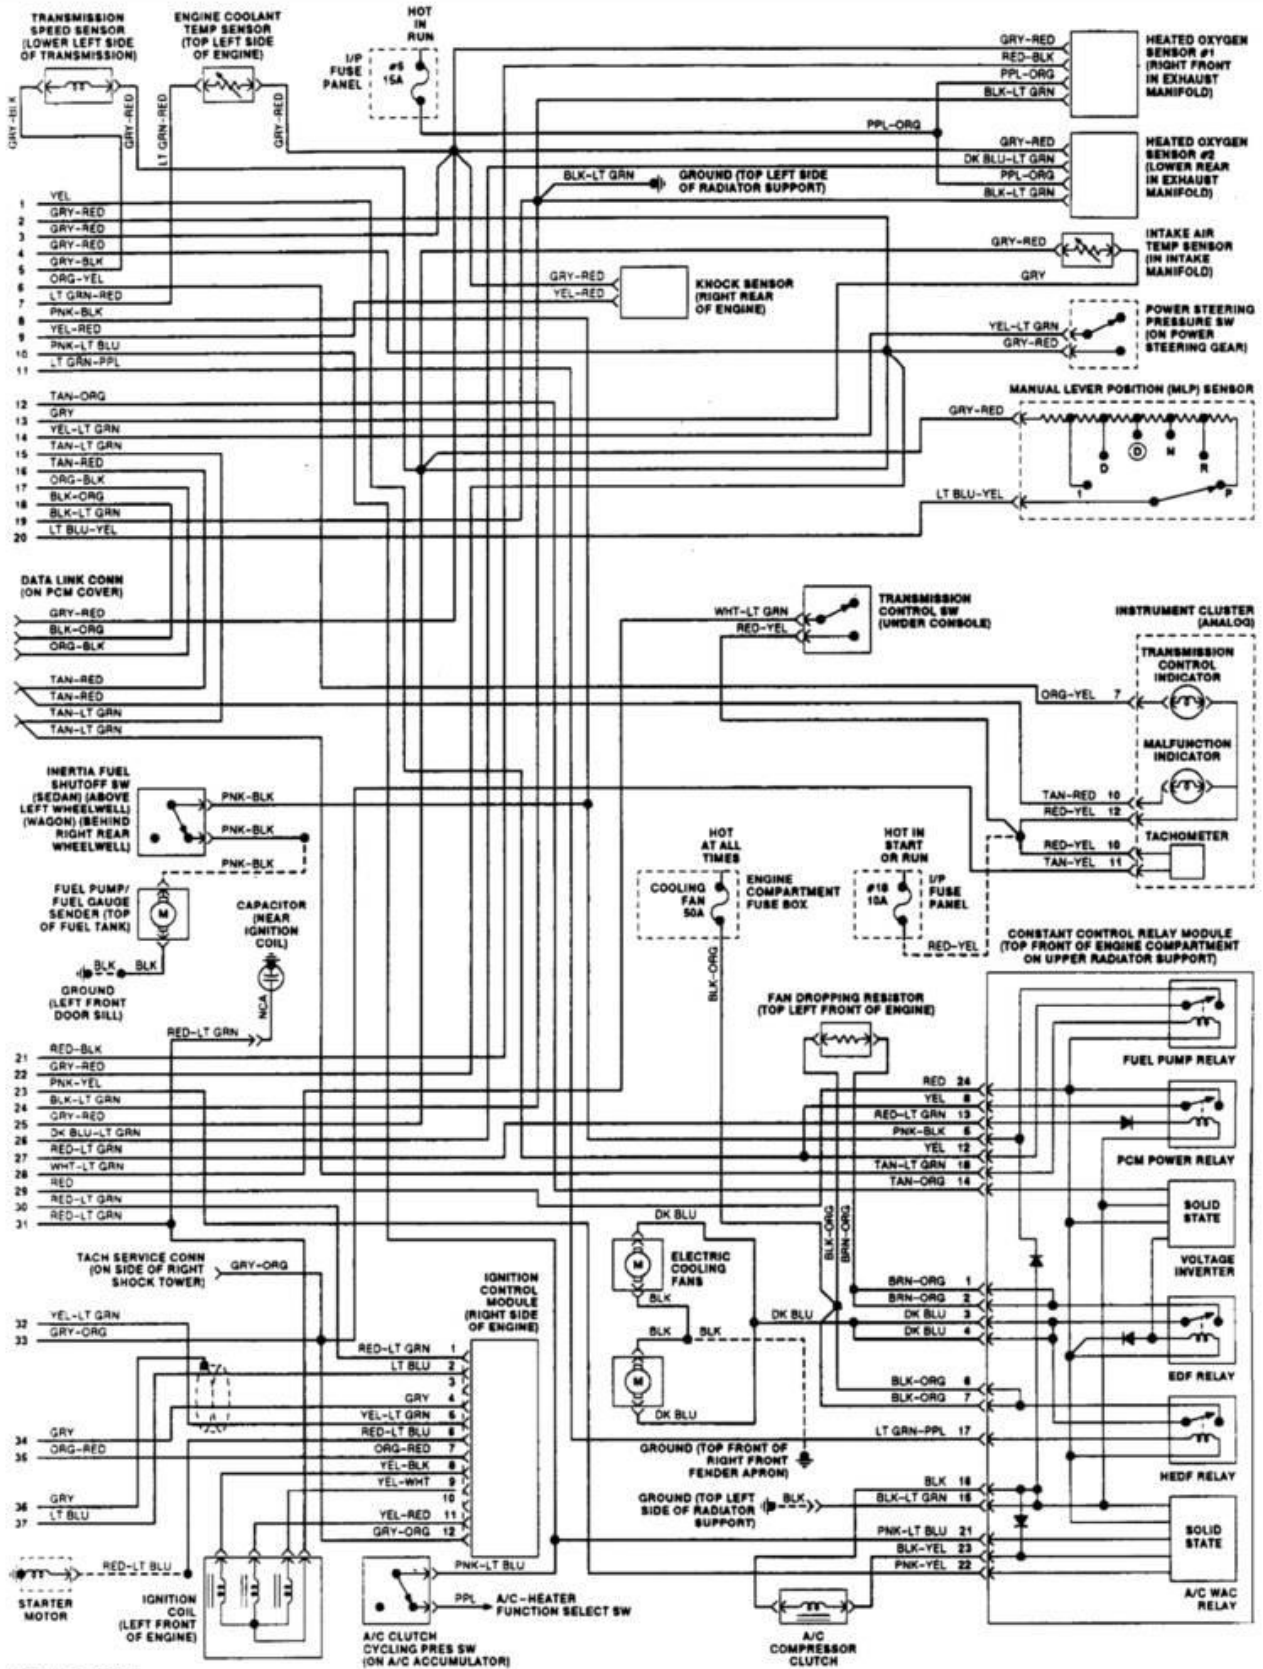


93A40667

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 128: CID Wiring Harness Circuits (3.0L Flexible Fuel)  
1993 Ford Taurus LX

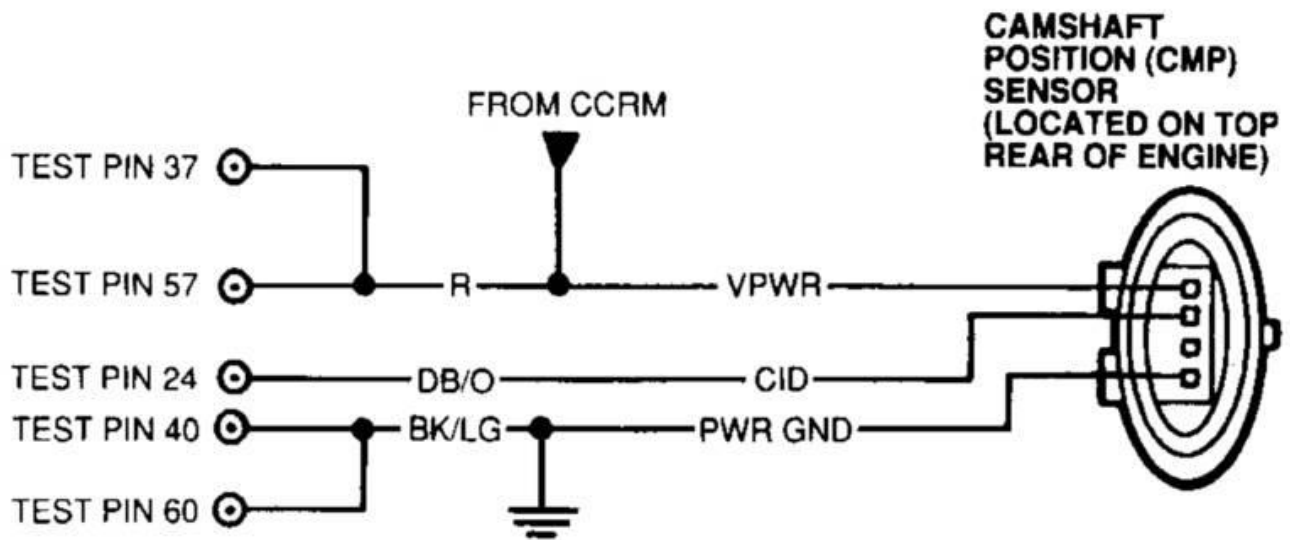

CAMSHAFT  
POSITION (CMP)  
SENSOR  
(LOCATED ON TOP  
REAR OF ENGINE)


\*TEST PINS LOCATED ON BREAKOUT BOX.  
ALL HARNESS CONNECTORS VIEWED IN MATING SURFACE.

93A40535

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 129: HO2S Sensor Wiring Harness Connector  
1993 Ford Taurus LX

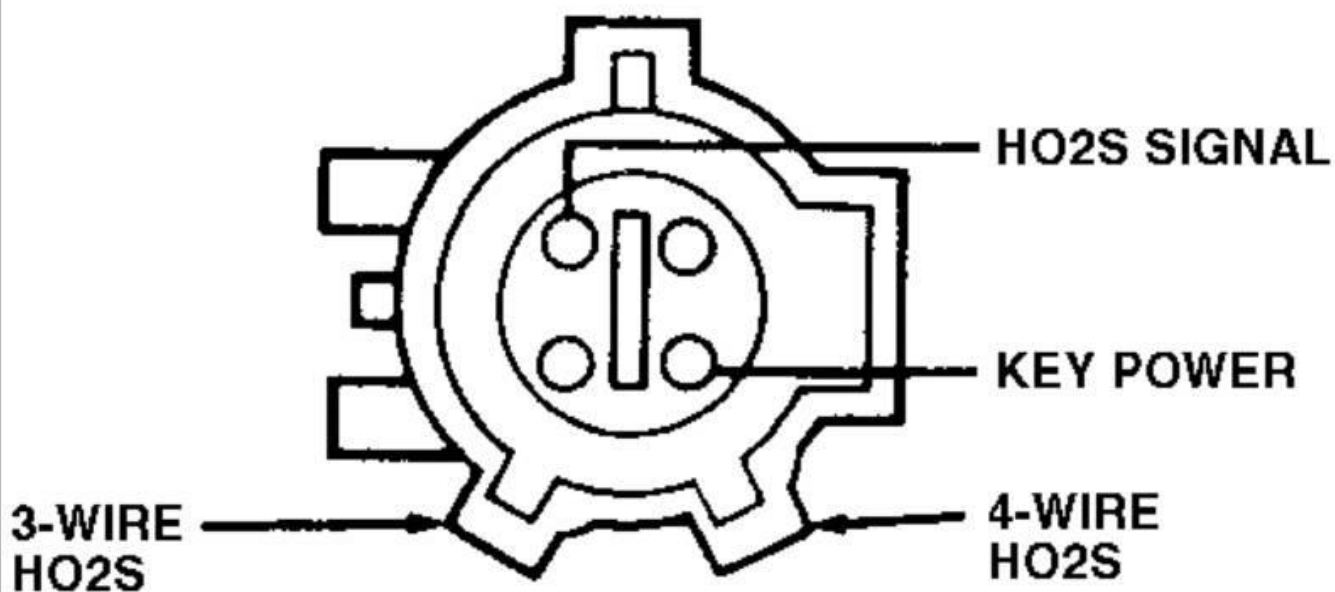


93B40619

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN

Fig. 130: Identifying A/C Relay Wiring Harness Connector  
Terminals  
1993 Ford Taurus LX

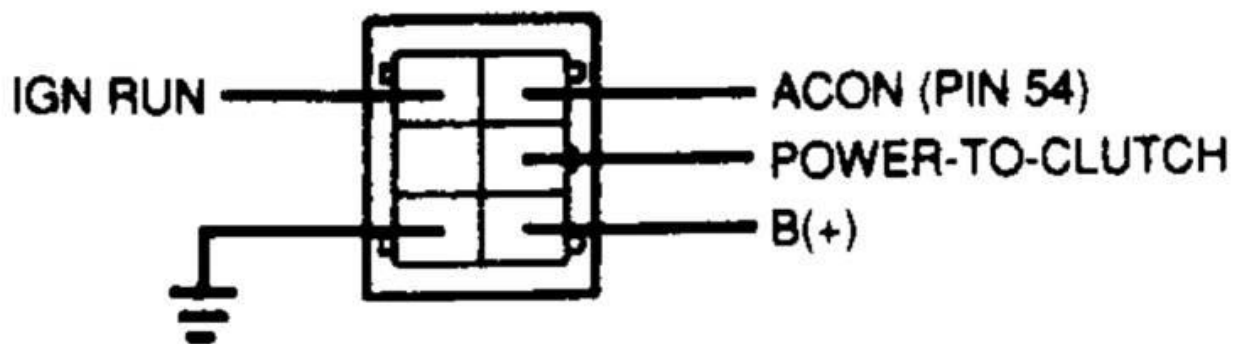


93G40754

WIRING DIAGRAMS  
Power & Ground Distribution

PAVLIN


Fig. 131: DIS Module Wiring Harness Connector  
Terminals (3.2L SHO)  
1993 Ford Taurus LX

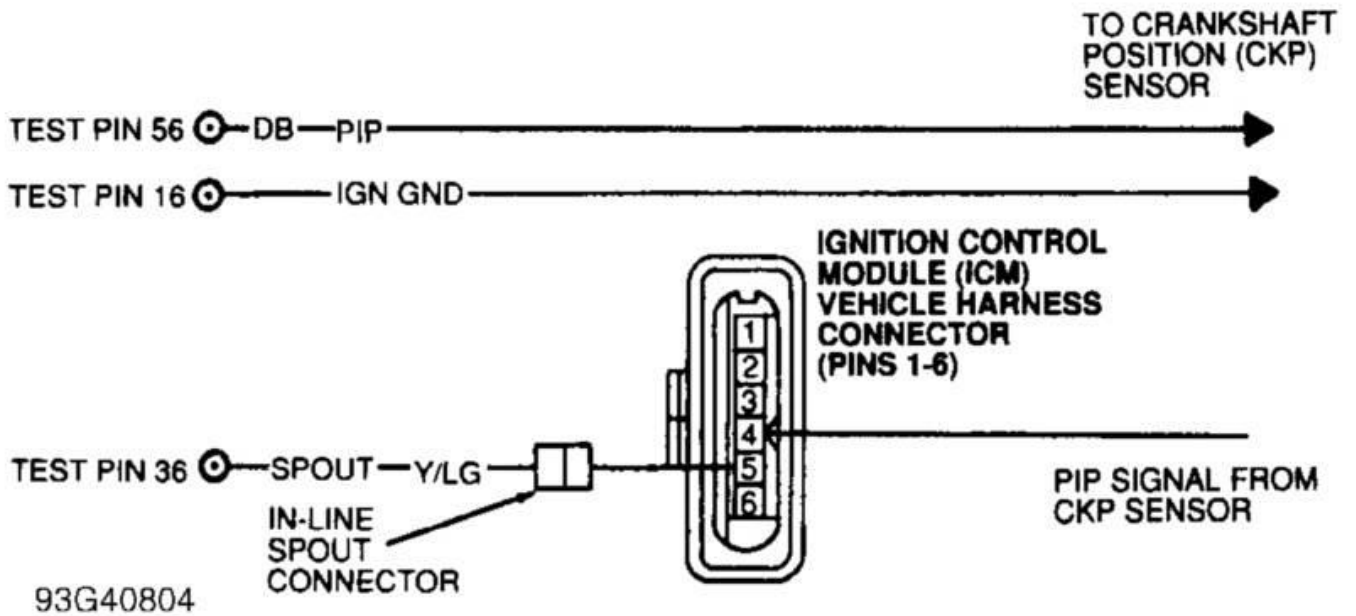

## WIRING DIAGRAMS Power & Ground Distribution

PAVLIN

Fig. 132: EI Wiring Diagram (3.0L Flexible Fuel)  
1993 Ford Taurus LX

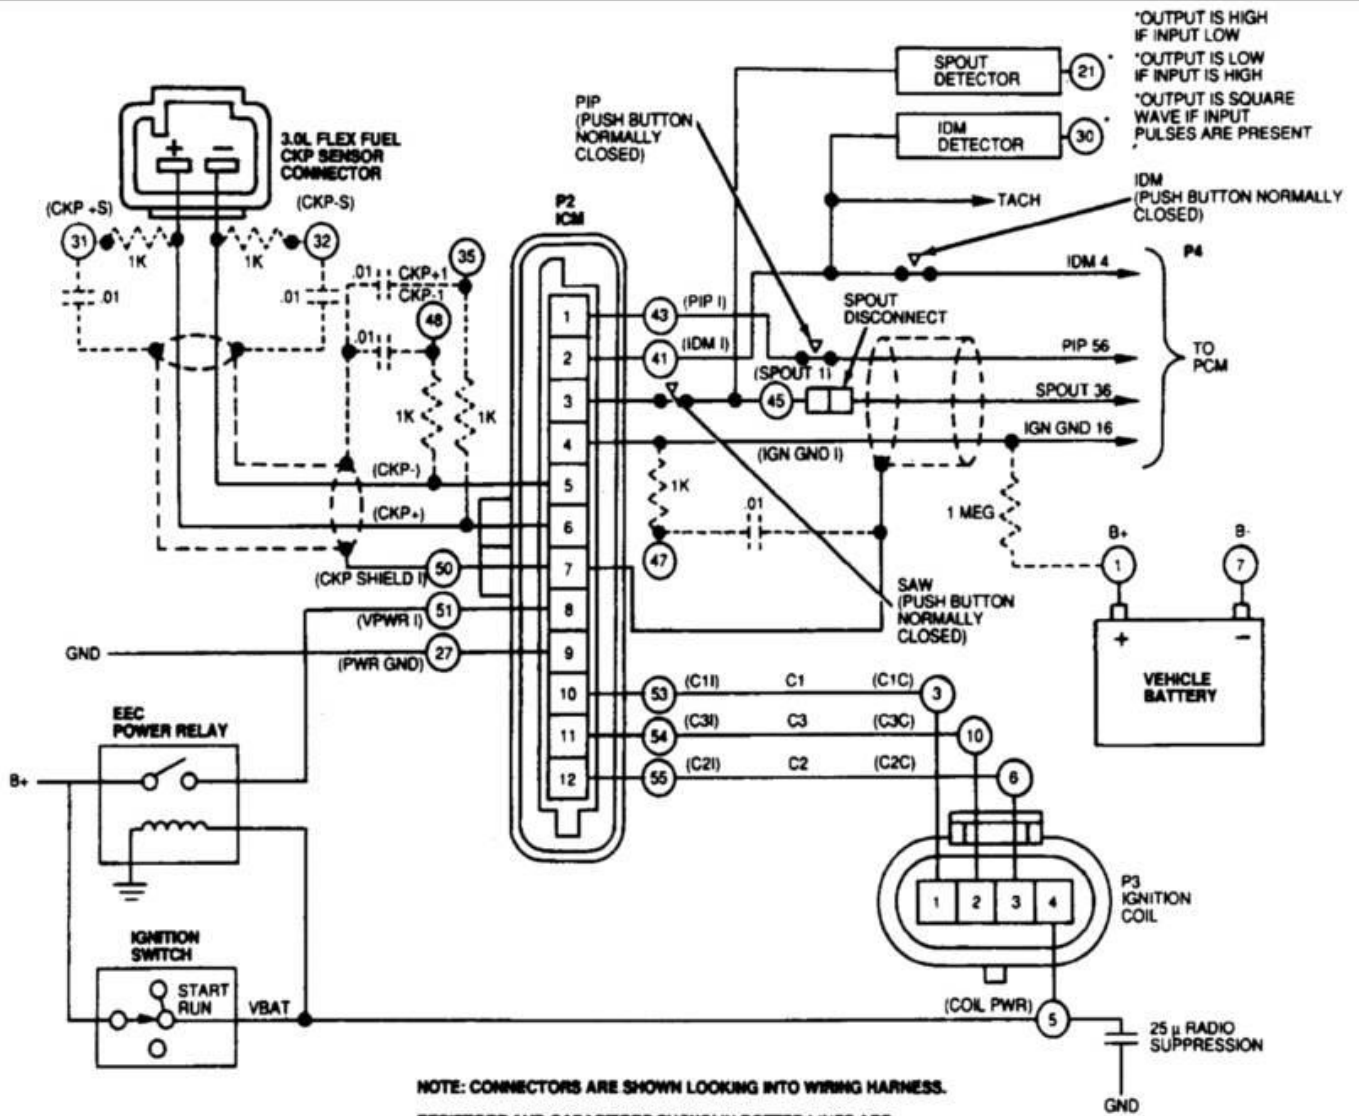


NOTE: CONNECTORS ARE SHOWN LOOKING INTO WIRING HARNESS.

RESISTORS AND CAPACITORS SHOWN IN DOTTED LINES ARE PART OF DIAGNOSTIC CABLE. NOTE VEHICLE WIRING.

CIRCLED NUMBERS ARE TEST JACKS ON BREAKOUT BOX.

COIL 1 DRIVES CYLINDERS 1 & 5 COIL 2 DRIVES CYLINDERS 3 & 4. COIL 3 DRIVES CYLINDERS 2 & 6.

PIN No.	3.0L Flexible Fuel
1	PIP I
2	IDM I
3	SPOUT I
4	IGN GND I
5	CKP-I
6	CKP+I
7	CKP Shield
8	VPWR I
9	PWR GND I
10	Coil 1 (CYL 1 and 5) I
11	Coil 3 (CYL 2 and 6) I
12	Coil 2 (CYL 3 and 4) I

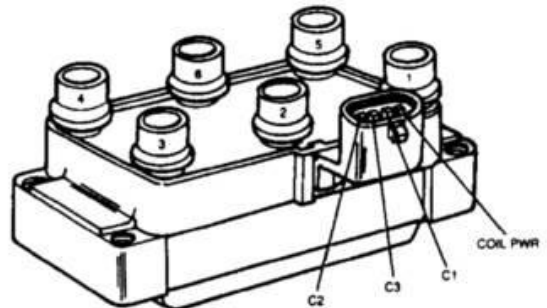


93I41481

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 133: EEC-IV Wiring Diagram (3.0L Except SHO 1 of 2)  
1993 Ford Taurus LX

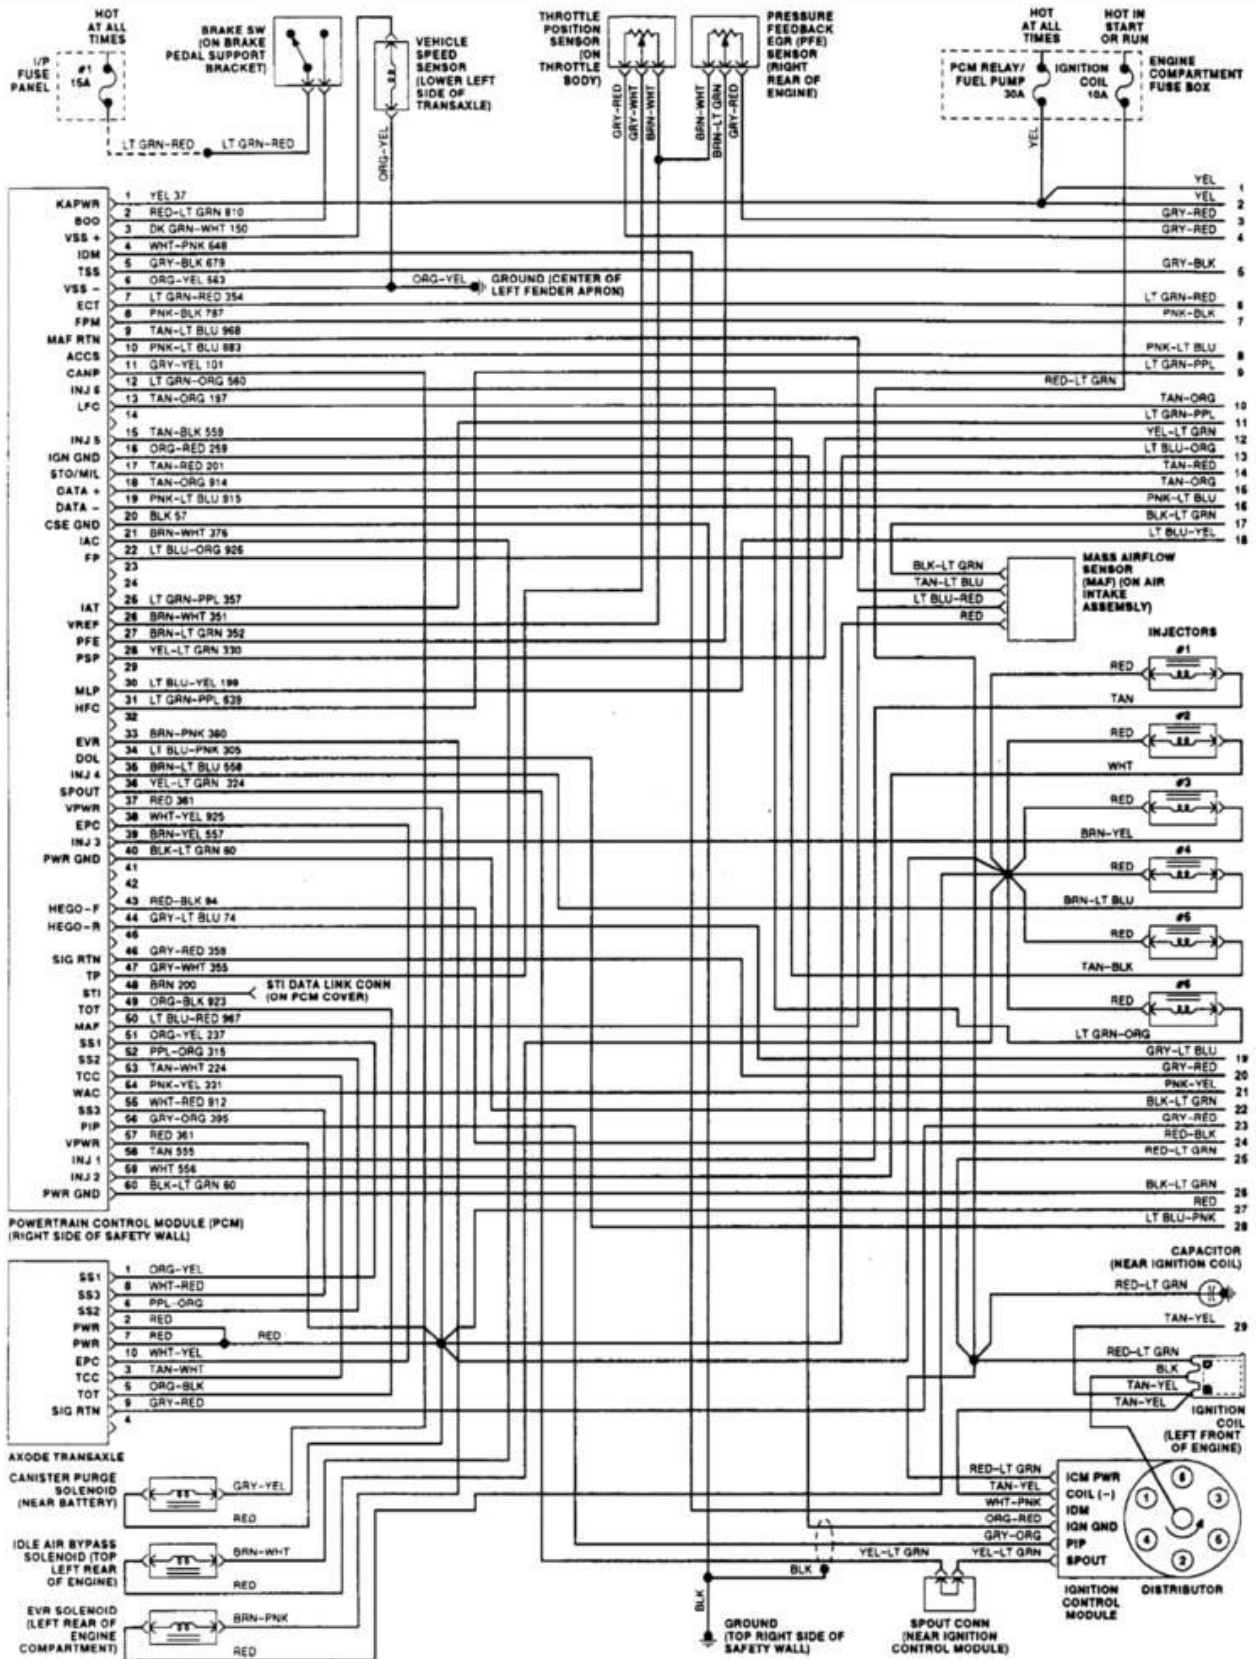


93J40658

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 134: EEC-IV Wiring Diagram (3.0L Except SHO 2 of 2)  
1993 Ford Taurus LX

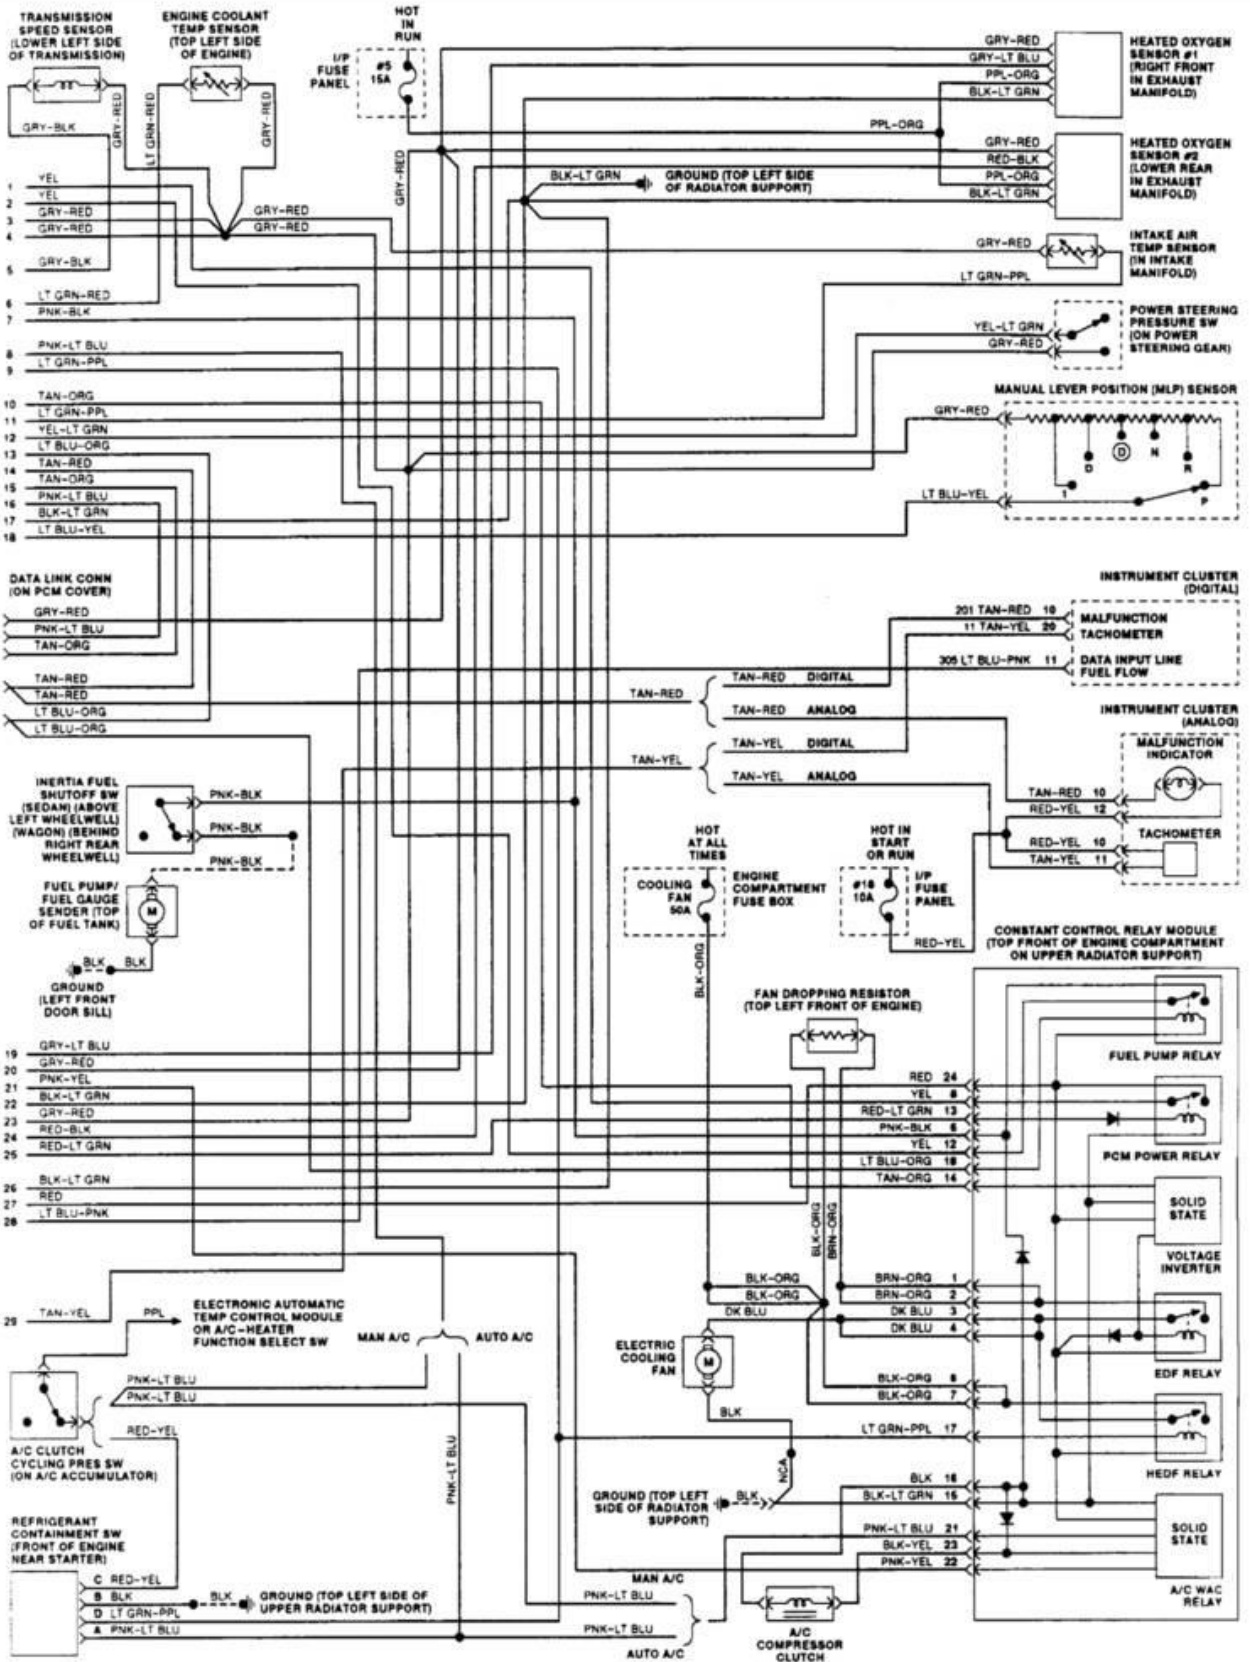

93A40659




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 135: EEC-IV Wiring Diagram (3.8L - 1 of 2)  
1993 Ford Taurus LX

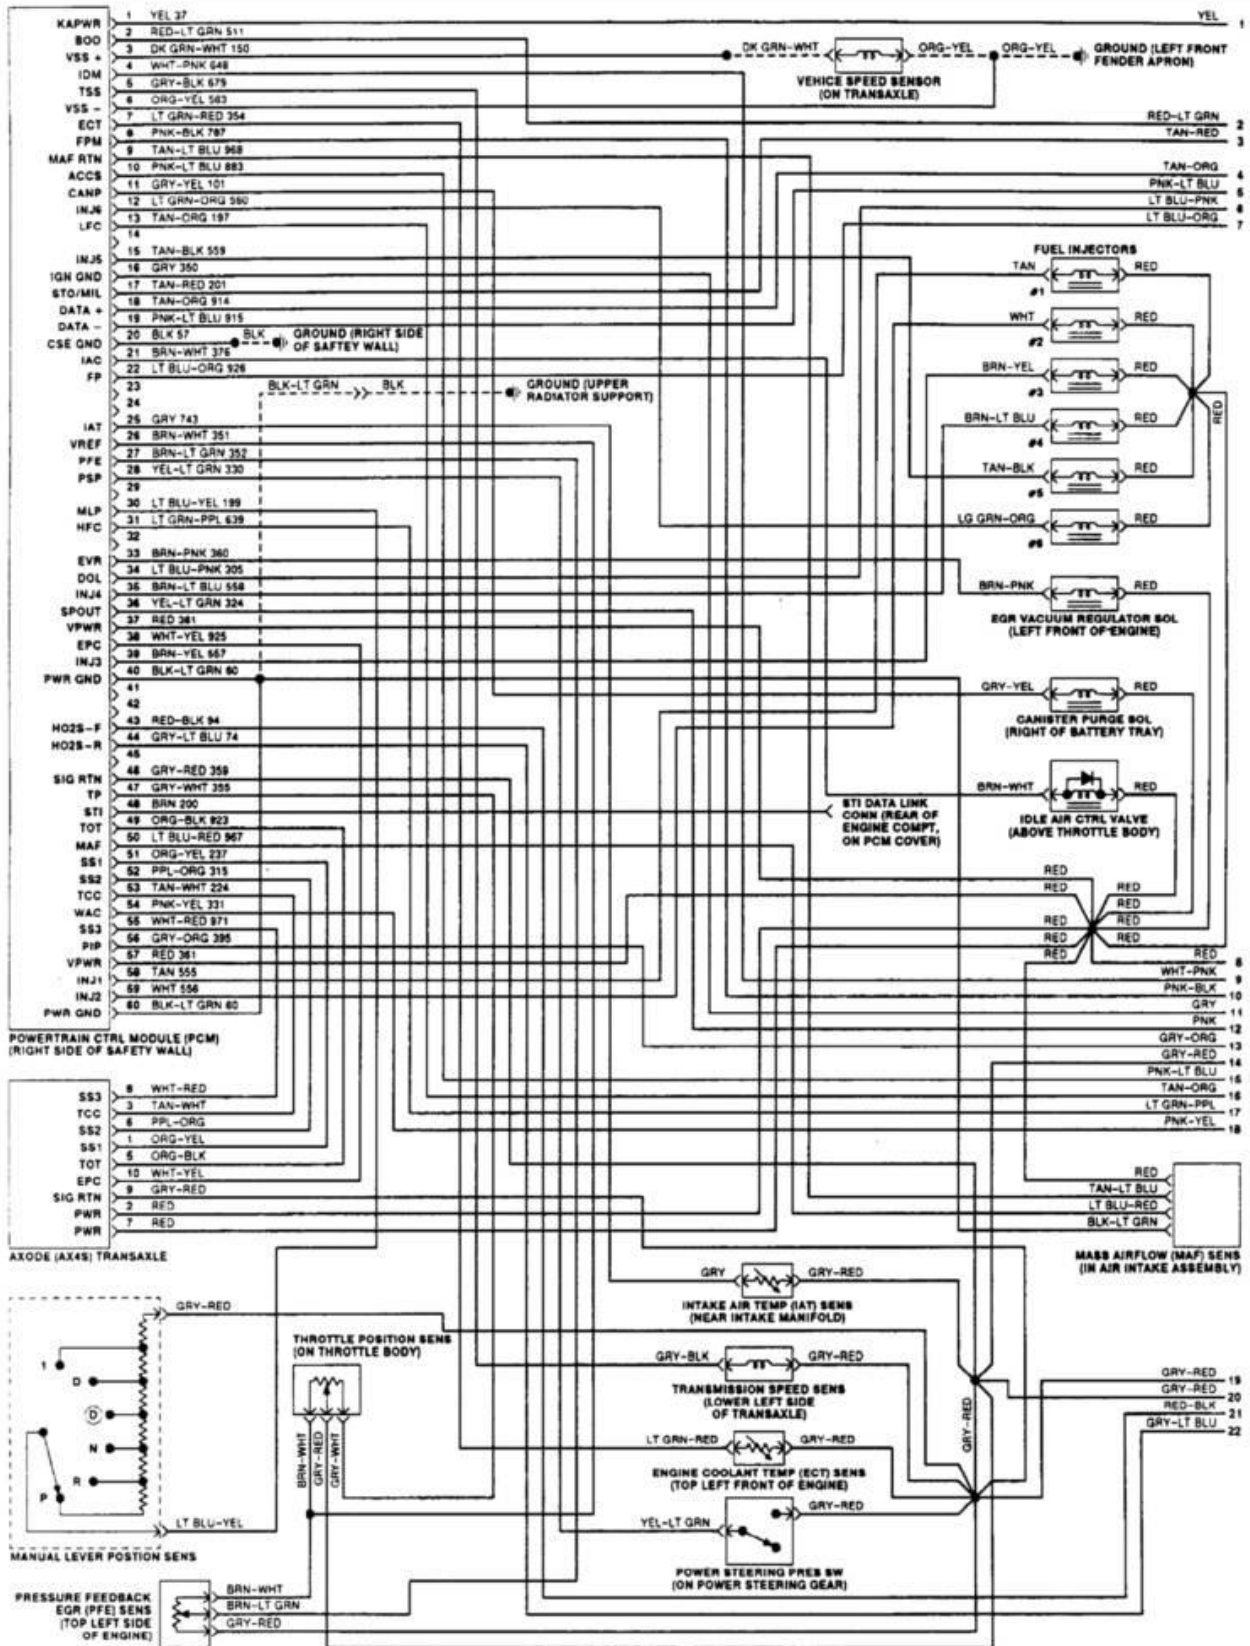


93D40680

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 136: EEC-IV Wiring Diagram (3.8L - 2 of 2)  
1993 Ford Taurus LX

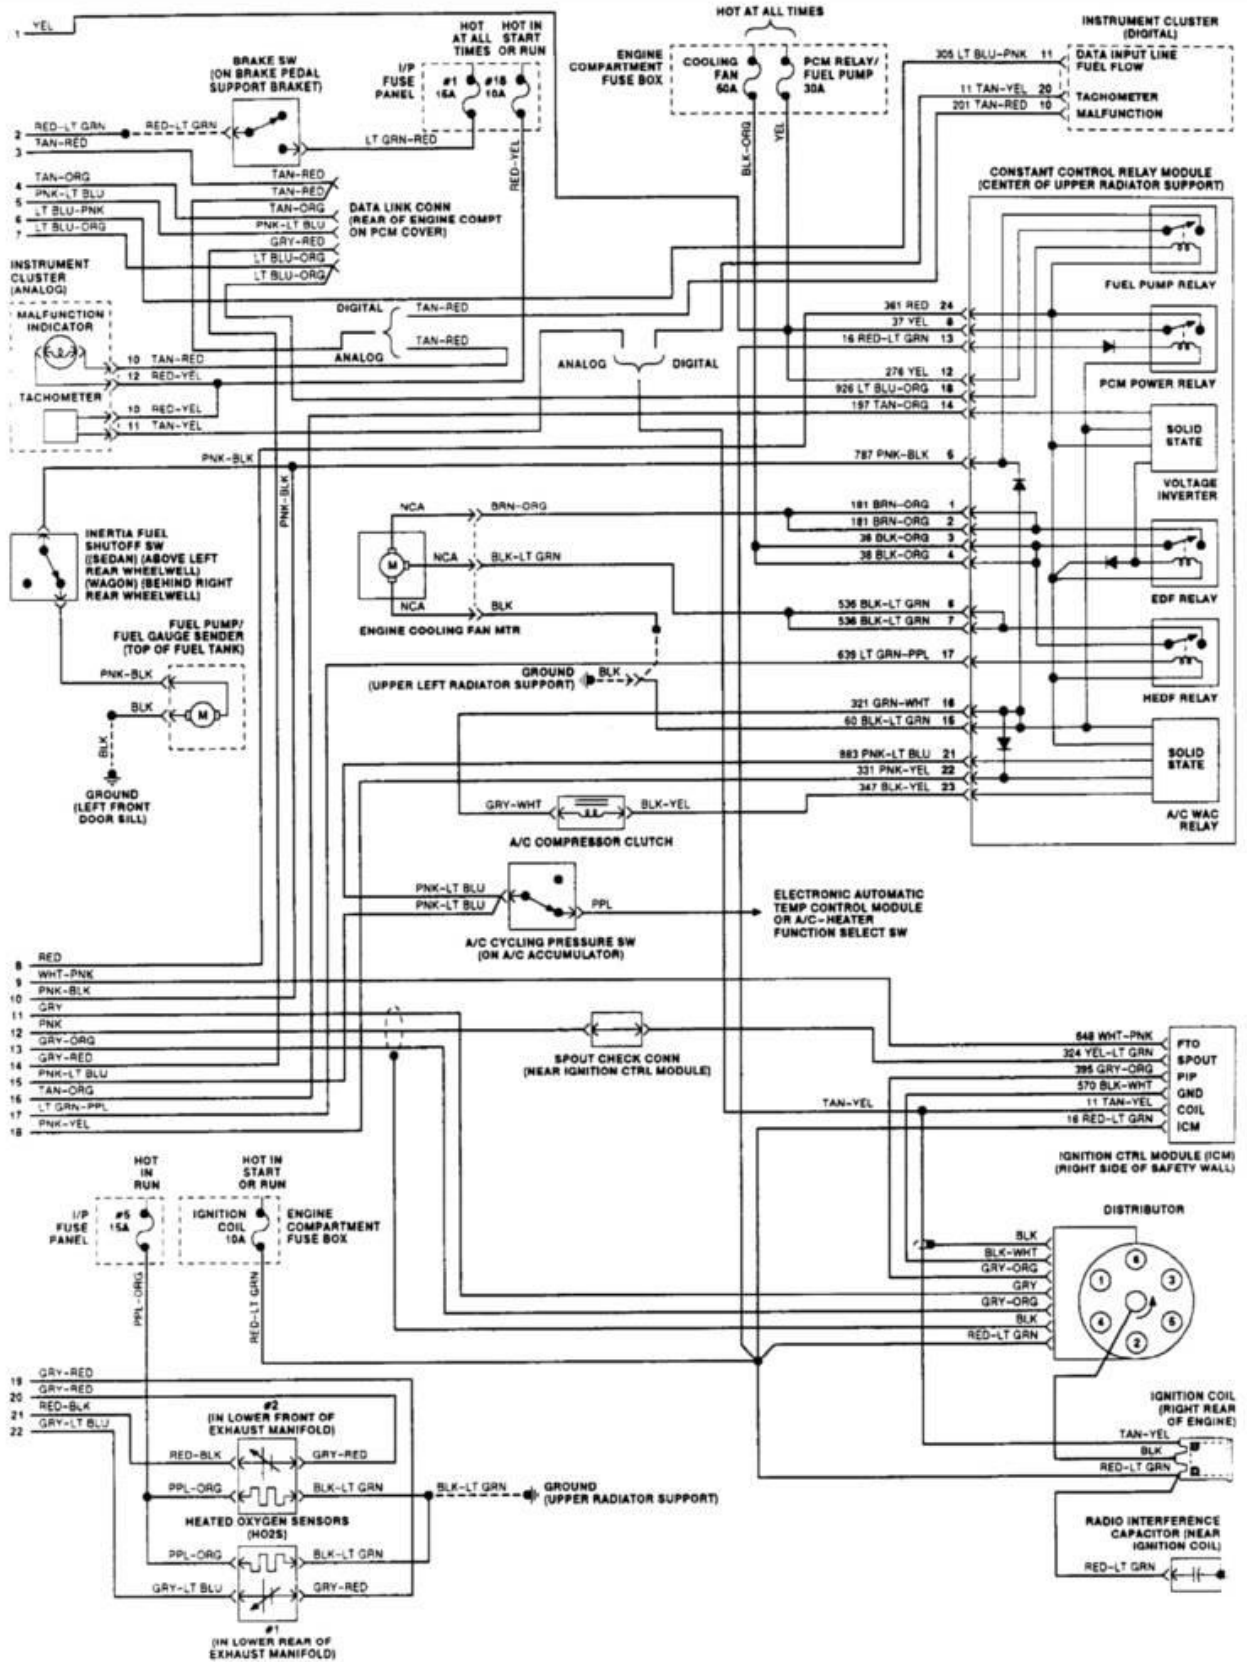


93E40661

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 137: EEC-IV Wiring Diagram (3.0L Flex Fuel - 1 of 2)  
1993 Ford Taurus LX

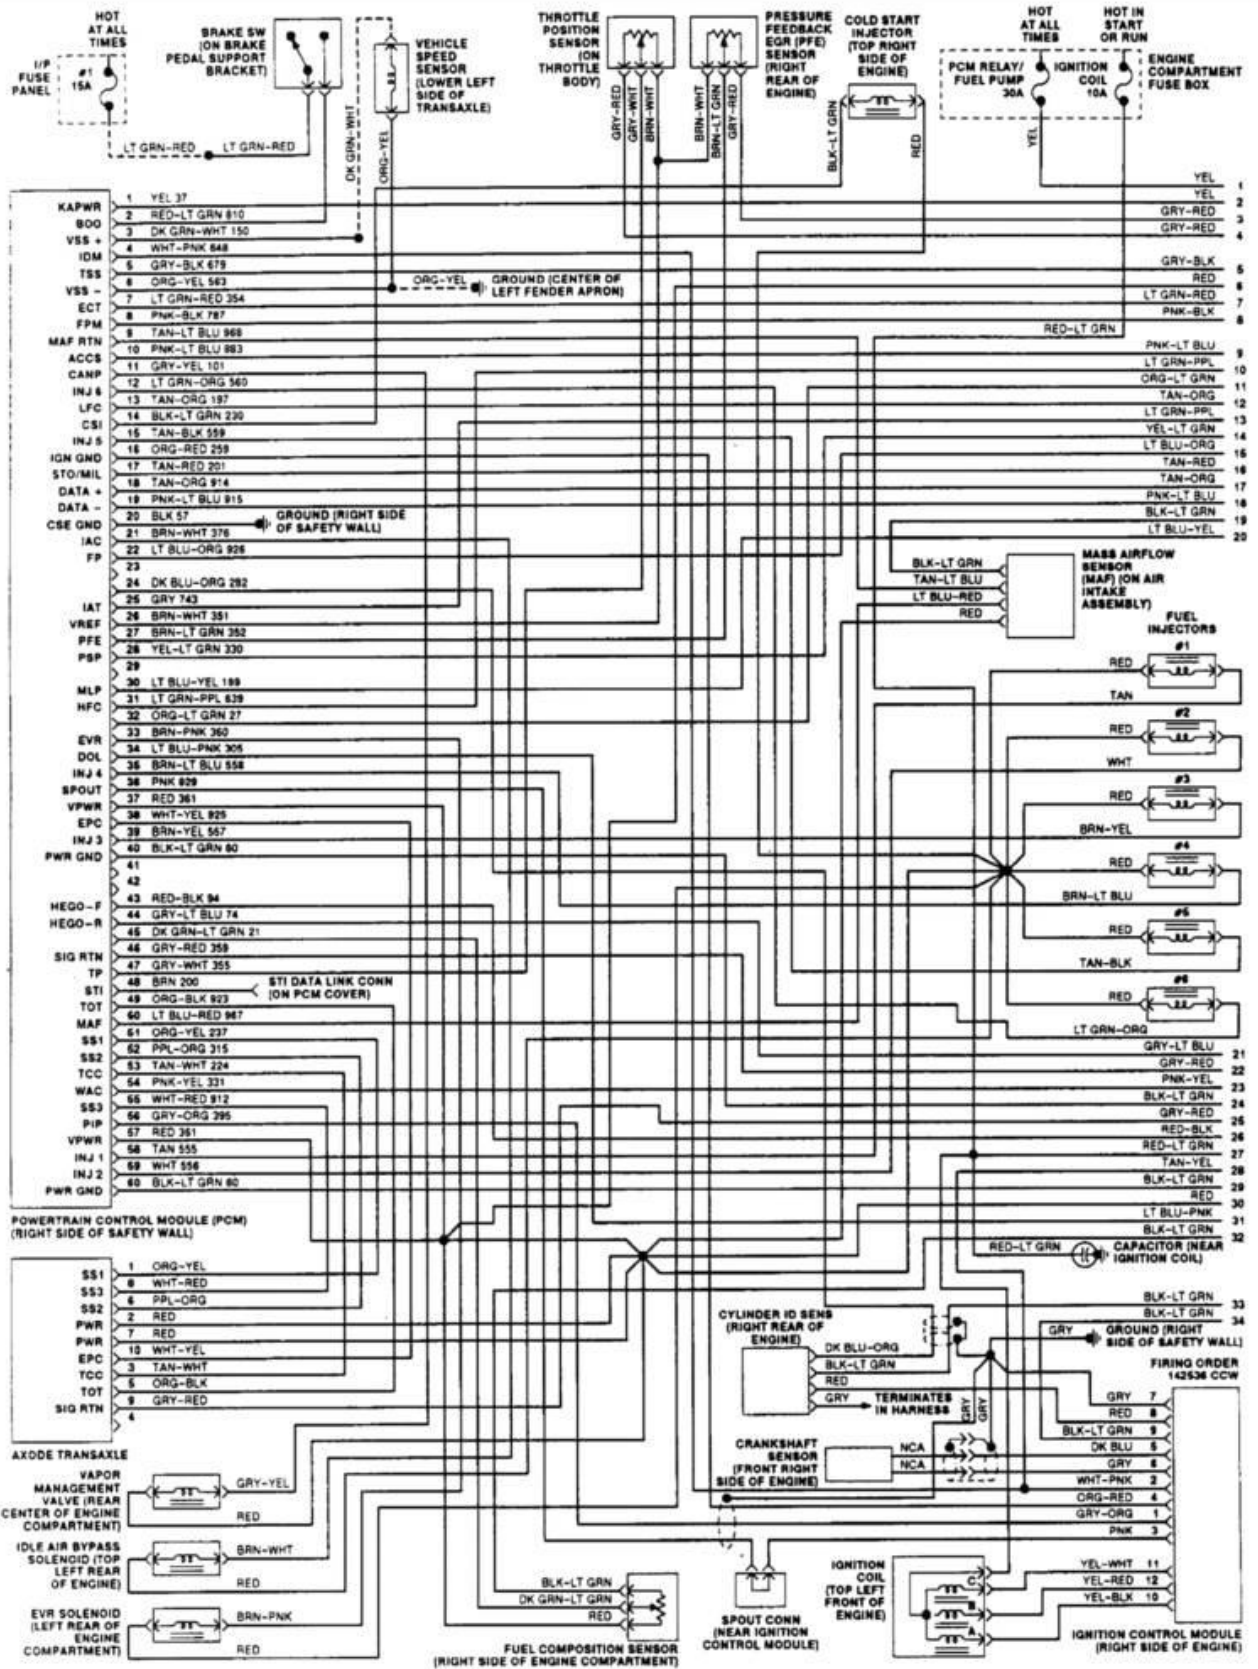

93F40682




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 139: EEC-IV Wiring Diagram (3.0L SHO - 1 of 2)  
1993 Ford Taurus LX

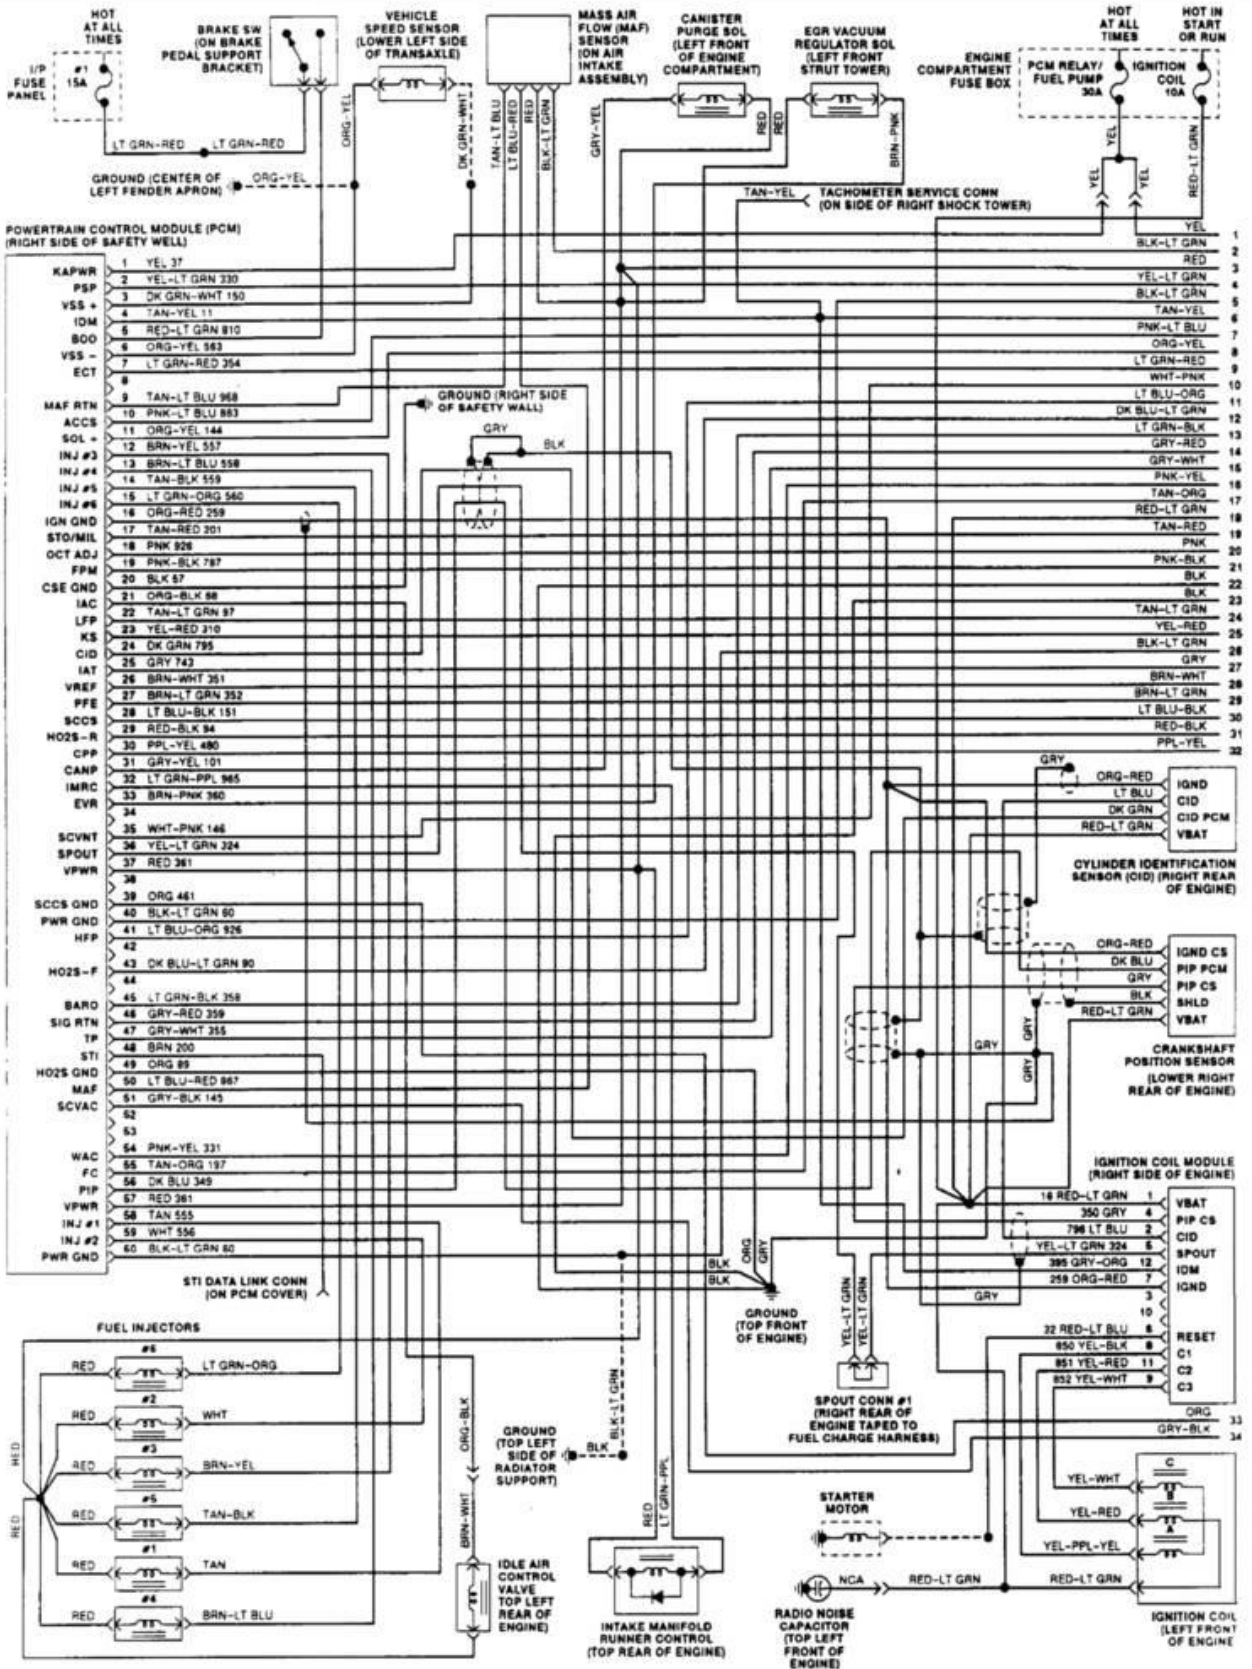

93H40664




# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 140: EEC-IV Wiring Diagram (3.0L SHO - 2 of 2)  
1993 Ford Taurus LX

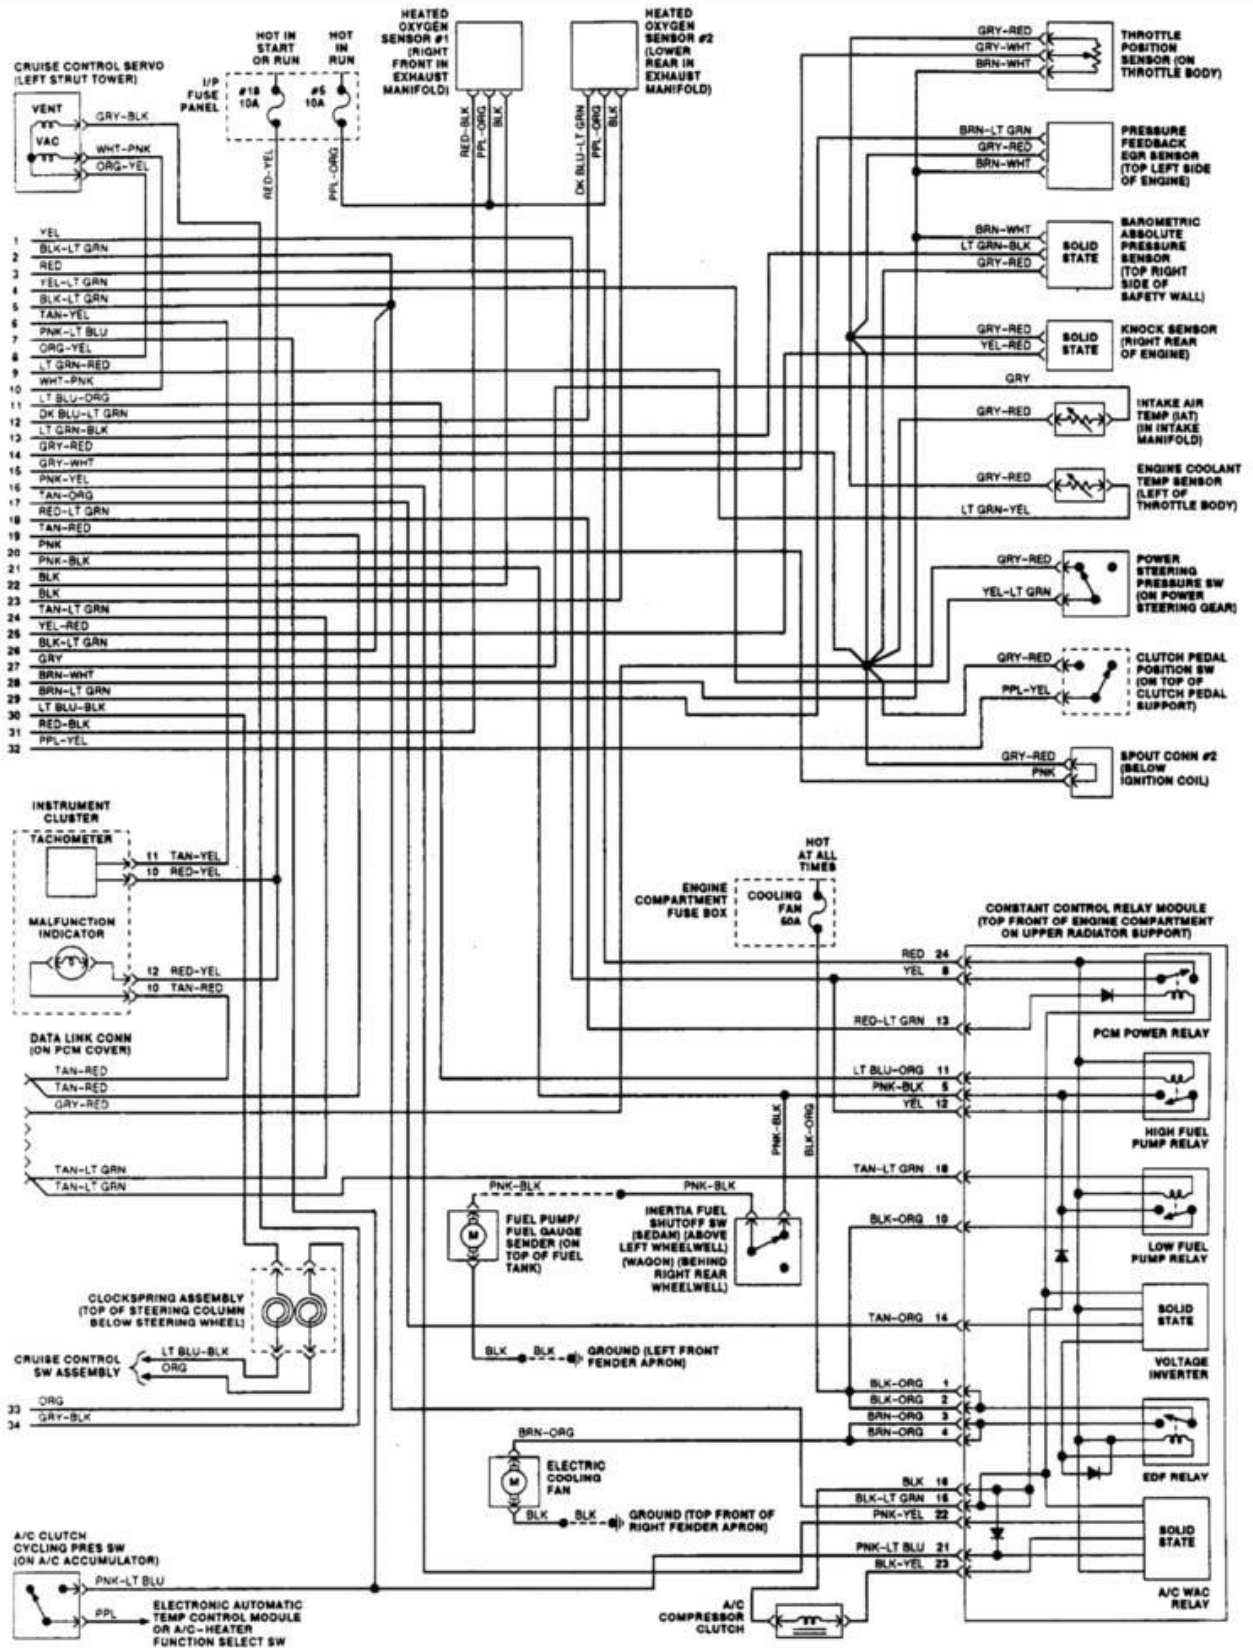


93I40665

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 141: EEC-IV Wiring Diagram (3.2L SHO - 1 of 2)  
1993 Ford Taurus LX

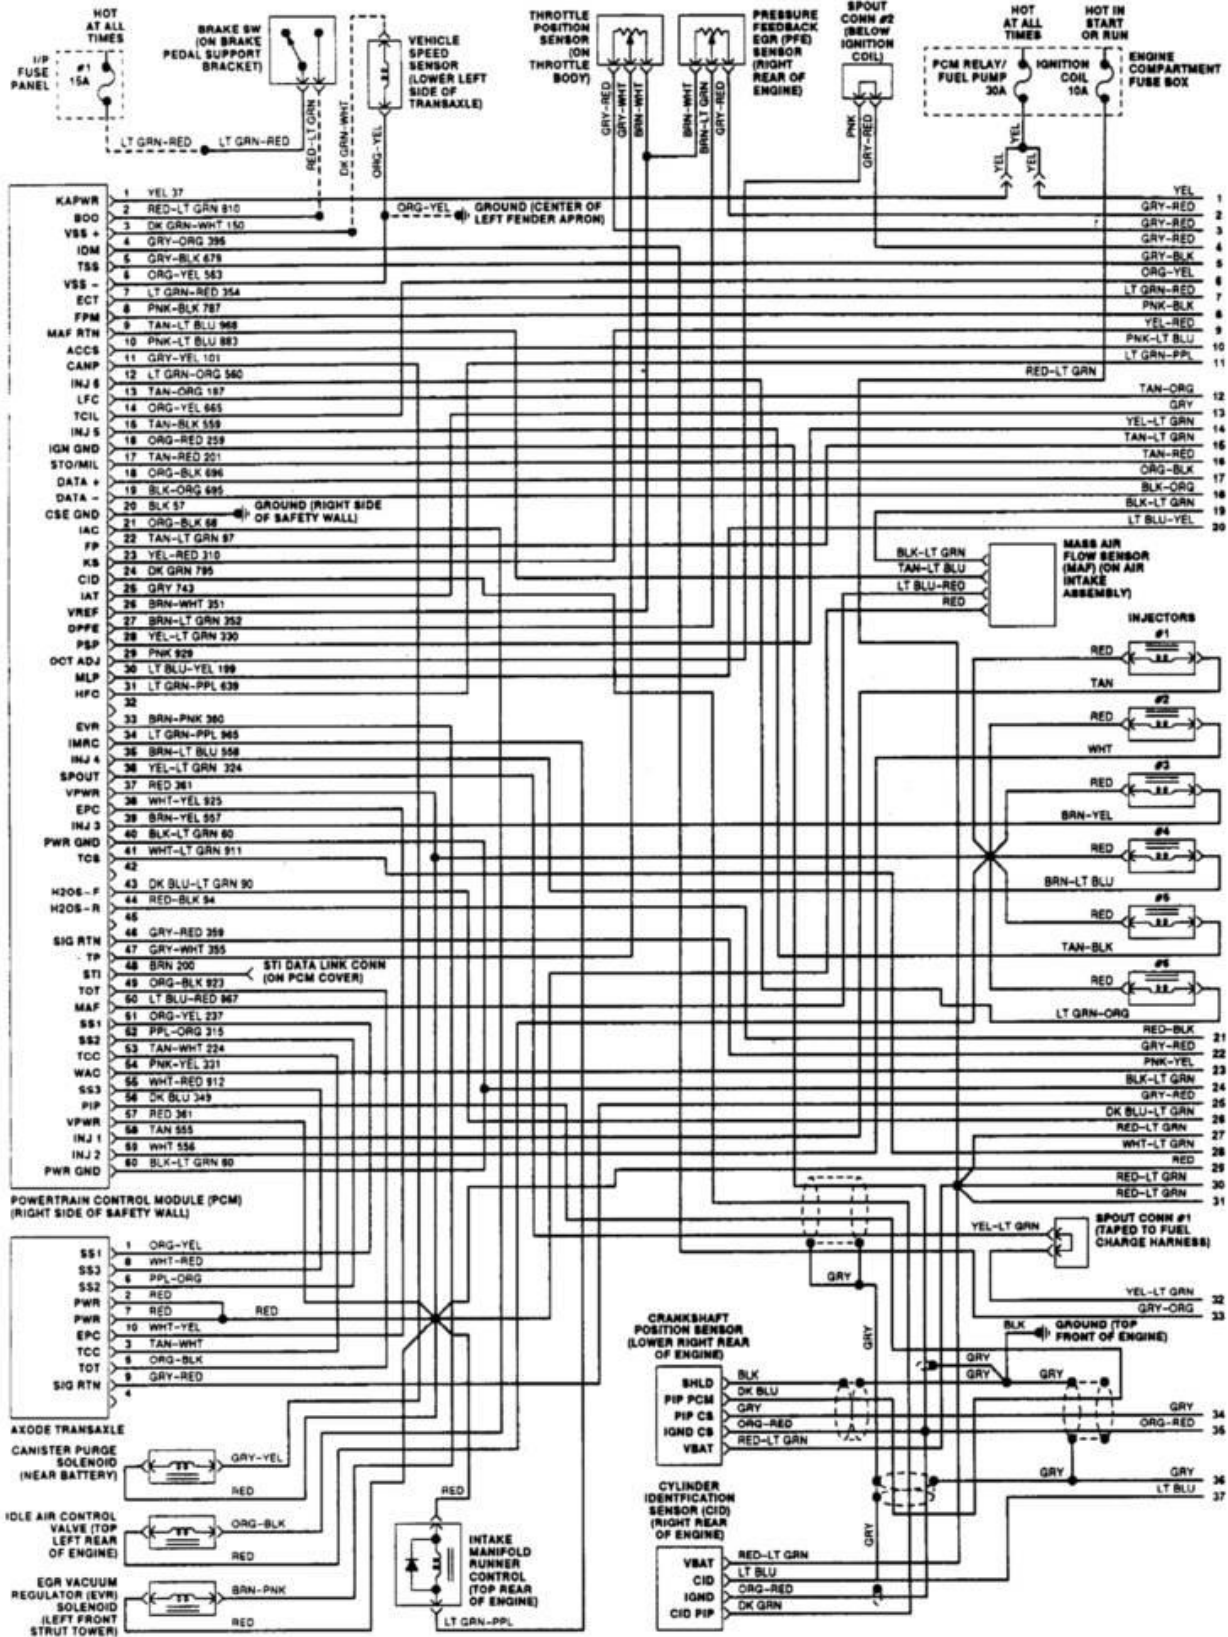


93J40666

# WIRING DIAGRAMS

## Power & Ground Distribution

PAVLIN

Fig. 142: EEC-IV Wiring Diagram (3.2L SHO - 2 of 2)  
1993 Ford Taurus LX

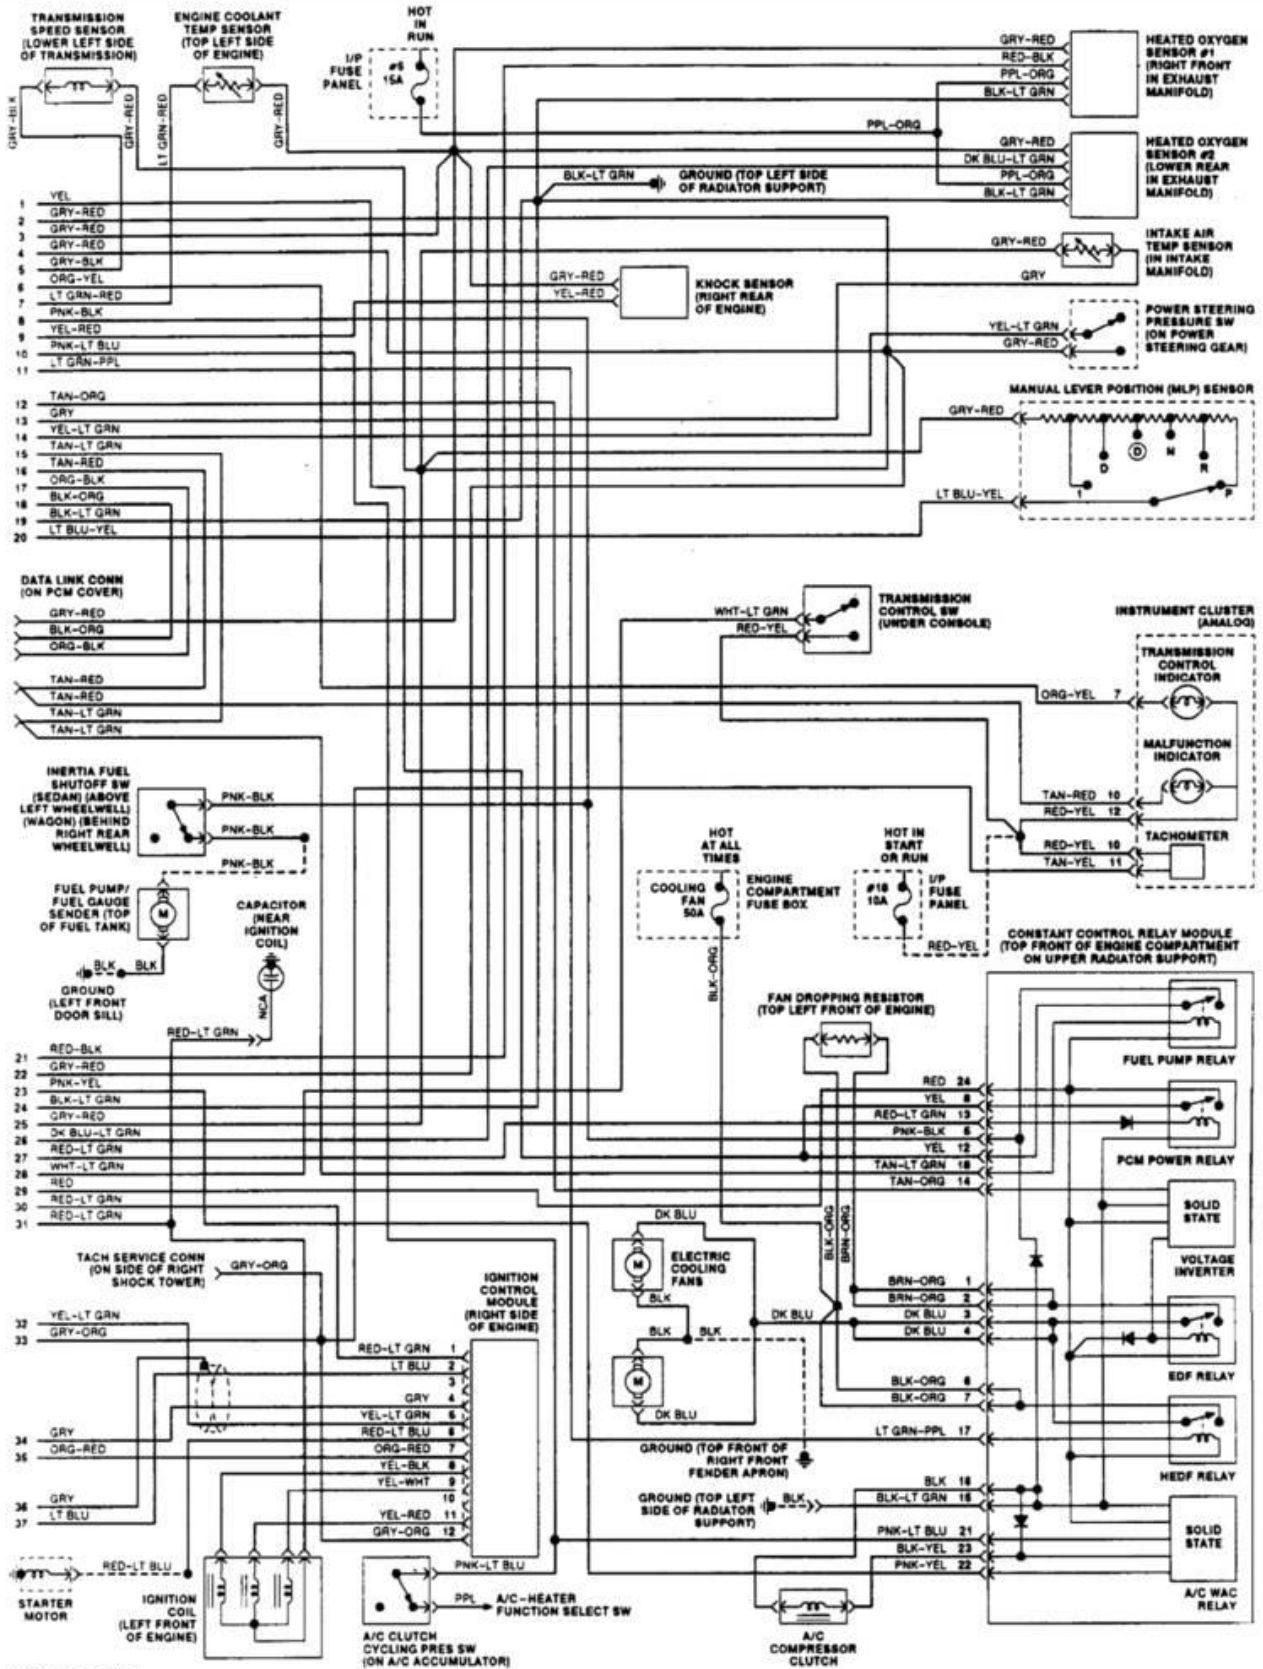


93A40667



**WIRING DIAGRAMS**  
Power & Ground Distribution

PAVLIN

Fig. 143: Power Steering Module Wiring Diagram (SHO)  
1993 Ford Taurus LX

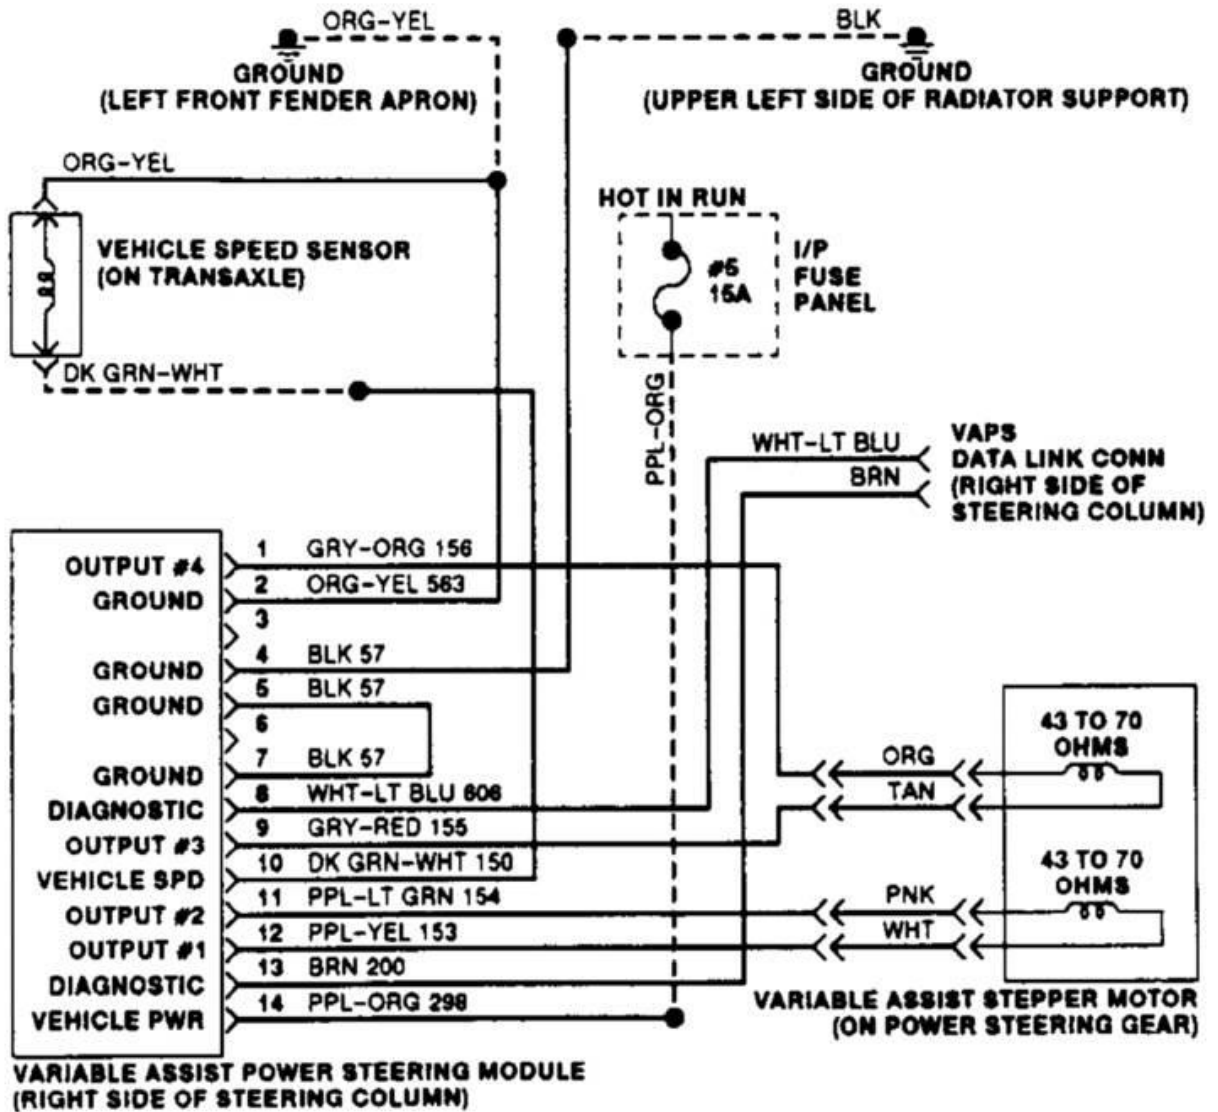

93J42209